
YosysHQ Yosys

Version 0.56

YosysHQ GmbH

Aug 15, 2025

CONTENTS

1	What is Yosys	15
1.1	What you can do with Yosys	15
1.1.1	Typical applications for Yosys	16
1.1.2	Things you can't do	16
1.2	The Yosys family	16
1.3	The original thesis abstract	17
1.3.1	Benefits of open source HDL synthesis	18
1.3.2	History of Yosys	18
2	Getting started with Yosys	21
2.1	Installation	21
2.1.1	CAD suite(s)	21
2.1.2	Building from source	22
2.1.3	Source tree and build system	24
2.2	Synthesis starter	25
2.2.1	Demo design	25
2.2.2	Loading the design	27
2.2.3	Elaboration	27
2.2.4	Flattening	33
2.2.5	The coarse-grain representation	34
2.2.6	Hardware mapping	42
2.2.7	Final steps	50
2.3	Scripting in Yosys	52
2.3.1	Script parsing	52
2.3.2	The synthesis starter script	52
3	Using Yosys (advanced)	59
3.1	Synthesis in detail	59
3.1.1	Synth commands	59
3.1.2	Converting process blocks	60
3.1.3	FSM handling	63
3.1.4	Memory handling	66
3.1.5	Optimization passes	81
3.1.6	Technology mapping	87
3.1.7	The extract pass	89
3.1.8	The ABC toolbox	102
3.1.9	Mapping to cell libraries	105
3.2	More scripting	110
3.2.1	Loading a design	110
3.2.2	Selections	113

3.2.3	Interactive design investigation	125
3.2.4	Symbolic model checking	144
3.2.5	Dataflow tracking	148
3.3	Minimizing failing (or bugged) designs	150
3.3.1	Before you start	150
3.3.2	Minimizing RTLIL designs with bugpoint	151
3.3.3	Minimizing Verilog designs	154
3.3.4	Identifying issues	156
3.4	Notes on Verilog support in Yosys	156
3.4.1	Unsupported Verilog-2005 Features	156
3.4.2	Verilog Attributes and non-standard features	157
3.4.3	Non-standard or SystemVerilog features for formal verification	160
3.4.4	Supported features from SystemVerilog	161
4	Yosys internals	163
4.1	Internal flow	163
4.1.1	Flow overview	163
4.1.2	Control and data flow	164
4.1.3	The Verilog and AST frontends	166
4.2	Internal formats	175
4.2.1	The RTL Intermediate Language (RTLIL)	176
4.3	Working with the Yosys codebase	182
4.3.1	Writing extensions	182
4.3.2	Compiling with Verific library	191
4.3.3	Writing a new backend using FunctionalIR	194
4.3.4	Identifying the root cause of bugs	207
4.3.5	Contributing to Yosys	211
4.3.6	Testing Yosys	213
4.4	Techmap by example	214
4.4.1	Mapping OR3X1	214
4.4.2	Conditional techmap	216
4.4.3	Scripting in map modules	217
4.4.4	Handling constant inputs	219
4.4.5	Handling shorted inputs	220
4.4.6	Notes on using techmap	222
4.5	Hashing and associative data structures in Yosys	222
4.5.1	Container classes based on hashing	222
4.5.2	The hash function	223
4.5.3	Making a type hashable	223
4.5.4	Porting plugins from the legacy interface	224
5	A primer on digital circuit synthesis	225
5.1	Levels of abstraction	225
5.1.1	System level	226
5.1.2	High level	226
5.1.3	Behavioural level	226
5.1.4	Register-Transfer Level (RTL)	227
5.1.5	Logical gate level	227
5.1.6	Physical gate level	228
5.1.7	Switch level	228
5.1.8	Yosys	228
5.2	Features of synthesizable Verilog	228
5.2.1	Structural Verilog	228
5.2.2	Expressions in Verilog	229

5.2.3	Behavioural modelling	229
5.2.4	Functions and tasks	230
5.2.5	Conditionals, loops and generate-statements	230
5.2.6	Arrays and memories	230
5.3	Challenges in digital circuit synthesis	231
5.3.1	Standards compliance	231
5.3.2	Optimizations	231
5.3.3	Technology mapping	232
5.4	Script-based synthesis flows	232
5.5	Methods from compiler design	233
5.5.1	Lexing and parsing	233
5.5.2	Multi-pass compilation	234
5.5.3	Static Single Assignment (SSA) form	235
6	RTLIL text representation	237
6.1	Lexical elements	237
6.1.1	Characters	237
6.1.2	Identifiers	237
6.1.3	Values	237
6.1.4	Strings	238
6.1.5	Comments	238
6.2	File	238
6.2.1	Autoindex statements	238
6.2.2	Modules	239
6.2.3	Attribute statements	239
6.2.4	Signal specifications	239
6.2.5	Connections	239
6.2.6	Wires	239
6.2.7	Memories	240
6.2.8	Cells	240
6.2.9	Processes	240
6.2.10	Switches	240
6.2.11	Syncs	241
7	Auxiliary libraries	243
7.1	BigInt	243
7.2	dlfcn-win32	243
7.3	ezSAT	243
7.4	fst	243
7.5	json11	243
7.6	MiniSAT	244
7.7	SHA1	244
7.8	SubCircuit	244
8	Auxiliary programs	245
8.1	yosys-config	245
8.2	yosys-filterlib	246
8.3	yosys-abc	246
8.4	yosys-smtbmc	246
8.5	yosys-witness	250
9	Internal cell library	251
9.1	Word-level cells	251
9.1.1	Unary operators	251
9.1.2	Binary operators	257

9.1.3	Multiplexers	277
9.1.4	Registers	281
9.1.5	Memories	291
9.1.6	Finite state machines	303
9.1.7	Coarse arithmetics	305
9.1.8	Arbitrary logic functions	313
9.1.9	Specify rules	315
9.1.10	Formal verification cells	320
9.1.11	Debugging cells	326
9.1.12	Wire cells	329
9.2	Gate-level cells	330
9.2.1	Combinatorial cells (simple)	331
9.2.2	Combinatorial cells (combined)	335
9.2.3	Flip-flop cells	341
9.2.4	Latch cells	395
9.2.5	Other gate-level cells	407
9.3	Cell properties	408
10	Command line reference	409
10.1	Command reference	410
10.1.1	Yosys environment variables	410
10.1.2	Reading input files	411
10.1.3	Writing output files	435
10.1.4	Yosys kernel commands	441
10.1.5	Formal verification	441
10.1.6	Passes	459
10.1.7	Technology libraries	501
10.1.8	Internal commands for developers	504
10.1.9	Writing command help	508
	Bibliography	517
	Internal cell reference	519
	Property Index	523
	Tag Index	525
	Command Reference	529

Yosys is an open source framework for RTL synthesis. To learn more about Yosys, see [What is Yosys](#). For a quick guide on how to get started using Yosys, check out [Getting started with Yosys](#). For the complete list of commands available, go to [Command reference](#).

Todo

look into command ref improvements

- Search bar with live drop down suggestions for matching on title / autocompleting commands
- Scroll the left sidebar to the current location on page load
- Also the formatting in pdf uses link formatting instead of code formatting

Todo

how does a filterlib rules-file work?

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/appendix/auxprogs.rst`, line 22.)

Todo

see if we can get the two hanging appnotes as lit references

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/bib.rst`, line 10.)

Todo

flip-flops with async load, `$_ALDFFE?_[NP]{2,3}_`

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/cell/gate_reg_ff.rst`, line 226.)

Todo

Add information about `$alu`, `$fa`, `$macc_v2`, and `$lcu` cells.

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/cell/word_arith.rst`, line 4.)

Todo

Describe formal cells

`$check`, `$assert`, `$assume`, `$live`, `$fair`, `$cover`, `$equiv`, `$initstate`, `$anyconst`, `$anyseq`, `$anyinit`, `$allconst`, and `$allseq`.

Also `$ff` and `$_FF_` cells.

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/cell/word_formal.rst`, line 13.)

Todo

Describe *\$fsm* cell

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/cell/word_fsm.rst`, line 4.)

Todo

\$specify2, *\$specify3*, and *\$specrule* cells.

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/cell/word_spec.rst`, line 4.)

Todo

Add information about *\$slice* and *\$concat* cells.

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/cell/word_wire.rst`, line 4.)

Todo

Can we warn on command groups that aren't included anywhere?

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/cmd_ref.rst`, line 13.)

Todo

reconsider including the whole (~77 line) design like this

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/getting_started/example_synth.rst`, line 23.)

Todo

fifo.v description

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/getting_started/example_synth.rst`, line 31.)

Todo

consider a brief glossary for terms like adff

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/getting_started/example_synth.rst`, line 199.)

Todo

hierarchy failure modes

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/getting_started/example_synth.rst`, line 237.)

Todo

pending bugfix in `wreduce` and/or `opt_clean`

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/getting_started/example_synth.rst`, line 427.)

Todo

`ice40_dsp` is pmgen

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/getting_started/example_synth.rst`, line 501.)

Todo

look into command ref improvements

- Search bar with live drop down suggestions for matching on title / autocompleting commands
- Scroll the left sidebar to the current location on page load
- Also the formatting in pdf uses link formatting instead of code formatting

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/index.rst`, line 10.)

Todo

nextpnr for FPGAs, consider mentioning openlane, vpr, coriolis

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/introduction.rst`, line 76.)

Todo

Consider a less academic version of the History of Yosys

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/introduction.rst`, line 206.)

Todo

pending merge of <https://github.com/YosysHQ/yosys/pull/5068>

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/bugpoint.rst`, line 4.)

Todo

brief overview for the more scripting index

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/index.rst`, line 4.)

Todo

troubleshooting document(?)

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/index.rst`, line 6.)

Todo

interactive design opening text

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 4.)

Todo

merge into *Scripting in Yosys* show section

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 14.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 363.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 395.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 483.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 553.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 597.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 643.)

Todo

replace inline code?

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 696.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/interactive_investigation.rst`, line 721.)

Todo

link note to as-yet non-existent section on `RTLIL::Pass` under *Working with the Yosys codebase*

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/load_design.rst`, line 84.)

Todo

figure out this example code block

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/load_design.rst`, line 104.)

Todo

does `write_file` count?

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/load_design.rst`, line 133.)

Todo

check text context

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/model_checking.rst`, line 4.)

Todo

add/expand supporting text

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/model_checking.rst`, line 25.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/model_checking.rst`, line 47.)

Todo

add/expand supporting text

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/model_checking.rst`, line 91.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/model_checking.rst`, line 107.)

Todo

reduce overlap with *Scripting in Yosys* select section

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/selections.rst`, line 10.)

Todo

pending discussion on whether rule ordering is a bug or a feature

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/selections.rst`, line 340.)

Todo

reflow for not presentation

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/more_scripting/selections.rst`, line 385.)

Todo

more about logic minimization & register balancing et al with ABC

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/abc.rst`, line 102.)

Todo

find a Liberty pygments style?

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/cell_libs.rst`, line 93.)

Todo

add/expand supporting text, also mention custom pattern matching and pmgen

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/extract.rst`, line 12.)

Todo

add/expand supporting text

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/extract.rst`, line 103.)

Todo

Make `memory_*` notes less quick

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/memory.rst`, line 18.)

Todo

describe `memory` images

(The [original entry](#) is located in `/build/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/memory.rst`, line 34.)

Todo

assorted enables, e.g. `cen`, `wen+ren`

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using__yosys/synthesis/memory.rst`, line 233.)

Todo

“outlines these optimizations” or “outlines *some*.”?

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using__yosys/synthesis/opt.rst`, line 7.)

Todo

unsure if this is too much detail and should be in *Yosys internals*

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using__yosys/synthesis/opt.rst`, line 27.)

Todo

`$_DFF_` isn't a valid cell

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using__yosys/synthesis/opt.rst`, line 185.)

Todo

more on the other optimizations

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using__yosys/synthesis/opt.rst`, line 234.)

Todo

describe `proc` images

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using__yosys/synthesis/proc.rst`, line 29.)

Todo

comment on common `synth_*` options, like `-run`

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/synth.rst`, line 4.)

Todo

less academic, check text is coherent

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/techmap_synth.rst`, line 4.)

Todo

newer techmap libraries appear to be largely `.v` instead of `.lib`

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/using_yosys/synthesis/techmap_synth.rst`, line 76.)

Todo

check text is coherent

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 7.)

Todo

update to use `/code_examples/extensions/test*.log`

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 9.)

Todo

mention coding guide

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 14.)

Todo

consider replacing inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 44.)

Todo

add/expand supporting text

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 62.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 84.)

Todo

use `my_cmd.cc` `literalincludes`

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 171.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 213.)

Todo

replace inline code

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/extensions.rst`, line 228.)

Todo

more about the included test suite and how to add tests

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/test_suites.rst`, line 4.)

Todo

are unit tests currently working

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/extending_yosys/test_suites.rst`, line 17.)

Todo

less academic

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/flow/control_and_data.rst`, line 4.)

Todo

less academic

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/flow/overview.rst`, line 4.)

Todo

Synthesizing Verilog arrays

Add some information on the generation of `$memrd` and `$memwr` cells and how they are processed in the memory pass.

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/flow/verilog_frontend.rst`, line 647.)

Todo

Synthesizing parametric designs

Add some information on the `RTLIL::Module::derive()` method and how it is used to synthesize parametric modules via the hierarchy pass.

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/flow/verilog_frontend.rst`, line 653.)

Todo

less academic

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/index.rst`, line 6.)

Todo

add RISC-V core example

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/index.rst`, line 18.)

Todo

add/expand supporting text

(The [original entry](#) is located in `/builddir/build/BUILD/yosys-0.56-build/yosys-8c71226d0050b3ff71e9bc44297480811a21bb56/docs/source/yosys_internals/techmap.rst`, line 25.)

WHAT IS YOSYS

Yosys began as a BSc thesis project by Claire Wolf intended to support synthesis for a CGRA (coarse-grained reconfigurable architecture). It then expanded into more general infrastructure for research on synthesis.

Modern Yosys has full support for the synthesizable subset of Verilog-2005 and has been described as “the GCC of hardware synthesis.” Freely available and [open source](#), Yosys finds use across hobbyist and commercial applications as well as academic.

Note

Yosys is released under the ISC License:

A permissive license lets people do anything with your code with proper attribution and without warranty. The ISC license is functionally equivalent to the BSD 2-Clause and MIT licenses, removing some language that is no longer necessary.

Together with the place and route tool [nextpnr](#), Yosys can be used to program some FPGAs with a fully end-to-end open source flow (Lattice iCE40 and ECP5). It also does the synthesis portion for the [OpenLane flow](#), targeting the SkyWater 130nm open source PDK for fully open source ASIC design. Yosys can also do formal verification with backends for solver formats like [SMT2](#).

Yosys, and the accompanying Open Source EDA ecosystem, is currently maintained by [Yosys Headquarters](#), with many of the core developers employed by [YosysHQ GmbH](#). A commercial extension, [Tabby CAD Suite](#), includes the Verific frontend for industry-grade SystemVerilog and VHDL support, formal verification with SVA, and formal apps.



1.1 What you can do with Yosys

- Read and process (most of) modern Verilog-2005 code
- Perform all kinds of operations on netlist (RTL, Logic, Gate)
- Perform logic optimizations and gate mapping with ABC

1.1.1 Typical applications for Yosys

- Synthesis of final production designs
- Pre-production synthesis (trial runs before investing in other tools)
- Conversion of full-featured Verilog to simple Verilog
- Conversion of Verilog to other formats (BLIF, BTOR, etc)
- Demonstrating synthesis algorithms (e.g. for educational purposes)
- Framework for experimenting with new algorithms
- Framework for building custom flows (Not limited to synthesis but also formal verification, reverse engineering, ...)

1.1.2 Things you can't do

- Process high-level languages such as C/C++/SystemC
- Create physical layouts (place&route)
 - Check out [nextpnr](#) for that
- Rely on built-in syntax checking
 - Use an external tool like [verilator](#) instead

Todo

nextpnr for FPGAs, consider mentioning openlane, vpr, coriolis

1.2 The Yosys family

As mentioned above, [YosysHQ](#) maintains not just Yosys but an entire family of tools built around it. In no particular order:

SBY for formal verification

Yosys provides input parsing and conversion to the formats used by the solver engines. Yosys also provides a unified witness framework for providing cover traces and counter examples for engines which don't natively support this. [SBY source](#) | [SBY docs](#)

EQY for equivalence checking

In addition to input parsing and preparation, Yosys provides the plugin support enabling EQY to operate on designs directly. [EQY source](#) | [EQY docs](#)

MCY for mutation coverage

Yosys is used to read the source design, generate a list of possible mutations to maximise design coverage, and then perform selected mutations. [MCY source](#) | [MCY docs](#)

SCY for deep formal traces

Since SCY generates and runs SBY, Yosys provides the same utility for SCY as it does for SBY. Yosys additionally provides the trace concatenation needed for outputting the deep traces. [SCY source](#)

1.3 The original thesis abstract

The first version of the Yosys documentation was published as a bachelor thesis at the Vienna University of Technology [Wol13].

Abstract

Most of today's digital design is done in HDL code (mostly Verilog or VHDL) and with the help of HDL synthesis tools.

In special cases such as synthesis for coarse-grain cell libraries or when testing new synthesis algorithms it might be necessary to write a custom HDL synthesis tool or add new features to an existing one. In these cases the availability of a Free and Open Source (FOSS) synthesis tool that can be used as basis for custom tools would be helpful.

In the absence of such a tool, the Yosys Open SYnthesis Suite (Yosys) was developed. This document covers the design and implementation of this tool. At the moment the main focus of Yosys lies on the high-level aspects of digital synthesis. The pre-existing FOSS logic-synthesis tool ABC is used by Yosys to perform advanced gate-level optimizations.

An evaluation of Yosys based on real-world designs is included. It is shown that Yosys can be used as-is to synthesize such designs. The results produced by Yosys in this tests were successfully verified using formal verification and are comparable in quality to the results produced by a commercial synthesis tool.

Yosys is a Verilog HDL synthesis tool. This means that it takes a behavioural design description as input and generates an RTL, logical gate or physical gate level description of the design as output. Yosys' main strengths are behavioural and RTL synthesis. A wide range of commands (synthesis passes) exist within Yosys that can be used to perform a wide range of synthesis tasks within the domain of behavioural, rtl and logic synthesis. Yosys is designed to be extensible and therefore is a good basis for implementing custom synthesis tools for specialised tasks.

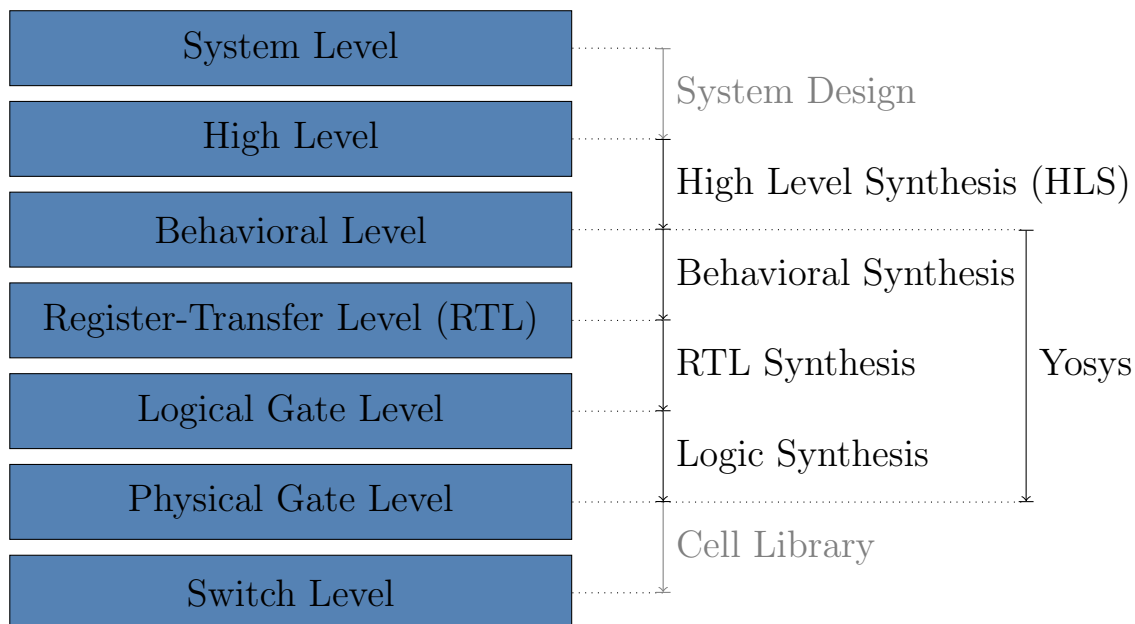


Fig. 1.1: Where Yosys exists in the layers of abstraction

1.3.1 Benefits of open source HDL synthesis

- Cost (also applies to **free as in free beer** solutions):

Today the cost for a mask set in 180nm technology is far less than the cost for the design tools needed to design the mask layouts. Open Source ASIC flows are an important enabler for ASIC-level Open Source Hardware.

- Availability and Reproducibility:

If you are a researcher who is publishing, you want to use tools that everyone else can also use. Even if most universities have access to all major commercial tools, you usually do not have easy access to the version that was used in a research project a couple of years ago. With Open Source tools you can even release the source code of the tool you have used alongside your data.

- Framework:

Yosys is not only a tool. It is a framework that can be used as basis for other developments, so researchers and hackers alike do not need to re-invent the basic functionality. Extensibility was one of Yosys' design goals.

- All-in-one:

Because of the framework characteristics of Yosys, an increasing number of features become available in one tool. Yosys not only can be used for circuit synthesis but also for formal equivalence checking, SAT solving, and for circuit analysis, to name just a few other application domains. With proprietary software one needs to learn a new tool for each of these applications.

- Educational Tool:

Proprietary synthesis tools are at times very secretive about their inner workings. They often are **black boxes**. Yosys is very open about its internals and it is easy to observe the different steps of synthesis.

1.3.2 History of Yosys

Todo
Consider a less academic version of the History of Yosys

A Hardware Description Language (HDL) is a computer language used to describe circuits. A HDL synthesis tool is a computer program that takes a formal description of a circuit written in an HDL as input and generates a netlist that implements the given circuit as output.

Currently the most widely used and supported HDLs for digital circuits are Verilog [A+02, A+06] and VHDL (VHSIC HDL, where VHSIC is an acronym for Very-High-Speed Integrated Circuits) [A+04, A+09]. Both HDLs are used for test and verification purposes as well as logic synthesis, resulting in a set of synthesizable and a set of non-synthesizable language features. In this document we only look at the synthesizable subset of the language features.

In recent work on heterogeneous coarse-grain reconfigurable logic [WGS+12] the need for a custom application-specific HDL synthesis tool emerged. It was soon realised that a synthesis tool that understood Verilog or VHDL would be preferred over a synthesis tool for a custom HDL. Given an existing Verilog or VHDL front end, the work for writing the necessary additional features and integrating them in an existing tool can be estimated to be about the same as writing a new tool with support for a minimalistic custom HDL.

The proposed custom HDL synthesis tool should be licensed under a Free and Open Source Software (FOSS) licence. So an existing FOSS Verilog or VHDL synthesis tool would have been needed as basis to build upon.

The main advantages of choosing Verilog or VHDL is the ability to synthesize existing HDL code and to mitigate the requirement for circuit-designers to learn a new language. In order to take full advantage of any existing FOSS Verilog or VHDL tool, such a tool would have to provide a feature-complete implementation of the synthesizable HDL subset.

Basic RTL synthesis is a well understood field [HS96]. Lexing, parsing and processing of computer languages [ASU86] is a thoroughly researched field. All the information required to write such tools has been openly available for a long time, and it is therefore likely that a FOSS HDL synthesis tool with a feature-complete Verilog or VHDL front end must exist which can be used as a basis for a custom RTL synthesis tool.

Due to the author's preference for Verilog over VHDL it was decided early on to go for Verilog instead of VHDL¹. So the existing FOSS Verilog synthesis tools were evaluated. The results of this evaluation are utterly devastating. Therefore a completely new Verilog synthesis tool was implemented and is recommended as basis for custom synthesis tools. This is the tool that is discussed in this document.

¹ A quick investigation into FOSS VHDL tools yielded similar grim results for FOSS VHDL synthesis tools.

GETTING STARTED WITH YOSYS

This section covers how to get started with Yosys, from installation to a guided walkthrough of synthesizing a design for hardware, and finishing with an introduction to writing re-usable Yosys scripts.

2.1 Installation

This document will guide you through the process of installing Yosys.

2.1.1 CAD suite(s)

Yosys is part of the [Tabby CAD Suite](#) and the [OSS CAD Suite](#)! The easiest way to use yosys is to install the binary software suite, which contains all required dependencies and related tools.

- [Contact YosysHQ](#) for a [Tabby CAD Suite](#) Evaluation License and download link
- OR go to <https://github.com/YosysHQ/oss-cad-suite-build/releases> to download the free OSS CAD Suite
- Follow the [Install Instructions on GitHub](#)

Make sure to get a [Tabby CAD Suite](#) Evaluation License if you need features such as industry-grade SystemVerilog and VHDL parsers!

For more information about the difference between [Tabby CAD Suite](#) and the [OSS CAD Suite](#), please visit <https://www.yosyshq.com/tabby-cad-datasheet>

Many Linux distributions also provide Yosys binaries, some more up to date than others. Check with your package manager!

Targeted architectures

The [OSS CAD Suite](#) releases [nightly builds](#) for the following architectures:

- **linux-x64** - Most personal Linux based computers
- **darwin-x64** - macOS 12 or later with Intel CPU
- **darwin-arm64** - macOS 12 or later with M1/M2 CPU
- **windows-x64** - Targeted for Windows 10 and 11
- **linux-arm64** - Devices such as Raspberry Pi with 64bit OS

For more information about the targeted architectures, and the current build status, check the [OSS CAD Suite](#) git repository.

2.1.2 Building from source

The Yosys source files can be obtained from the [YosysHQ/Yosys git repository](https://github.com/YosysHQ/Yosys). ABC and some of the other libraries used are included as git submodules. To clone these submodules at the same time, use e.g.:

```
git clone --recurse-submodules https://github.com/YosysHQ/yosys.git # ..or..
git clone https://github.com/YosysHQ/yosys.git
cd yosys
git submodule update --init --recursive
```

Note

As of Yosys v0.47, releases include a `yosys.tar.gz` file which includes all source code and all sub-modules in a single archive. This can be used as an alternative which does not rely on `git`.

Supported platforms

The following platforms are supported and regularly tested:

- Linux
- macOS

Other platforms which may work, but instructions may not be up to date and are not regularly tested:

- FreeBSD
- WSL
- Windows with (e.g.) Cygwin

Build prerequisites

A C++ compiler with C++17 support is required as well as some standard tools such as GNU Flex, GNU Bison, Make and Python. Some additional tools: readline, libffi, Tcl and zlib; are optional but enabled by default (see `ENABLE_*` settings in Makefile). Graphviz and Xdot are used by the `show` command to display schematics.

Installing all prerequisites for Ubuntu 20.04:

```
sudo apt-get install gperf build-essential bison flex \
  libreadline-dev gawk tcl-dev libffi-dev git graphviz \
  xdot pkg-config python3 libboost-system-dev \
  libboost-python-dev libboost-filesystem-dev zlib1g-dev
```

Installing all prerequisites for macOS 13 (with Homebrew):

```
brew tap Homebrew/bundle && brew bundle
```

or MacPorts:

```
sudo port install bison flex readline gawk libffi graphviz \
  pkgconfig python311 boost zlib tcl
```

On FreeBSD use the following command to install all prerequisites:

```
pkg install bison flex readline gawk libffi graphviz \
  pkgconf python311 tcl-wrapper boost-libs
```

Note

On FreeBSD system use `gmake` instead of `make`. To run tests use: `MAKE=gmake CXX=cxx CC=cc gmake test`

For Cygwin use the following command to install all prerequisites, or select these additional packages:

```
setup-x86_64.exe -q --packages=bison,flex,gcc-core,gcc-g++,git,libffi-devel,libreadline-
↳devel,make,pkg-config,python3,tcl-devel,boost-build,zlib-devel
```

Warning

As of this writing, Cygwin only supports up to Python 3.9.16 while the minimum required version of Python is 3.11. This means that Cygwin is not compatible with many of the Python-based frontends. While this does not currently prevent Yosys itself from working, no guarantees are made for continued support. It is instead recommended to use Windows Subsystem for Linux (WSL) and follow the instructions for Ubuntu.

Build configuration

The Yosys build is based solely on Makefiles, and uses a number of variables which influence the build process. The recommended method for configuring builds is with a `Makefile.conf` file in the root `yosys` directory. The following commands will clean the directory and provide an initial configuration file:

```
make config-clang    # ..or..
make config-gcc
```

Check the root Makefile to see what other configuration targets are available. Other variables can then be added to the `Makefile.conf` as needed, for example:

```
echo "ENABLE_ZLIB := 0" >> Makefile.conf
```

Using one of these targets will set the `CONFIG` variable to something other than `none`, and will override the environment variable for `CXX`. To use a different compiler than the default when building, use:

```
make CXX=$CXX        # ..or..
make CXX="g++-11"
```

Note

Setting the compiler in this way will prevent some other options such as `ENABLE_CCACHE` from working as expected.

If you have clang, and (a compatible version of) `ld.lld` available in `PATH`, it's recommended to speed up incremental builds with `lld` by enabling LTO with `ENABLE_LTO=1`. On macOS, LTO requires using clang from homebrew rather than clang from xcode. For example:

```
make ENABLE_LTO=1 CXX=$(brew --prefix)/opt/llvm/bin/clang++
```

By default, building (and installing) `yosys` will build (and install) `ABC`, using `yosys-abc` as the executable name. To use an existing `ABC` executable instead, set the `ABCEXTERNAL` make variable to point to the desired executable.

Running the build system

From the root `yosys` directory, call the following commands:

```
make
sudo make install
```

To use a separate (out-of-tree) build directory, provide a path to the Makefile.

```
mkdir build; cd build
make -f ../Makefile
```

Out-of-tree builds require a clean source tree.

See also

Refer to *Testing Yosys* for details on testing Yosys once compiled.

2.1.3 Source tree and build system

The Yosys source tree is organized into the following top-level directories:

backends/

This directory contains a subdirectory for each of the backend modules.

docs/

Contains the source for this documentation, including images and sample code.

examples/

Contains example code for using Yosys with some other tools including a demo of the Yosys Python api, and synthesizing for various toolchains such as Intel and Anlogic.

frontends/

This directory contains a subdirectory for each of the frontend modules.

kernel/

This directory contains all the core functionality of Yosys. This includes the functions and definitions for working with the RTLIL data structures (`rtlil.h/cc`), the `main()` function (`driver.cc`), the internal framework for generating log messages (`log.h/cc`), the internal framework for registering and calling passes (`register.h/cc`), some core commands that are not really passes (`select.cc`, `show.cc`, ...) and a couple of other small utility libraries.

libs/

Libraries packaged with Yosys builds are contained in this folder. See *Auxiliary libraries*.

misc/

Other miscellany which doesn't fit anywhere else.

passes/

This directory contains a subdirectory for each pass or group of passes. For example as of this writing the directory `passes/hierarchy/` contains the code for three passes: `hierarchy`, `submod`, and `uniquify`.

techlibs/

This directory contains simulation models and standard implementations for the cells from the internal cell library.

tests/

This directory contains the suite of unit tests and regression tests used by Yosys. See *Testing Yosys*.

The top-level Makefile includes `frontends/*/Makefile.inc`, `passes/*/Makefile.inc` and `backends/*/Makefile.inc`. So when extending Yosys it is enough to create a new directory in `frontends/`, `passes/` or `backends/` with your sources and a `Makefile.inc`. The Yosys kernel automatically detects all commands linked with Yosys. So it is not needed to add additional commands to a central list of commands.

Good starting points for reading example source code to learn how to write passes are `passes/opt/opt_dff.cc` and `passes/opt/opt_merge.cc`.

Users of the Qt Creator IDE can generate a QT Creator project file using `make qtcreator`. Users of the Eclipse IDE can use the “Makefile Project with Existing Code” project type in the Eclipse “New Project” dialog (only available after the CDT plugin has been installed) to create an Eclipse project in order to programming extensions to Yosys or just browse the Yosys code base.

2.2 Synthesis starter

This page will be a guided walkthrough of the prepackaged iCE40 FPGA synthesis script - `synth_ice40`. We will take a simple design through each step, looking at the commands being called and what they do to the design. While `synth_ice40` is specific to the iCE40 platform, most of the operations we will be discussing are common across the majority of FPGA synthesis scripts. Thus, this document will provide a good foundational understanding of how synthesis in Yosys is performed, regardless of the actual architecture being used.

See also

Advanced usage docs for *Synth commands*

2.2.1 Demo design

First, let’s quickly look at the design we’ll be synthesizing:

Todo

reconsider including the whole (~77 line) design like this

Listing 2.1: `fifo.v`

```

1  // address generator/counter
2  module addr_gen
3  #(   parameter MAX_DATA=256,
4      localparam AWIDTH = $clog2(MAX_DATA)
5  ) (   input en, clk, rst,
6      output reg [AWIDTH-1:0] addr
7  );
8      initial addr = 0;
9
10     // async reset
11     // increment address when enabled
12     always @(posedge clk or posedge rst)
13         if (rst)
14             addr <= 0;
15         else if (en) begin

```

(continues on next page)

(continued from previous page)

```

16         if ({'0, addr} == MAX_DATA-1)
17             addr <= 0;
18         else
19             addr <= addr + 1;
20     end
21 endmodule //addr_gen
22
23 // Define our top level fifo entity
24 module fifo
25 # ( parameter MAX_DATA=256,
26     localparam AWIDTH = $clog2(MAX_DATA)
27 ) ( input wen, ren, clk, rst,
28     input [7:0] wdata,
29     output reg [7:0] rdata,
30     output reg [AWIDTH:0] count
31 );
32     // fifo storage
33     // sync read before write
34     wire [AWIDTH-1:0] waddr, raddr;
35     reg [7:0] data [MAX_DATA-1:0];
36     always @(posedge clk) begin
37         if (wen)
38             data[waddr] <= wdata;
39         rdata <= data[raddr];
40     end // storage
41
42     // addr_gen for both write and read addresses
43     addr_gen #(.MAX_DATA(MAX_DATA))
44     fifo_writer (
45         .en      (wen),
46         .clk      (clk),
47         .rst      (rst),
48         .addr     (waddr)
49     );
50
51     addr_gen #(.MAX_DATA(MAX_DATA))
52     fifo_reader (
53         .en      (ren),
54         .clk      (clk),
55         .rst      (rst),
56         .addr     (raddr)
57     );
58
59     // status signals
60     initial count = 0;
61
62     always @(posedge clk or posedge rst) begin
63         if (rst)
64             count <= 0;
65         else if (wen && !ren)
66             count <= count + 1;
67         else if (ren && !wen)

```

(continues on next page)

(continued from previous page)

```

68         count <= count - 1;
69     end
70
71 endmodule

```

Todo

fifo.v description

While the open source *read_verilog* frontend generally does a pretty good job at processing valid Verilog input, it does not provide very good error handling or reporting. Using an external tool such as *verilator* before running Yosys is highly recommended. We can quickly check the Verilog syntax of our design by calling `verilator --lint-only fifo.v`.

2.2.2 Loading the design

Let's load the design into Yosys. From the command line, we can call `yosys fifo.v`. This will open an interactive Yosys shell session and immediately parse the code from *fifo.v* and convert it into an Abstract Syntax Tree (AST). If you are interested in how this happens, there is more information in the document, *The Verilog and AST frontends*. For now, suffice it to say that we do this to simplify further processing of the design. You should see something like the following:

```

$ yosys fifo.v

-- Parsing `fifo.v' using frontend ` -vlog2k' --

1. Executing Verilog-2005 frontend: fifo.v
Parsing Verilog input from `fifo.v' to AST representation.
Storing AST representation for module `$abstract\addr_gen'.
Storing AST representation for module `$abstract\fifo'.
Successfully finished Verilog frontend.

```

See alsoAdvanced usage docs for *Loading a design*

2.2.3 Elaboration

Now that we are in the interactive shell, we can call Yosys commands directly. Our overall goal is to call `synth_ice40 -top fifo`, but for now we can run each of the commands individually for a better sense of how each part contributes to the flow. We will also start with just a single module; `addr_gen`.

At the bottom of the `help` output for `synth_ice40` is the complete list of commands called by this script. Let's start with the section labeled `begin`:

Listing 2.2: `begin` section

```

read_verilog -D ICE40_HX -lib -specify +/ice40/cells_sim.v
hierarchy -check -top <top>
proc

```

`read_verilog -D ICE40_HX -lib -specify +/ice40/cells_sim.v` loads the iCE40 cell models which allows us to include platform specific IP blocks in our design. PLLs are a common example of this, where we might need to reference `SB_PLL40_CORE` directly rather than being able to rely on mapping passes later. Since our simple design doesn't use any of these IP blocks, we can skip this command for now. Because these cell models will also be needed once we start mapping to hardware we will still need to load them later.

Note

`+/` is a dynamic reference to the Yosys `share` directory. By default, this is `/usr/local/share/yosys`. If using a locally built version of Yosys from the source directory, this will be the `share` folder in the same directory.

The `addr_gen` module

Since we're just getting started, let's instead begin with `hierarchy -top addr_gen`. This command declares that the top level module is `addr_gen`, and everything else can be discarded.

Listing 2.3: `addr_gen` module source

```

2 module addr_gen
3 #( parameter MAX_DATA=256,
4     localparam AWIDTH = $clog2(MAX_DATA)
5 ) ( input en, clk, rst,
6     output reg [AWIDTH-1:0] addr
7 );
8     initial addr = 0;
9
10    // async reset
11    // increment address when enabled
12    always @(posedge clk or posedge rst)
13        if (rst)
14            addr <= 0;
15        else if (en) begin
16            if ({'0, addr} == MAX_DATA-1)
17                addr <= 0;
18            else
19                addr <= addr + 1;
20        end
21 endmodule //addr_gen

```

Note

`hierarchy` should always be the first command after the design has been read. By specifying the top module, `hierarchy` will also set the `(* top *)` attribute on it. This is used by other commands that need to know which module is the top.

Listing 2.4: `hierarchy -top addr_gen` output

```
yosys> hierarchy -top addr_gen
```

```
2. Executing HIERARCHY pass (managing design hierarchy).
```

(continues on next page)

(continued from previous page)

3. Executing AST frontend in derive mode using pre-parsed AST for module ``\addr_gen'`.
Generating RTLIL representation for module ``\addr_gen'`.

3.1. Analyzing design hierarchy..

Top module: `\addr_gen`

3.2. Analyzing design hierarchy..

Top module: `\addr_gen`

Removing unused module ``$abstract\fifo'`.

Removing unused module ``$abstract\addr_gen'`.

Removed 2 unused modules.

Our `addr_gen` circuit now looks like this:

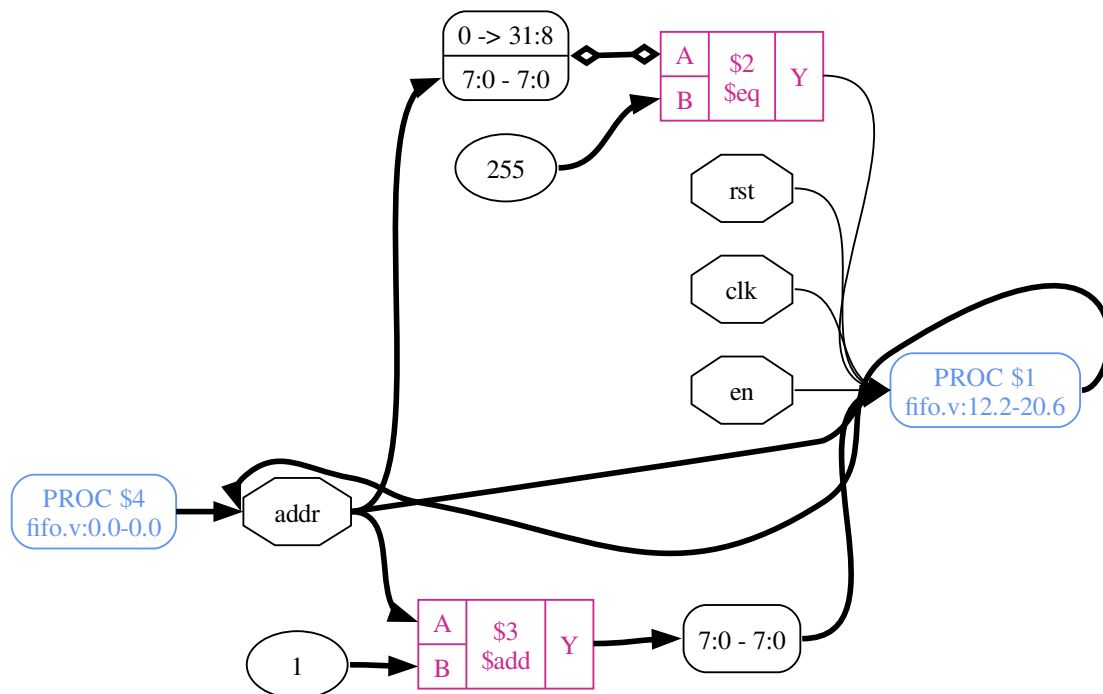


Fig. 2.1: `addr_gen` module after hierarchy

Simple operations like `addr + 1` and `addr == MAX_DATA-1` can be extracted from our `always @` block in *addr_gen module source*. This gives us the highlighted `$add` and `$eq` cells we see. But control logic (like the `if .. else`) and memory elements (like the `addr <= 0`) are not so straightforward. These get put into “processes”, shown in the schematic as PROC. Note how the second line refers to the line numbers of the start/end of the corresponding `always @` block. In the case of an `initial` block, we instead see the PROC referring to line 0.

To handle these, let us now introduce the next command: *proc - translate processes to netlists*. `proc` is a macro command like `synth_ice40`. Rather than modifying the design directly, it instead calls a series of

other commands. In the case of `proc`, these sub-commands work to convert the behavioral logic of processes into multiplexers and registers. Let's see what happens when we run it. For now, we will call `proc -noopt` to prevent some automatic optimizations which would normally happen.

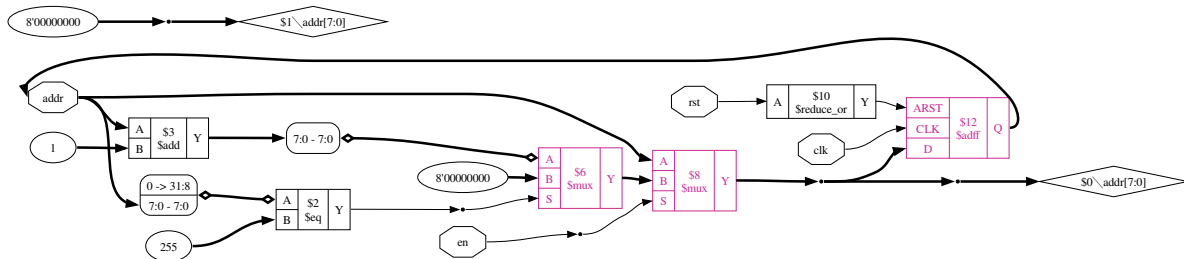


Fig. 2.2: `addr_gen` module after `proc -noopt`

There are now a few new cells from our `always @`, which have been highlighted. The `if` statements are now modeled with `$mux` cells, while the register uses an `$dff` cell. If we look at the terminal output we can also see all of the different `proc_*` commands being called. We will look at each of these in more detail in *Converting process blocks*.

Notice how in the top left of *addr_gen module after proc -noopt* we have a floating wire, generated from the initial assignment of 0 to the `addr` wire. However, this initial assignment is not synthesizable, so this will need to be cleaned up before we can generate the physical hardware. We can do this now by calling `clean`. We're also going to call `opt_expr` now, which would normally be called at the end of `proc`. We can call both commands at the same time by separating them with a colon and space: `opt_expr; clean`.

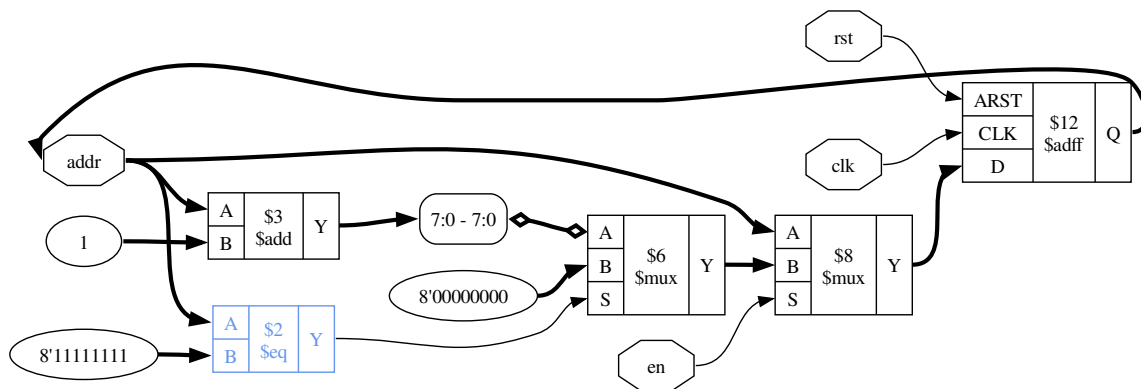


Fig. 2.3: `addr_gen` module after `opt_expr; clean`

You may also notice that the highlighted `$eq` cell input of 255 has changed to 8'11111111. Constant values are presented in the format `<bit_width>'<bits>`, with 32-bit values instead using the decimal number. This indicates that the constant input has been reduced from 32-bit wide to 8-bit wide. This is a side-effect of running `opt_expr`, which performs constant folding and simple expression rewriting. For more on why this happens, refer to *Optimization passes* and the *section on opt_expr*.

Note

`clean` can also be called with two semicolons after any command, for example we could have called `opt_expr;;` instead of `opt_expr; clean`. You may notice some scripts will end each line with `;;`. It is beneficial to run `clean` before inspecting intermediate products to remove disconnected parts of the circuit which have been left over, and in some cases can reduce the processing required in subsequent commands.

Todo

consider a brief glossary for terms like adff

See also

Advanced usage docs for

- *Converting process blocks*
- *Optimization passes*

The full example

Let's now go back and check on our full design by using `hierarchy -check -top fifo`. By passing the `-check` option there we are also telling the `hierarchy` command that if the design includes any non-blackbox modules without an implementation it should return an error.

Note that if we tried to run this command now then we would get an error. This is because we already removed all of the modules other than `addr_gen`. We could restart our shell session, but instead let's use two new commands:

- `design`, and
- *`read_verilog` - read modules from Verilog file.*

Listing 2.5: reloading `fifo.v` and running `hierarchy -check -top fifo`

```
yosys> design -reset

yosys> read_verilog fifo.v

11. Executing Verilog-2005 frontend: fifo.v
Parsing Verilog input from `fifo.v' to AST representation.
Generating RTLIL representation for module `addr_gen'.
Generating RTLIL representation for module `fifo'.
Successfully finished Verilog frontend.

yosys> hierarchy -check -top fifo

12. Executing HIERARCHY pass (managing design hierarchy).

12.1. Analyzing design hierarchy..
```

(continues on next page)

(continued from previous page)

```
Top module: \fifo  
Used module:      \addr_gen  
Parameter \MAX_DATA = 256
```

12.2. Executing AST frontend in derive mode using pre-parsed AST for module '\addr_gen'.

```
Parameter \MAX_DATA = 256  
Generating RTLIL representation for module ` $paramod\addr_gen\MAX_DATA=s32  
→ '0000000000000000000000000100000000'.  
Parameter \MAX_DATA = 256  
Found cached RTLIL representation for module ` $paramod\addr_gen\MAX_DATA=s32  
→ '0000000000000000000000000100000000'.
```

12.3. Analyzing design hierarchy..

```
Top module: \fifo  
Used module:    $paramod\addr_gen\MAX_DATA=s32'0000000000000000000000000100000000
```

12.4. Analyzing design hierarchy..

```
Top module: \fifo  
Used module:    $paramod\addr_gen\MAX_DATA=s32'0000000000000000000000000100000000  
Removing unused module '\addr_gen'.  
Removed 1 unused modules.
```

Notice how this time we didn't see any of those `$abstract` modules? That's because when we ran `yosys fifo.v`, the first command Yosys called was `read_verilog -defer fifo.v`. The `-defer` option tells `read_verilog` only read the abstract syntax tree and defer actual compilation to a later `hierarchy` command. This is useful in cases where the default parameters of modules yield invalid code which is not synthesizable. This is why Yosys defers compilation automatically and is one of the reasons why `hierarchy` should always be the first command after loading the design. If we know that our design won't run into this issue, we can skip the `-defer`.

Todo

 
hierarchy failure modes

Note

The number before a command's output increments with each command run. Don't worry if your numbers don't match ours! The output you are seeing comes from the same script that was used to generate the images in this document, included in the source as `fifo.py`. There are extra commands being run which you don't see, but feel free to try them yourself, or play around with different commands. You can always start over with a clean slate by calling `exit` or hitting `ctrl+d` (i.e. EOF) and re-launching the Yosys interactive terminal. `ctrl+c` (i.e. SIGINT) will also end the terminal session but will return an error code rather than exiting gracefully.

We can also run *proc* now to finish off the full *begin section*. Because the design schematic is quite large, we will be showing just the data path for the `rdata` output. If you would like to see the entire design for yourself, you can do so with *show - generate schematics using graphviz*. Note that the *show* command only works with a single module, so you may need to call it with `show fifo`. *Displaying schematics* section in *Scripting in Yosys* has more on how to use *show*.

The highlighted `fifo_reader` block contains an instance of the *addr_gen module after proc -noopt* that we



The other highlighted block is a *\$memrd* cell. At this stage of synthesis we don't yet know what type of memory is going to be implemented, but we *do* know that `rdata <= data[raddr];` could be implemented as a read from memory. Note that the *\$memrd* cell here is asynchronous, with both the clock and enable signal undefined; shown with the 1'x inputs.

Advanced usage docs for *Converting process blocks*

At this stage of a synthesis flow there are a few other commands we could run. In `synth_ice40` we get these:

```
flatten
tribuf -logic
deminout
```

Listing 2.7: output of `flatten;;`

The pieces have moved around a bit, but we can see *addr_gen module after proc -noopt* from earlier has replaced the `fifo_reader` block in *rdata output after proc*. We can also see that the `addr` output has been renamed to `fifo_reader.addr` and merged with the `raddr` wire feeding into the *\$memrd* cell. This wire merging happened during the call to `clean` which we can see in the *output of flatten::*.

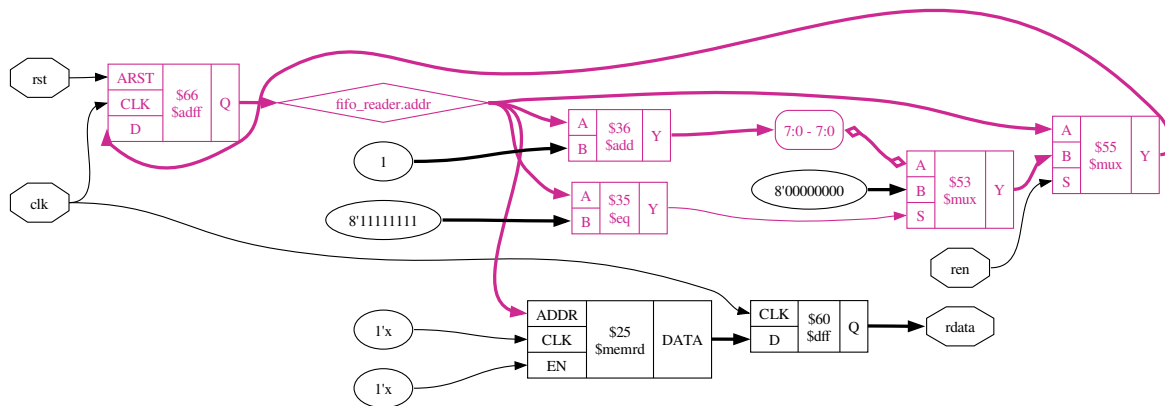


Fig. 2.5: rdata output after flatten;;

Note

`flatten` and `clean` would normally be combined into a single `yosys> flatten;;` output, but they appear separately here as a side effect of using `echo` for generating the terminal style output.

Depending on the target architecture, this stage of synthesis might also see commands such as `tribuf` with the `-logic` option and `deminout`. These remove tristate and inout constructs respectively, replacing them with logic suitable for mapping to an FPGA. Since we do not have any such constructs in our example running these commands does not change our design.

2.2.5 The coarse-grain representation

At this stage, the design is in coarse-grain representation. It still looks recognizable, and cells are word-level operators with parametrizable width. This is the stage of synthesis where we do things like const propagation, expression rewriting, and trimming unused parts of wires.

This is also where we convert our FSMs and hard blocks like DSPs or memories. Such elements have to be inferred from patterns in the design and there are special passes for each. Detection of these patterns can also be affected by optimizations and other transformations done previously.

Note

While the iCE40 flow had a *flatten* section and put *proc* in the *begin* section, some synthesis scripts will instead include these in this section.

Part 1

In the iCE40 flow, we start with the following commands:

Listing 2.8: `coarse` section (part 1)

```
opt_expr
opt_clean
check
```

(continues on next page)

(continued from previous page)

```

opt -nodffe -nosdff
fsm
opt

```

We've already come across *opt_expr*, and *opt_clean* is the same as *clean* but with more verbose output. The *check* pass identifies a few obvious problems which will cause errors later. Calling it here lets us fail faster rather than wasting time on something we know is impossible.

Next up is *opt -nodffe -nosdff* performing a set of simple optimizations on the design. This command also ensures that only a specific subset of FF types are included, in preparation for the next command: *fsm -extract and optimize finite state machines*. Both *opt* and *fsm* are macro commands which are explored in more detail in *Optimization passes* and *FSM handling* respectively.

Up until now, the data path for *rdata* has remained the same since *rdata output after flatten;;*. However the next call to *opt* does cause a change. Specifically, the call to *opt_dff* without the *-nodffe -nosdff* options is able to fold one of the *\$mux* cells into the *\$adff* to form an *\$adffe* cell; highlighted below:


Listing 2.9: output of *opt_dff*

```
yosys> opt_dff
```

```

17. Executing OPT_DFF pass (perform DFF optimizations).
Adding EN signal on $procdff$59 ($adff) from module fifo (D = $0\count[8:0], Q = \count).
Adding EN signal on $flatten\fifo_writer.$procdff$66 ($adff) from module fifo (D =
->$flatten\fifo_writer.$procmux$53_Y, Q = \fifo_writer.addr).
Adding EN signal on $flatten\fifo_reader.$procdff$66 ($adff) from module fifo (D =
->$flatten\fifo_reader.$procmux$53_Y, Q = \fifo_reader.addr).

```

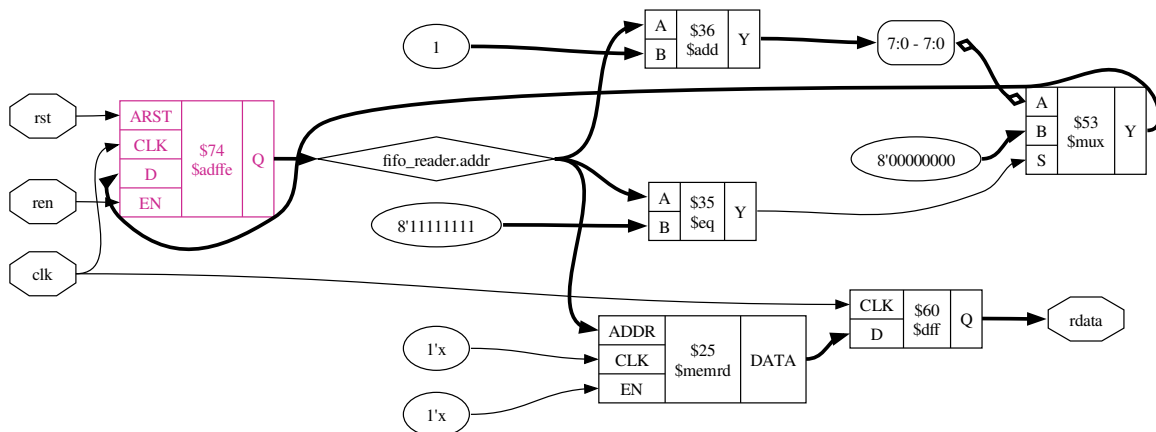Fig. 2.6: *rdata* output after *opt_dff*

See also

Advanced usage docs for

- *FSM handling*

- *Optimization passes*

Part 2

The next group of commands performs a series of optimizations:

Listing 2.10: coarse section (part 2)

```
wreduce
peepopt
opt_clean
share
techmap
opt_expr
opt_clean
memory_dff
```

First up is `wreduce`. If we run this we get the following:

Listing 2.11: output of `wreduce`

```
yosys> wreduce

19. Executing WREDUCE pass (reducing word size of cells).
Removed top 31 bits (of 32) from port B of cell fifo.$add$fifo.v:66$29 ($add).
Removed top 23 bits (of 32) from port Y of cell fifo.$add$fifo.v:66$29 ($add).
Removed top 31 bits (of 32) from port B of cell fifo.$sub$fifo.v:68$32 ($sub).
Removed top 23 bits (of 32) from port Y of cell fifo.$sub$fifo.v:68$32 ($sub).
Removed top 1 bits (of 2) from port B of cell fifo.$auto$opt_dff.cc:248:make_patterns_
↳logic$72 ($ne).
Removed cell fifo.$flatten\fifo_writer.$procmux$55 ($mux).
Removed top 31 bits (of 32) from port B of cell fifo.$flatten\fifo_writer.$add$fifo.v:19
↳$36 ($add).
Removed top 24 bits (of 32) from port Y of cell fifo.$flatten\fifo_writer.$add$fifo.v:19
↳$36 ($add).
Removed cell fifo.$flatten\fifo_reader.$procmux$55 ($mux).
Removed top 31 bits (of 32) from port B of cell fifo.$flatten\fifo_reader.$add$fifo.v:19
↳$36 ($add).
Removed top 24 bits (of 32) from port Y of cell fifo.$flatten\fifo_reader.$add$fifo.v:19
↳$36 ($add).
Removed top 23 bits (of 32) from wire fifo.$add$fifo.v:66$29_Y.
Removed top 24 bits (of 32) from wire fifo.$flatten\fifo_reader.$add$fifo.v:19$36_Y.
Removed top 24 bits (of 32) from wire fifo.$flatten\fifo_writer.$add$fifo.v:19$36_Y.

yosys> show -notitle -format dot -prefix rdata_wreduce o:rdata %ci*

20. Generating Graphviz representation of design.
Writing dot description to `rdata_wreduce.dot'.
Dumping selected parts of module fifo to page 1.

yosys> opt_clean

21. Executing OPT_CLEAN pass (remove unused cells and wires).
```

(continues on next page)

(continued from previous page)

```
Finding unused cells or wires in module \fifo..
```

```
Removed 0 unused cells and 5 unused wires.
```

```
<suppressed ~1 debug messages>
```

```
yosys> memory_dff
```

```
22. Executing MEMORY_DFF pass (merging $dff cells to $memrd).
```

```
Checking read port '\data'[0] in module '\fifo': merging output FF to cell.
```

```
Write port 0: non-transparent.
```

Looking at the data path for `rdata`, the most relevant of these width reductions are the ones affecting `fifo`. `$flatten\fifo_reader.$add$fifo.v`. That is the `$add` cell incrementing the `fifo_reader` address. We can look at the schematic and see the output of that cell has now changed.

Todo

pending bugfix in `wreduce` and/or `opt_clean`

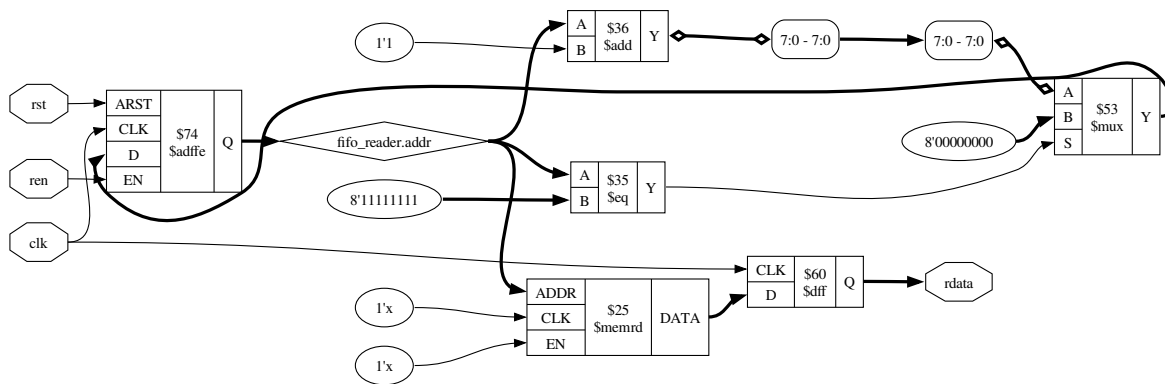


Fig. 2.7: `rdata` output after `wreduce`

The next two (new) commands are `peepopt` and `share`. Neither of these affect our design, and they're explored in more detail in *Optimization passes*, so let's skip over them. `techmap -map +/cmp2lut.v -D LUT_WIDTH=4` optimizes certain comparison operators by converting them to LUTs instead. The usage of `techmap` is explored more in *Technology mapping*.

Our next command to run is `memory_dff - merge input/output DFFs into memory read ports`.

Listing 2.12: output of `memory_dff`


```
yosys> memory_dff
```

```
22. Executing MEMORY_DFF pass (merging $dff cells to $memrd).
```

```
Checking read port '\data'[0] in module '\fifo': merging output FF to cell.
```

```
Write port 0: non-transparent.
```

As the title suggests, `memory_dff` has merged the output `$dff` into the `$memrd` cell and converted it to a `$memrd_v2` (highlighted). This has also connected the `CLK` port to the `clk` input as it is now a synchronous

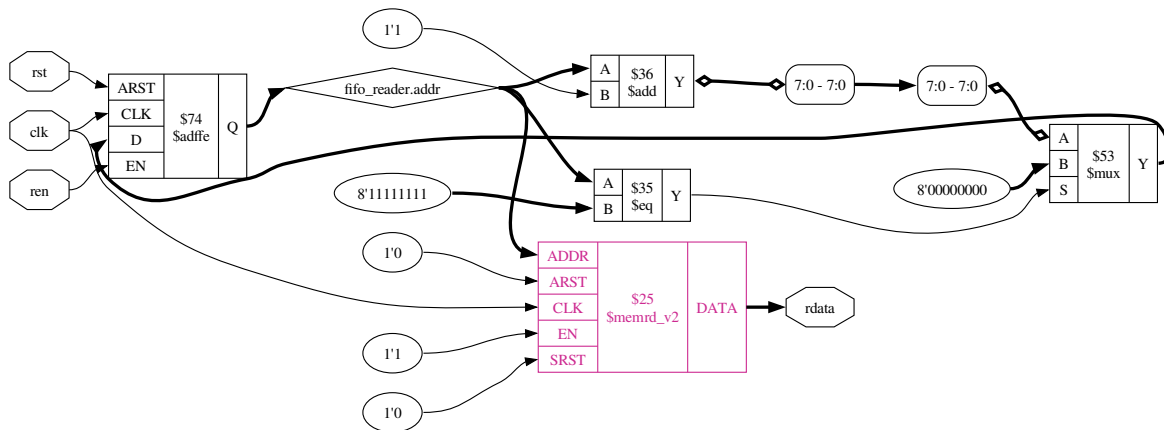Fig. 2.8: rdata output after *memory_dff*

memory read with appropriate enable (EN=1'1) and reset (ARST=1'0 and SRST=1'0) inputs.

See also

Advanced usage docs for

- [Optimization passes](#)
- [Technology mapping](#)
- [Memory handling](#)

Part 3

The third part of the `synth_ice40` flow is a series of commands for mapping to DSPs. By default, the iCE40 flow will not map to the hardware DSP blocks and will only be performed if called with the `-dsp` flag: `synth_ice40 -dsp`. While our example has nothing that could be mapped to DSPs we can still take a quick look at the commands here and describe what they do.

Listing 2.13: `coarse` section (part 3)

```
wreduce t:$mul
techmap
select a:mul2dsp
setattr -unset mul2dsp
opt_expr -fine
wreduce
select -clear
ice40_dsp
chtype -set $mul t:$__soft_mul
```

`wreduce t:$mul` performs width reduction again, this time targeting only cells of type `$mul`. `techmap -map +/mul2dsp.v -map +/ice40/dsp_map.v ... -D DSP_NAME=$__MUL16X16` uses `techmap` to map `$mul` cells to `$__MUL16X16` which are, in turn, mapped to the iCE40 SB_MAC16. Any multipliers which aren't compatible with conversion to `$__MUL16X16` are relabelled to `$__soft_mul` before `chtype` changes them back to `$mul`.

During the mul2dsp conversion, some of the intermediate signals are marked with the attribute mul2dsp. By calling `select a:mul2dsp` we restrict the following commands to only operate on the cells and wires used for these signals. `setattr` removes the now unnecessary mul2dsp attribute. `opt_expr` we've already come across for const folding and simple expression rewriting, the `-fine` option just enables more fine-grain optimizations. Then we perform width reduction a final time and clear the selection.

Todo

ice40_dsp is pmgen

Finally we have `ice40_dsp`: similar to the `memory_dff` command we saw in the previous section, this merges any surrounding registers into the SB_MAC16 cell. This includes not just the input/output registers, but also pipeline registers and even a post-adder where applicable: turning a multiply + add into a single multiply-accumulate.

See also

Advanced usage docs for *Technology mapping*

Part 4

That brings us to the fourth and final part for the iCE40 synthesis flow:

Listing 2.14: `coarse` section (part 4)

```
alumacc
opt
memory -nomap [-no-rw-check]
opt_clean
```

Where before each type of arithmetic operation had its own cell, e.g. `$add`, we now want to extract these into `$alu` and `$macc_v2` cells which can help identify opportunities for reusing logic. We do this by running `alumacc`, which we can see produce the following changes in our example design:

Listing 2.15: output of `alumacc`

```
yosys> alumacc

24. Executing ALUMACC pass (create $alu and $macc cells).
Extracting $alu and $macc cells in module fifo:
  creating $macc model for $add$fifo.v:66$29 ($add).
  creating $macc model for $flatten\fifo_reader.$add$fifo.v:19$36 ($add).
  creating $macc model for $flatten\fifo_writer.$add$fifo.v:19$36 ($add).
  creating $macc model for $sub$fifo.v:68$32 ($sub).
  creating $alu model for $macc $sub$fifo.v:68$32.
  creating $alu model for $macc $flatten\fifo_writer.$add$fifo.v:19$36.
  creating $alu model for $macc $flatten\fifo_reader.$add$fifo.v:19$36.
  creating $alu model for $macc $add$fifo.v:66$29.
  creating $alu cell for $add$fifo.v:66$29: $auto$alumacc.cc:495:replace_alu$87
  creating $alu cell for $flatten\fifo_reader.$add$fifo.v:19$36: $auto$alumacc.
  cc:495:replace_alu$90
  creating $alu cell for $flatten\fifo_writer.$add$fifo.v:19$36: $auto$alumacc.
```

(continues on next page)

(continued from previous page)

```

cc:495:replace_alu$93
creating $alu cell for $sub$fifo.v:68$32: $auto$alumacc.cc:495:replace_alu$96
created 4 $alu and 0 $macc cells.

```

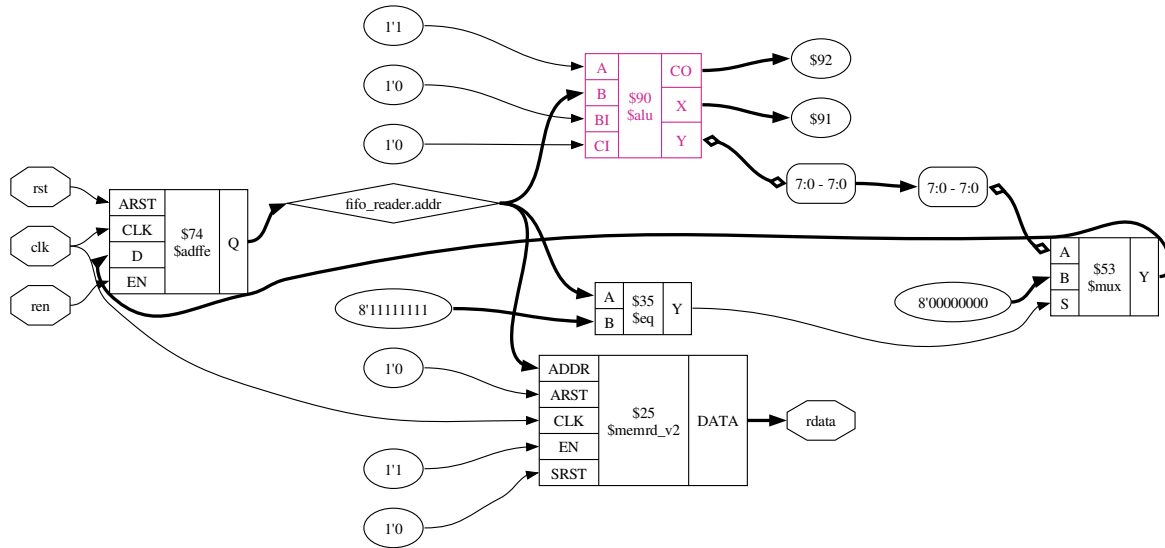


Fig. 2.9: rdata output after alumacc

Once these cells have been inserted, the call to `opt` can combine cells which are now identical but may have been missed due to e.g. the difference between `$add` and `$sub`.


The other new command in this part is `memory` - *translate memories to basic cells*. `memory` is another macro command which we examine in more detail in *Memory handling*. For this document, let us focus just on the step most relevant to our example: `memory_collect`. Up until this point, our memory reads and our memory writes have been totally disjoint cells; operating on the same memory only in the abstract. `memory_collect` combines all of the reads and writes for a memory block into a single cell.

Looking at the schematic after running `memory_collect` we see that our `$memrd_v2` cell has been replaced with a `$mem_v2` cell named `data`, the same name that we used in `fifo.v`. Where before we had a single set of signals for address and enable, we now have one set for reading (`RD_*`) and one for writing (`WR_*`), as well as both `WR_DATA` input and `RD_DATA` output.

See also

Advanced usage docs for

- *Optimization passes*
- *Memory handling*

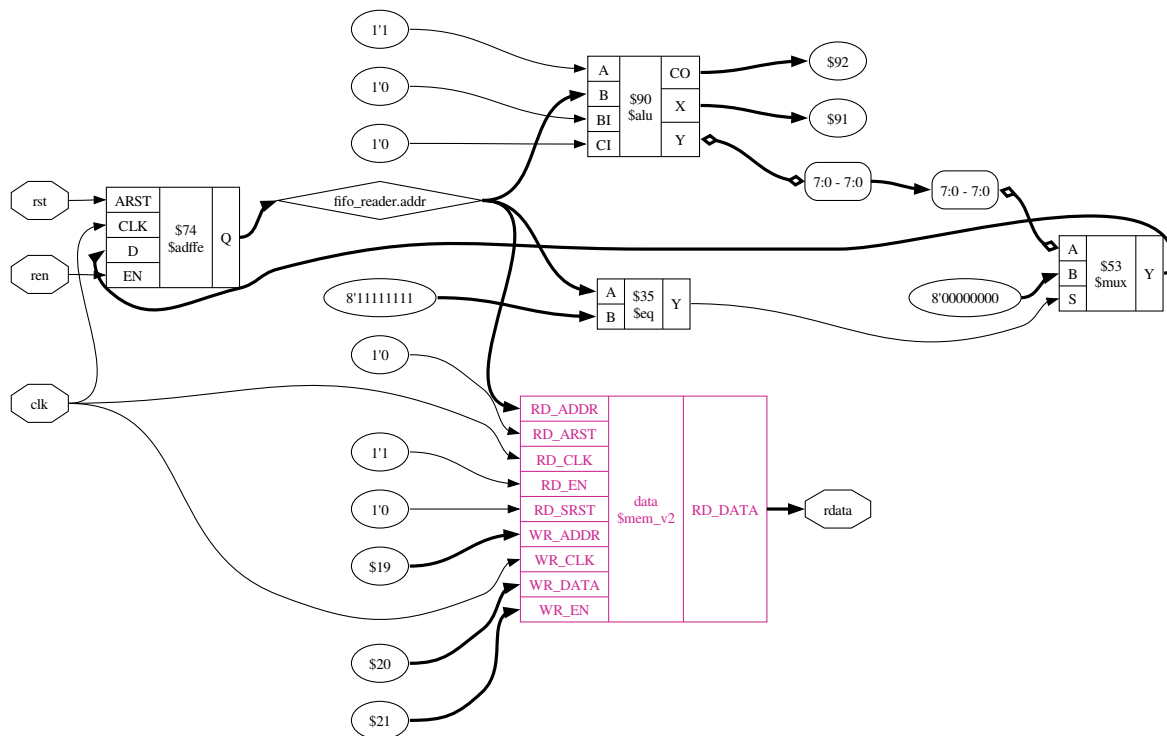Fig. 2.10: rdata output after `memory_collect`

Final note

Having now reached the end of the the coarse-grain representation, we could also have gotten here by running `synth_ice40 -top fifo -run :map_ram` after loading the design. The `-run <from_label>:<to_label>` option with an empty `<from_label>` starts from the *begin section*, while the `<to_label>` runs up to but including the *map_ram section*.

2.2.6 Hardware mapping

The remaining sections each map a different type of hardware and are much more architecture dependent than the previous sections. As such we will only be looking at each section very briefly.

If you skipped calling `read_verilog -D ICE40_HX -lib -specify +/ice40/cells_sim.v` earlier, do it now.

Memory blocks

Mapping to hard memory blocks uses a combination of *memory_libmap* and *techmap*.

Listing 2.16: *map_ram* section

```
memory_libmap
techmap
ice40_braminit
```

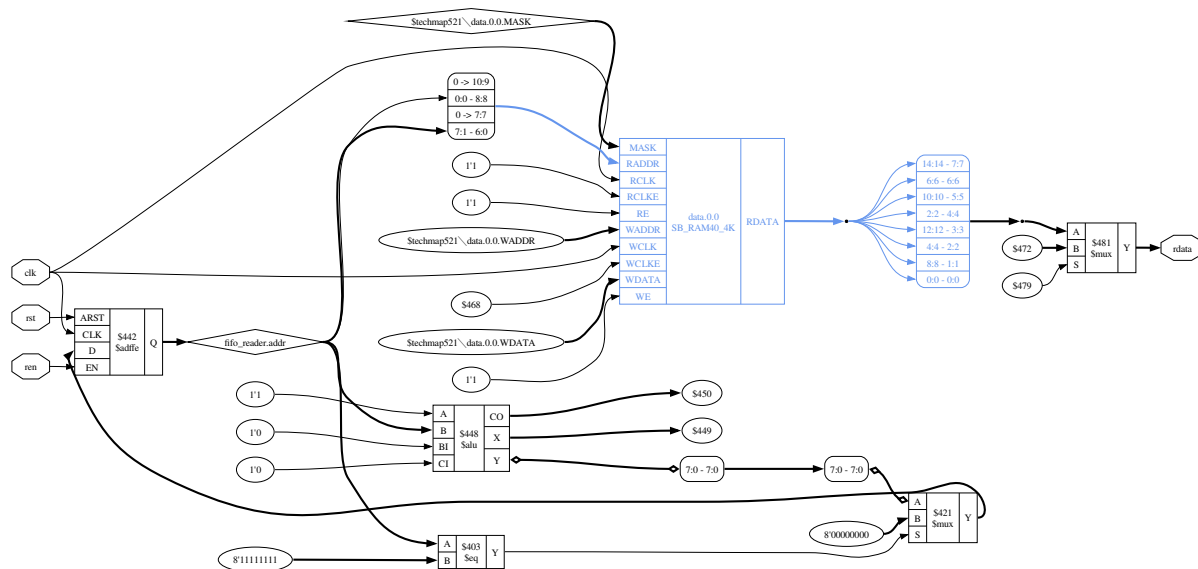


Fig. 2.11: *rdata* output after *map_ram* section

The *map_ram* section converts the generic `$mem_v2` into the iCE40 `SB_RAM40_4K` (highlighted). We can also see the memory address has been remapped, and the data bits have been reordered (or swizzled). There is also now a `$mux` cell controlling the value of `rdata`. In *fifo.v* we wrote our memory as read-before-write, however the `SB_RAM40_4K` has undefined behaviour when reading from and writing to the same address in the same cycle. As a result, extra logic is added so that the generated circuit matches the behaviour of the verilog. *Synchronous SDP with undefined collision behavior* describes how we could change our verilog to match our hardware instead.

If we run `memory_libmap` under the `debug` command we can see candidates which were identified for mapping, along with the costs of each and what logic requires emulation.

```
yosys> debug memory_libmap -lib +/ice40/brams.txt -lib +/ice40/spram.txt -no-auto-huge
4. Executing MEMORY_LIBMAP pass (mapping memories to cells).
Memory fifo.data mapping candidates (post-geometry):
- logic fallback
  - cost: 2048.000000
- $__ICE40_RAM4K_:
  - option HAS_BE 0
  - emulation score: 7
  - replicates (for ports): 1
  - replicates (for data): 1
  - mux score: 0
  - demux score: 0
  - cost: 78.000000
  - abits 11 dbits 2 4 8 16
  - chosen base width 8
  - swizzle 0 1 2 3 4 5 6 7
  - emulate read-first behavior
  - write port 0: port group W
    - widths 2 4 8
  - read port 0: port group R
    - widths 2 4 8 16
    - emulate transparency with write port 0
- $__ICE40_RAM4K_:
  - option HAS_BE 1
  - emulation score: 7
  - replicates (for ports): 1
  - replicates (for data): 1
  - mux score: 0
  - demux score: 0
  - cost: 78.000000
  - abits 11 dbits 2 4 8 16
  - byte width 1
  - chosen base width 8
  - swizzle 0 1 2 3 4 5 6 7
  - emulate read-first behavior
  - write port 0: port group W
    - widths 16
  - read port 0: port group R
    - widths 2 4 8 16
    - emulate transparency with write port 0
Memory fifo.data mapping candidates (after post-geometry prune):
- logic fallback
  - cost: 2048.000000
- $__ICE40_RAM4K_:
  - option HAS_BE 0
  - emulation score: 7
  - replicates (for ports): 1
  - replicates (for data): 1
  - mux score: 0
  - demux score: 0
```

(continues on next page)

(continued from previous page)

```

- cost: 78.000000
- abits 11 dbits 2 4 8 16
- chosen base width 8
- swizzle 0 1 2 3 4 5 6 7
- emulate read-first behavior
- write port 0: port group W
  - widths 2 4 8
- read port 0: port group R
  - widths 2 4 8 16
  - emulate transparency with write port 0
mapping memory fifo.data via $_ICE40_RAM4K_

```


The `$_ICE40_RAM4K_` cell is defined in the file `techlibs/ice40/brams.txt`, with the mapping to `SB_RAM40_4K` done by `techmap` using `techlibs/ice40/brams_map.v`. Any leftover memory cells are then converted into flip flops (the logic fallback) with `memory_map`.

Listing 2.17: map_ffram section

```

opt -fast -mux_undef -undriven -fine
memory_map
opt -undriven -fine

```

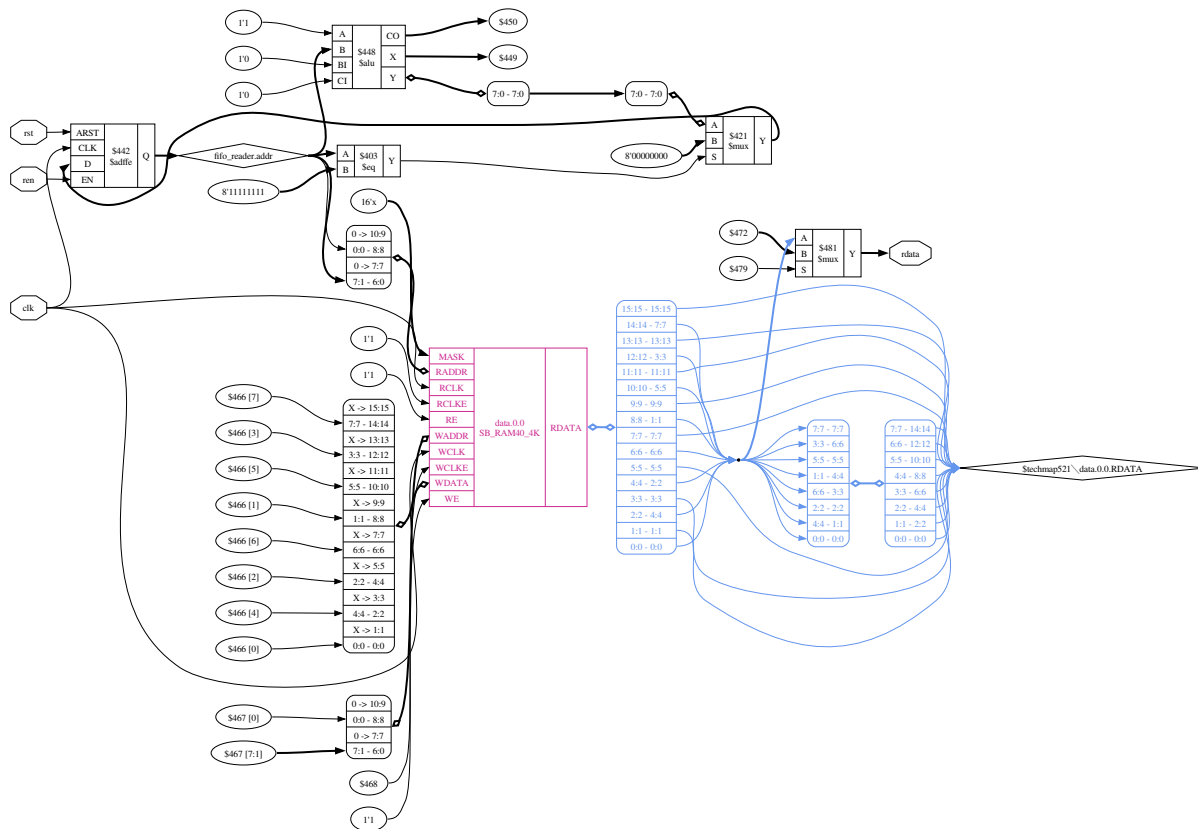Fig. 2.12: rdata output after `map_ffram` section

Note

The visual clutter on the RDATA output port (highlighted) is an unfortunate side effect of *opt_clean* on the swizzled data bits. In connecting the *\$mux* input port directly to RDATA to reduce the number of wires, the `$techmap579\data.0.0.RDATA` wire becomes more visually complex.

See also

Advanced usage docs for

- *Technology mapping*
- *Memory handling*

Arithmetic

Uses `techmap` to map basic arithmetic logic to hardware. This sees somewhat of an explosion in cells as multi-bit *\$mux* and *\$adffe* are replaced with single-bit *\$MUX_* and *\$_DFFE_PPOP_* cells, while the *\$alu* is replaced with primitive *\$_OR_* and *\$_NOT_* gates and a *\$lut* cell.

Listing 2.18: `map_gates` section

```
ice40_wrapcarry
techmap
opt -fast
abc -dff -D 1
ice40_opt
```

See also

Advanced usage docs for *Technology mapping*

Flip-flops


Convert FFs to the types supported in hardware with `dfflegalize`, and then use `techmap` to map them. In our example, this converts the *\$_DFFE_PPOP_* cells to *SB_DFFER*.


We also run `simplemap` here to convert any remaining cells which could not be mapped to hardware into gate-level primitives. This includes optimizing *\$MUX_* cells where one of the inputs is a constant 1'0, replacing it instead with an *\$_AND_* cell.

Listing 2.19: `map_ffs` section

```
dfflegalize
techmap
opt_expr -mux_undef
simplemap
ice40_opt -full
```

See also

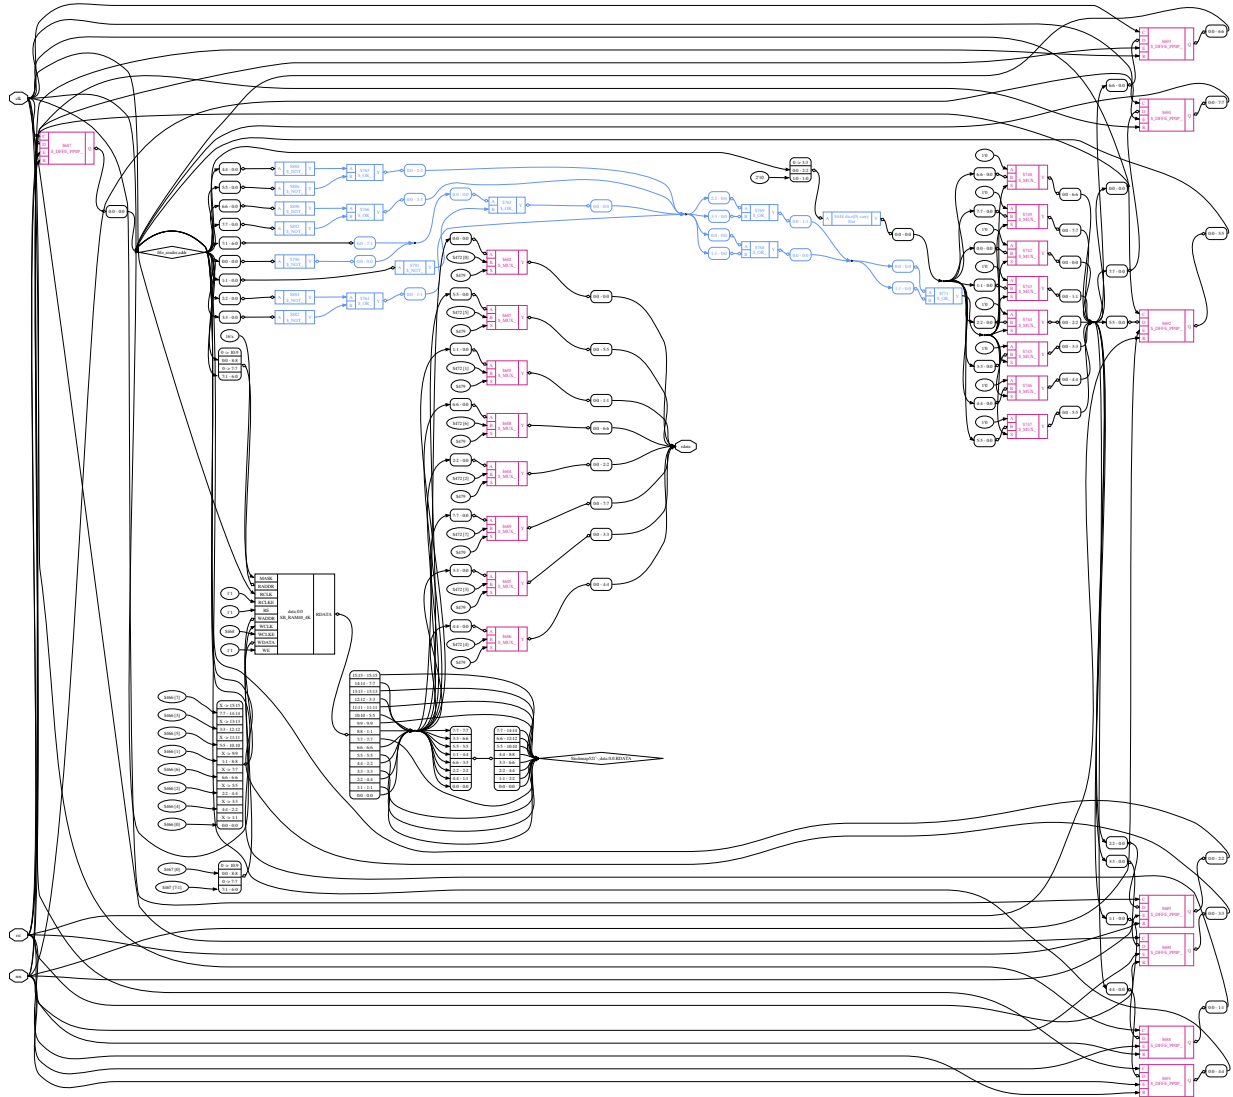Fig. 2.13: rdata output after *map_gates* section

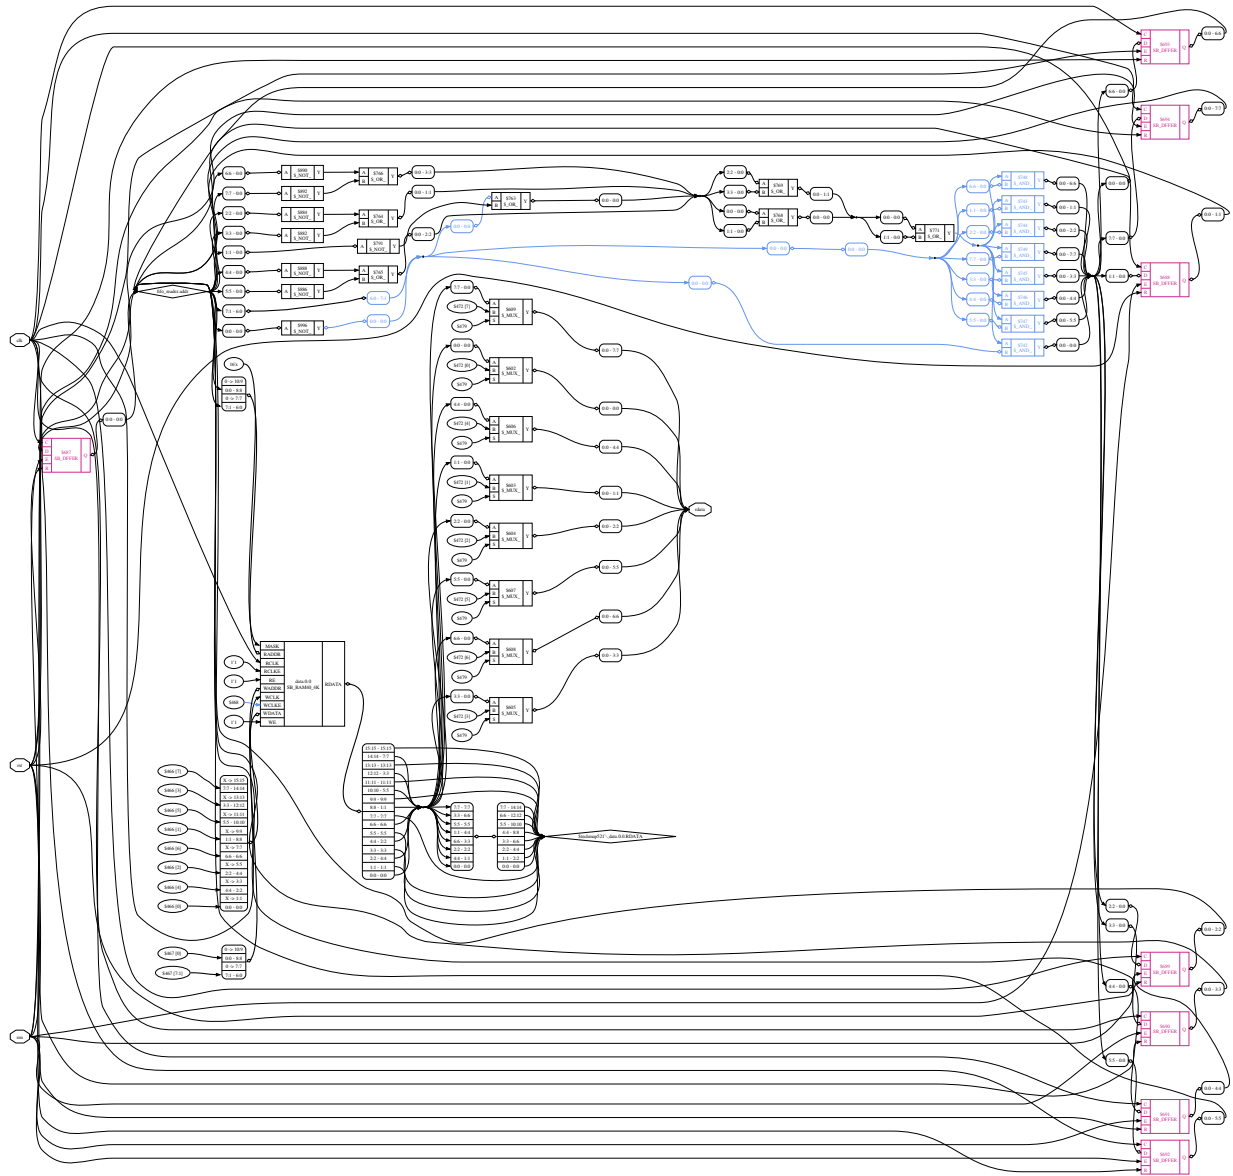Fig. 2.14: rdata output after *map_ffs* section

Advanced usage docs for *Technology mapping*

LUTs

`abc` and `techmap` are used to map LUTs; converting primitive cell types to use *\$lut* and `SB_CARRY` cells. Note that the iCE40 flow uses `abc9` rather than `abc`. For more on what these do, and what the difference between these two commands are, refer to *The ABC toolbox*.

Listing 2.20: `map_luts` section

```
abc
ice40_opt
techmap
simplemap
techmap
flowmap
read_verilog
abc9
ice40_wrapcarry -unwrap
techmap
clean
opt_lut -tech ice40
```

Finally we use `techmap` to map the generic *\$lut* cells to iCE40 `SB_LUT4` cells.

Listing 2.21: `map_cells` section

```
techmap
clean
```

See also

Advanced usage docs for

- *Technology mapping*
- *The ABC toolbox*

Other cells

The following commands may also be used for mapping other cells:



`hilomap`

Some architectures require special driver cells for driving a constant hi or lo value. This command replaces simple constants with instances of such driver cells.

`iopadmap`

Top-level input/outputs must usually be implemented using special I/O-pad cells. This command inserts such cells to the design.

These commands tend to either be in the *map_cells section* or after the *check section* depending on the flow.

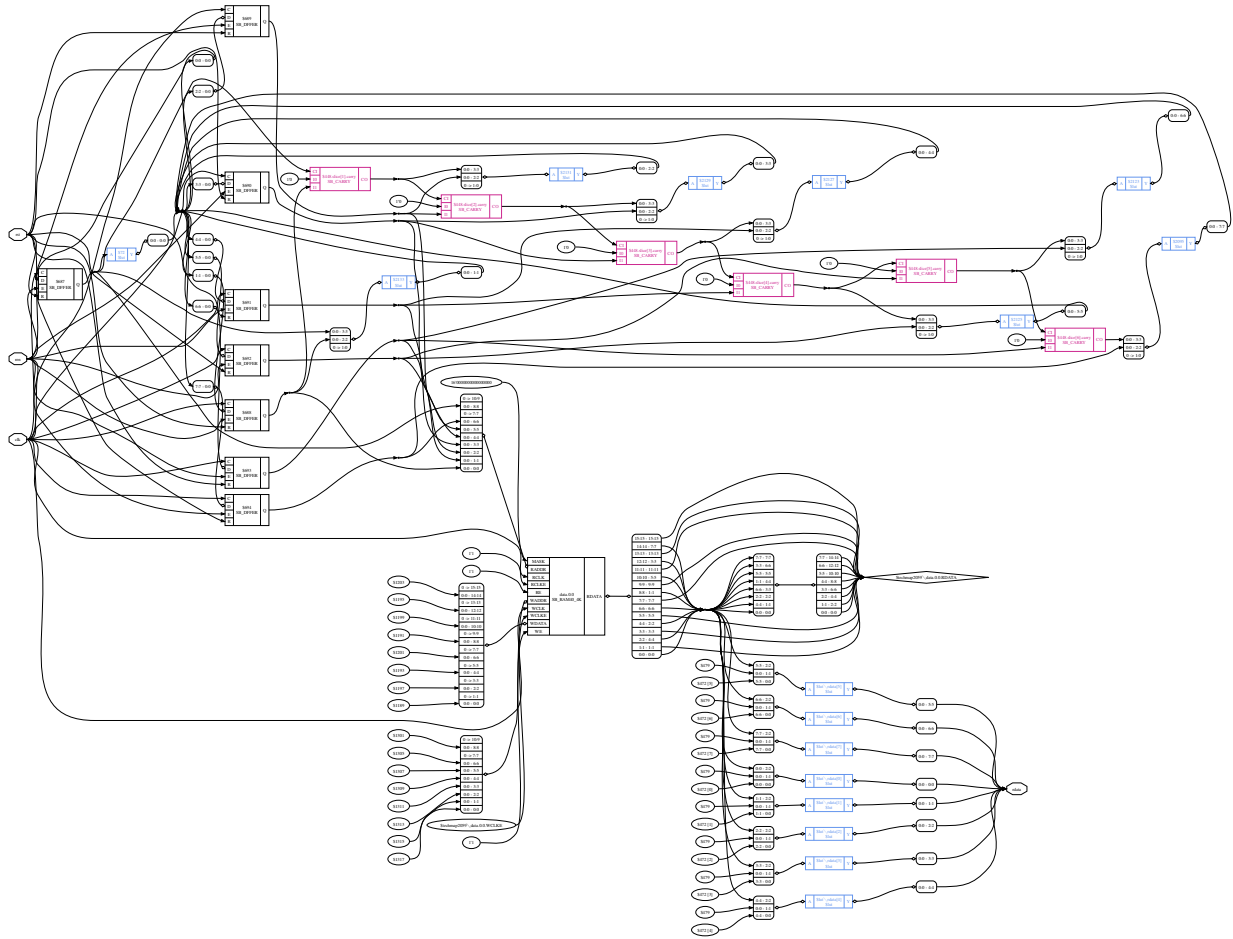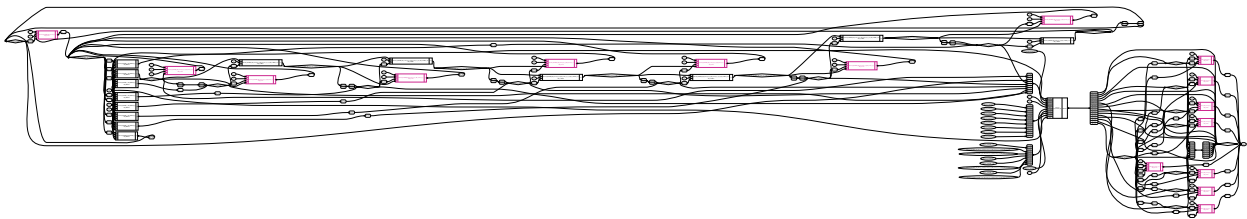Fig. 2.15: rdata output after *map_luts* sectionFig. 2.16: rdata output after *map_cells* section

2.2.7 Final steps

The next section of the iCE40 synth flow performs some sanity checking and final tidy up:

Listing 2.22: `check` section

```
autoname
hierarchy -check
stat
check -noinit
blackbox =A:whitebox
```

The new commands here are:

- `autoname`,
- *`stat` - print some statistics*, and
- `blackbox`.

The output from *`stat`* is useful for checking resource utilization; providing a list of cells used in the design and the number of each, as well as the number of other resources used such as wires and processes. For this design, the final call to *`stat`* should look something like the following:

```
yosys> stat -top fifo

17. Printing statistics.

=== fifo ===

Number of wires:          95
Number of wire bits:      264
Number of public wires:   95
Number of public wire bits: 264
Number of ports:          7
Number of port bits:      29
Number of memories:       0
Number of memory bits:    0
Number of processes:      0
Number of cells:          138
  $scopeinfo              2
  SB_CARRY                 26
  SB_DFF                   26
  SB_DFFER                 25
  SB_LUT4                  58
  SB_RAM40_4K              1
```

Note that the `-top fifo` here is optional. *`stat`* will automatically use the module with the `top` attribute set, which `fifo` was when we called `hierarchy`. If no module is marked `top`, then stats will be shown for each module selected.

The *`stat`* output is also useful as a kind of sanity-check: Since we have already run *`proc`*, we wouldn't expect there to be any processes. We also expect `data` to use hard memory; if instead of an `SB_RAM40_4K` saw a high number of flip-flops being used we might suspect something was wrong.

If we instead called *`stat`* immediately after `read_verilog fifo.v` we would see something very different:


```
yosys> stat
```

```
2. Printing statistics.
```

```
=== fifo ===
```

Number of wires:	28
Number of wire bits:	219
Number of public wires:	9
Number of public wire bits:	45
Number of ports:	7
Number of port bits:	29
Number of memories:	1
Number of memory bits:	2048
Number of processes:	3
Number of cells:	9
\$add	1
\$logic_and	2
\$logic_not	2
\$memrd	1
\$sub	1
addr_gen	2

```
=== addr_gen ===
```

Number of wires:	8
Number of wire bits:	60
Number of public wires:	4
Number of public wire bits:	11
Number of ports:	4
Number of port bits:	11
Number of memories:	0
Number of memory bits:	0
Number of processes:	2
Number of cells:	2
\$add	1
\$eq	1

Notice how `fifo` and `addr_gen` are listed separately, and the statistics for `fifo` show 2 `addr_gen` modules. Because this is before the memory has been mapped, we also see that there is 1 memory with 2048 memory bits; matching our 8-bit wide `data` memory with 256 values ($8 * 256 = 2048$).

Synthesis output

The iCE40 synthesis flow has the following output modes available:

- `write_blif`,
- `write_edif`, and
- `write_json`.

As an example, if we called `synth_ice40 -top fifo -json fifo.json`, our synthesized `fifo` design will be output as `fifo.json`. We can then read the design back into Yosys with `read_json`, but make sure you use `design -reset` or open a new interactive terminal first. The JSON output we get can also be loaded into `nextpnr` to do place and route; but that is beyond the scope of this documentation.

See also`synth_ice40`

2.3 Scripting in Yosys

On the previous page we went through a synthesis script, running each command in the interactive Yosys shell. On this page, we will be introducing the script file format and how you can make your own synthesis scripts.

Yosys script files typically use the `.ys` extension and contain a set of commands for Yosys to run sequentially. These commands are the same ones we were using on the previous page like `read_verilog` and `hierarchy`.

2.3.1 Script parsing

As with the interactive shell, each command consists of the command name, and an optional whitespace separated list of arguments. Commands are terminated with the newline character, and anything after a hash sign `#` is a comment (i.e. it is ignored).

It is also possible to terminate commands with a semicolon `;`. This is particularly useful in conjunction with the `-p <command>` command line option, where `<command>` can be a string with multiple commands separated by semicolon. In-line comments can also be made with the colon `:`, where the end of the comment is a semicolon `;` or a new line.

Listing 2.23: Using the `-p` option

```
$ yosys -p 'read_verilog fifo.v; :this is a comment; prep'
```

Warning

The space after the semicolon is required for correct parsing. `log a;log b;` for example will display `a;log b` instead of `a` and `b` as might be expected.

Another special character that can be used in Yosys scripts is the bang `!`. Anything after the bang will be executed as a shell command. This can only be terminated with a new line. Any semicolons, hashes, or other special characters will be passed to the shell. If an error code is returned from the shell it will be raised by Yosys. `exec` provides a much more flexible way of executing commands, allowing the output to be logged and more control over when to generate errors.

Warning

Take care when using the `yosys -p` option. Some shells such as `bash` will perform substitution options inside of a double quoted string, such as `!` for history substitution and `$` for variable substitution; single quotes should be used instead to pass the string to Yosys without substitution.

2.3.2 The synthesis starter script

All of the images and console output used in *Synthesis starter* were generated by Yosys, using Yosys script files found in `docs/source/code_examples/fifo`. If you haven't already, let's take a look at some of those script files now.

Listing 2.24: A section of `fifo.ys`, generating the images used for
The addr_gen module

```

10 echo on
11 hierarchy -top addr_gen
12 select -module addr_gen
13 select -list
14 select t:*
15 select -list
16 select -set new_cells %
17 select -clear
18 show -format dot -prefix addr_gen_show addr_gen
19 show -format dot -prefix new_cells_show -notitle @new_cells
20 show -color maroon3 @new_cells -color cornflowerblue p:* -notitle -format dot -prefix
   ↪ addr_gen_hier
21
22 # =====
23 proc -noopt
24 select -set new_cells t:$mux t:*dff
25 show -color maroon3 @new_cells -notitle -format dot -prefix addr_gen_proc
26
27 # =====
28 opt_expr; clean
29 select -set new_cells t:$eq
30 show -color cornflowerblue @new_cells -notitle -format dot -prefix addr_gen_clean
31
32 # =====

```

The first command there, `echo on`, uses `echo` to enable command echoes on. This is how we generated the code listing for *hierarchy -top addr_gen output*. Turning command echoes on prints the `yosys> hierarchy -top addr_gen` line, making the output look the same as if it were an interactive terminal. `hierarchy -top addr_gen` is of course the command we were demonstrating, including the output text and an image of the design schematic after running it.

We briefly touched on `select` when it came up in `synth_ice40`, but let's look at it more now.

Selections intro

The `select` command is used to modify and view the list of selected objects:

```

yosys> select -module addr_gen

yosys [addr_gen]> select -list
addr_gen
addr_gen/$add$fifo.v:19$3
addr_gen/$eq$fifo.v:16$2
addr_gen/$1\addr[7:0]
addr_gen/$add$fifo.v:19$3_Y
addr_gen/$eq$fifo.v:16$2_Y
addr_gen/$0\addr[7:0]
addr_gen/addr
addr_gen/rst
addr_gen/clk
addr_gen/en

```

(continues on next page)

(continued from previous page)

```

addr_gen/$proc$fifo.v:0$4
addr_gen/$proc$fifo.v:12$1

yosys [addr_gen]> select t:*

yosys [addr_gen]> select -list
addr_gen/$add$fifo.v:19$3
addr_gen/$eq$fifo.v:16$2

yosys [addr_gen]> select -set new_cells %

yosys [addr_gen]> select -clear

```

When we call `select -module addr_gen` we are changing the currently active selection from the whole design, to just the `addr_gen` module. Notice how this changes the `yosys` at the start of each command to `yosys [addr_gen]`? This indicates that any commands we run at this point will *only* operate on the `addr_gen` module. When we then call `select -list` we get a list of all objects in the `addr_gen` module, including the module itself, as well as all of the wires, inputs, outputs, processes, and cells.

Next we perform another selection, `select t:*`. The `t:` part signifies we are matching on the *cell type*, and the `*` means to match anything. For this (very simple) selection, we are trying to find all of the cells, regardless of their type. The active selection is now shown as `[addr_gen]*`, indicating some sub-selection of the `addr_gen` module. This gives us the `$add` and `$eq` cells, which we want to highlight for the *addr_gen module after hierarchy* image.

We can assign a name to a selection with `select -set`. In our case we are using the name `new_cells`, and telling it to use the current selection, indicated by the `%` symbol. We can then use this named selection by referring to it as `@new_cells`, which we will see later. Then we clear the selection so that the following commands can operate on the full design. While we split that out for this document, we could have done the same thing in a single line by calling `select -set new_cells addr_gen/t:*`. If we know we only have the one module in our design, we can even skip the `addr_gen/` part. Looking further down *the fifo.y code* we can see this with `select -set new_cells t:$mux t:*dff`. We can also see in that command that selections don't have to be limited to a single statement.

Many commands also support an optional `[selection]` argument which can be used to override the currently selected objects. We could, for example, call `clean addr_gen` to have `clean` operate on *just* the `addr_gen` module.

Detailed documentation of the select framework can be found under *Selections* or in the command reference at *select - modify and view the list of selected objects*.

Displaying schematics

While the `select` command is very useful, sometimes nothing beats being able to see a design for yourself. This is where `show` comes in. Note that this document is just an introduction to the `show` command, only covering the basics. For more information, including a guide on what the different symbols represent, see *A look at the show command* and the *Interactive design investigation* page.

Note

The `show` command requires a working installation of `GraphViz` and `xdot` for displaying the actual circuit diagrams.

This is the first `show` command we called in `fifo.y`, *as we saw above*. If we look at the log output for this

image we see the following:

```
yosys> show -format dot -prefix addr_gen_show addr_gen
```

4. Generating Graphviz representation of design.

Writing dot description to `addr_gen_show.dot'.

Dumping module addr_gen to page 1.

Calling `show` with `-format dot` tells it we want to output a `.dot` file rather than opening it for display. The `-prefix addr_gen_show` option indicates we want the file to be called `addr_gen_show.*`. Remember, we do this in `fifo.py` because we need to store the image for displaying in the documentation you're reading. But if you just want to display the images locally you can skip these two options. The `-format` option internally calls the `dot` command line program from GraphViz to convert to formats other than `.dot`. Check [GraphViz output docs](#) for more on available formats.

Note

If you are using a POSIX based version of Yosys (such as for Mac or Linux), `xdot` will be opened in the background and Yosys can continue to be used. If it is still open, future calls to `show` will use the same `xdot` instance.

The `addr_gen` at the end tells it we only want the `addr_gen` module, just like when we called `select -module addr_gen` in [Selections intro](#). That last parameter doesn't have to be a module name, it can be any valid selection string. Remember when we *assigned a name to a selection* and called it `new_cells`? We saw in the `select -list` output that it contained two cells, an `$add` and an `$eq`. We can call `show` on that selection just as easily:

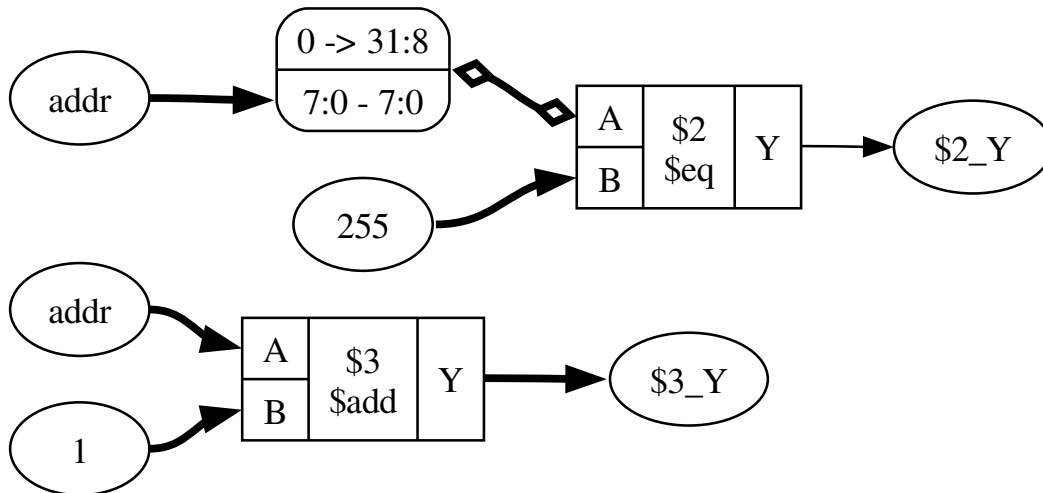


Fig. 2.18: Calling `show -notitle @new_cells`

We could have gotten the same output with `show -notitle t:$add t:$eq` if we didn't have the named selection. By adding the `-notitle` flag there we can also get rid of the `addr_gen` title that would have been

automatically added. The last two images were both added for this introduction. The next image is the first one we saw in *Synthesis starter*: showing the full `addr_gen` module while also highlighting `@new_cells` and the two `PROC` blocks. To achieve this highlight, we make use of the `-color` option:

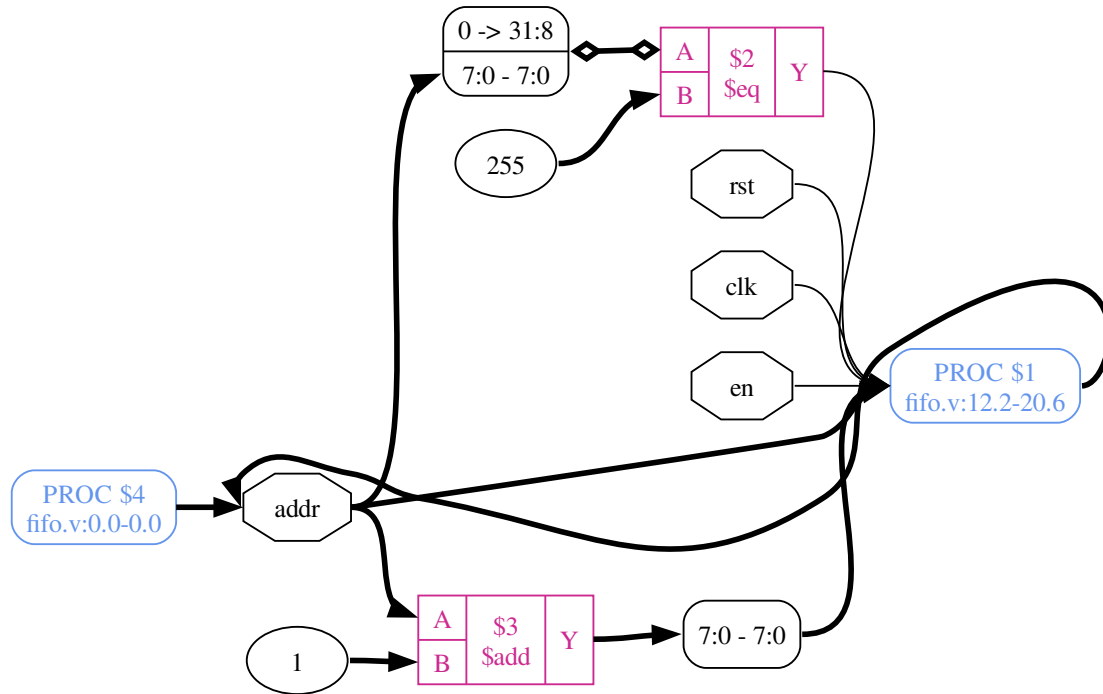


Fig. 2.19: Calling `show -color maroon3 @new_cells -color cornflowerblue p:* -notitle`

As described in the the `help` output for `show` (or by clicking on the `show` link), colors are specified as `-color <color> <object>`. Color names for the `<color>` portion can be found on the [GraphViz color docs](#). Unlike the final `show` parameter which can have be any selection string, the `<object>` part must be a single selection expression or named selection. That means while we can use `@new_cells`, we couldn't use `t:$eq t:$add`. In general, if a command lists `[selection]` as its final parameter it can be any selection string. Any selections that are not the final parameter, such as those used in options, must be a single expression instead.

For all of the options available to `show`, check the command reference at `show - generate schematics using graphviz`.

See also

A look at the show command on the *Interactive design investigation* page.

USING YOSYS (ADVANCED)

While much of Yosys is focused around synthesis, there are also a number of other useful things that can be accomplished with Yosys scripts or in an interactive shell. As such this section is broken into two parts: *Synthesis in detail* expands on the *Synthesis starter* and goes into further detail on the major commands used in synthesis; *More scripting* covers the ways Yosys can interact with designs for a deeper investigation.

3.1 Synthesis in detail

Synthesis can generally be broken down into coarse-grain synthesis, and fine-grain synthesis. We saw this in *Synthesis starter* where a design was loaded and elaborated and then went through a series of coarse-grain optimizations before being mapped to hard blocks and fine-grain cells. Most commands in Yosys will target either coarse-grain representation or fine-grain representation, with only a select few compatible with both states.

Commands such as *proc*, *fsm*, and *memory* rely on the additional information in the coarse-grain representation, along with a number of optimizations such as *wreduce*, *share*, and *alumacc*. *opt* provides optimizations which are useful in both states, while *techmap* is used to convert coarse-grain cells to the corresponding fine-grain representation.

Single-bit cells (logic gates, FFs) as well as LUTs, half-adders, and full-adders make up the bulk of the fine-grain representation and are necessary for commands such as *abc/abc9*, *simplemap*, *dfflegalize*, and *memory_map*.

3.1.1 Synth commands

Todo
comment on common <code>synth_*</code> options, like <code>-run</code>

Packaged `synth_*` commands

A list of all synth commands included in Yosys for different platforms can be found under *Technology libraries*. Each command runs a script of sub commands specific to the platform being targeted. Note that not all of these scripts are actively maintained and may not be up-to-date.

General synthesis

In addition to the above hardware-specific synth commands, there is also *prep*. This command is limited to coarse-grain synthesis, without getting into any architecture-specific mappings or optimizations. Among other things, this is useful for design verification.

The following commands are executed by the *prep* command:

```
begin:
    hierarchy -check [-top <top> | -auto-top]

coarse:
    proc [-ifx]
    flatten      (if -flatten)
    future
    opt_expr -keepdc
    opt_clean
    check
    opt -noff -keepdc
    wreduce -keepdc [-memx]
    memory_dff   (if -rdff)
    memory_memx  (if -memx)
    opt_clean
    memory_collect
    opt -noff -keepdc -fast

check:
    stat
    check
```

Synthesis starter covers most of these commands and what they do.

3.1.2 Converting process blocks

The Verilog frontend converts **always**-blocks to RTL netlists for the expressions and “processess” for the control- and memory elements. The *proc* command then transforms these “processess” to netlists of RTL multiplexer and register cells. It also is a macro command that calls the other *proc_** commands in a sensible order:

Listing 3.1: Passes called by *proc*

```
proc_clean # removes empty branches and processes
proc_rmdead # removes unreachable branches
proc_prune
proc_init # special handling of "initial" blocks
proc_arst # identifies modeling of async resets
proc_rom
proc_mux # converts decision trees to multiplexer networks
proc_dlatch
proc_dff # extracts registers from processes
proc_memwr
proc_clean # this should remove all the processes, provided all went fine
opt_expr -keepdc
```

After all the *proc_** commands, *opt_expr* is called. This can be disabled by calling *proc -noopt*. For more information about *proc*, such as disabling certain sub commands, see *Converting process blocks*.

Many commands can not operate on modules with “processess” in them. Usually a call to *proc* is the first command in the actual synthesis procedure after design elaboration.

Example

Todo

describe proc images


docs/source/code_examples/synth_flow.

Listing 3.2: proc_01.v

```
module test(input D, C, R, output reg Q);
    always @(posedge C, posedge R)
        if (R)
            Q <= 0;
        else
            Q <= D;
endmodule
```

Listing 3.3: proc_01.y


```
read_verilog proc_01.v
hierarchy -check -top test
proc;;
```

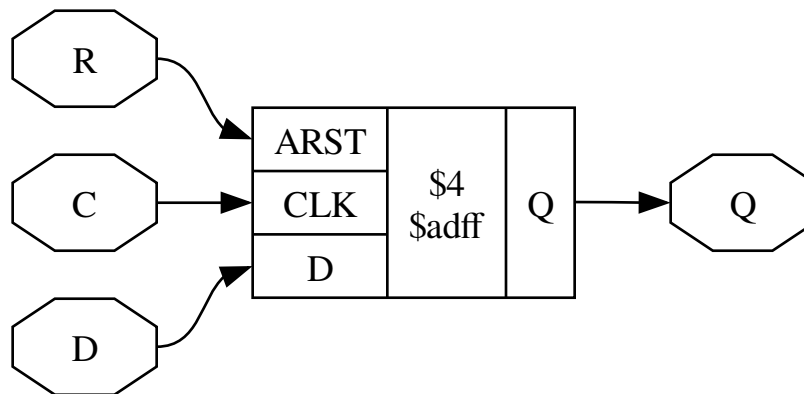

Listing 3.4: proc_02.v

```
module test(input D, C, R, RV,
            output reg Q);
    always @(posedge C, posedge R)
        if (R)
            Q <= RV;
        else
```

(continues on next page)

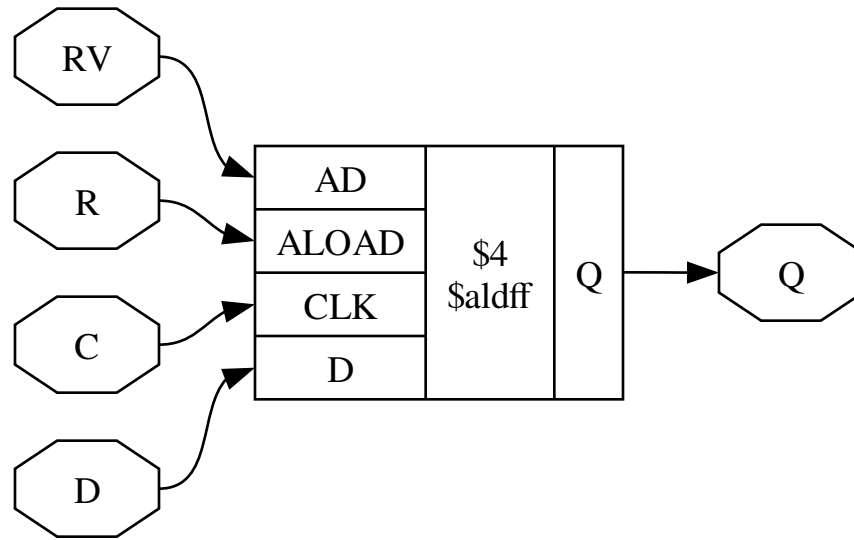

(continued from previous page)


```
Q <= D;
endmodule
```

Listing 3.5: proc_02.yo

```
read_verilog proc_02.v
hierarchy -check -top test
proc;;
```

Listing 3.6: proc_03.yo

```
read_verilog proc_03.v
hierarchy -check -top test
proc;;
```

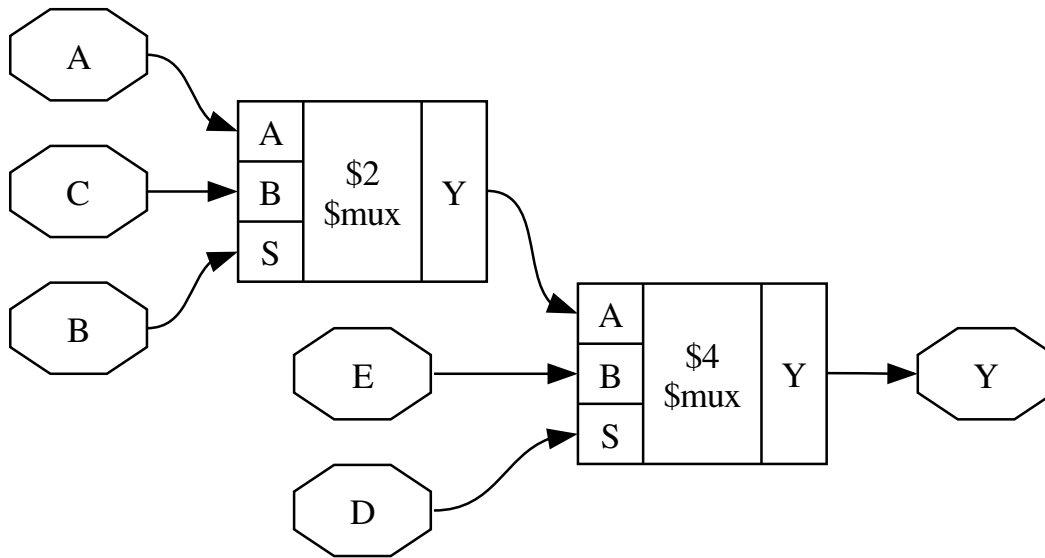

Listing 3.7: proc_03.v

```

module test(input A, B, C, D, E,
            output reg Y);
  always @* begin
    Y <= A;
    if (B)
      Y <= C;
    if (D)
      Y <= E;
  end
endmodule

```

3.1.3 FSM handling

The *fsm* command identifies, extracts, optimizes (re-encodes), and re-synthesizes finite state machines. It again is a macro that calls a series of other commands:

Listing 3.8: Passes called by *fsm*

```

# Identify and extract FSMs:
fsm_detect
fsm_extract

# Basic optimizations:
fsm_opt
opt_clean

```

(continues on next page)

(continued from previous page)

```
fsm_opt

# Expanding to nearby gate-logic (if called with -expand):
fsm_expand
opt_clean
fsm_opt

# Re-code FSM states (unless called with -norecode):
fsm_recode

# Print information about FSMs:
fsm_info

# Export FSMs in KISS2 file format (if called with -export):
fsm_export

# Map FSMs to RTL cells (unless called with -nomap):
fsm_map
```

See also *FSM handling*.

The algorithms used for FSM detection and extraction are influenced by a more general reported technique [STGR10].

FSM detection

The *fsm_detect* pass identifies FSM state registers. It sets the `fsm_encoding = "auto"` attribute on any (multi-bit) wire that matches the following description:

- Does not already have the `fsm_encoding` attribute.
- Is not an output of the containing module.
- Is driven by single *\$dff* or *\$adff* cell.
- The D-Input of this *\$dff* or *\$adff* cell is driven by a multiplexer tree that only has constants or the old state value on its leaves.
- The state value is only used in the said multiplexer tree or by simple relational cells that compare the state value to a constant (usually *\$eq* cells).

This heuristic has proven to work very well. It is possible to overwrite it by setting `fsm_encoding = "auto"` on registers that should be considered FSM state registers and setting `fsm_encoding = "none"` on registers that match the above criteria but should not be considered FSM state registers.

Note however that marking state registers with `fsm_encoding` that are not suitable for FSM recoding can cause synthesis to fail or produce invalid results.

FSM extraction

The *fsm_extract* pass operates on all state signals marked with the (`fsm_encoding != "none"`) attribute. For each state signal the following information is determined:

- The state registers
- The asynchronous reset state if the state registers use asynchronous reset
- All states and the control input signals used in the state transition functions

- The control output signals calculated from the state signals and control inputs
- A table of all state transitions and corresponding control inputs- and outputs

The state registers (and asynchronous reset state, if applicable) is simply determined by identifying the driver for the state signal.

From there the *\$mux*-tree driving the state register inputs is recursively traversed. All select inputs are control signals and the leaves of the *\$mux*-tree are the states. The algorithm fails if a non-constant leaf that is not the state signal itself is found.

The list of control outputs is initialized with the bits from the state signal. It is then extended by adding all values that are calculated by cells that compare the state signal with a constant value.

In most cases this will cover all uses of the state register, thus rendering the state encoding arbitrary. If however a design uses e.g. a single bit of the state value to drive a control output directly, this bit of the state signal will be transformed to a control output of the same value.

Finally, a transition table for the FSM is generated. This is done by using the ConstEval C++ helper class (defined in kernel/consteval.h) that can be used to evaluate parts of the design. The ConstEval class can be asked to calculate a given set of result signals using a set of signal-value assignments. It can also be passed a list of stop-signals that abort the ConstEval algorithm if the value of a stop-signal is needed in order to calculate the result signals.

The *fsm_extract* pass uses the ConstEval class in the following way to create a transition table. For each state:

1. Create a ConstEval object for the module containing the FSM
2. Add all control inputs to the list of stop signals
3. Set the state signal to the current state
4. Try to evaluate the next state and control output
5. If step 4 was not successful:
 - Recursively goto step 4 with the offending stop-signal set to 0.
 - Recursively goto step 4 with the offending stop-signal set to 1.
6. If step 4 was successful: Emit transition

Finally a *\$fsm* cell is created with the generated transition table and added to the module. This new cell is connected to the control signals and the old drivers for the control outputs are disconnected.

FSM optimization

The *fsm_opt* pass performs basic optimizations on *\$fsm* cells (not including state recoding). The following optimizations are performed (in this order):

- Unused control outputs are removed from the *\$fsm* cell. The attribute *unused_bits* (that is usually set by the *opt_clean* pass) is used to determine which control outputs are unused.
- Control inputs that are connected to the same driver are merged.
- When a control input is driven by a control output, the control input is removed and the transition table altered to give the same performance without the external feedback path.
- Entries in the transition table that yield the same output and only differ in the value of a single control input bit are merged and the different bit is removed from the sensitivity list (turned into a don't-care bit).
- Constant inputs are removed and the transition table is altered to give an unchanged behaviour.

- Unused inputs are removed.

FSM recoding

The *fsm_recode* pass assigns new bit pattern to the states. Usually this also implies a change in the width of the state signal. At the moment of this writing only one-hot encoding with all-zero for the reset state is supported.

The *fsm_recode* pass can also write a text file with the changes performed by it that can be used when verifying designs synthesized by Yosys using Synopsys Formality.

3.1.4 Memory handling

The `memory` command

In the RTL netlist, memory reads and writes are individual cells. This makes consolidating the number of ports for a memory easier. The *memory* pass transforms memories to an implementation. Per default that is logic for address decoders and registers. It also is a macro command that calls the other common *memory_** passes in a sensible order:

Listing 3.9: Passes called by *memory*

```
opt_mem
opt_mem_priority
opt_mem_feedback
memory_bmux2rom
memory_dff
opt_clean
memory_share
opt_mem_widen
memory_memx                (when called with -memx)
opt_clean
memory_collect
memory_bram -rules <bram_rules> (when called with -bram)
memory_map                 (skipped if called with -nomap)
```

Todo

Make *memory_** notes less quick

Some quick notes:

- *memory_dff* merges registers into the memory read- and write cells.
- *memory_collect* collects all read and write cells for a memory and transforms them into one multi-port memory cell.
- *memory_map* takes the multi-port memory cell and transforms it to address decoder logic and registers.


For more information about *memory*, such as disabling certain sub commands, see *Memory handling*.

Example

Todo

describe memory images

docs/source/code_examples/synth_flow.

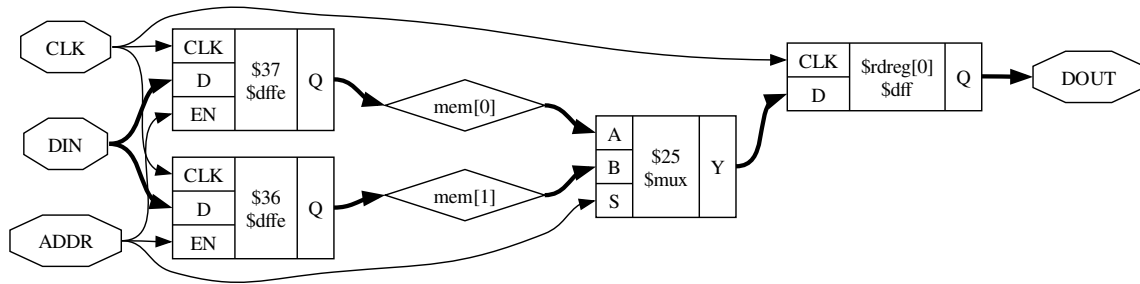

Listing 3.10: memory_01.yo

```
read_verilog memory_01.v
hierarchy -check -top test
proc;; memory; opt
```


Listing 3.11: memory_01.v

```
module test(input      CLK, ADDR,
            input      [7:0] DIN,
            output reg  [7:0] DOUT);
    reg [7:0] mem [0:1];
    always @(posedge CLK) begin
        mem[ADDR] <= DIN;
        DOUT <= mem[ADDR];
    end
endmodule
```

Listing 3.12: memory_02.v

```
module test(
    input      WR1_CLK, WR2_CLK,
    input      WR1_WEN, WR2_WEN,
    input      [7:0] WR1_ADDR, WR2_ADDR,
    input      [7:0] WR1_DATA, WR2_DATA,
    input      RD1_CLK, RD2_CLK,
    input      [7:0] RD1_ADDR, RD2_ADDR,
    output reg  [7:0] RD1_DATA, RD2_DATA
);
```

(continues on next page)

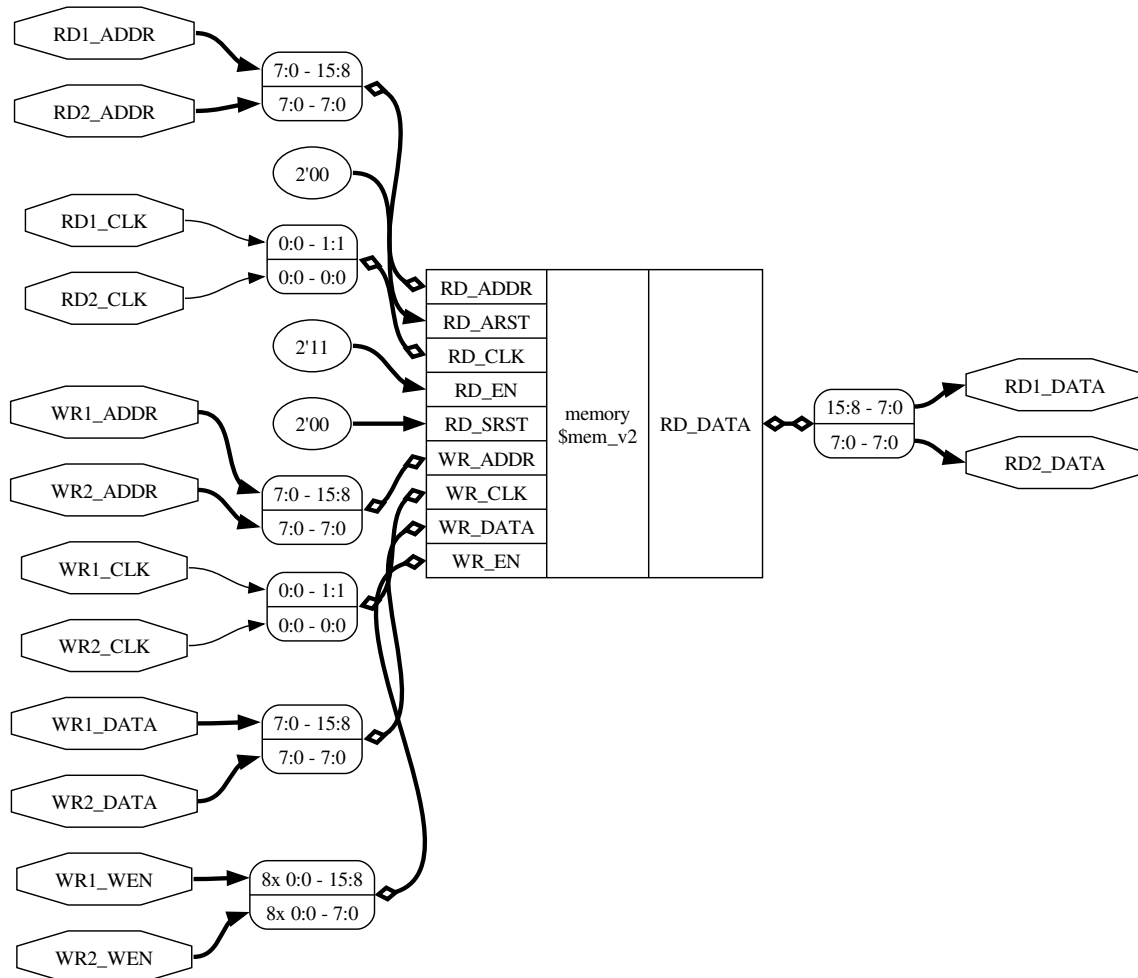

(continued from previous page)

```

reg [7:0] memory [0:255];

always @(posedge WR1_CLK)
    if (WR1_WEN)
        memory[WR1_ADDR] <= WR1_DATA;

always @(posedge WR2_CLK)
    if (WR2_WEN)
        memory[WR2_ADDR] <= WR2_DATA;

always @(posedge RD1_CLK)
    RD1_DATA <= memory[RD1_ADDR];

always @(posedge RD2_CLK)
    RD2_DATA <= memory[RD2_ADDR];

endmodule

```

Listing 3.13: memory_02.yo

```

read_verilog memory_02.v
hierarchy -check -top test
proc;; memory -nomap
opt -mux_undef -mux_bool

```

Memory mapping

Usually it is preferred to use architecture-specific RAM resources for memory. For example:

```

memory -nomap
memory_libmap -lib my_memory_map.txt
techmap -map my_memory_map.v
memory_map

```

memory_libmap attempts to convert memory cells (*\$mem_v2* etc) into hardware supported memory using a provided library (*my_memory_map.txt* in the example above). Where necessary, emulation logic is added to ensure functional equivalence before and after this conversion. *techmap -map my_memory_map.v* then uses *techmap* to map to hardware primitives. Any leftover memory cells unable to be converted are then picked up by *memory_map* and mapped to DFFs and address decoders.

Note

More information about what mapping options are available and associated costs of each can be found by enabling debug outputs. This can be done with the *debug* command, or by using the *-g* flag when calling Yosys to globally enable debug messages.

For more on the lib format for *memory_libmap*, see [passes/memory/memlib.md](#)

Supported memory patterns

Note that not all supported patterns are included in this document, of particular note is that combinations of multiple patterns should generally work. For example, *wbe* could be used in conjunction with any of the simple dual port (SDP) models. In general if a hardware memory definition does not support a given configuration, additional logic will be instantiated to guarantee behaviour is consistent with simulation.

Notes

Memory kind selection

The memory inference code will automatically pick target memory primitive based on memory geometry and features used. Depending on the target, there can be up to four memory primitive classes available for selection:

- FF RAM (aka logic): no hardware primitive used, memory lowered to a bunch of FFs and multiplexers
 - Can handle arbitrary number of write ports, as long as all write ports are in the same clock domain
 - Can handle arbitrary number and kind of read ports
- LUT RAM (aka distributed RAM): uses LUT storage as RAM
 - Supported on most FPGAs (with notable exception of ice40)
 - Usually has one synchronous write port, one or more asynchronous read ports
 - Small
 - Will never be used for ROMs (lowering to plain LUTs is always better)
- Block RAM: dedicated memory tiles
 - Supported on basically all FPGAs
 - Supports only synchronous reads
 - Two ports with separate clocks
 - Usually supports true dual port (with notable exception of ice40 that only supports SDP)
 - Usually supports asymmetric memories and per-byte write enables
 - Several kilobits in size
- Huge RAM:
 - Only supported on several targets:
 - * Some Xilinx UltraScale devices (UltraRAM)
 - Two ports, both with mutually exclusive synchronous read and write
 - Single clock
 - Initial data must be all-0
 - * Some ice40 devices (SPRAM)
 - Single port with mutually exclusive synchronous read and write
 - Does not support initial data
 - * Nexus (large RAM)
 - Two ports, both with mutually exclusive synchronous read and write

- Single clock
- Will not be automatically selected by memory inference code, needs explicit opt-in via `ram_style` attribute

In general, you can expect the automatic selection process to work roughly like this:

- If any read port is asynchronous, only LUT RAM (or FF RAM) can be used.
- If there is more than one write port, only block RAM can be used, and this needs to be a hardware-supported true dual port pattern
 - ... unless all write ports are in the same clock domain, in which case FF RAM can also be used, but this is generally not what you want for anything but really small memories
- Otherwise, either FF RAM, LUT RAM, or block RAM will be used, depending on memory size

This process can be overridden by attaching a `ram_style` attribute to the memory:

- (`* ram_style = "logic" *`) selects FF RAM
- (`* ram_style = "distributed" *`) selects LUT RAM
- (`* ram_style = "block" *`) selects block RAM
- (`* ram_style = "huge" *`) selects huge RAM

It is an error if this override cannot be realized for the given target.

Many alternate spellings of the attribute are also accepted, for compatibility with other software.

Initial data

Most FPGA targets support initializing all kinds of memory to user-provided values. If explicit initialization is not used the initial memory value is undefined. Initial data can be provided by either initial statements writing memory cells one by one of `$readmemh` or `$readmemb` system tasks. For an example pattern, see [*sr_init*](#).

Write port with byte enables

- Byte enables can be used with any supported pattern
- To ensure that multiple writes will be merged into one port, they need to have disjoint bit ranges, have the same address, and the same clock
- Any write enable granularity will be accepted (down to per-bit write enables), but using smaller granularity than natively supported by the target is very likely to be inefficient (eg. using 4-bit bytes on ECP5 will result in either padding the bytes with 5 dummy bits to native 9-bit units or splitting the RAM into two block RAMs)

```
reg [31 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable[0])
        mem[write_addr][7:0] <= write_data[7:0];
    if (write_enable[1])
        mem[write_addr][15:8] <= write_data[15:8];
    if (write_enable[2])
        mem[write_addr][23:16] <= write_data[23:16];
    if (write_enable[3])
        mem[write_addr][31:24] <= write_data[31:24];
end
```

(continues on next page)

(continued from previous page)

```

        if (read_enable)
            read_data <= mem[read_addr];
end

```

Simple dual port (SDP) memory patterns

Todo

assorted enables, e.g. cen, wen+ren

Asynchronous-read SDP

- This will result in LUT RAM on supported targets

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];
always @(posedge clk)
    if (write_enable)
        mem[write_addr] <= write_data;
assign read_data = mem[read_addr];

```

Synchronous SDP with clock domain crossing

- Will result in block RAM or LUT RAM depending on size
- No behavior guarantees in case of simultaneous read and write to the same address

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge write_clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
end

always @(posedge read_clk) begin
    if (read_enable)
        read_data <= mem[read_addr];
end

```

Synchronous SDP read first

- The read and write parts can be in the same or different processes.
- Will result in block RAM or LUT RAM depending on size
- As long as the same clock is used for both, yosys will ensure read-first behavior. This may require extra circuitry on some targets for block RAM. If this is not necessary, use one of the patterns below.

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)

```

(continues on next page)

(continued from previous page)

```

        mem[write_addr] <= write_data;
    if (read_enable)
        read_data <= mem[read_addr];
end

```

Synchronous SDP with undefined collision behavior

- Like above, but the read value is undefined when read and write ports target the same address in the same cycle

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;

    if (read_enable) begin
        read_data <= mem[read_addr];

        if (write_enable && read_addr == write_addr)
            // this if block
            read_data <= 'x;
    end
end

```

- Or below, using the no_rw_check attribute

```

(* no_rw_check *)
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;

    if (read_enable)
        read_data <= mem[read_addr];
end

```

Synchronous SDP with write-first behavior

- Will result in block RAM or LUT RAM depending on size
- May use additional circuitry for block RAM if write-first is not natively supported. Will always use additional circuitry for LUT RAM.

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;

    if (read_enable) begin

```

(continues on next page)

(continued from previous page)

```

        read_data <= mem[read_addr];
        if (write_enable && read_addr == write_addr)
            read_data <= write_data;
    end
end

```

Synchronous SDP with write-first behavior (alternate pattern)

- This pattern is supported for compatibility, but is much less flexible than the above

```

reg [ADDR_WIDTH - 1 : 0] read_addr_reg;
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
    read_addr_reg <= read_addr;
end

assign read_data = mem[read_addr_reg];

```

Single-port RAM memory patterns

Asynchronous-read single-port RAM

- Will result in single-port LUT RAM on supported targets

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];
always @(posedge clk)
    if (write_enable)
        mem[addr] <= write_data;
assign read_data = mem[addr];

```

Synchronous single-port RAM with mutually exclusive read/write

- Will result in single-port block RAM or LUT RAM depending on size
- This is the correct pattern to infer ice40 SPRAM (with manual ram_style selection)
- On targets that don't support read/write block RAM ports (eg. ice40), will result in SDP block RAM instead
- For block RAM, will use "NO_CHANGE" mode if available

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[addr] <= write_data;
    else if (read_enable)
        read_data <= mem[addr];
end

```


Synchronous single-port RAM with read-first behavior

- Will only result in single-port block RAM when read-first behavior is natively supported; otherwise, SDP RAM with additional circuitry will be used
- Many targets (Xilinx, ECP5, ...) can only natively support read-first/write-first single-port RAM (or TDP RAM) where the write_enable signal implies the read_enable signal (ie. can never write without reading). The memory inference code will run a simple SAT solver on the control signals to determine if this is the case, and insert emulation circuitry if it cannot be easily proven.

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[addr] <= write_data;
    if (read_enable)
        read_data <= mem[addr];
end
```

Synchronous single-port RAM with write-first behavior

- Will result in single-port block RAM or LUT RAM when supported
- Block RAMs will require extra circuitry if write-first behavior not natively supported

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[addr] <= write_data;
    if (read_enable)
        if (write_enable)
            read_data <= write_data;
        else
            read_data <= mem[addr];
end
```

Synchronous read port with initial value

- Initial read port values can be combined with any other supported pattern
- If block RAM is used and initial read port values are not natively supported by the target, small emulation circuit will be inserted

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];
reg [DATA_WIDTH - 1 : 0] read_data;
initial read_data = 'h1234;

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
    if (read_enable)
        read_data <= mem[read_addr];
end
```

Read register reset patterns

Resets can be combined with any other supported pattern (except that synchronous reset and asynchronous reset cannot both be used on a single read port). If block RAM is used and the selected reset (synchronous or asynchronous) is used but not natively supported by the target, small emulation circuitry will be inserted.

Synchronous reset, reset priority over enable

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;

    if (read_reset)
        read_data <= 'h1234;
    else if (read_enable)
        read_data <= mem[read_addr];
end
```

Synchronous reset, enable priority over reset

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
    if (read_enable)
        if (read_reset)
            read_data <= 'h1234;
        else
            read_data <= mem[read_addr];
end
```

Synchronous read port with asynchronous reset

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
end

always @(posedge clk, posedge read_reset) begin
    if (read_reset)
        read_data <= 'h1234;
    else if (read_enable)
        read_data <= mem[read_addr];
end
```

Asymmetric memory patterns

To construct an asymmetric memory (memory with read/write ports of differing widths):

- Declare the memory with the width of the narrowest intended port
- Split all wide ports into multiple narrow ports
- To ensure the wide ports will be correctly merged:
 - For the address, use a concatenation of actual address in the high bits and a constant in the low bits
 - Ensure the actual address is identical for all ports belonging to the wide port
 - Ensure that clock is identical
 - For read ports, ensure that enable/reset signals are identical (for write ports, the enable signal may vary — this will result in using the byte enable functionality)

Asymmetric memory is supported on all targets, but may require emulation circuitry where not natively supported. Note that when the memory is larger than the underlying block RAM primitive, hardware asymmetric memory support is likely not to be used even if present as it is more expensive.

Wide synchronous read port

```
reg [7:0] mem [0:255];
wire [7:0] write_addr;
wire [5:0] read_addr;
wire [7:0] write_data;
reg [31:0] read_data;

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
    if (read_enable) begin
        read_data[7:0] <= mem[{read_addr, 2'b00}];
        read_data[15:8] <= mem[{read_addr, 2'b01}];
        read_data[23:16] <= mem[{read_addr, 2'b10}];
        read_data[31:24] <= mem[{read_addr, 2'b11}];
    end
end
```

Wide asynchronous read port

- Note: the only target natively supporting this pattern is Xilinx UltraScale

```
reg [7:0] mem [0:511];
wire [8:0] write_addr;
wire [5:0] read_addr;
wire [7:0] write_data;
wire [63:0] read_data;

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
end
```

(continues on next page)

(continued from previous page)

```

assign read_data[7:0] = mem[{read_addr, 3'b000}];
assign read_data[15:8] = mem[{read_addr, 3'b001}];
assign read_data[23:16] = mem[{read_addr, 3'b010}];
assign read_data[31:24] = mem[{read_addr, 3'b011}];
assign read_data[39:32] = mem[{read_addr, 3'b100}];
assign read_data[47:40] = mem[{read_addr, 3'b101}];
assign read_data[55:48] = mem[{read_addr, 3'b110}];
assign read_data[63:56] = mem[{read_addr, 3'b111}];

```

Wide write port

```

reg [7:0] mem [0:255];
wire [5:0] write_addr;
wire [7:0] read_addr;
wire [31:0] write_data;
reg [7:0] read_data;

always @(posedge clk) begin
    if (write_enable[0])
        mem[{write_addr, 2'b00}] <= write_data[7:0];
    if (write_enable[1])
        mem[{write_addr, 2'b01}] <= write_data[15:8];
    if (write_enable[2])
        mem[{write_addr, 2'b10}] <= write_data[23:16];
    if (write_enable[3])
        mem[{write_addr, 2'b11}] <= write_data[31:24];
    if (read_enable)
        read_data <= mem[read_addr];
end

```

True dual port (TDP) patterns

- Many different variations of true dual port memory can be created by combining two single-port RAM patterns on the same memory
- When TDP memory is used, memory inference code has much less maneuver room to create requested semantics compared to individual single-port patterns (which can end up lowered to SDP memory where necessary) — supported patterns depend strongly on the target
- In particular, when both ports have the same clock, it's likely that “undefined collision” mode needs to be manually selected to enable TDP memory inference
- The examples below are non-exhaustive — many more combinations of port types are possible
- Note: if two write ports are in the same process, this defines a priority relation between them (if both ports are active in the same clock, the later one wins). On almost all targets, this will result in a bit of extra circuitry to ensure the priority semantics. If this is not what you want, put them in separate processes.
 - Priority is not supported when using the verific front end and any priority semantics are ignored.

TDP with different clocks, exclusive read/write

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk_a) begin
    if (write_enable_a)
        mem[addr_a] <= write_data_a;
    else if (read_enable_a)
        read_data_a <= mem[addr_a];
end

always @(posedge clk_b) begin
    if (write_enable_b)
        mem[addr_b] <= write_data_b;
    else if (read_enable_b)
        read_data_b <= mem[addr_b];
end

```

TDP with same clock, read-first behavior

- This requires hardware inter-port read-first behavior, and will only work on some targets (Xilinx, Nexus)

```

reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable_a)
        mem[addr_a] <= write_data_a;
    if (read_enable_a)
        read_data_a <= mem[addr_a];
end

always @(posedge clk) begin
    if (write_enable_b)
        mem[addr_b] <= write_data_b;
    if (read_enable_b)
        read_data_b <= mem[addr_b];
end

```

TDP with multiple read ports

- The combination of a single write port with an arbitrary amount of read ports is supported on all targets — if a multi-read port primitive is available (like Xilinx RAM64M), it'll be used as appropriate. Otherwise, the memory will be automatically split into multiple primitives.

```

reg [31:0] mem [0:31];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] <= write_data;
end

assign read_data_a = mem[read_addr_a];

```

(continues on next page)

(continued from previous page)

```
assign read_data_b = mem[read_addr_b];
assign read_data_c = mem[read_addr_c];
```

Patterns only supported with Verific

The following patterns are only supported when the design is read in using the Verific front-end.

Synchronous SDP with write-first behavior via blocking assignments

- Use `sdp_wf` for compatibility with Yosys Verilog frontend.

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr] = write_data;

    if (read_enable)
        read_data <= mem[read_addr];
end
```

Asymmetric memories via part selection

- Build wide ports out of narrow ports instead (see `wide_sr`) for compatibility with Yosys Verilog frontend.

```
reg [31:0] mem [2**ADDR_WIDTH - 1 : 0];

wire [1:0] byte_lane;
wire [7:0] write_data;

always @(posedge clk) begin
    if (write_enable)
        mem[write_addr][byte_lane * 8 +: 8] <= write_data;

    if (read_enable)
        read_data <= mem[read_addr];
end
```

Undesired patterns

Asynchronous writes

- Not supported in modern FPGAs
- Not supported in yosys code anyhow

```
reg [DATA_WIDTH - 1 : 0] mem [2**ADDR_WIDTH - 1 : 0];

always @* begin
    if (write_enable)
        mem[write_addr] = write_data;
```

(continues on next page)

(continued from previous page)

```
end
assign read_data = mem[read_addr];
```

3.1.5 Optimization passes

Yosys employs a number of optimizations to generate better and cleaner results. This chapter outlines these optimizations.

Todo

“outlines these optimizations” or “outlines *some*..”?

The `opt` macro command

The Yosys pass `opt` runs a number of simple optimizations. This includes removing unused signals and cells and const folding. It is recommended to run this pass after each major step in the synthesis script. This macro command calls the following `opt_*` commands:

Listing 3.14: Passes called by `opt`

```
opt_expr
opt_merge -nomux

do
    opt_muxtree
    opt_reduce
    opt_merge
    opt_share (-full only)
    opt_dff (except when called with -noff)
    opt_hier (-hier only)
    opt_clean
    opt_expr
while <changed design>
```

Constant folding and simple expression rewriting - `opt_expr`

Todo

unsure if this is too much detail and should be in *Yosys internals*

This pass performs constant folding on the internal combinational cell types described in *Internal cell library*. This means a cell with all constant inputs is replaced with the constant value this cell drives. In some cases this pass can also optimize cells with some constant inputs.

Table 3.1: Const folding rules for `$_AND_` cells as used in `opt_expr`.

A-Input	B-Input	Replacement
any	0	0
0	any	0
1	1	1
X/Z	X/Z	X
1	X/Z	X
X/Z	1	X
any	X/Z	0
X/Z	any	0
<i>a</i>	1	<i>a</i>
1	<i>b</i>	<i>b</i>

Table 3.1 shows the replacement rules used for optimizing an `$_AND_` gate. The first three rules implement the obvious const folding rules. Note that ‘any’ might include dynamic values calculated by other parts of the circuit. The following three lines propagate undef (X) states. These are the only three cases in which it is allowed to propagate an undef according to Sec. 5.1.10 of IEEE Std. 1364-2005 [A+06].

The next two lines assume the value 0 for undef states. These two rules are only used if no other substitutions are possible in the current module. If other substitutions are possible they are performed first, in the hope that the ‘any’ will change to an undef value or a 1 and therefore the output can be set to undef.

The last two lines simply replace an `$_AND_` gate with one constant-1 input with a buffer.

Besides this basic const folding the `opt_expr` pass can replace 1-bit wide `$eq` and `$ne` cells with buffers or not-gates if one input is constant. Equality checks may also be reduced in size if there are redundant bits in the arguments (i.e. bits which are constant on both inputs). This can, for example, result in a 32-bit wide constant like 255 being reduced to the 8-bit value of 8'11111111 if the signal being compared is only 8-bit as in *addr_gen module after opt_expr; clean* of *Synthesis starter*.

The `opt_expr` pass is very conservative regarding optimizing `$mux` cells, as these cells are often used to model decision-trees and breaking these trees can interfere with other optimizations.

Listing 3.15: example verilog for demonstrating `opt_expr`

```


module uut(
    input a,
    output y, z
);
    assign y = a == a;
    assign z = a != a;
endmodule

```

Merging identical cells - `opt_merge`

This pass performs trivial resource sharing. This means that this pass identifies cells with identical inputs and replaces them with a single instance of the cell.

The option `-nomux` can be used to disable resource sharing for multiplexer cells (`$mux` and `$pmux`.) This can be useful as it prevents multiplexer trees to be merged, which might prevent `opt_muxtree` to identify possible optimizations.

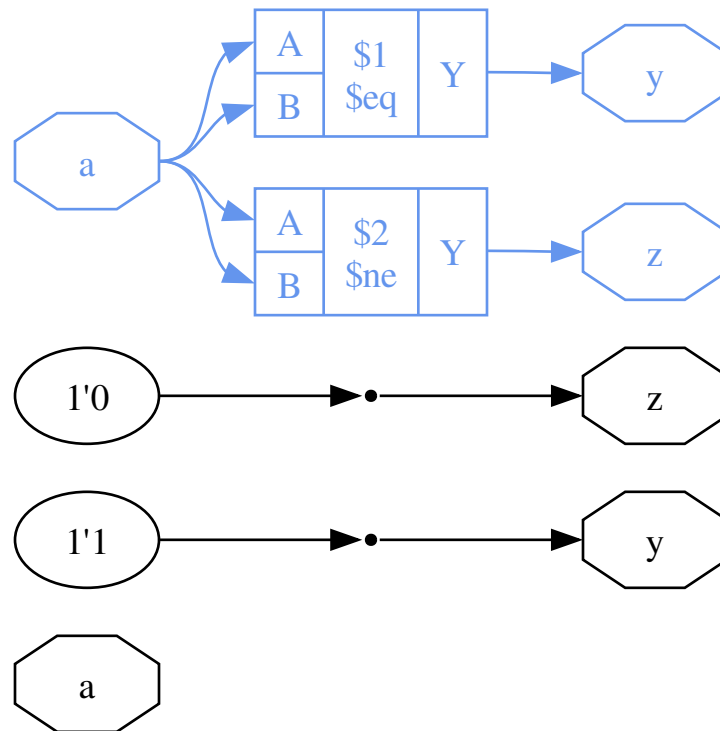
Fig. 3.1: Before and after `opt_expr`

Listing 3.16: example verilog for demonstrating *opt_merge*

```

module uut(
    input  [3:0] a, b,
    output [3:0] y, z
);
    assign y = a + b;
    assign z = b + a;
endmodule

```

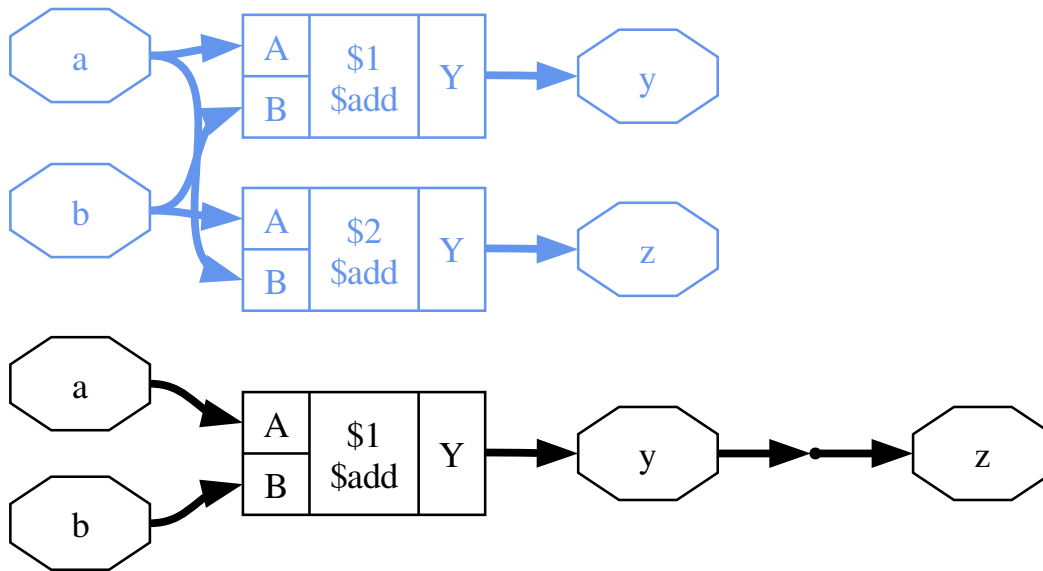Fig. 3.2: Before and after *opt_merge*

Removing never-active branches from multiplexer tree - *opt_muxtree*

This pass optimizes trees of multiplexer cells by analyzing the select inputs. Consider the following simple example:

Listing 3.17: example verilog for demonstrating *opt_muxtree*

```

module uut(
    input a, b, c, d,
    output y
);
    assign y = a ? (a ? b : c) : d;
endmodule

```

The output can never be *c*, as this would require *a* to be 1 for the outer multiplexer and 0 for the inner multiplexer. The *opt_muxtree* pass detects this contradiction and replaces the inner multiplexer with a

constant 1, yielding the logic for $y = a ? b : d$.

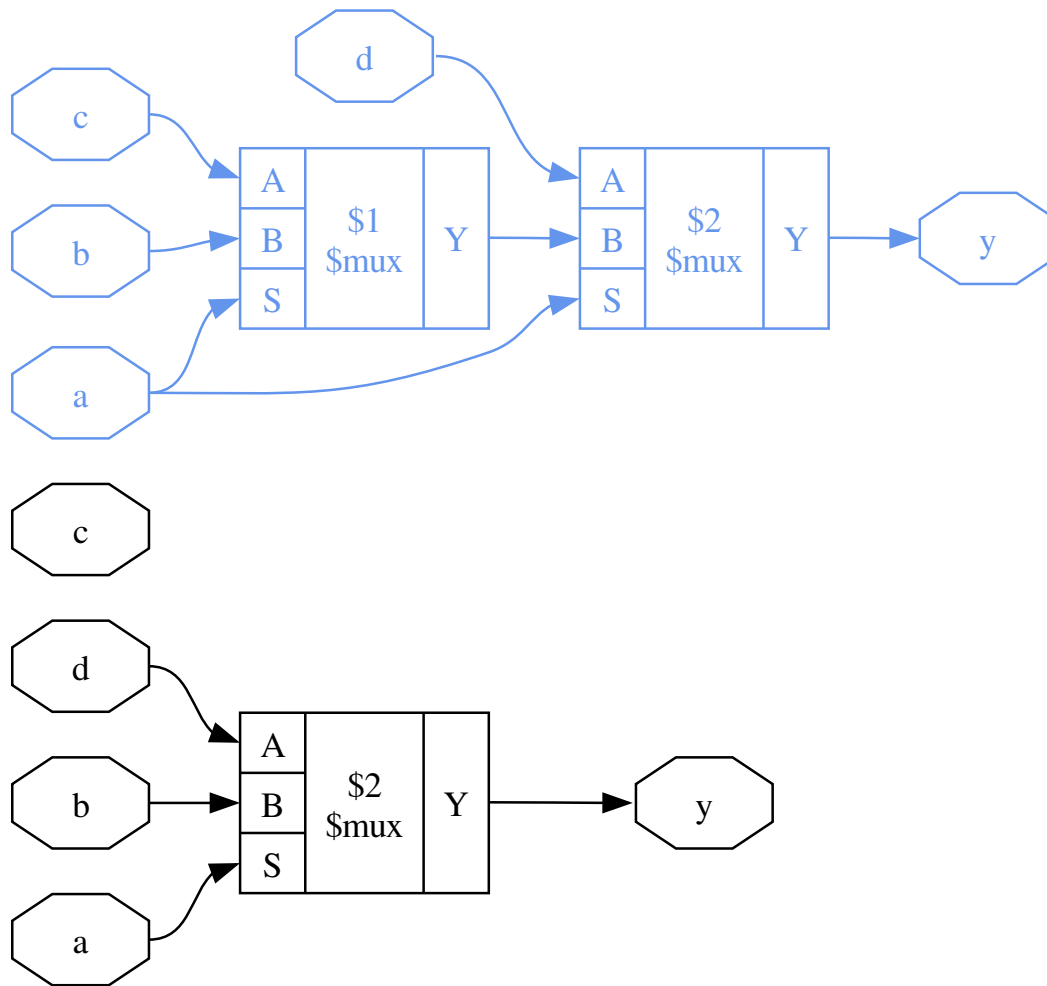


Fig. 3.3: Before and after `opt_muxtree`

Simplifying large MUXes and AND/OR gates - `opt_reduce`

This is a simple optimization pass that identifies and consolidates identical input bits to `$reduce_and` and `$reduce_or` cells. It also sorts the input bits to ease identification of shareable `$reduce_and` and `$reduce_or` cells in other passes.

This pass also identifies and consolidates identical inputs to multiplexer cells. In this case the new shared select bit is driven using a `$reduce_or` cell that combines the original select bits.

Lastly this pass consolidates trees of `$reduce_and` cells and trees of `$reduce_or` cells to single large `$reduce_and` or `$reduce_or` cells.

These three simple optimizations are performed in a loop until a stable result is produced.

Merging mutually exclusive cells with shared inputs - *opt_share*

This pass identifies mutually exclusive cells of the same type that:

- share an input signal, and
- drive the same *\$mux*, *\$MUX_*, or *\$pmux* multiplexing cell,

allowing the cell to be merged and the multiplexer to be moved from multiplexing its output to multiplexing the non-shared input signals.

Listing 3.18: example verilog for demonstrating *opt_share*

```
module uut(
  input  [15:0] a, b,
  input      sel,
  output [15:0] res,
);
  assign res = {sel ? a + b : a - b};
endmodule
```

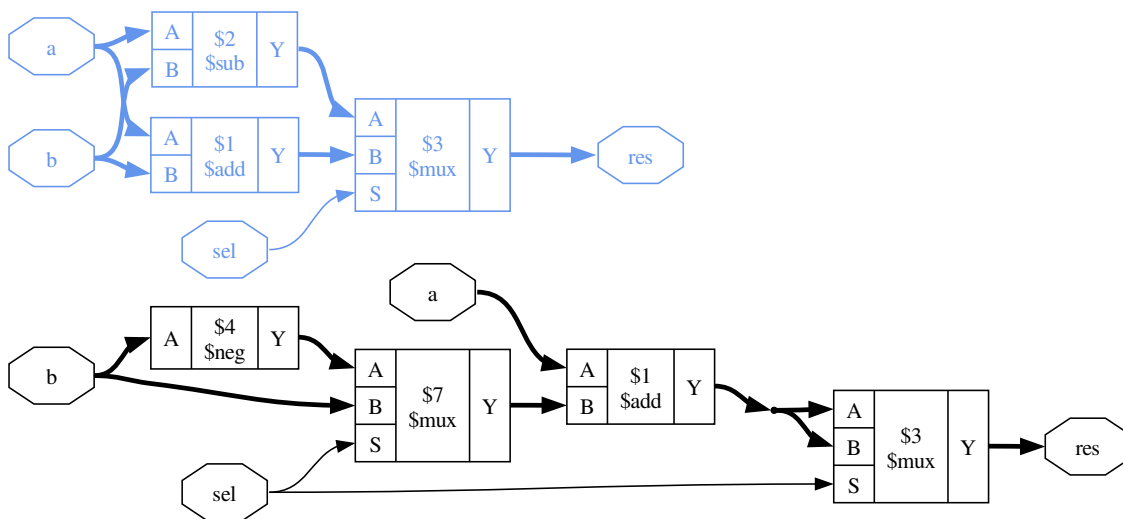


Fig. 3.4: Before and after *opt_share*

When running *opt* in full, the original *\$mux* (labeled \$3) is optimized away by *opt_expr*.

Performing DFF optimizations - *opt_dff*

Todo

\$_DFF_ isn't a valid cell

This pass identifies single-bit d-type flip-flops (*\$_DFF_*, *\$dff*, and *\$adff* cells) with a constant data input and replaces them with a constant driver. It can also merge clock enables and synchronous reset multiplexers,

removing unused control inputs.

Called with `-nodffe` and `-nosdff`, this pass is used to prepare a design for *FSM handling*.

Hierarchical optimization - `opt_hier` pass

This pass considers the design hierarchy and propagates unused signals, constant signals, and tied-together signals across module boundaries to facilitate optimization by other passes.

Removing unused cells and wires - `opt_clean` pass

This pass identifies unused signals and cells and removes them from the design. It also creates an `unused_bits` attribute on wires with unused bits. This attribute can be used for debugging or by other optimization passes.

When to use `opt` or `clean`

Usually it does not hurt to call `opt` after each regular command in the synthesis script. But it increases the synthesis time, so it is favourable to only call `opt` when an improvement can be achieved.

It is generally a good idea to call `opt` before inherently expensive commands such as `sat` or `freduce`, as the possible gain is much higher in these cases as the possible loss.

The `clean` command, which is an alias for `opt_clean` with fewer outputs, on the other hand is very fast and many commands leave a mess (dangling signal wires, etc). For example, most commands do not remove any wires or cells. They just change the connections and depend on a later call to `clean` to get rid of the now unused objects. So the occasional `;;`, which itself is an alias for `clean`, is a good idea in every synthesis script, e.g:

```
hierarchy; proc; opt; memory; opt_expr;; fsm;;
```

Other optimizations

Todo

more on the other optimizations

- Check *Optimization passes* for more.
- `abc` and `abc9`, see also: *The ABC toolbox*.

3.1.6 Technology mapping

Todo

less academic, check text is coherent

Previous chapters outlined how HDL code is transformed into an RTL netlist. The RTL netlist is still based on abstract coarse-grain cell types like arbitrary width adders and even multipliers. This chapter covers how an RTL netlist is transformed into a functionally equivalent netlist utilizing the cell types available in the target architecture.

Technology mapping is often performed in two phases. In the first phase RTL cells are mapped to an internal library of single-bit cells (see *Gate-level cells*). In the second phase this netlist of internal gate types is transformed to a netlist of gates from the target technology library.

When the target architecture provides coarse-grain cells (such as block ram or ALUs), these must be mapped to directly form the RTL netlist, as information on the coarse-grain structure of the design is lost when it is mapped to bit-width gate types.

Cell substitution

The simplest form of technology mapping is cell substitution, as performed by the techmap pass. This pass, when provided with a Verilog file that implements the RTL cell types using simpler cells, simply replaces the RTL cells with the provided implementation.

When no map file is provided, techmap uses a built-in map file that maps the Yosys RTL cell types to the internal gate library used by Yosys. The curious reader may find this map file as `techlibs/common/techmap.v` in the Yosys source tree.

Additional features have been added to techmap to allow for conditional mapping of cells (see *Technology mapping*). This can for example be useful if the target architecture supports hardware multipliers for certain bit-widths but not for others.

A usual synthesis flow would first use the techmap pass to directly map some RTL cells to coarse-grain cells provided by the target architecture (if any) and then use techmap with the built-in default file to map the remaining RTL cells to gate logic.

Subcircuit substitution

Sometimes the target architecture provides cells that are more powerful than the RTL cells used by Yosys. For example a cell in the target architecture that can calculate the absolute-difference of two numbers does not match any single RTL cell type but only combinations of cells.

For these cases Yosys provides the extract pass that can match a given set of modules against a design and identify the portions of the design that are identical (i.e. isomorphic subcircuits) to any of the given modules. These matched subcircuits are then replaced by instances of the given modules.

The extract pass also finds basic variations of the given modules, such as swapped inputs on commutative cell types.

In addition to this the extract pass also has limited support for frequent subcircuit mining, i.e. the process of finding recurring subcircuits in the design. This has a few applications, including the design of new coarse-grain architectures [GW13].

The hard algorithmic work done by the extract pass (solving the isomorphic subcircuit problem and frequent subcircuit mining) is performed using the SubCircuit library that can also be used stand-alone without Yosys (see *SubCircuit*).

Gate-level technology mapping

Todo

newer techmap libraries appear to be largely `.v` instead of `.lib`

On the gate-level the target architecture is usually described by a “Liberty file”. The Liberty file format is an industry standard format that can be used to describe the behaviour and other properties of standard library cells .

Mapping a design utilizing the Yosys internal gate library (e.g. as a result of mapping it to this representation using the techmap pass) is performed in two phases.

First the register cells must be mapped to the registers that are available on the target architectures. The target architecture might not provide all variations of d-type flip-flops with positive and negative clock edge, high-active and low-active asynchronous set and/or reset, etc. Therefore the process of mapping the registers might add additional inverters to the design and thus it is important to map the register cells first.

Mapping of the register cells may be performed by using the dfflibmap pass. This pass expects a Liberty file as argument (using the -liberty option) and only uses the register cells from the Liberty file.

Secondly the combinational logic must be mapped to the target architecture. This is done using the external program ABC via the abc pass by using the -liberty option to the pass. Note that in this case only the combinatorial cells are used from the cell library.

Occasionally Liberty files contain trade secrets (such as sensitive timing information) that cannot be shared freely. This complicates processes such as reporting bugs in the tools involved. When the information in the Liberty file used by Yosys and ABC are not part of the sensitive information, the additional tool *yosys-filterlib* (see [yosys-filterlib](#)) can be used to strip the sensitive information from the Liberty file.

3.1.7 The extract pass

- Like the **techmap** pass, the **extract** pass is called with a map file. It compares the circuits inside the modules of the map file with the design and looks for sub-circuits in the design that match any of the modules in the map file.
- If a match is found, the **extract** pass will replace the matching subcircuit with an instance of the module from the map file.
- In a way the **extract** pass is the inverse of the techmap pass.

Todo

add/expand supporting text, also mention custom pattern matching and pmgen

Example code can be found in [docs/source/code_examples/macc](#).

```
read_verilog macc_simple_test.v
hierarchy -check -top test;;
```

```
extract -constports -map macc_simple_xmap.v;;
```



Listing 3.19: macc_simple_test.v

```
module test(a, b, c, d, y);
input [15:0] a, b;
input [31:0] c, d;
output [31:0] y;
assign y = a * b + c + d;
endmodule
```

Listing 3.20: macc_simple_xmap.v

```
module macc_16_16_32(a, b, c, y);
input [15:0] a, b;
```

(continues on next page)

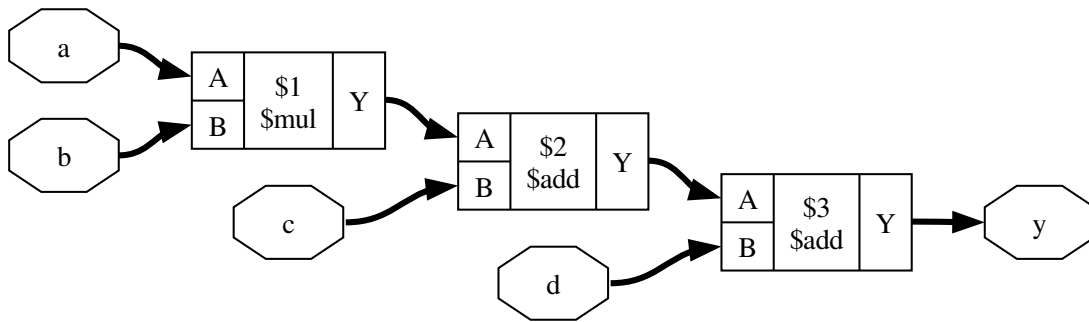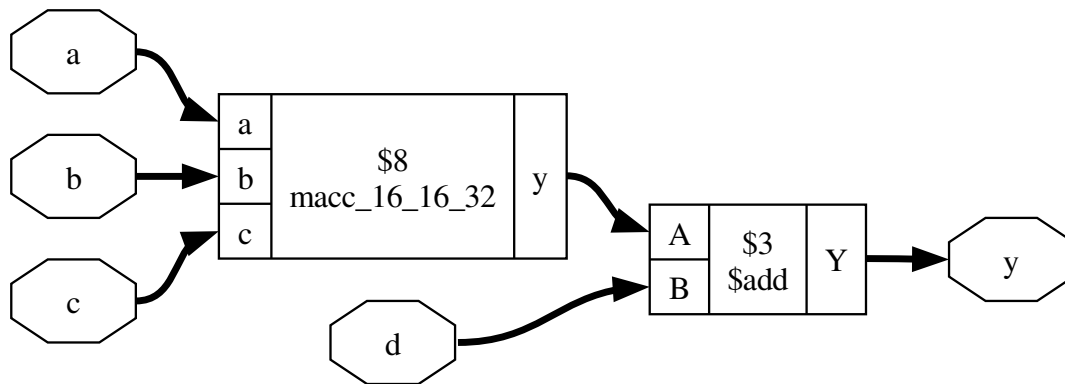Fig. 3.5: before `extract`Fig. 3.6: after `extract`

(continued from previous page)

```

input [31:0] c;
output [31:0] y;
assign y = a*b + c;
endmodule



```

Listing 3.21: macc_simple_test_01.v

```

module test(a, b, c, d, x, y);
input [15:0] a, b, c, d;
input [31:0] x;
output [31:0] y;
assign y = a*b + c*d + x;
endmodule

```

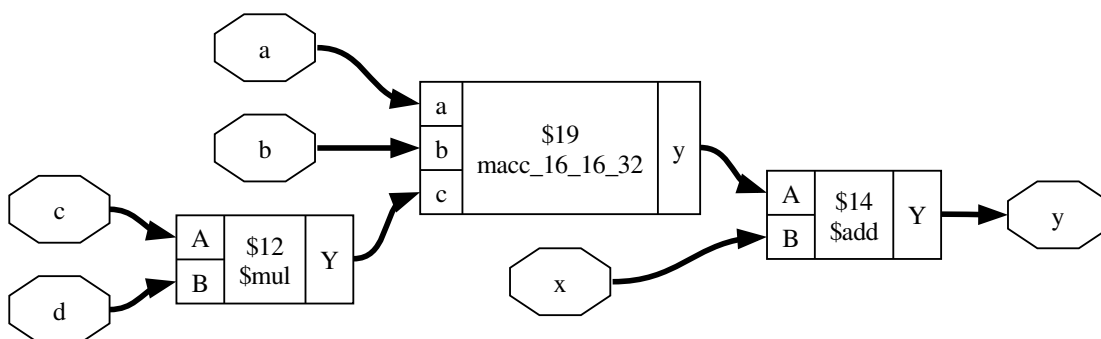
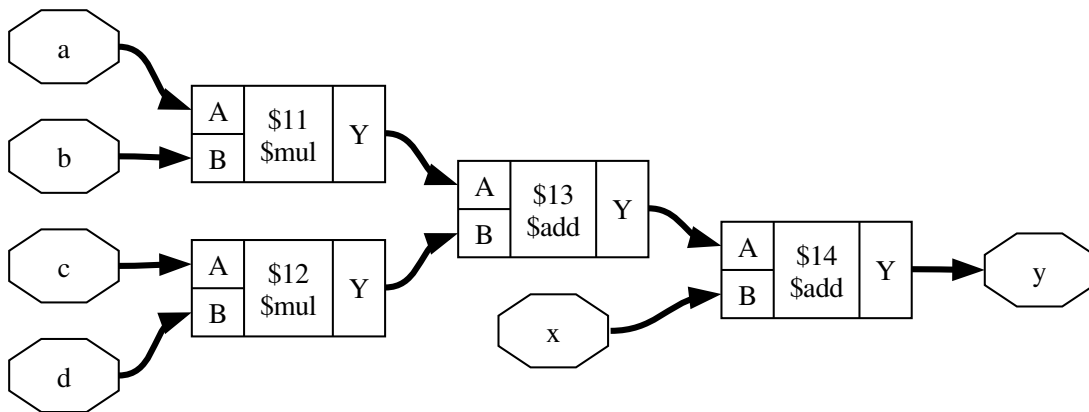


Listing 3.22: macc_simple_test_02.v

```

module test(a, b, c, d, x, y);
input [15:0] a, b, c, d;
input [31:0] x;
output [31:0] y;
assign y = a*b + (c*d + x);
endmodule

```

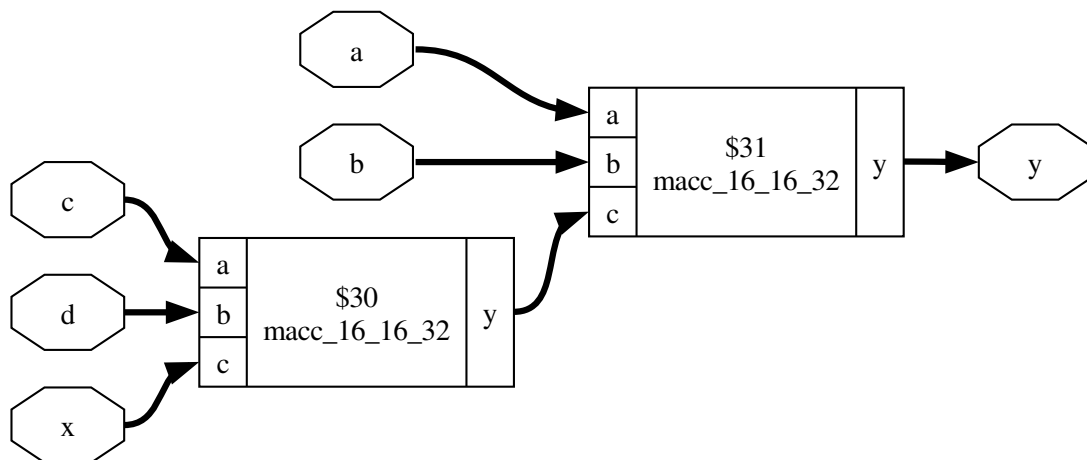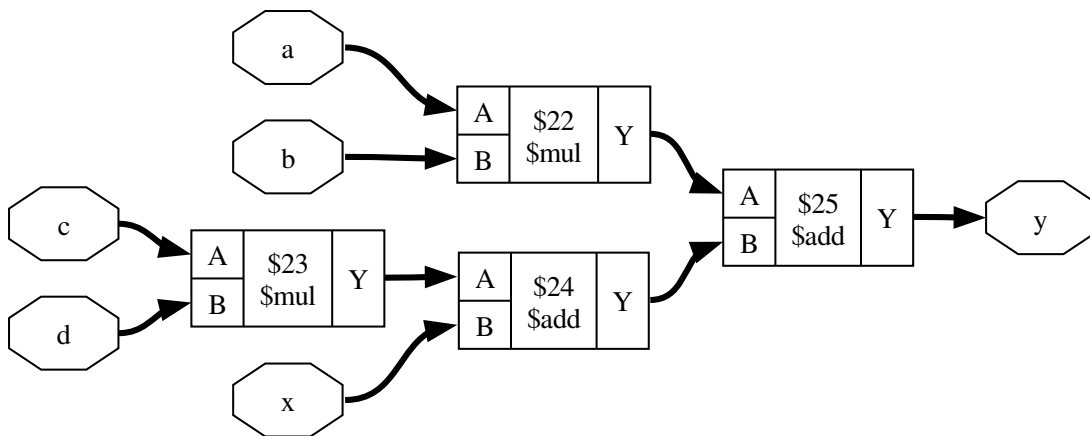

The wrap-extract-unwrap method

Often a coarse-grain element has a constant bit-width, but can be used to implement operations with a smaller bit-width. For example, a 18x25-bit multiplier can also be used to implement 16x20-bit multiplication.

A way of mapping such elements in coarse grain synthesis is the wrap-extract-unwrap method:

wrap

Identify candidate-cells in the circuit and wrap them in a cell with a constant wider bit-width using `techmap`. The wrappers use the same parameters as the original cell, so the information about the original width of the ports is preserved. Then use the `connwrappers` command to connect up the bit-extended in- and outputs of the wrapper cells.

extract

Now all operations are encoded using the same bit-width as the coarse grain element. The `extract` command can be used to replace circuits with cells of the target architecture.

unwrap

The remaining wrapper cell can be unwrapped using `techmap`.

Example: DSP48_MACC

This section details an example that shows how to map MACC operations of arbitrary size to MACC cells with a 18x25-bit multiplier and a 48-bit adder (such as the Xilinx DSP48 cells).

Preconditioning: `macc_xilinx_swap_map.v`

Make sure A is the smaller port on all multipliers

Todo

add/expand supporting text

Listing 3.23: `macc_xilinx_swap_map.v`

```
(* techmap_celltype = "$mul" *)
module mul_swap_ports (A, B, Y);

parameter A_SIGNED = 0;
parameter B_SIGNED = 0;
parameter A_WIDTH = 1;
parameter B_WIDTH = 1;
parameter Y_WIDTH = 1;

input [A_WIDTH-1:0] A;
input [B_WIDTH-1:0] B;
output [Y_WIDTH-1:0] Y;

wire _TECHMAP_FAIL_ = A_WIDTH <= B_WIDTH;

\ $mul #(
    .A_SIGNED(B_SIGNED),
    .B_SIGNED(A_SIGNED),
    .A_WIDTH(B_WIDTH),
    .B_WIDTH(A_WIDTH),
    .Y_WIDTH(Y_WIDTH)
```

(continues on next page)

(continued from previous page)

```

) _TECHMAP_REPLACE_ (
    .A(B),
    .B(A),
    .Y(Y)
);

endmodule

```

Wrapping multipliers: macc_xilinx_wrap_map.v

Listing 3.24: macc_xilinx_wrap_map.v

```

(* techmap_celltype = "$mul" *)
module mul_wrap (A, B, Y);

parameter A_SIGNED = 0;
parameter B_SIGNED = 0;
parameter A_WIDTH = 1;
parameter B_WIDTH = 1;
parameter Y_WIDTH = 1;

input [A_WIDTH-1:0] A;
input [B_WIDTH-1:0] B;
output [Y_WIDTH-1:0] Y;

wire [17:0] A_18 = A;
wire [24:0] B_25 = B;
wire [47:0] Y_48;
assign Y = Y_48;

wire [1023:0] _TECHMAP_DO_ = "proc; clean";

reg _TECHMAP_FAIL_;
initial begin
    _TECHMAP_FAIL_ <= 0;
    if (A_SIGNED || B_SIGNED)
        _TECHMAP_FAIL_ <= 1;
    if (A_WIDTH < 4 || B_WIDTH < 4)
        _TECHMAP_FAIL_ <= 1;
    if (A_WIDTH > 18 || B_WIDTH > 25)
        _TECHMAP_FAIL_ <= 1;
    if (A_WIDTH*B_WIDTH < 100)
        _TECHMAP_FAIL_ <= 1;
end

\$_mul_wrapper #(
    .A_SIGNED(A_SIGNED),
    .B_SIGNED(B_SIGNED),
    .A_WIDTH(A_WIDTH),
    .B_WIDTH(B_WIDTH),
    .Y_WIDTH(Y_WIDTH)
) _TECHMAP_REPLACE_ (

```

(continues on next page)

(continued from previous page)

```

        .A(A_18),
        .B(B_25),
        .Y(Y_48)
    );

```

```
endmodule
```

Wrapping adders: `macc_xilinx_wrap_map.v`

Listing 3.25: `macc_xilinx_wrap_map.v`

```

(* techmap_celltype = "$add" *)
module add_wrap (A, B, Y);

    parameter A_SIGNED = 0;
    parameter B_SIGNED = 0;
    parameter A_WIDTH = 1;
    parameter B_WIDTH = 1;
    parameter Y_WIDTH = 1;

    input [A_WIDTH-1:0] A;
    input [B_WIDTH-1:0] B;
    output [Y_WIDTH-1:0] Y;

    wire [47:0] A_48 = A;
    wire [47:0] B_48 = B;
    wire [47:0] Y_48;
    assign Y = Y_48;

    wire [1023:0] _TECHMAP_DO_ = "proc; clean";

    reg _TECHMAP_FAIL_;
    initial begin
        _TECHMAP_FAIL_ <= 0;
        if (A_SIGNED || B_SIGNED)
            _TECHMAP_FAIL_ <= 1;
        if (A_WIDTH < 10 && B_WIDTH < 10)
            _TECHMAP_FAIL_ <= 1;
    end

    \$_add_wrapper #(
        .A_SIGNED(A_SIGNED),
        .B_SIGNED(B_SIGNED),
        .A_WIDTH(A_WIDTH),
        .B_WIDTH(B_WIDTH),
        .Y_WIDTH(Y_WIDTH)
    ) _TECHMAP_REPLACE_ (
        .A(A_48),
        .B(B_48),
        .Y(Y_48)
    );

```

(continues on next page)

(continued from previous page)

endmodule

Extract: macc_xilinx_xmap.v

Listing 3.26: macc_xilinx_xmap.v

```

module DSP48_MACC (a, b, c, y);

input [17:0] a;
input [24:0] b;
input [47:0] c;
output [47:0] y;

assign y = a*b + c;

endmodule

```

... simply use the same wrapping commands on this module as on the design to create a template for the extract command.

Unwrapping multipliers: macc_xilinx_unwrap_map.v

Listing 3.27: `$_mul_wrapper` module in
macc_xilinx_unwrap_map.v

```

module \$_mul_wrapper (A, B, Y);

parameter A_SIGNED = 0;
parameter B_SIGNED = 0;
parameter A_WIDTH = 1;
parameter B_WIDTH = 1;
parameter Y_WIDTH = 1;

input [17:0] A;
input [24:0] B;
output [47:0] Y;

wire [A_WIDTH-1:0] A_ORIG = A;
wire [B_WIDTH-1:0] B_ORIG = B;
wire [Y_WIDTH-1:0] Y_ORIG;
assign Y = Y_ORIG;

\$_mul #(
    .A_SIGNED(A_SIGNED),
    .B_SIGNED(B_SIGNED),
    .A_WIDTH(A_WIDTH),
    .B_WIDTH(B_WIDTH),
    .Y_WIDTH(Y_WIDTH)
) _TECHMAP_REPLACE_ (
    .A(A_ORIG),
    .B(B_ORIG),
    .Y(Y_ORIG)
);

```

(continues on next page)

(continued from previous page)

```
endmodule
```

Unwrapping adders: macc_xilinx_unwrap_map.v

Listing 3.28: `$_add_wrapper` module in
macc_xilinx_unwrap_map.v

```
module \$_add_wrapper (A, B, Y);

parameter A_SIGNED = 0;
parameter B_SIGNED = 0;
parameter A_WIDTH = 1;
parameter B_WIDTH = 1;
parameter Y_WIDTH = 1;

input [47:0] A;
input [47:0] B;
output [47:0] Y;

wire [A_WIDTH-1:0] A_ORIG = A;
wire [B_WIDTH-1:0] B_ORIG = B;
wire [Y_WIDTH-1:0] Y_ORIG;
assign Y = Y_ORIG;

\$_add #(
    .A_SIGNED(A_SIGNED),
    .B_SIGNED(B_SIGNED),
    .A_WIDTH(A_WIDTH),
    .B_WIDTH(B_WIDTH),
    .Y_WIDTH(Y_WIDTH)
) _TECHMAP_REPLACE_ (
    .A(A_ORIG),
    .B(B_ORIG),
    .Y(Y_ORIG)
);

endmodule
```



Listing 3.29: test1 of macc_xilinx_test.v

```
module test1(a, b, c, d, e, f, y);
    input [19:0] a, b, c;
    input [15:0] d, e, f;
    output [41:0] y;
    assign y = a*b + c*d + e*f;
endmodule
```

Listing 3.30: test2 of macc_xilinx_test.v

```
module test2(a, b, c, d, e, f, y);
    input [19:0] a, b, c;
```

(continues on next page)

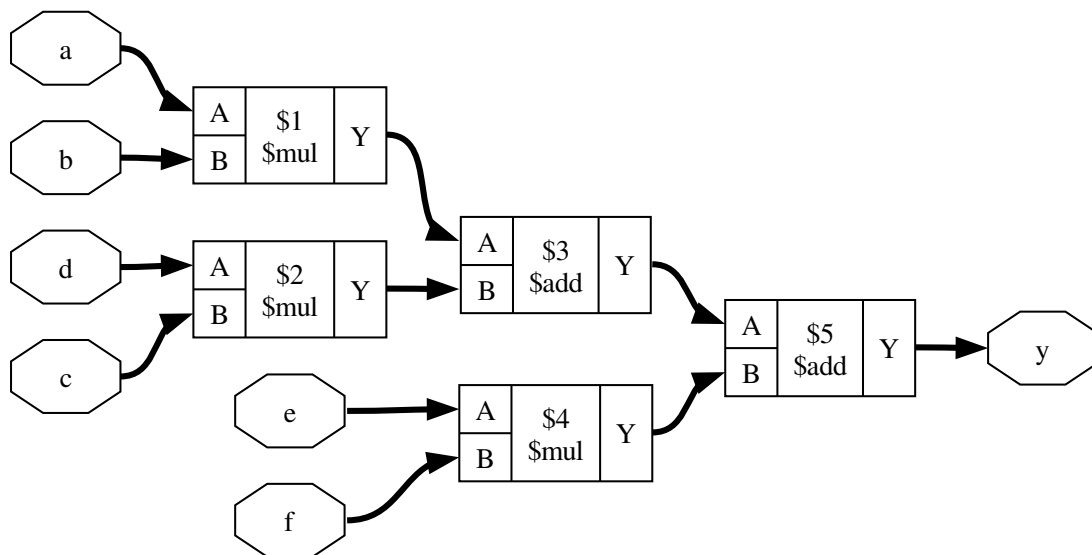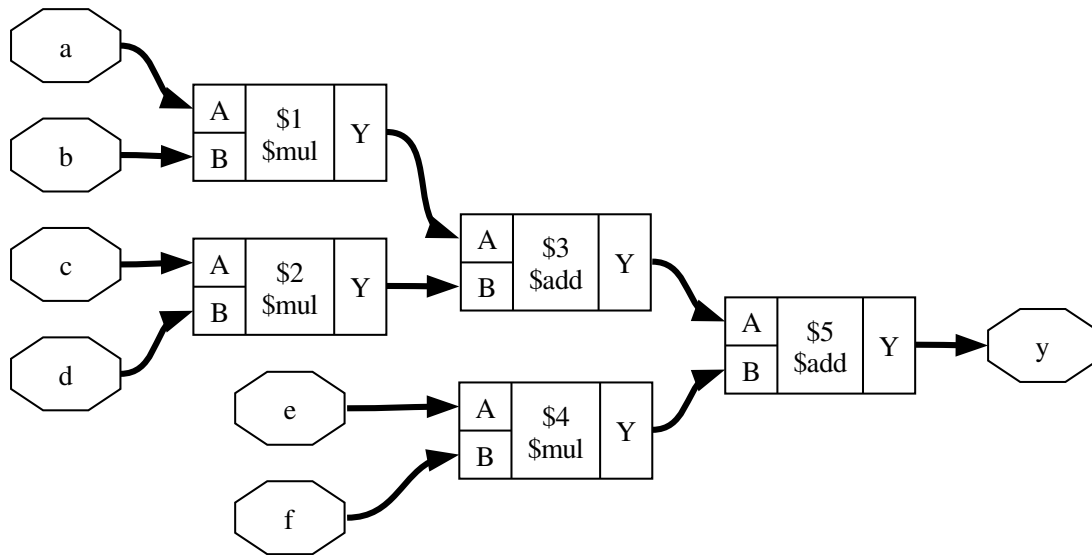


(continued from previous page)

```

input [15:0] d, e, f;
output [41:0] y;
assign y = a*b + (c*d + e*f);
endmodule

```

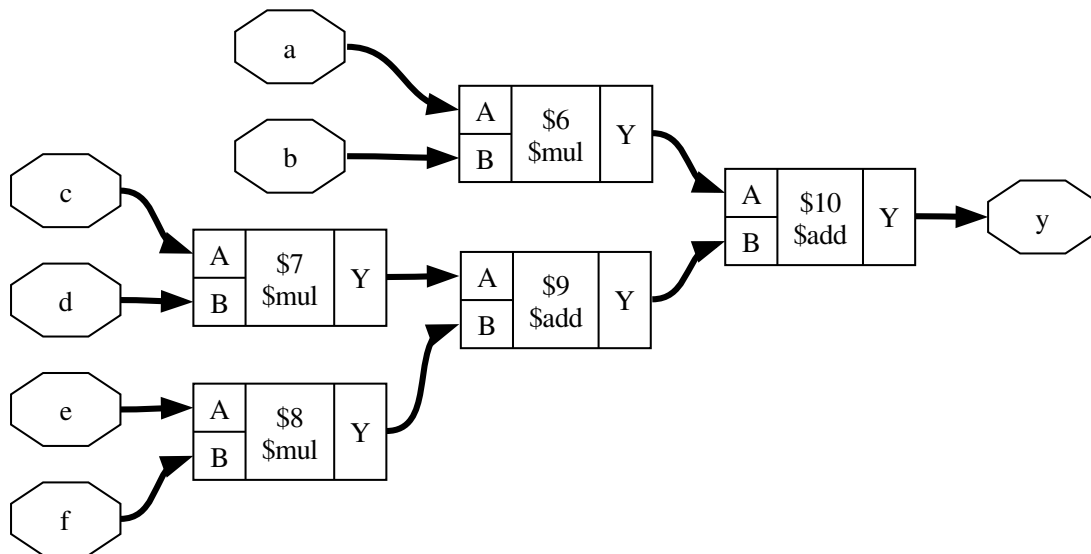

Wrapping in test1:

```

techmap -map macc_xilinx_wrap_map.v

connwrappers -unsigned $__mul_wrapper Y Y_WIDTH \
              -unsigned $__add_wrapper Y Y_WIDTH;;

```

Wrapping in test2:

```

techmap -map macc_xilinx_wrap_map.v

connwrappers -unsigned $__mul_wrapper Y Y_WIDTH \
              -unsigned $__add_wrapper Y Y_WIDTH;;

```

Extract in test1:




```




design -push
read_verilog macc_xilinx_xmap.v
techmap -map macc_xilinx_swap_map.v
techmap -map macc_xilinx_wrap_map.v;;
design -save __macc_xilinx_xmap
design -pop

extract -constports -ignore_parameters \

```


(continues on next page)

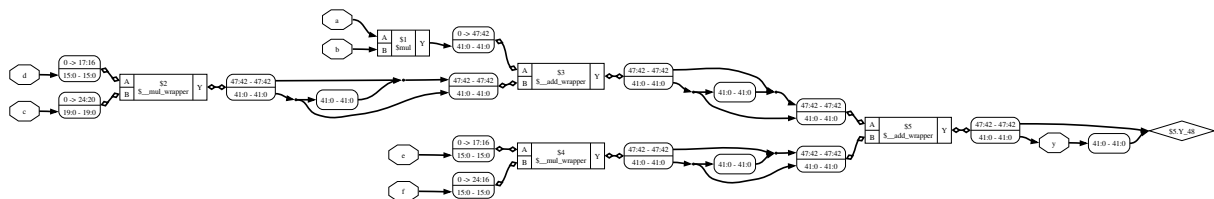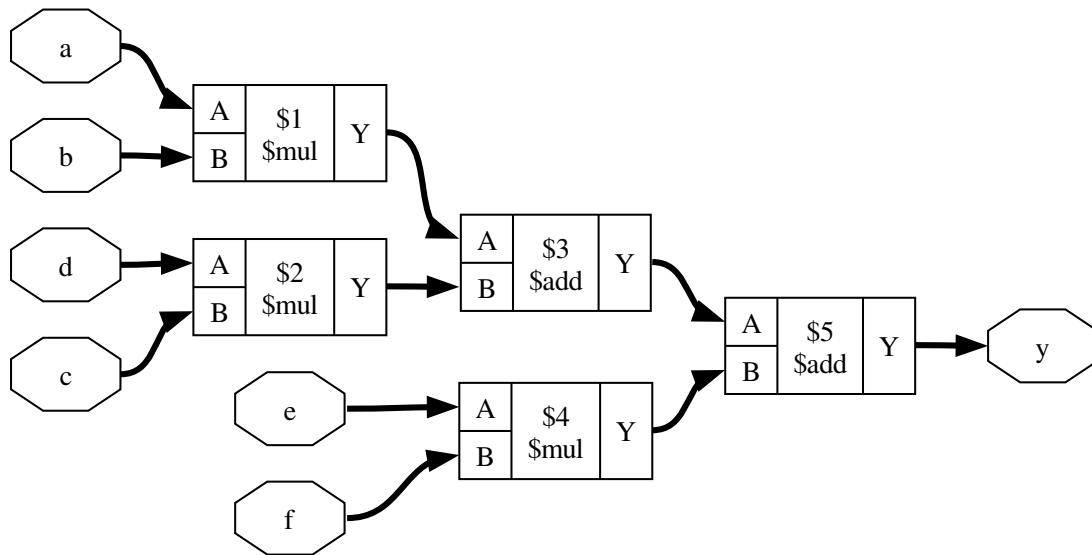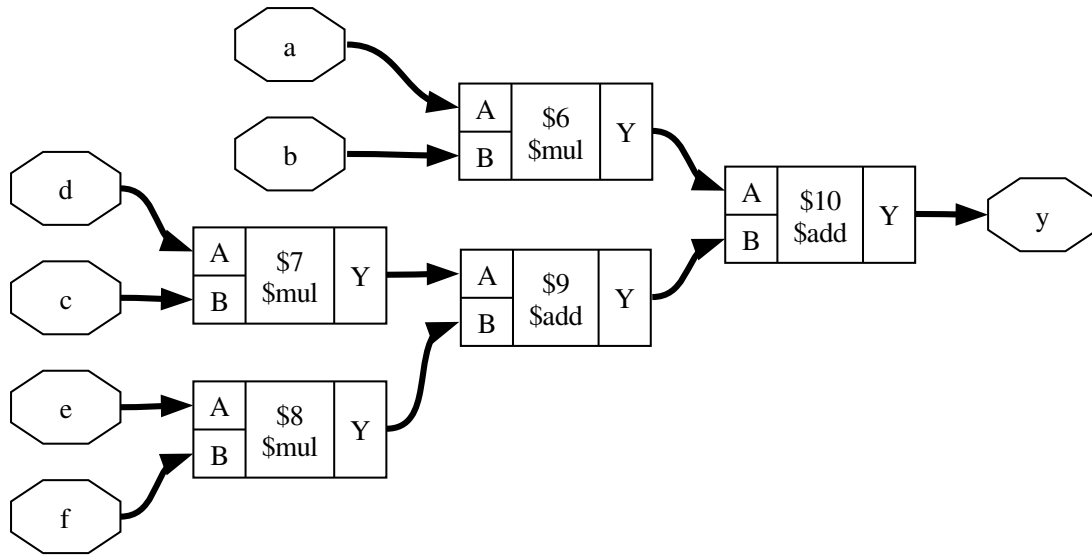

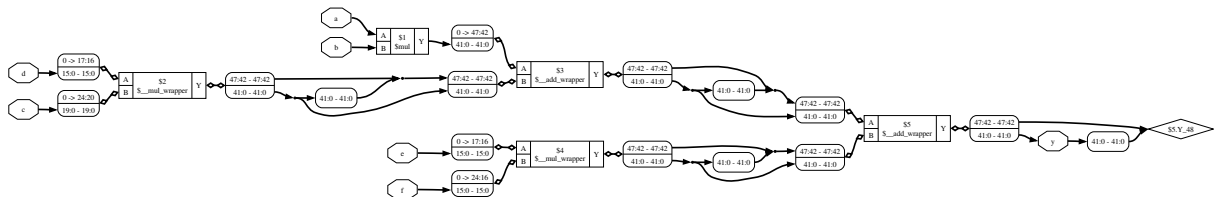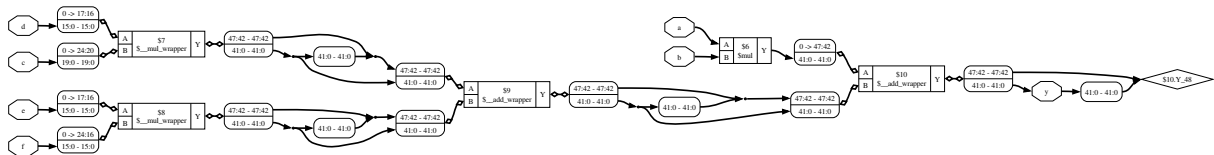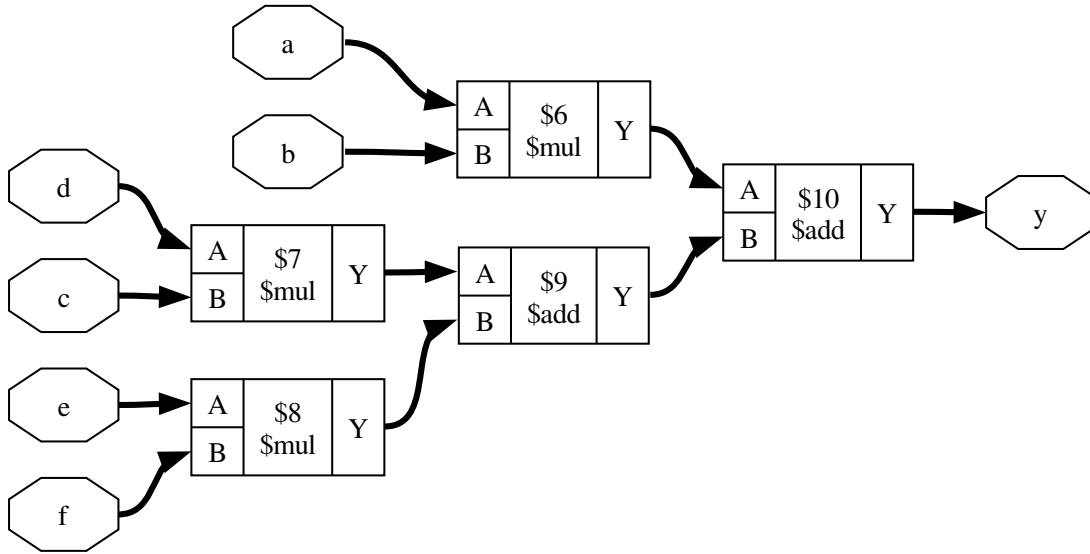


(continued from previous page)

```
-map %__macc_xilinx_xmap \
-swap $__add_wrapper A,B ;;
```

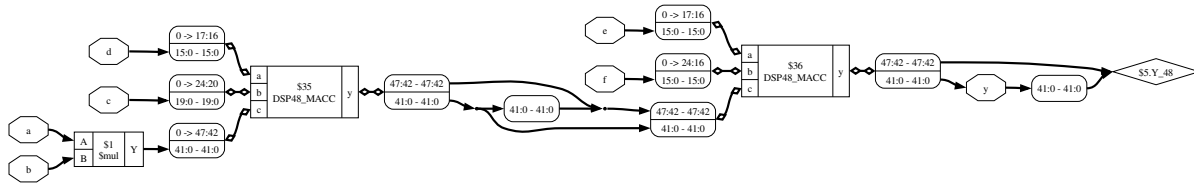


Extract in test2:

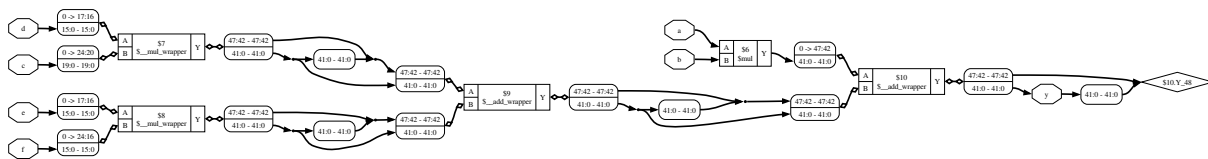

```
design -push
read_verilog macc_xilinx_xmap.v
techmap -map macc_xilinx_swap_map.v
techmap -map macc_xilinx_wrap_map.v;;
design -save __macc_xilinx_xmap
design -pop

extract -constports -ignore_parameters \
-map %__macc_xilinx_xmap \
-swap $__add_wrapper A,B ;;
```

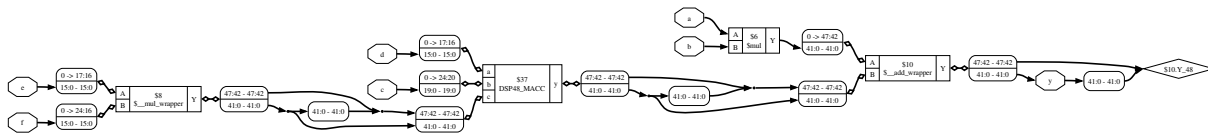

Unwrap in test2:

```
techmap -map macc_xilinx_unwrap_map.v;;
```


3.1.8 The ABC toolbox

ABC, from the University of California, Berkeley, is a logic toolbox used for fine-grained optimisation and LUT mapping.

Yosys has two different commands, which both use this logic toolbox, but use it in different ways.

The `abc` pass can be used for both ASIC (e.g. `abc -liberty`) and FPGA (`abc -lut`) mapping, but this page will focus on FPGA mapping.

The `abc9` pass generally provides superior mapping quality due to being aware of combination boxes and DFF and LUT timings, giving it a more global view of the mapping problem.

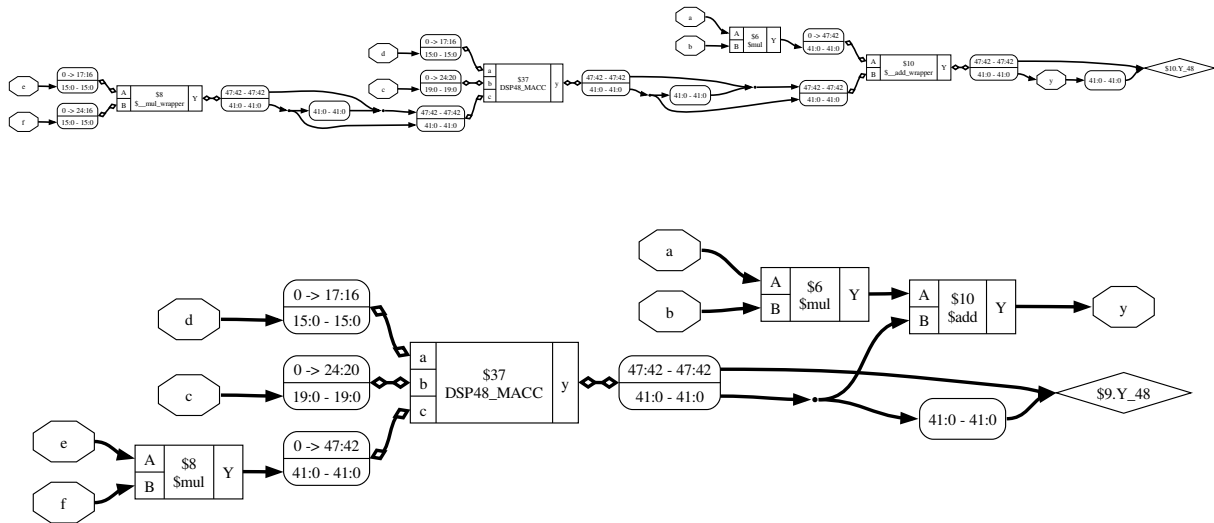

ABC: the unit delay model, simple and efficient

The `abc` pass uses a highly simplified view of an FPGA:

- An FPGA is made up of a network of inputs that connect through LUTs to a network of outputs. These inputs may actually be I/O pins, D flip-flops, memory blocks or DSPs, but ABC is unaware of this.
- Each LUT has 1 unit of delay between an input and its output, and this applies for all inputs of a LUT, and for all sizes of LUT up to the maximum LUT size allowed; e.g. the delay between the input of a LUT2 and its output is the same as the delay between the input of a LUT6 and its output.
- A LUT may take up a variable number of area units. This is constant for each size of LUT; e.g. a LUT4 may take up 1 unit of area, but a LUT5 may take up 2 units of area, but this applies for all LUT4s and LUT5s.

This is known as the “unit delay model”, because each LUT uses one unit of delay.

From this view, the problem ABC has to solve is finding a mapping of the network to LUTs that has the lowest delay, and then optimising the mapping for size while maintaining this delay.

This approach has advantages:

- It is simple and easy to implement.
- Working with unit delays is fast to manipulate.
- It reflects *some* FPGA families, for example, the iCE40HX/LP fits the assumptions of the unit delay model quite well (almost all synchronous blocks, except for adders).

But this approach has drawbacks, too:

- The network of inputs and outputs with only LUTs means that a lot of combinational cells (multipliers and LUTRAM) are invisible to the unit delay model, meaning the critical path it optimises for is not necessarily the actual critical path.
- LUTs are implemented as multiplexer trees, so there is a delay caused by the result propagating through the remaining multiplexers. This means the assumption of delay being equal isn’t true in physical hardware, and is proportionally larger for larger LUTs.

- Even synchronous blocks have arrival times (propagation delay between clock edge to output changing) and setup times (requirement for input to be stable before clock edge) which affect the delay of a path.

ABC9: the generalised delay model, realistic and flexible

ABC9 uses a more detailed and accurate model of an FPGA:

- An FPGA is made up of a network of inputs that connect through LUTs and combinational boxes to a network of outputs. These boxes have specified delays between inputs and outputs, and may have an associated network (“white boxes”) or not (“black boxes”), but must be treated as a whole.
- Each LUT has a specified delay between an input and its output in arbitrary delay units, and this varies for all inputs of a LUT and for all sizes of LUT, but each size of LUT has the same associated delay; e.g. the delay between input A and output is different between a LUT2 and a LUT6, but is constant for all LUT6s.
- A LUT may take up a variable number of area units. This is constant for each size of LUT; e.g. a LUT4 may take up 1 unit of area, but a LUT5 may take up 2 units of area, but this applies for all LUT4s and LUT5s.

This is known as the “generalised delay model”, because it has been generalised to arbitrary delay units. ABC9 doesn’t actually care what units you use here, but the Yosys convention is picoseconds. Note the introduction of boxes as a concept. While the generalised delay model does not require boxes, they naturally fit into it to represent combinational delays. Even synchronous delays like arrival and setup can be emulated with combinational boxes that act as a delay. This is further extended to white boxes, where the mapper is able to see inside a box, and remove orphan boxes with no outputs, such as adders.

Again, ABC9 finds a mapping of the network to LUTs that has the lowest delay, and then minimises it to find the lowest area, but it has a lot more information to work with about the network.

The result here is that ABC9 can remove boxes (like adders) to reduce area, optimise better around those boxes, and also permute inputs to give the critical path the fastest inputs.

Todo

more about logic minimization & register balancing et al with ABC

Setting up a flow for ABC9

Much of the configuration comes from attributes and `specify` blocks in Verilog simulation models.

specify syntax

Since `specify` is a relatively obscure part of the Verilog standard, a quick guide to the syntax:

```

specify                                // begins a specify block
  (A => B) = 123;                        // simple combinational path from A to B with a delay
  ↪ of 123.
  (A *> B) = 123;                        // simple combinational path from A to all bits of B
  ↪ with a delay of 123 for all.
  if (FOO) (A => B) = 123;               // paths may apply under specific conditions.
  (posedge CLK => (Q : D)) = 123;        // combinational path triggered on the positive edge
  ↪ of CLK; used for clock-to-Q arrival paths.
  $setup(A, posedge CLK, 123);          // setup constraint for an input relative to a clock.
endspecify                            // ends a specify block

```

By convention, all delays in `specify` blocks are in integer picoseconds. Files containing `specify` blocks should be read with the `-specify` option to `read_verilog` so that they aren't skipped.

LUTs

LUTs need to be annotated with an `(* abc9_lut=N *)` attribute, where `N` is the relative area of that LUT model. For example, if an architecture can combine LUTs to produce larger LUTs, then the combined LUTs would have increasingly larger `N`. Conversely, if an architecture can split larger LUTs into smaller LUTs, then the smaller LUTs would have smaller `N`.

LUTs are generally specified with simple combinational paths from the LUT inputs to the LUT output.

DFFs

DFFs should be annotated with an `(* abc9_flop *)` attribute, however ABC9 has some specific requirements for this to be valid: - the DFF must initialise to zero (consider using `dfflegalize` to ensure this). - the DFF cannot have any asynchronous resets/sets (see the simplification idiom and the Boxes section for what to do here).

It is worth noting that in pure `abc9` mode, only the setup and arrival times are passed to ABC9 (specifically, they are modelled as buffers with the given delay). In `abc9 -dff`, the flop itself is passed to ABC9, permitting sequential optimisations.

Some vendors have universal DFF models which include async sets/resets even when they're unused. Therefore the *simplification idiom* exists to handle this: by using a `techmap` file to discover flops which have a constant driver to those asynchronous controls, they can be mapped into an intermediate, simplified flop which qualifies as an `(* abc9_flop *)`, ran through `abc9`, and then mapped back to the original flop. This is used in `synth_intel_aln` and `synth_quicklogic` for the PolarPro3.

DFFs are usually specified to have setup constraints against the clock on the input signals, and an arrival time for the Q output.

Boxes

A “box” is a purely-combinational piece of hard logic. If the logic is exposed to ABC9, it's a “whitebox”, otherwise it's a “blackbox”. Carry chains would be best implemented as whiteboxes, but a DSP would be best implemented as a blackbox (multipliers are too complex to easily work with). LUT RAMs can be implemented as whiteboxes too.

Boxes are arguably the biggest advantage that ABC9 has over ABC: by being aware of carry chains and DSPs, it avoids optimising for a path that isn't the actual critical path, while the generally-longer paths result in ABC9 being able to reduce design area by mapping other logic to slower cells with greater logic density.

3.1.9 Mapping to cell libraries

While much of this documentation focuses on the use of Yosys with FPGAs, it is also possible to map to cell libraries which can be used in designing ASICs. This section will cover a brief [example project](#), available in the Yosys source code under `docs/source/code_examples/intro/`. The project contains a simple ASIC synthesis script (`counter.ys`), a digital design written in Verilog (`counter.v`), and a simple CMOS cell library (`mycells.lib`). Many of the early steps here are already covered in more detail in the *Synthesis starter* document.

Note

The `counter.js` script includes the commands used to generate the images in this document. Code snippets in this document skip these commands; including line numbers to allow the reader to follow along with the source.

To learn more about these commands, check out *[A look at the show command](#)*.

A simple counter

First, let's quickly look at the design:

Listing 3.31: `counter.v`

```
1 module counter (clk, rst, en, count);
2
3     input clk, rst, en;
4     output reg [1:0] count;
5
6     always @(posedge clk)
7         if (rst)
8             count <= 2'd0;
9         else if (en)
10            count <= count + 2'd1;
11
12 endmodule
```

This is a simple counter with reset and enable. If the reset signal, `rst`, is high then the counter will reset to 0. Otherwise, if the enable signal, `en`, is high then the `count` register will increment by 1 each rising edge of the clock, `clk`.

Loading the design

Listing 3.32: `counter.js` - read design

```
1 # read design
2 read_verilog counter.v
3 hierarchy -check -top counter
```

Our circuit now looks like this:

Coarse-grain representation

Listing 3.33: `counter.js` - the high-level stuff

```
7 # the high-level stuff
8 proc; opt
9 memory; opt
10 fsm; opt
```

Logic gate mapping

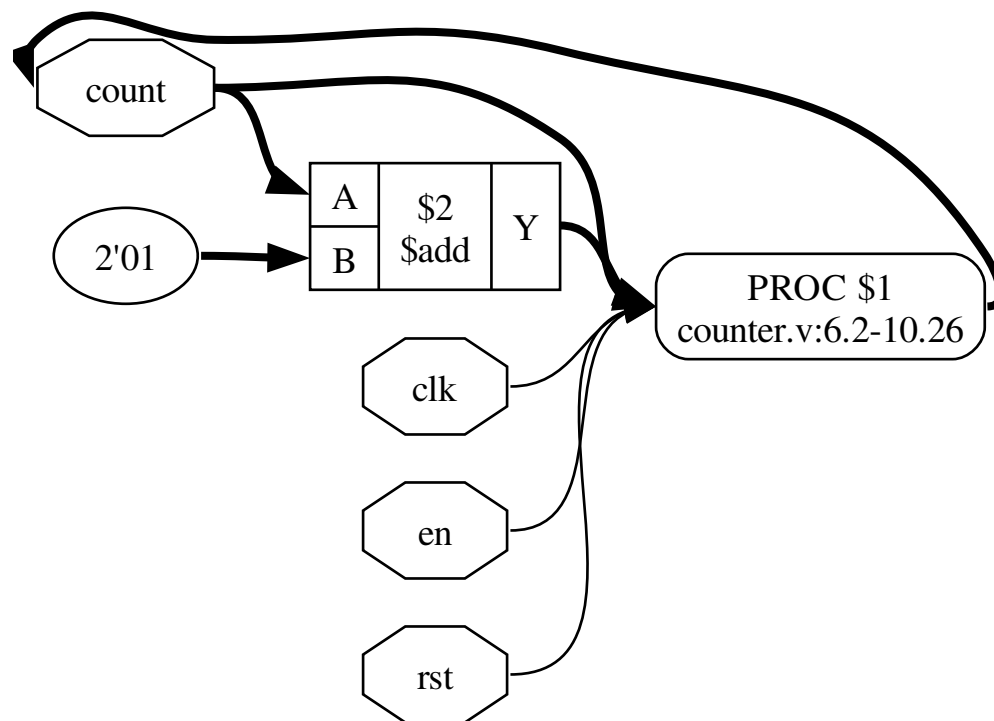


Fig. 3.7: counter after hierarchy

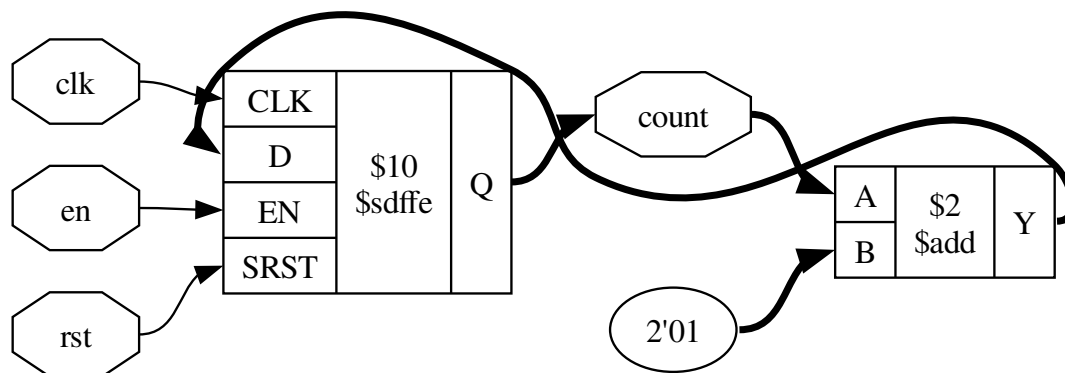


Fig. 3.8: Coarse-grain representation of the counter module

Listing 3.34: counter.y_s - mapping to internal cell library

```

14 # mapping to internal cell library
15 techmap; opt

```

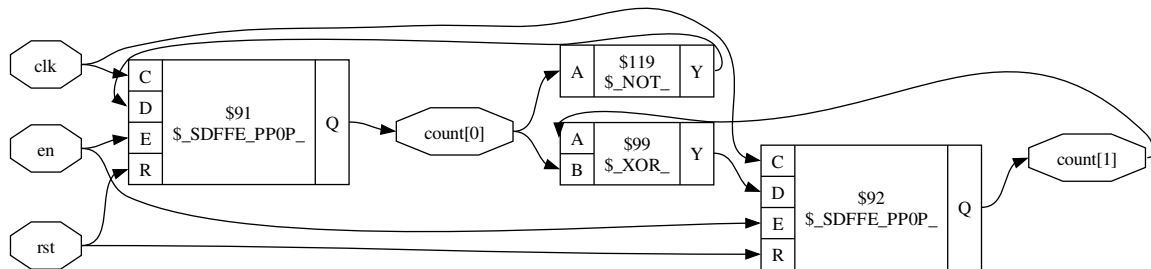


Fig. 3.9: counter after techmap

Mapping to hardware

For this example, we are using a Liberty file to describe a cell library which our internal cell library will be mapped to:

Todo

find a Liberty pigments style?

Listing 3.35: mycells.lib

```

1 library(demo) {
2   cell(BUF) {
3     area: 6;
4     pin(A) { direction: input; }
5     pin(Y) { direction: output;
6             function: "A"; }
7   }
8   cell(NOT) {
9     area: 3;
10    pin(A) { direction: input; }
11    pin(Y) { direction: output;
12            function: "A'"; }
13  }
14  cell(NAND) {
15    area: 4;
16    pin(A) { direction: input; }
17    pin(B) { direction: input; }
18    pin(Y) { direction: output;
19            function: "(A*B)'" ; }
20  }
21  cell(NOR) {

```

(continues on next page)

(continued from previous page)

```

22     area: 4;
23     pin(A) { direction: input; }
24     pin(B) { direction: input; }
25     pin(Y) { direction: output;
26             function: "(A+B)"; }
27 }
28 cell(DFF) {
29     area: 18;
30     ff(IQ, IQN) { clocked_on: C;
31                 next_state: D; }
32     pin(C) { direction: input;
33             clock: true; }
34     pin(D) { direction: input; }
35     pin(Q) { direction: output;
36             function: "IQ"; }
37 }
38 }

```

Recall that the Yosys built-in logic gate types are `$_NOT_`, `$_AND_`, `$_OR_`, `$_XOR_`, and `$_MUX_` with an assortment of dff memory types. *mycells.lib* defines our target cells as BUF, NOT, NAND, NOR, and DFF. Mapping between these is performed with the commands `dfflibmap` and `abc` as follows:

Listing 3.36: counter.y - mapping to hardware

```

20 dfflibmap -liberty mycells.lib
21
22 # mapping logic to mycells.lib
23 abc -liberty mycells.lib
24
25 # cleanup
26 clean

```

The final version of our `counter` module looks like this:

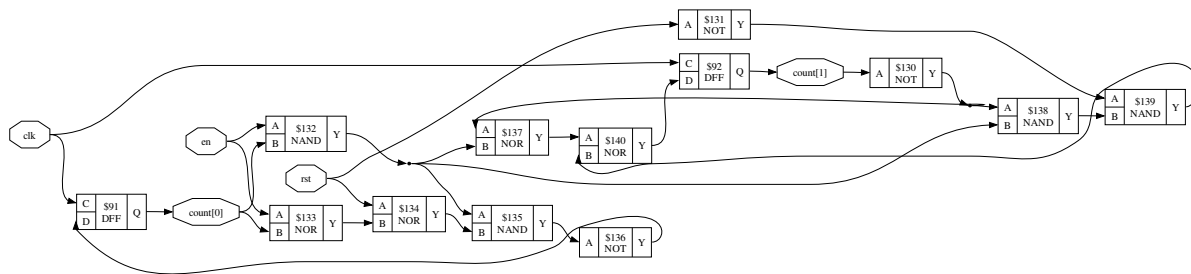


Fig. 3.10: counter after hardware cell mapping

Before finally being output as a verilog file with `write_verilog`, which can then be loaded into another tool:

Listing 3.37: counter.y_s - write synthesized design

```
30 # write synthesized design
31 write_verilog synth.v
```

3.2 More scripting

Todo

brief overview for the more scripting index

Todo

troubleshooting document(?)

3.2.1 Loading a design

Input files on the command line

- guesses frontend based on file extension
 - .v -> read -vlog2k
 - .sv -> read -sv
 - .vhd and .vhdl -> read -vhdl
 - .blif and .eblif -> *read_blif*
 - .json -> *read_json*
 - .il -> *read_rtlil* (direct textual representation of Yosys internal state)
- command line also supports
 - .ys -> script
 - .tcl -> tcl
 - - -> reads stdin and treats it as a script

The read command

- standard method of loading designs
- also for defining macros and include directories
- uses **verific** command if available
 - **-verific** and **-noverific** options to enforce with/without Verific
 - check **help read** for more about the options available and the filetypes supported
 - elaborate designs with **verific -import [options] <top>** (or use **hierarchy**)
- fallback to *read_verilog* with **-defer** option
 - does not compile design until **hierarchy** command as discussed in *Synthesis starter*

- more similar to `verific` behaviour
- `read -define` et al mapped to `verific` or `verilog_defines`
- similarly, `read -incdir` et al mapped to `verific` or `verilog_defaults`

Note

The Verific frontend for Yosys, which provides the `verific` command, requires Yosys to be built with Verific. For full functionality, custom modifications to the Verific source code from YosysHQ are required, but limited useability can be achieved with some stock Verific builds. Check [Compiling with Verific library](#) for more.

Yosys frontends

- *Reading input files*
- typically start with `read_`
- built-in support for heredocs
 - in-line code with `<<EOT`
 - can use any eot marker, but EOT (End-of-Transmission) and EOF (End-of-File) are most common
- built-in support for reading multiple files in the same command
 - executed as multiple successive calls to the frontend
- compatible with `-f` command line option, e.g. `yosys -f verilog design.txt` will use the `read_verilog` frontend with the input file `design.txt`
- `verific` and `read` commands are technically not ‘Frontends’, but their behaviour is kept in sync

Note

‘Frontend’ here means that the command is implemented as a sub-class of `RTLIL::Frontend`, as opposed to the usual `RTLIL::Pass`.

Todo

link note to as-yet non-existent section on `RTLIL::Pass` under [Working with the Yosys codebase](#)

The `read_verilog` command

- *`read_verilog` - read modules from Verilog file*; also
 - `verilog_defaults`,
 - `verilog_defines`, and
 - *`read_verilog_file_list` - parse a Verilog file list*
- supports most of Verilog-2005
- limited support for SystemVerilog
- some non-standard features/extensions for enabling formal verification

- please do not rely on `read_verilog` for syntax checking
 - recommend using a simulator (for example Icarus Verilog) or linting with another tool (such as verilator) first

Todo

figure out this example code block

```
read_verilog file1.v
read_verilog -I include_dir -D enable_foo -D WIDTH=12 file2.v
read_verilog -lib cell_library.v

verilog_defaults -add -I include_dir
read_verilog file3.v
read_verilog file4.v
verilog_defaults -clear

verilog_defaults -push
verilog_defaults -add -I include_dir
read_verilog file5.v
read_verilog file6.v
verilog_defaults -pop
```

Other built-in read_* commands

- `read_rtlil` - read modules from RTLIL file
- `read_aiger` - read AIGER file
- `read_blif` - read BLIF file
- `read_json` - read JSON file
- `read_liberty` - read cells from liberty file
- `read_xaiger2` - (experimental) read XAIGER file

Todo

does `write_file` count?

Externally maintained plugins

- GHDL plugin for VHDL (check `help ghdl`)
- yosys-slang plugin for more comprehensive SystemVerilog support (check `help read_slang`)
 - yosys-slang is implemented as a ‘*Frontend*,’ with all the built-in support that entails
- both plugins above are included in OSS CAD Suite
- Synlig, which uses Surelog to provide SystemVerilog support
 - also implemented as a ‘*Frontend*’

3.2.2 Selections

The selection framework

Todo

reduce overlap with *Scripting in Yosys* select section

The `select` command can be used to create a selection for subsequent commands. For example:

```
select foobar      # select the module foobar
delete            # delete selected objects
```

Normally the `select` command overwrites a previous selection. The commands `select -add` and `select -del` can be used to add or remove objects from the current selection.

The command `select -clear` can be used to reset the selection to the default, which is a complete selection of everything in the current module.

This selection framework can also be used directly in many other commands. Whenever a command has `[selection]` as last argument in its usage help, this means that it will use the engine behind the `select` command to evaluate additional arguments and use the resulting selection instead of the selection created by the last `select` command.

For example, the command `delete` will delete everything in the current selection; while `delete foobar` will only delete the module foobar. If no `select` command has been made, then the “current selection” will be the whole design.

Note

Many of the examples on this page make use of the `show` command to visually demonstrate the effect of selections. For a more detailed look at this command, refer to *A look at the show command*.

How to make a selection

Selection by object name

The easiest way to select objects is by object name. This is usually only done in synthesis scripts that are hand-tailored for a specific design.

```
select foobar      # select module foobar
select foo*        # select all modules whose names start with foo
select foo*/bar*    # select all objects matching bar* from modules matching foo*
select */clk        # select objects named clk from all modules
```

Module and design context

Commands can be executed in *module/* or *design/* context. Until now, all commands have been executed in design context. The `cd` command can be used to switch to module context.

In module context, all commands only effect the active module. Objects in the module are selected without the `<module_name>/` prefix. For example:

```
cd foo                # switch to module foo
delete bar            # delete object foo/bar

cd mycpu              # switch to module mycpu
dump reg_*            # print details on all objects whose names start with reg_

cd ..                 # switch back to design
```

Note: Most synthesis scripts never switch to module context. But it is a very powerful tool which we explore more in *Interactive design investigation*.

Selecting by object property or type

Special patterns can be used to select by object property or type. For example:

- select all wires whose names start with `reg_`: `select w:reg_*`
- select all objects with the attribute `foobar` set: `select a:foobar`
- select all objects with the attribute `foobar` set to 42: `select a:foobar=42`
- select all modules with the attribute `blabla` set: `select A:blabla`
- select all *\$add* cells from the module `foo`: `select foo/t:$add`

A complete list of pattern expressions can be found in *select - modify and view the list of selected objects*.

Operations on selections

Combining selections

The *select* command is actually much more powerful than it might seem at first glance. When it is called with multiple arguments, each argument is evaluated and pushed separately on a stack. After all arguments have been processed it simply creates the union of all elements on the stack. So `select t:$add a:foo` will select all *\$add* cells and all objects with the `foo` attribute set:

Listing 3.38: Test module for operations on selections

```
module foobaraddsub(a, b, c, d, fa, fs, ba, bs);
  input [7:0] a, b, c, d;
  output [7:0] fa, fs, ba, bs;
  assign fa = a + (* foo *) b;
  assign fs = a - (* foo *) b;
  assign ba = c + (* bar *) d;
  assign bs = c - (* bar *) d;
endmodule
```

Listing 3.39: Output for command `select t:$add a:foo -list`
on Listing 3.38

```
yosys> select t:$add a:foo -list
foobaraddsub/$add$foobaraddsub.v:6$3
foobaraddsub/$sub$foobaraddsub.v:5$2
foobaraddsub/$add$foobaraddsub.v:4$1
```

In many cases simply adding more and more stuff to the selection is an ineffective way of selecting the interesting part of the design. Special arguments can be used to combine the elements on the stack. For

example the `%i` arguments pops the last two elements from the stack, intersects them, and pushes the result back on the stack. So `select t:$add a:foo %i` will select all `$add` cells that have the `foo` attribute set:

Listing 3.40: Output for command `select t:$add a:foo %i`
`-list` on Listing 3.38

```
yosys> select t:$add a:foo %i -list
foobaraddsub/$add$foobaraddsub.v:4$1
```

Some of the special `%`-codes:

- `%u`: union of top two elements on stack – pop 2, push 1
- `%d`: difference of top two elements on stack – pop 2, push 1
- `%i`: intersection of top two elements on stack – pop 2, push 1
- `%n`: inverse of top element on stack – pop 1, push 1

See *select - modify and view the list of selected objects* for the full list.

Expanding selections

Listing 3.41 uses the Yosys non-standard `{... *}` syntax to set the attribute `sumstuff` on all cells generated by the first assign statement. (This works on arbitrary large blocks of Verilog code and can be used to mark portions of code for analysis.)

Listing 3.41: Another test module for operations on selections

```
module sumprod(a, b, c, sum, prod);

    input [7:0] a, b, c;
    output [7:0] sum, prod;

    {* sumstuff *}
    assign sum = a + b + c;
    {* *}

    assign prod = a * b * c;

endmodule
```



Selecting `a:sumstuff` in this module will yield the following circuit diagram:

As only the cells themselves are selected, but not the temporary wire `$1_Y`, the two adders are shown as two disjunct parts. This can be very useful for global signals like clock and reset signals: just unselect them using a command such as `select -del clk rst` and each cell using them will get its own net label.

In this case however we would like to see the cells connected properly. This can be achieved using the `%x` action, that broadens the selection, i.e. for each selected wire it selects all cells connected to the wire and vice versa. So `show a:sumstuff %x` yields the diagram shown in Fig. 3.12:

Selecting logic cones

Fig. 3.12 shows what is called the **input cone** of `sum`, i.e. all cells and signals that are used to generate the signal `sum`. The `%ci` action can be used to select the input cones of all object in the top selection in the stack maintained by the `select` command.

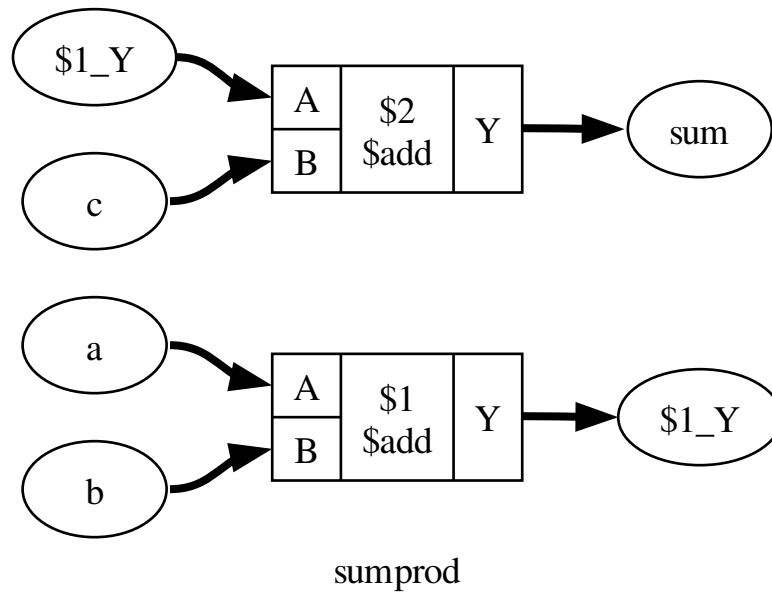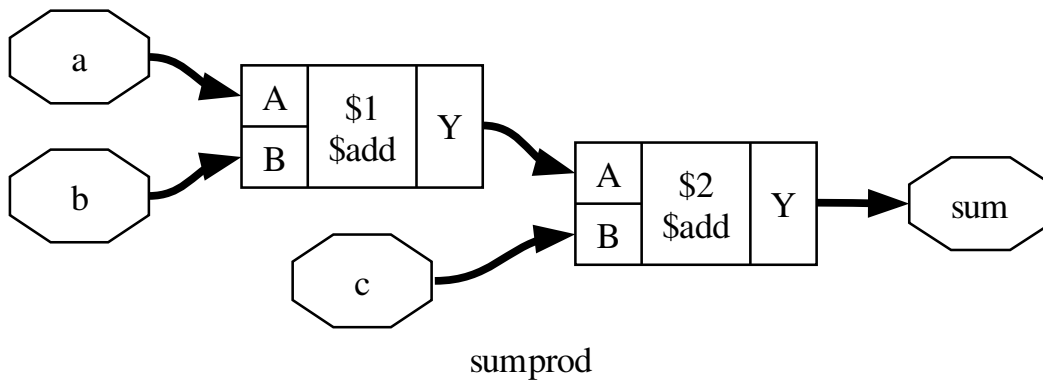Fig. 3.11: Output of `show a:sumstuff` on Listing 3.41Fig. 3.12: Output of `show a:sumstuff %x` on Listing 3.41

As with the `%x` action, these commands broaden the selection by one “step”. But this time the operation only works against the direction of data flow. That means, wires only select cells via output ports and cells only select wires via input ports.

The following sequence of diagrams demonstrates this step-wise expansion:

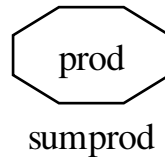


Fig. 3.13: Output of `show prod` on Listing 3.41

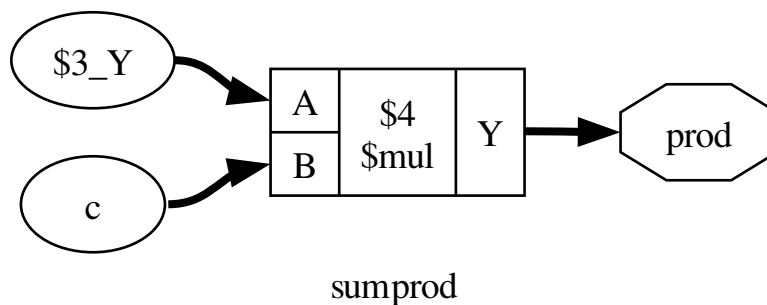


Fig. 3.14: Output of `show prod %ci` on Listing 3.41



Notice the subtle difference between `show prod %ci` and `show prod %ci %ci`. Both images show the `$mul` cell driven by some inputs `$3_Y` and `c`. However it is not until the second image, having called `%ci` the second time, that `show` is able to distinguish between `$3_Y` being a wire and `c` being an input. We can see this better with the `dump` command instead:

Listing 3.42: Output of `dump prod %ci`

```
attribute \src "sumprod.v:4.21-4.25"
wire width 8 output 5 \prod

attribute \src "sumprod.v:10.17-10.26"
cell $mul $mul$sumprod.v:10$4
  parameter \A_SIGNED 0
  parameter \A_WIDTH 8
```

(continues on next page)

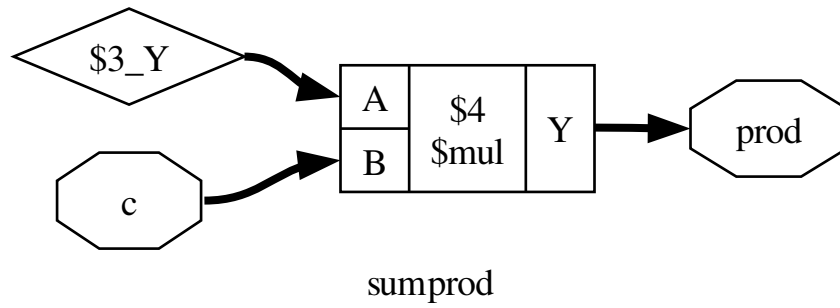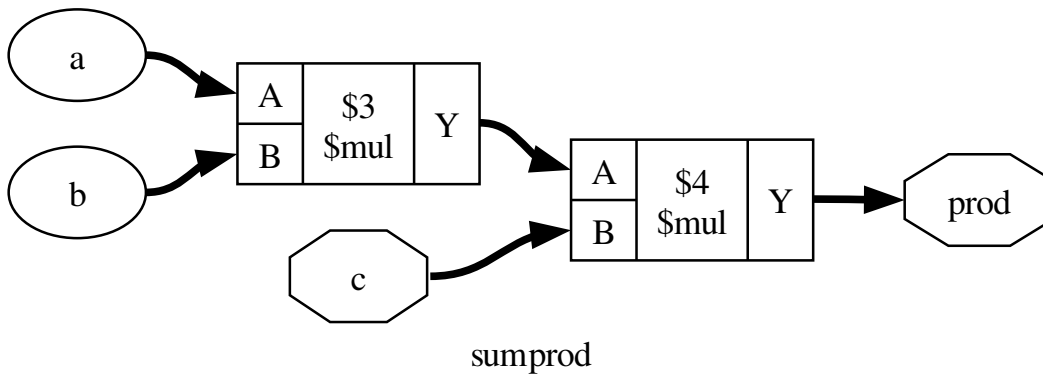Fig. 3.15: Output of `show prod %ci %ci` on Listing 3.41Fig. 3.16: Output of `show prod %ci %ci %ci` on Listing 3.41

(continued from previous page)

```

parameter \B_SIGNED 0
parameter \B_WIDTH 8
parameter \Y_WIDTH 8
connect \A $mul$sumprod.v:10$3_Y
connect \B \c
connect \Y \prod
end

```

Listing 3.43: Output of dump prod %ci %ci

```

attribute \src "sumprod.v:10.17-10.22"
wire width 8 $mul$sumprod.v:10$3_Y

attribute \src "sumprod.v:3.21-3.22"
wire width 8 input 3 \c

attribute \src "sumprod.v:4.21-4.25"
wire width 8 output 5 \prod

attribute \src "sumprod.v:10.17-10.26"
cell $mul $mul$sumprod.v:10$4
parameter \A_SIGNED 0
parameter \A_WIDTH 8
parameter \B_SIGNED 0
parameter \B_WIDTH 8
parameter \Y_WIDTH 8
connect \A $mul$sumprod.v:10$3_Y
connect \B \c
connect \Y \prod
end

```

When selecting many levels of logic, repeating %ci over and over again can be a bit dull. So there is a shortcut for that: the number of iterations can be appended to the action. So for example the action %ci3 is identical to performing the %ci action three times.

The action %ci* performs the %ci action over and over again until it has no effect anymore.

Advanced logic cone selection

In most cases there are certain cell types and/or ports that should not be considered for the %ci action, or we only want to follow certain cell types and/or ports. This can be achieved using additional patterns that can be appended to the %ci action.

Lets consider Listing 3.44. It serves no purpose other than being a non-trivial circuit for demonstrating some of the advanced Yosys features. This code is available in docs/source/code_examples/selections of the Yosys source repository.

Listing 3.44: memdemo.v

```

module memdemo(clk, d, y);

input clk;
input [3:0] d;

```

(continues on next page)

(continued from previous page)

```

output reg [3:0] y;

integer i;
reg [1:0] s1, s2;
reg [3:0] mem [0:3];

always @(posedge clk) begin
    for (i = 0; i < 4; i = i+1)
        mem[i] <= mem[(i+1) % 4] + mem[(i+2) % 4];
    { s2, s1 } = d ? { s1, s2 } ^ d : 4'b0;
    mem[s1] <= d;
    y <= mem[s2];
end

endmodule

```

The script `memdemo.ys` is used to generate the images included here. Let's look at the first section:

Listing 3.45: Synthesizing `memdemo.v`

```

read_verilog memdemo.v
prep -top memdemo; memory; opt

```

This loads Listing 3.44 and synthesizes the included module. Note that this code can be copied and run directly in a Yosys command line session, provided `memdemo.v` is in the same directory. We can now change to the `memdemo` module with `cd memdemo`, and call `show` to see the diagram in Fig. 3.17.

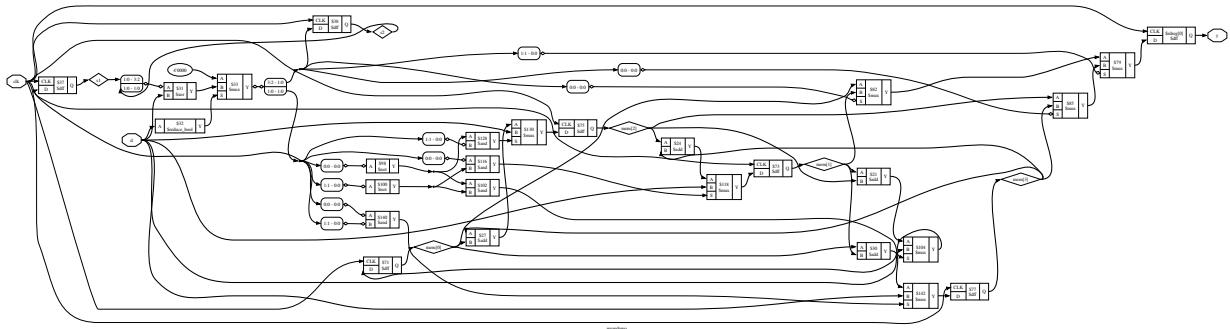
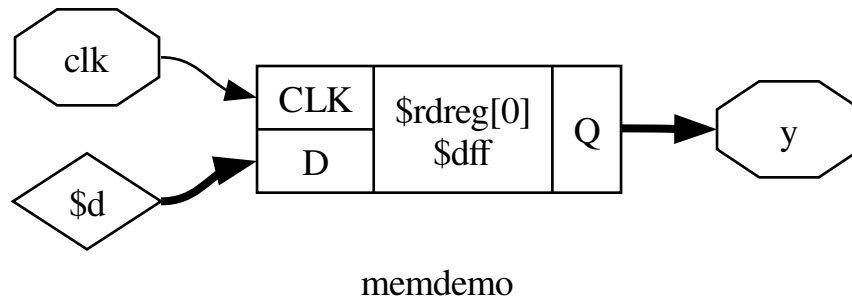
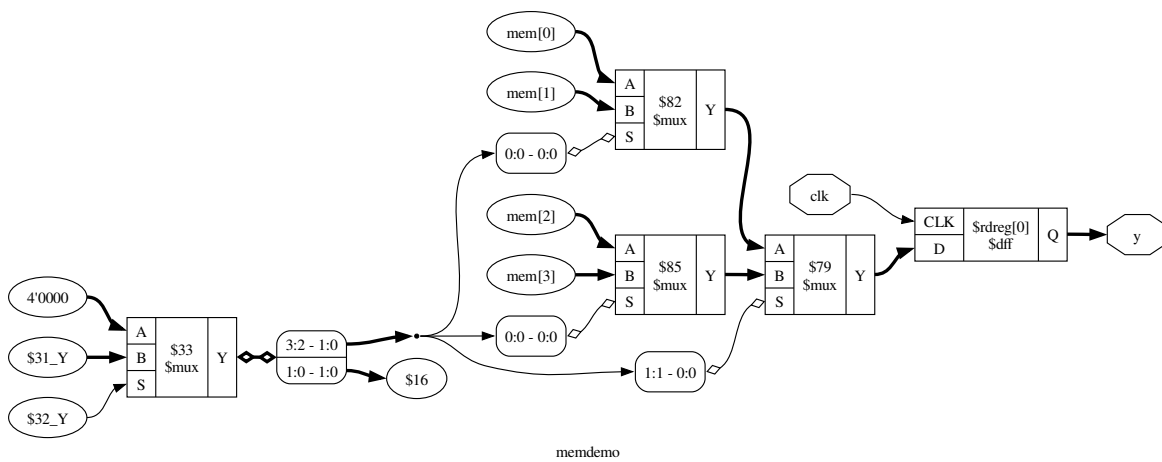


Fig. 3.17: Complete circuit diagram for the design shown in Listing 3.44

There's a lot going on there, but maybe we are only interested in the tree of multiplexers that select the output value. Let's start by just showing the output signal, `y`, and its immediate predecessors. Remember *Selecting logic cones* from above, we can use `show y %ci2`:

From this we would learn that `y` is driven by a `$dff` cell, that `y` is connected to the output port `Q`, that the `clk` signal goes into the `CLK` input port of the cell, and that the data comes from an auto-generated wire into the input `D` of the flip-flop cell (indicated by the `$` at the start of the name). Let's go a bit further now and try `show y %ci5`:

That's starting to get a bit messy, so maybe we want to ignore the mux select inputs. To add a pattern we add a colon followed by the pattern to the `%ci` action. The pattern itself starts with `-` or `+`, indicating if it is an include or exclude pattern, followed by an optional comma separated list of cell types, followed by an optional comma separated list of port names in square brackets. In this case, we want to exclude the `S` port

Fig. 3.18: Output of `show y %ci2`Fig. 3.19: Output of `show y %ci5`

of the `$mux` cell type with `show y %ci5:-$mux[S]:`

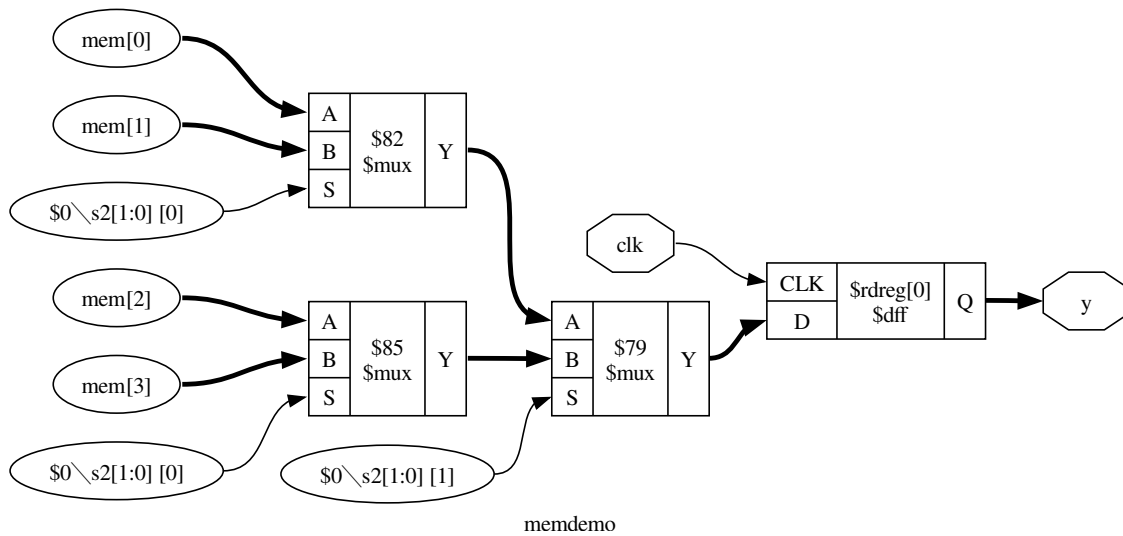


Fig. 3.20: Output of `show y %ci5:-$mux[S]`

We could use a command such as `show y %ci2:+$dff[Q,D] %ci*:-$mux[S]:-$dff` in which the first `%ci` jumps over the initial d-type flip-flop and the 2nd action selects the entire input cone without going over multiplexer select inputs and flip-flop cells:

Or we could use `show y %ci*:-[CLK,S]:+$dff:+$mux` instead, following the input cone all the way but only following `$dff` and `$mux` cells, and ignoring any ports named CLK or S:

Todo

pending discussion on whether rule ordering is a bug or a feature

Similar to `%ci` exists an action `%co` to select output cones that accepts the same syntax for pattern and repetition. The `%x` action mentioned previously also accepts this advanced syntax.

These actions for traversing the circuit graph, combined with the actions for boolean operations such as intersection (`%i`) and difference (`%d`) are powerful tools for extracting the relevant portions of the circuit under investigation.



Again, see *select - modify and view the list of selected objects* for full documentation of these expressions.

Incremental selection

Sometimes a selection can most easily be described by a series of add/delete operations. As mentioned previously, the commands `select -add` and `select -del` respectively add or remove objects from the current selection instead of overwriting it.

```
select -none      # start with an empty selection
select -add reg_* # select a bunch of objects
```

(continues on next page)

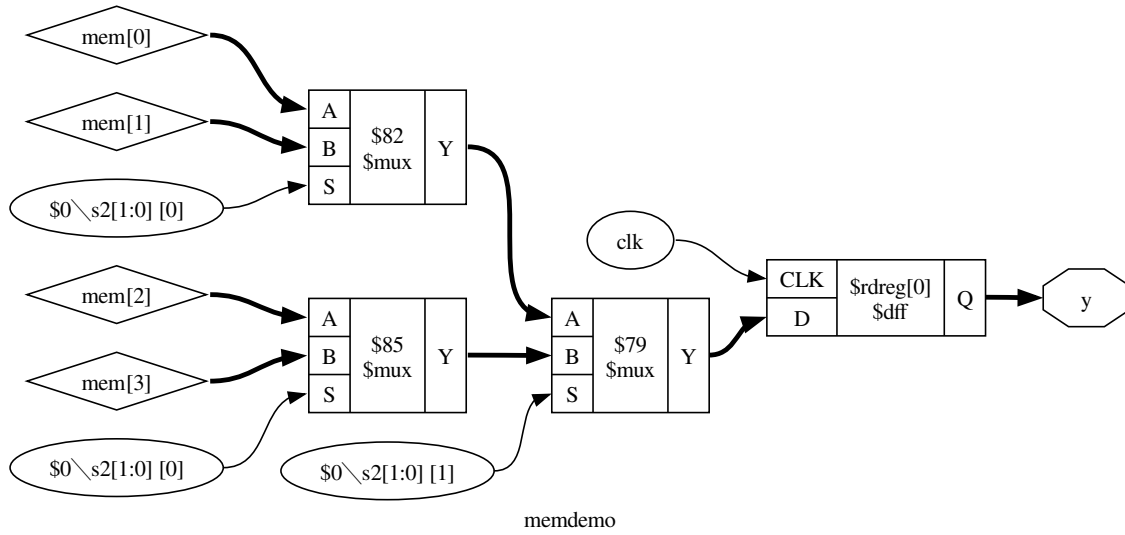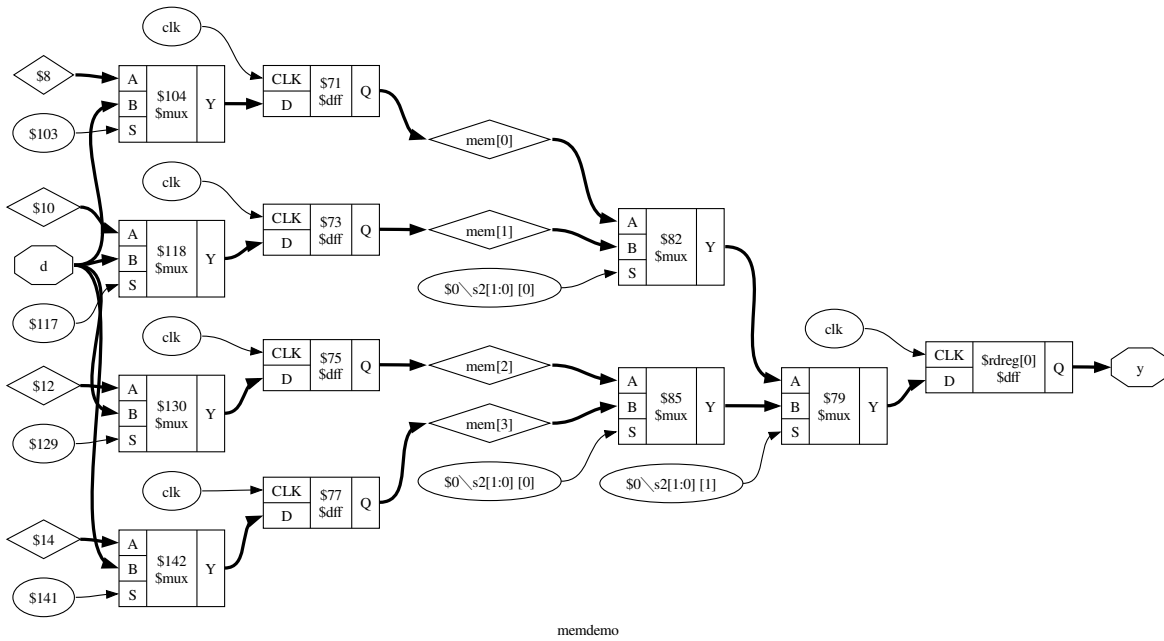Fig. 3.21: Output of `show y %ci2:+$dff[Q,D] %ci*:-$mux[S]:-$dff`Fig. 3.22: Output of `show y %ci*:-[CLK,S]:+$dff,$mux`

(continued from previous page)

```
select -del reg_42      # but not this one
select -add state %ci   # and add more stuff
```

Within a select expression the token % can be used to push the previous selection on the stack.

```
select t:$add t:$sub    # select all $add and $sub cells
select % %ci % %d       # select only the input wires to those cells
```

Storing and recalling selections

Todo

reflow for not presentation

The current selection can be stored in memory with the command `select -set <name>`. It can later be recalled using `select @<name>`. In fact, the `@<name>` expression pushes the stored selection on the stack maintained by the `select` command. So for example `select @foo @bar %i` will select the intersection between the stored selections `foo` and `bar`.

In larger investigation efforts it is highly recommended to maintain a script that sets up relevant selections, so they can easily be recalled, for example when Yosys needs to be re-run after a design or source code change.

The `history` command can be used to list all recent interactive commands. This feature can be useful for creating such a script from the commands used in an interactive session.

Remember that select expressions can also be used directly as arguments to most commands. Some commands also accept a single select argument to some options. In those cases selection variables must be used to capture more complex selections.

Example code from `docs/source/code_examples/selections`:

Listing 3.46: `select.v`

```
module test(clk, s, a, y);
    input clk, s;
    input [15:0] a;
    output [15:0] y;
    reg [15:0] b, c;

    always @(posedge clk) begin
        b <= a;
        c <= b;
    end

    wire [15:0] state_a = (a ^ b) + c;
    wire [15:0] state_b = (a ^ b) - c;
    assign y = !s ? state_a : state_b;
endmodule
```

Listing 3.47: select.ys

```
read_verilog select.v
prep -top test

cd test
select -set cone_a state_a %ci*:-$dff
select -set cone_b state_b %ci*:-$dff
select -set cone_ab @cone_a @cone_b %i
show -prefix select -format dot -notitle \
    -color red @cone_ab -color magenta @cone_a \
    -color blue @cone_b
```

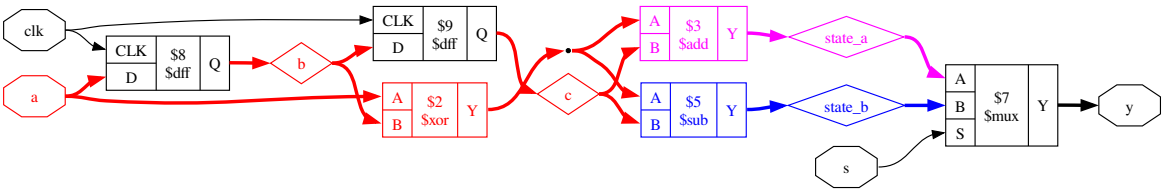


Fig. 3.23: Circuit diagram produced by Listing 3.47

3.2.3 Interactive design investigation

Todo

interactive design opening text

A look at the show command

Todo

merge into Scripting in Yosys show section

This section explores the *show* command and explains the symbols used in the circuit diagrams generated by it. The code used is included in the Yosys code base under docs/source/code_examples/show.

A simple circuit

example.v below provides the Verilog code for a simple circuit which we will use to demonstrate the usage of *show* in a simple setting.

Listing 3.48: example.v

```
module example(input clk, a, b, c,
               output reg [1:0] y);
    always @(posedge clk)
```

(continues on next page)

(continued from previous page)

```

    if (c)
        y <= c ? a + b : 2'd0;
endmodule

```

The Yosys synthesis script we will be running is included as [Listing 3.49](#). Note that `show` is called with the `-pause` option, that halts execution of the Yosys script until the user presses the Enter key. Using `show -pause` also allows the user to enter an interactive shell to further investigate the circuit before continuing synthesis.

Listing 3.49: `example_show.ys`

```


read_verilog example.v
show -pause # first
proc
show -pause # second
opt
show -pause # third

```

This script, when executed, will show the design after each of the three synthesis commands. We will now look at each of these diagrams and explain what is shown.

Note

The images used in this document are generated from the `example.ys` file, rather than `example_show.ys`. `example.ys` outputs the schematics as `.dot` files rather than displaying them directly. You can view these images yourself by running `yosys example.ys` and then `xdot example_first.dot` etc.

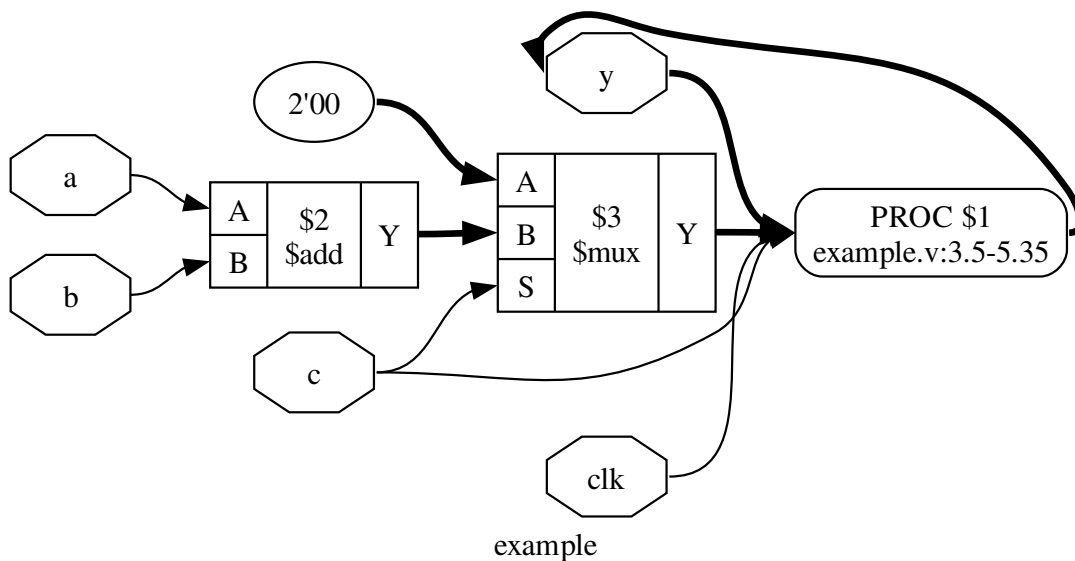Fig. 3.24: Output of the first `show` command in [Listing 3.49](#)

The first output shows the design directly after being read by the Verilog front-end. Input and output ports are displayed as octagonal shapes. Cells are displayed as rectangles with inputs on the left and outputs on the right side. The cell labels are two lines long: The first line contains a unique identifier for the cell and the second line contains the cell type. Internal cell types are prefixed with a dollar sign. For more details on the internal cell library, see [Internal cell library](#).

Constants are shown as ellipses with the constant value as label. The syntax `<bit_width>'<bits>` is used for constants that are not 32-bit wide and/or contain bits that are not 0 or 1 (i.e. x or z). Ordinary 32-bit constants are written using decimal numbers.

Single-bit signals are shown as thin arrows pointing from the driver to the load. Signals that are multiple bits wide are shown as thick arrows.

Finally *processes* are shown in boxes with round corners. Processes are Yosys' internal representation of the decision-trees and synchronization events modelled in a Verilog `always`-block. The label reads `PROC` followed by a unique identifier in the first line and contains the source code location of the original `always`-block in the second line. Note how the multiplexer from the `?:`-expression is represented as a `$mux` cell but the multiplexer from the `if`-statement is yet still hidden within the process.

The `proc` command transforms the process from the first diagram into a multiplexer and a d-type flip-flop, which brings us to the second diagram:

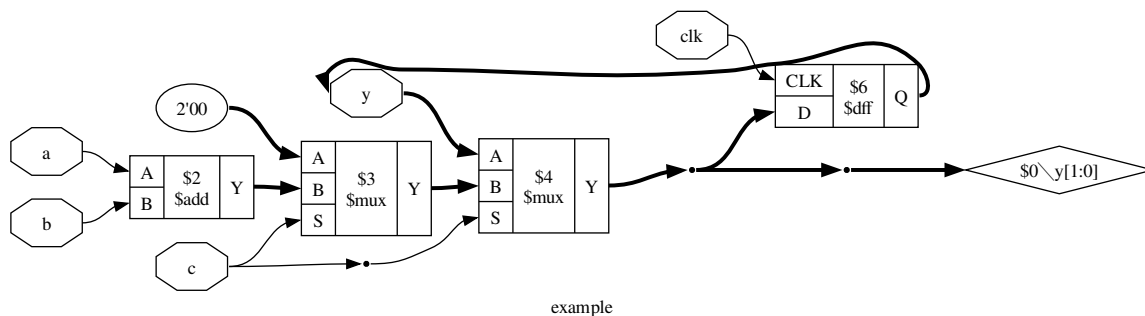
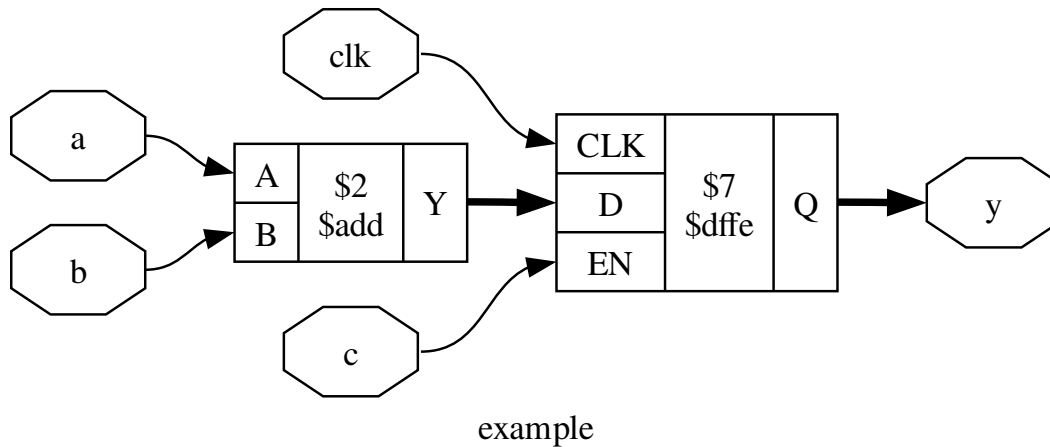


Fig. 3.25: Output of the second `show` command in Listing 3.49

The Rhombus shape to the right is a dangling wire. (Wire nodes are only shown if they are dangling or have “public” names, for example names assigned from the Verilog input.) Also note that the design now contains two instances of a `BUF`-node. These are artefacts left behind by the `proc` command. It is quite usual to see such artefacts after calling commands that perform changes in the design, as most commands only care about doing the transformation in the least complicated way, not about cleaning up after them. The next call to `clean` (or `opt`, which includes `clean` as one of its operations) will clean up these artefacts. This operation is so common in Yosys scripts that it can simply be abbreviated with the `;` token, which doubles as separator for commands. Unless one wants to specifically analyze this artefacts left behind some operations, it is therefore recommended to always call `clean` before calling `show`.

In this script we directly call `opt` as the next step, which finally leads us to the third diagram:

Here we see that the `opt` command not only has removed the artefacts left behind by `proc`, but also determined correctly that it can remove the first `$mux` cell without changing the behavior of the circuit.

Fig. 3.26: Output of the third *show* command in *example_show.y*

Break-out boxes for signal vectors

The code listing below shows a simple circuit which uses a lot of spliced signal accesses.

Listing 3.50: *splice.v*

```
module splice_demo(a, b, c, d, e, f, x, y);

input [1:0] a, b, c, d, e, f;
output [1:0] x;
assign x = {a[0], a[1]};

output [11:0] y;
assign {y[11:4], y[1:0], y[3:2]} =
    {a, b, ~{c, d}, ~{e, f}};

endmodule
```

Notice how the output for this circuit from the *show* command (Fig. 3.27) appears quite complex. This is an unfortunate side effect of the way Yosys handles signal vectors (aka. multi-bit wires or buses) as native objects. While this provides great advantages when analyzing circuits that operate on wide integers, it also introduces some additional complexity when the individual bits of of a signal vector are accessed.

The key elements in understanding this circuit diagram are of course the boxes with round corners and rows labeled <MSB_LEFT>:<LSB_LEFT> - <MSB_RIGHT>:<LSB_RIGHT>. Each of these boxes have one signal per row on one side and a common signal for all rows on the other side. The <MSB>:<LSB> tuples specify which bits of the signals are broken out and connected. So the top row of the box connecting the signals *a* and *x* indicates that the bit 0 (i.e. the range 0:0) from signal *a* is connected to bit 1 (i.e. the range 1:1) of signal *x*.

Lines connecting such boxes together and lines connecting such boxes to cell ports have a slightly different look to emphasise that they are not actual signal wires but a necessity of the graphical representation. This distinction seems like a technicality, until one wants to debug a problem related to the way Yosys internally

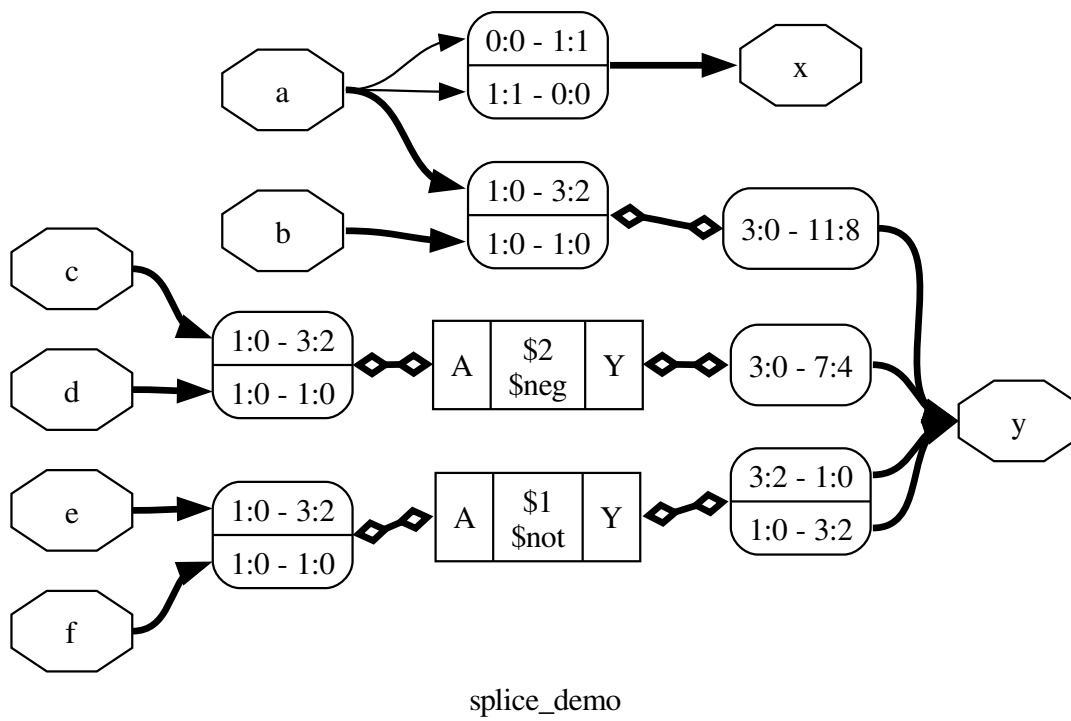


Fig. 3.27: Output of `yosys -p 'prep -top splice_demo; show' splice.v`

represents signal vectors, for example when writing custom Yosys commands.

Gate level netlists

Fig. 3.28 shows two common pitfalls when working with designs mapped to a cell library:

Listing 3.51: Generating Fig. 3.28

```
read_verilog cmos.v
prep -top cmos_demo
techmap
abc -liberty ../intro/mycells.lib;;
show -format dot -prefix cmos_00
```

First, Yosys did not have access to the cell library when this diagram was generated, resulting in all cell ports defaulting to being inputs. This is why all ports are drawn on the left side the cells are awkwardly arranged in a large column. Secondly the two-bit vector `y` requires breakout-boxes for its individual bits, resulting in an unnecessary complex diagram.

Listing 3.52: Generating Fig. 3.29

```
read_verilog cmos.v
prep -top cmos_demo
techmap
splitnets -ports
abc -liberty ../intro/mycells.lib;;
show -lib ../intro/mycells.v -format dot -prefix cmos_01
```

For Fig. 3.29, Yosys has been given a description of the cell library as Verilog file containing blackbox modules. There are two ways to load cell descriptions into Yosys: First the Verilog file for the cell library can be passed directly to the `show` command using the `-lib <filename>` option. Secondly it is possible to load cell libraries into the design with the `read_verilog -lib <filename>` command. The second method has the great advantage that the library only needs to be loaded once and can then be used in all subsequent calls to the `show` command.

In addition to that, Fig. 3.29 was generated after `splitnet -ports` was run on the design. This command splits all signal vectors into individual signal bits, which is often desirable when looking at gate-level circuits. The `-ports` option is required to also split module ports. Per default the command only operates on interior signals.

Miscellaneous notes

Per default the `show` command outputs a temporary dot file and launches `xdot` to display it. The options `-format`, `-viewer` and `-prefix` can be used to change format, viewer and filename prefix. Note that the `pdf` and `ps` format are the only formats that support plotting multiple modules in one run. The `dot` format can be used to output multiple modules, however `xdot` will raise an error when trying to read them.

In densely connected circuits it is sometimes hard to keep track of the individual signal wires. For these cases it can be useful to call `show` with the `-colors <integer>` argument, which randomly assigns colors to the nets. The integer (> 0) is used as seed value for the random color assignments. Sometimes it is necessary it try some values to find an assignment of colors that looks good.

The command `help show` prints a complete listing of all options supported by the `show` command.

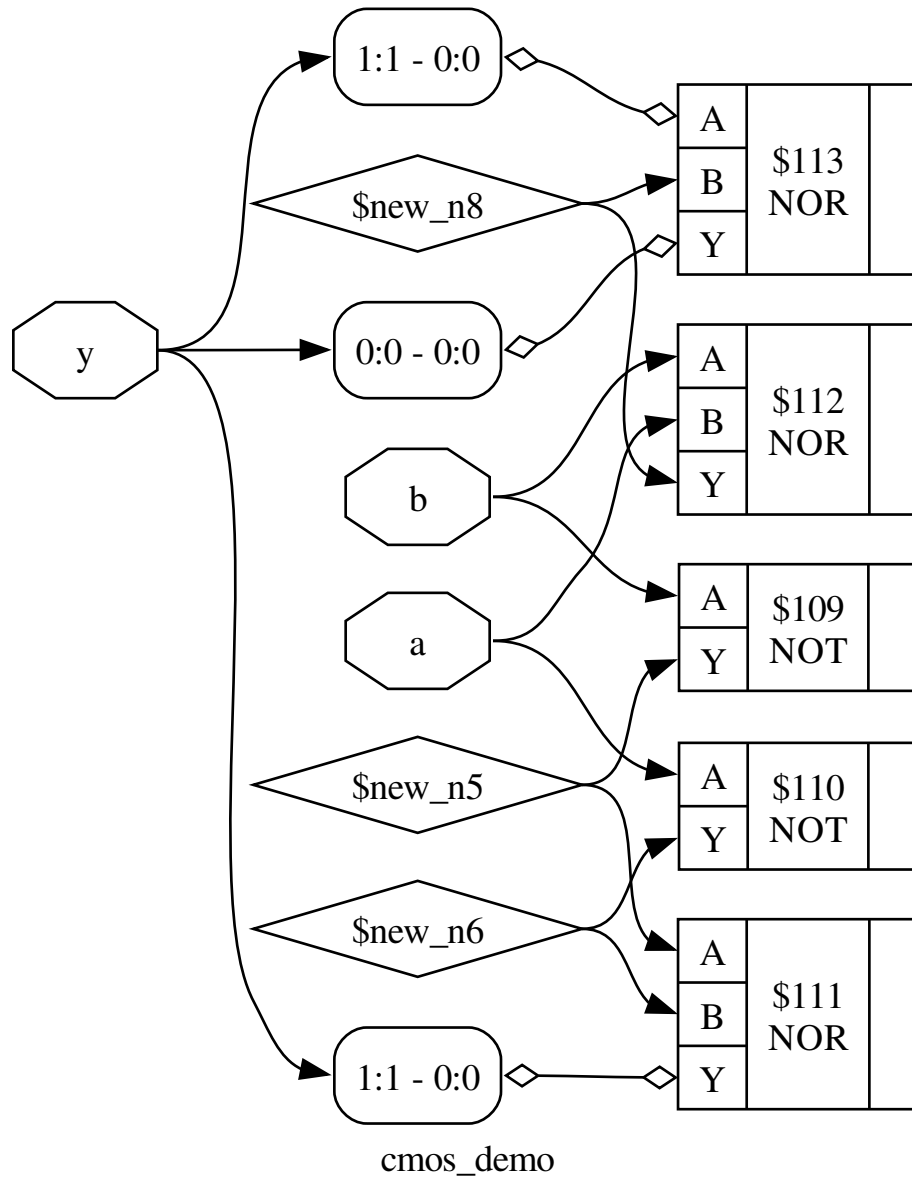


Fig. 3.28: A half-adder built from simple CMOS gates, demonstrating common pitfalls when using `show`

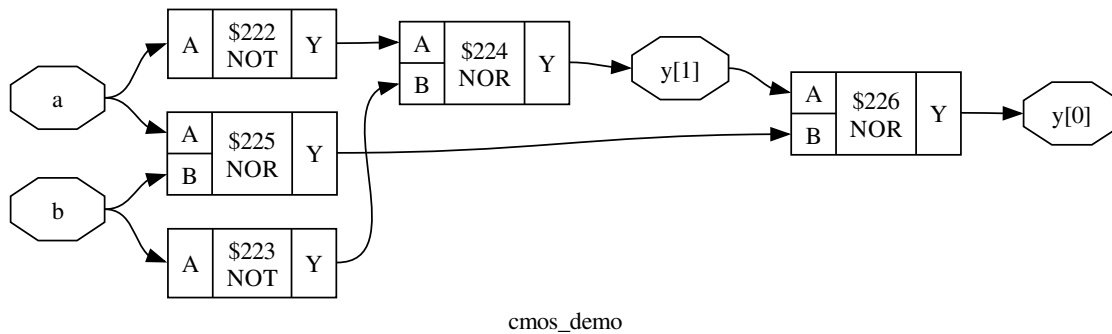


Fig. 3.29: Effects of `splitnets` command and of providing a cell library on design in Fig. 3.28

Navigating the design

Plotting circuit diagrams for entire modules in the design brings us only helps in simple cases. For complex modules the generated circuit diagrams are just stupidly big and are no help at all. In such cases one first has to select the relevant portions of the circuit.

In addition to *what* to display one also needs to carefully decide *when* to display it, with respect to the synthesis flow. In general it is a good idea to troubleshoot a circuit in the earliest state in which a problem can be reproduced. So if, for example, the internal state before calling the `techmap` command already fails to verify, it is better to troubleshoot the coarse-grain version of the circuit before `techmap` than the gate-level circuit after `techmap`.

Note

It is generally recommended to verify the internal state of a design by writing it to a Verilog file using `write_verilog -noexpr` and using the simulation models from `simlib.v` and `simcells.v` from the Yosys data directory (as printed by `yosys-config --datdir`).

Interactive navigation

Once the right state within the synthesis flow for debugging the circuit has been identified, it is recommended to simply add the `shell` command to the matching place in the synthesis script. This command will stop the synthesis at the specified moment and go to shell mode, where the user can interactively enter commands.

For most cases, the shell will start with the whole design selected (i.e. when the synthesis script does not already narrow the selection). The command `ls` can now be used to create a list of all modules. The command `cd` can be used to switch to one of the modules (type `cd ..` to switch back). Now the `ls` command lists the objects within that module. This is demonstrated below using `example.v` from *A simple circuit*:

Listing 3.53: Output of `ls` and `cd` after running `yosys example.v`

```
yosys> ls

1 modules:
  example
```

(continues on next page)

(continued from previous page)

```

yosys> cd example

yosys [example]> ls

8 wires:
  $0\y[1:0]
  $add$example.v:5$2_Y
  $ternary$example.v:5$3_Y
  a
  b
  c
  clk
  y

2 cells:
  $add$example.v:5$2
  $ternary$example.v:5$3

1 processes:
  $proc$example.v:3$1

```

When a module is selected using the `cd` command, all commands (with a few exceptions, such as the `read_` and `write_` commands) operate only on the selected module. This can also be useful for synthesis scripts where different synthesis strategies should be applied to different modules in the design.

We can see that the cell names from Fig. 3.26 are just abbreviations of the actual cell names, namely the part after the last dollar-sign. Most auto-generated names (the ones starting with a dollar sign) are rather long and contains some additional information on the origin of the named object. But in most cases those names can simply be abbreviated using the last part.

Usually all interactive work is done with one module selected using the `cd` command. But it is also possible to work from the design-context (`cd ..`). In this case all object names must be prefixed with `<module_name>/`. For example `a*/b*` would refer to all objects whose names start with `b` from all modules whose names start with `a`.

The `dump` command can be used to print all information about an object. For example, calling `dump $2` after the `cd example` above:

Listing 3.54: Output of `dump $2` after Listing 3.53

```

attribute \src "example.v:5.22-5.27"
cell $add $add$example.v:5$2
  parameter \Y_WIDTH 2
  parameter \B_WIDTH 1
  parameter \A_WIDTH 1
  parameter \B_SIGNED 0
  parameter \A_SIGNED 0
  connect \Y $add$example.v:5$2_Y
  connect \B \b
  connect \A \a
end

```

This can for example be useful to determine the names of nets connected to cells, as the net-names are

usually suppressed in the circuit diagram if they are auto-generated. Note that the output is in the RTLIL representation, described in *The RTL Intermediate Language (RTLIL)*.

Design Investigation

Yosys can also be used to investigate designs (or netlists created from other tools).

- The selection mechanism, especially patterns such as `%ci` and `%co`, can be used to figure out how parts of the design are connected.
- Commands such as `submod`, `expose`, and `splice` can be used to transform the design into an equivalent design that is easier to analyse.
- Commands such as `eval` and `sat` can be used to investigate the behavior of the circuit.
- `show - generate schematics using graphviz`.
- `dump`.
- `add` and `delete` can be used to modify and reorganize a design dynamically.

The code used is included in the Yosys code base under `docs/source/code_examples/scrambler`.

Changing design hierarchy

Commands such as `flatten` and `submod` can be used to change the design hierarchy, i.e. flatten the hierarchy or moving parts of a module to a submodule. This has applications in synthesis scripts as well as in reverse engineering and analysis. An example using `submod` is shown below for reorganizing a module in Yosys and checking the resulting circuit.

Listing 3.55: `scrambler.v`

```
module scrambler(
    input clk, rst, in_bit,
    output reg out_bit
);
    reg [31:0] xs;
    always @(posedge clk) begin
        if (rst)
            xs = 1;
        xs = xs ^ (xs << 13);
        xs = xs ^ (xs >> 17);
        xs = xs ^ (xs << 5);
        out_bit <= in_bit ^ xs[0];
    end
endmodule
```

Listing 3.56: `scrambler.y`

```
read_verilog scrambler.v

hierarchy; proc;;

cd scrambler
submod -name xorshift32 xs %c %ci %D %c %ci:+[D] %D %ci*:-$dff xs %co %ci %d
```

Analyzing the resulting circuit with `eval`:

```
> cd xorshift32
> rename n2 in
> rename n1 out

> eval -set in 1 -show out
Eval result: \out = 270369.

> eval -set in 270369 -show out
Eval result: \out = 67634689.

> sat -set out 632435482
```

Signal Name	Dec	Hex	Bin
\in	745495504	2c6f5bd0	00101100011011110101101111010000
\out	632435482	25b2331a	00100101101100100011001100011010

Commands such as `techmap` can be used to make behavioral changes to the design, for example changing asynchronous resets to synchronous resets. This has applications in design space exploration (evaluation of various architectures for one circuit).

Todo

```
replace inline code
```

```
(* techmap_celltype = "$adff" *)
module adff2dff (CLK, ARST, D, Q);

    parameter WIDTH = 1;
    parameter CLK_POLARITY = 1;
    parameter ARST_POLARITY = 1;
    parameter ARST_VALUE = 0;

    input CLK, ARST;
    input [WIDTH-1:0] D;
    output reg [WIDTH-1:0] Q;

    wire [1023:0] _TECHMAP_DO_ = "proc";

    wire _TECHMAP_FAIL_ = !CLK_POLARITY || !ARST_POLARITY;

    always @(posedge CLK)
        if (ARST)
            Q <= ARST_VALUE;
        else
            Q <= D;

endmodule
```

For more on the `techmap` command, see the page on [Techmap by example](#).

Advanced investigation techniques

When working with very large modules, it is often not enough to just select the interesting part of the module. Instead it can be useful to extract the interesting part of the circuit into a separate module. This can for example be useful if one wants to run a series of synthesis commands on the critical part of the module and wants to carefully read all the debug output created by the commands in order to spot a problem. This kind of troubleshooting is much easier if the circuit under investigation is encapsulated in a separate module.

Recall the `memdemo` design from [Advanced logic cone selection](#):

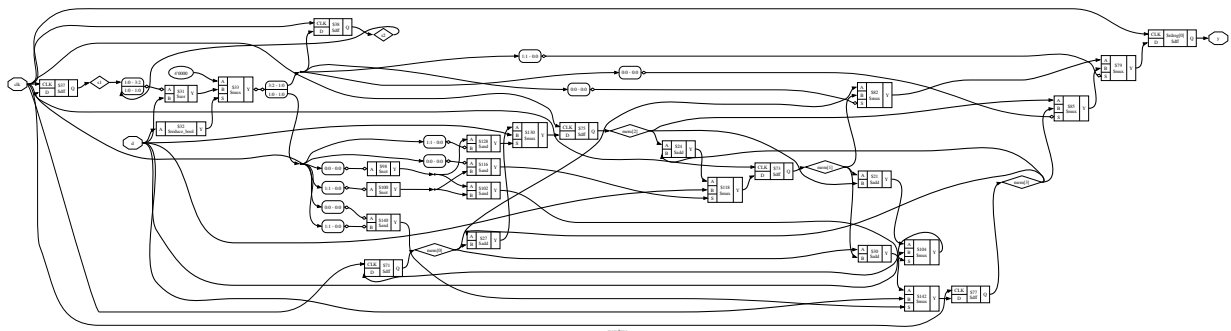


Fig. 3.30: memdemo

Because this produces a rather large circuit, it can be useful to split it into smaller parts for viewing and

working with. Listing 3.57 does exactly that, utilising the `submod` command to split the circuit into three sections: `outstage`, `selstage`, and `scramble`.

Listing 3.57: Using `submod` to break up the circuit from `memdemo.v`

```
select -set outstage y %ci2:$dff[Q,D] %ci*:-$mux[S]:-$dff
select -set selstage y %ci2:$dff[Q,D] %ci*:-$dff @outstage %d
select -set scramble mem* %ci2 %ci*:-$dff mem* %d @selstage %d
submod -name scramble @scramble
submod -name outstage @outstage
submod -name selstage @selstage
```

The `-name` option is used to specify the name of the new module and also the name of the new cell in the current module. The resulting circuits are shown below.

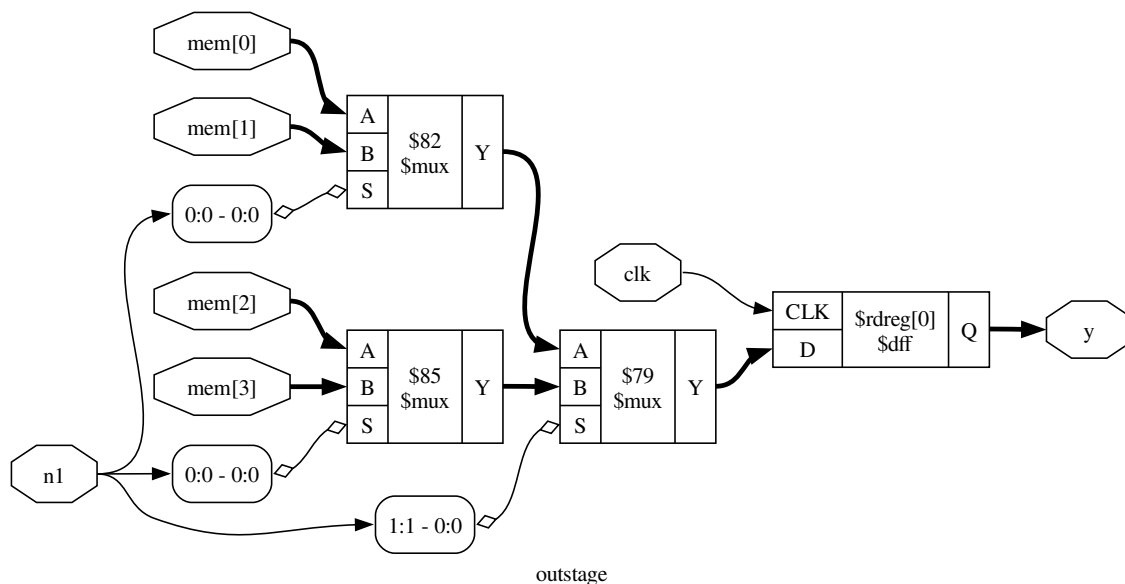


Fig. 3.31: `outstage`

Evaluation of combinatorial circuits

The `eval` command can be used to evaluate combinatorial circuits. As an example, we will use the `selstage` subnet of `memdemo` which we found above and is shown in Fig. 3.32.

Todo

replace inline code

```
yosys [selstage]> eval -set s2,s1 4'b1001 -set d 4'hc -show n2 -show n1
```

1. Executing EVAL pass (evaluate the circuit given an input).

(continues on next page)

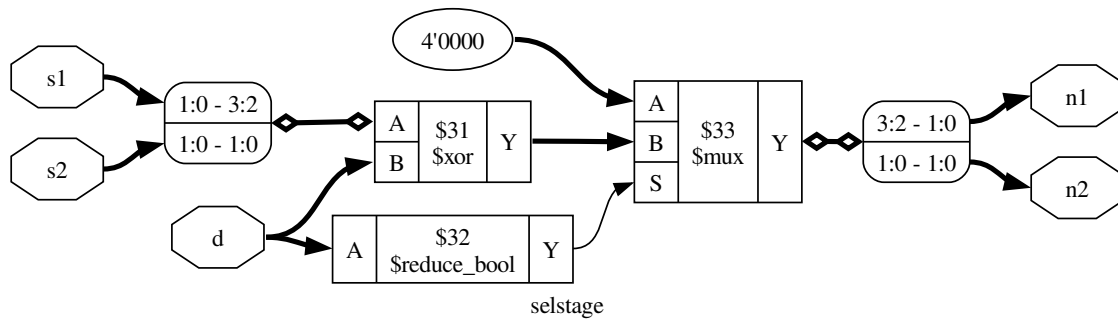


Fig. 3.32: selstage

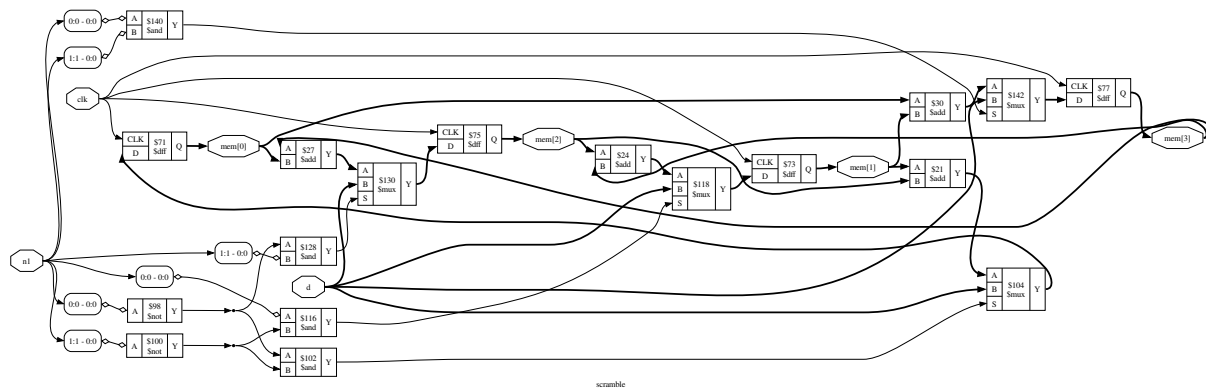


Fig. 3.33: scramble

(continued from previous page)

```
Full command line: eval -set s2,s1 4'b1001 -set d 4'hc -show n2 -show n1
Eval result: \n2 = 2'10.
Eval result: \n1 = 2'10.
```

So the `-set` option is used to set input values and the `-show` option is used to specify the nets to evaluate. If no `-show` option is specified, all selected output ports are used per default.

If a necessary input value is not given, an error is produced. The option `-set-undef` can be used to instead set all unspecified input nets to undef (x).

The `-table` option can be used to create a truth table. For example:

```
yosys [selstage]> eval -set-undef -set d[3:1] 0 -table s1,d[0]

10. Executing EVAL pass (evaluate the circuit given an input).
Full command line: eval -set-undef -set d[3:1] 0 -table s1,d[0]

  \s1 \d [0] |  \n1  \n2
  ---- - |  ----
2'00  1'0 | 2'00 2'00
2'00  1'1 | 2'xx 2'00
2'01  1'0 | 2'00 2'00
2'01  1'1 | 2'xx 2'01
2'10  1'0 | 2'00 2'00
2'10  1'1 | 2'xx 2'10
2'11  1'0 | 2'00 2'00
2'11  1'1 | 2'xx 2'11

Assumed undef (x) value for the following signals: \s2
```

Note that the `eval` command (as well as the `sat` command discussed in the next sections) does only operate on flattened modules. It can not analyze signals that are passed through design hierarchy levels. So the `flatten` command must be used on modules that instantiate other modules before these commands can be applied.

Solving combinatorial SAT problems

Often the opposite of the `eval` command is needed, i.e. the circuits output is given and we want to find the matching input signals. For small circuits with only a few input bits this can be accomplished by trying all possible input combinations, as it is done by the `eval -table` command. For larger circuits however, Yosys provides the `sat` command that uses a SAT solver, [MiniSAT](#), to solve this kind of problems.

Note

While it is possible to perform model checking directly in Yosys, it is highly recommended to use SBY or EQY for formal hardware verification.

The `sat` command works very similar to the `eval` command. The main difference is that it is now also possible to set output values and find the corresponding input values. For Example:

Todo

replace inline code

```
yosys [selstage]> sat -show s1,s2,d -set s1 s2 -set n2,n1 4'b1001
```

11. Executing SAT pass (solving SAT problems in the circuit).

Full command line: `sat -show s1,s2,d -set s1 s2 -set n2,n1 4'b1001`

Setting up SAT problem:

Import set-constraint: `\s1 = \s2`

Import set-constraint: `{ \n2 \n1 } = 4'1001`

Final constraint equation: `{ \n2 \n1 \s1 } = { 4'1001 \s2 }`

Imported 3 cells to SAT database.

Import show expression: `{ \s1 \s2 \d }`

Solving problem with 81 variables and 207 clauses..

SAT solving finished - model found:

Signal Name	Dec	Hex	Bin
\d	9	9	1001
\s1	0	0	00
\s2	0	0	00

Note that the `sat` command supports signal names in both arguments to the `-set` option. In the above example we used `-set s1 s2` to constraint `s1` and `s2` to be equal. When more complex constraints are needed, a wrapper circuit must be constructed that checks the constraints and signals if the constraint was met using an extra output port, which then can be forced to a value using the `-set` option. (Such a circuit that contains the circuit under test plus additional constraint checking circuitry is called a **miter** circuit.)

Listing 3.58: `primetest.v`, a simple miter circuit for testing if a number is prime. But it has a problem.

```
module primetest(p, a, b, ok);
input [15:0] p, a, b;
output ok = p != a*b || a == 1 || b == 1;
endmodule
```

Listing 3.58 shows a miter circuit that is supposed to be used as a prime number test. If `ok` is 1 for all input values `a` and `b` for a given `p`, then `p` is prime, or at least that is the idea.

Todo

replace inline code

Listing 3.59: Experiments with the miter circuit from `primetest.v`.

```
yosys [primetest]> sat -prove ok 1 -set p 31
```

1. Executing SAT pass (solving SAT problems in the circuit).

Full command line: `sat -prove ok 1 -set p 31`

(continues on next page)

(continued from previous page)

```

Setting up SAT problem:
Import set-constraint: \p = 16'0000000000011111
Final constraint equation: \p = 16'0000000000011111
Imported 6 cells to SAT database.
Import proof-constraint: \ok = 1'1
Final proof equation: \ok = 1'1

Solving problem with 2790 variables and 8241 clauses..
SAT proof finished - model found: FAIL!

```

Signal Name	Dec	Hex	Bin
\a	15029	3ab5	0011101010110101
\b	4099	1003	0001000000000011
\ok	0	0	0
\p	31	1f	0000000000011111

The Yosys shell session shown in [Listing 3.59](#) demonstrates that SAT solvers can even find the unexpected solutions to a problem: Using integer overflow there actually is a way of “factorizing” 31. The clean solution would of course be to perform the test in 32 bits, for example by replacing `p != a*b` in the miter with `p != {16'd0,a}b`, or by using a temporary variable for the 32 bit product `a*b`. But as 31 fits well into 8 bits (and as the purpose of this document is to show off Yosys features) we can also simply force the upper 8 bits of `a` and `b` to zero for the `sat` call, as is done below.

Todo

replace inline code

Listing 3.60: Miter circuit from `primetest.v`, with the upper 8 bits of `a` and `b` constrained to prevent overflow.

```

yosys [primetest]> sat -prove ok 1 -set p 31 -set a[15:8],b[15:8] 0

1. Executing SAT pass (solving SAT problems in the circuit).
Full command line: sat -prove ok 1 -set p 31 -set a[15:8],b[15:8] 0

Setting up SAT problem:
Import set-constraint: \p = 16'0000000000011111
Import set-constraint: { \a [15:8] \b [15:8] } = 16'0000000000000000
Final constraint equation: { \a [15:8] \b [15:8] \p } = { 16'0000000000000000 16
↪ '0000000000011111 }
Imported 6 cells to SAT database.

```

(continues on next page)

(continued from previous page)

```

Import proof-constraint: \ok = 1'1
Final proof equation: \ok = 1'1

Solving problem with 2790 variables and 8257 clauses..
SAT proof finished - no model found: SUCCESS!

      /$$$$$      /$$$$$$      /$$$$$
    /$$__ $$    | $$_____/    | $$__ $$
   | $$ \ $$    | $$        | $$ \ $$
   | $$ | $$    | $$$$$$    | $$ | $$
   | $$ | $$    | $$____/    | $$ | $$
   | $$/$$ $$   | $$        | $$ | $$
   | $$$$$$/  /$$| $$$$$$$/  /$$| $$$$$$/
   \__ $$$$|__|_____/_/|__|_____/_/
      \__/_/

```

The `-prove` option used in [Listing 3.60](#) works similar to `-set`, but tries to find a case in which the two arguments are not equal. If such a case is not found, the property is proven to hold for all inputs that satisfy the other constraints.

It might be worth noting, that SAT solvers are not particularly efficient at factorizing large numbers. But if a small factorization problem occurs as part of a larger circuit problem, the Yosys SAT solver is perfectly capable of solving it.

Solving sequential SAT problems

The SAT solver functionality in Yosys can not only be used to solve combinatorial problems, but can also solve sequential problems. Let's consider the `memdemo` design from [Advanced logic cone selection](#) again, and suppose we want to know which sequence of input values for `d` will cause the output `y` to produce the sequence 1, 2, 3 from any initial state. Let's use the following command:

Todo

replace inline code?

```

sat -seq 6 -show y -show d -set-init-undef \
    -max_undef -set-at 4 y 1 -set-at 5 y 2 -set-at 6 y 3

```

The `-seq 6` option instructs the `sat` command to solve a sequential problem in 6 time steps. (Experiments with lower number of steps have show that at least 3 cycles are necessary to bring the circuit in a state from which the sequence 1, 2, 3 can be produced.)

The `-set-init-undef` option tells the `sat` command to initialize all registers to the undef (`x`) state. The way the `x` state is treated in Verilog will ensure that the solution will work for any initial state.

The `-max_undef` option instructs the `sat` command to find a solution with a maximum number of undefs. This way we can see clearly which inputs bits are relevant to the solution.

Finally the three `-set-at` options add constraints for the `y` signal to play the 1, 2, 3 sequence, starting with time step 4.

This produces the following output:

Todo

replace inline code

Listing 3.61: Solving a sequential SAT problem in the memdemo module.

```
yosys [memdemo]> sat -seq 6 -show y -show d -set-init-undef \
    -max_undef -set-at 4 y 1 -set-at 5 y 2 -set-at 6 y 3
```

1. Executing SAT pass (solving SAT problems in the circuit).
Full command line: `sat -seq 6 -show y -show d -set-init-undef -max_undef -set-at 4 y 1 -set-at 5 y 2 -set-at 6 y 3`

Setting up time step 1:
Final constraint equation: { } = { }
Imported 29 cells to SAT database.

Setting up time step 2:
Final constraint equation: { } = { }
Imported 29 cells to SAT database.

Setting up time step 3:
Final constraint equation: { } = { }
Imported 29 cells to SAT database.

Setting up time step 4:
Import set-constraint for timestep: \y = 4'0001
Final constraint equation: \y = 4'0001
Imported 29 cells to SAT database.

Setting up time step 5:
Import set-constraint for timestep: \y = 4'0010
Final constraint equation: \y = 4'0010
Imported 29 cells to SAT database.

Setting up time step 6:
Import set-constraint for timestep: \y = 4'0011
Final constraint equation: \y = 4'0011
Imported 29 cells to SAT database.

Setting up initial state:
Final constraint equation: { \y \s2 \s1 \mem[3] \mem[2] \mem[1]
 \mem[0] } = 24'xxxxxxxxxxxxxxxxxxxxxxxxxxxx

Import show expression: \y
Import show expression: \d

Solving problem with 10322 variables and 27881 clauses..
SAT model found. maximizing number of undefs.
SAT solving finished - model found:

(continues on next page)

(continued from previous page)

Time	Signal Name	Dec	Hex	Bin

init	\mem[0]	--	--	xxxx
init	\mem[1]	--	--	xxxx
init	\mem[2]	--	--	xxxx
init	\mem[3]	--	--	xxxx
init	\s1	--	--	xx
init	\s2	--	--	xx
init	\y	--	--	xxxx

1	\d	0	0	0000
1	\y	--	--	xxxx

2	\d	1	1	0001
2	\y	--	--	xxxx

3	\d	2	2	0010
3	\y	0	0	0000

4	\d	3	3	0011
4	\y	1	1	0001

5	\d	--	--	001x
5	\y	2	2	0010

6	\d	--	--	xxxx
6	\y	3	3	0011

It is not surprising that the solution sets `d = 0` in the first step, as this is the only way of setting the `s1` and `s2` registers to a known value. The input values for the other steps are a bit harder to work out manually, but the SAT solver finds the correct solution in an instant.

There is much more to write about the `sat` command. For example, there is a set of options that can be used to perform sequential proofs using temporal induction [EenSorensson03]. The command `help sat` can be used to print a list of all options with short descriptions of their functions.

3.2.4 Symbolic model checking

Todo

check text context

Note

While it is possible to perform model checking directly in Yosys, it is highly recommended to use SBY or EQY for formal hardware verification.

Symbolic Model Checking (SMC) is used to formally prove that a circuit has (or has not) a given property.

One application is Formal Equivalence Checking: Proving that two circuits are identical. For example this is a very useful feature when debugging custom passes in Yosys.

Other applications include checking if a module conforms to interface standards.

The `sat` command in Yosys can be used to perform Symbolic Model Checking.

Checking techmap

Todo

add/expand supporting text

Let's take a look at an example included in the Yosys code base under `docs/source/code_examples/synth_flow`:

Listing 3.62: `techmap_01_map.v`

```
module \${add} (A, B, Y);

parameter A_SIGNED = 0;
parameter B_SIGNED = 0;
parameter A_WIDTH = 1;
parameter B_WIDTH = 1;
parameter Y_WIDTH = 1;

input [A_WIDTH-1:0] A;
input [B_WIDTH-1:0] B;
output [Y_WIDTH-1:0] Y;

generate
  if ((A_WIDTH == 32) && (B_WIDTH == 32))
    begin
      wire [16:0] S1 = A[15:0] + B[15:0];
      wire [15:0] S2 = A[31:16] + B[31:16] + S1[16];
      assign Y = {S2[15:0], S1[15:0]};
    end
  else
    wire _TECHMAP_FAIL_ = 1;
endgenerate

endmodule
```

Listing 3.63: `techmap_01.v`

```
module test(input [31:0] a, b,
            output [31:0] y);
assign y = a + b;
endmodule
```

Listing 3.64: techmap_01.yo

```
read_verilog techmap_01.v
hierarchy -check -top test
techmap -map techmap_01_map.v;;
```

To see if it is correct we can use the following code:

Todo

replace inline code

```
# read test design
read_verilog techmap_01.v
hierarchy -top test

# create two version of the design: test_orig and test_mapped
copy test test_orig
rename test test_mapped

# apply the techmap only to test_mapped
techmap -map techmap_01_map.v test_mapped

# create a miter circuit to test equivalence
miter -equiv -make_assert -make_outputs test_orig test_mapped miter
flatten miter

# run equivalence check
sat -verify -prove-asserts -show-inputs -show-outputs miter
```

Result:

```
Solving problem with 945 variables and 2505 clauses..
SAT proof finished - no model found: SUCCESS!
```

AXI4 Stream Master

The code used in this section is included in the Yosys code base under [docs/source/code_examples/axis](#).

The following AXI4 Stream Master has a bug. But the bug is not exposed if the slave keeps `ready` asserted all the time. (Something a test bench might do.)

Symbolic Model Checking can be used to expose the bug and find a sequence of values for `ready` that yield the incorrect behavior.

Todo

add/expand supporting text

Listing 3.65: axis_master.v

```

module axis_master(aclk, aresetn, tvalid, tready, tdata);
    input aclk, aresetn, tready;
    output reg tvalid;
    output reg [7:0] tdata;

    reg [31:0] state;
    always @(posedge aclk) begin
        if (!aresetn) begin
            state <= 314159265;
            tvalid <= 0;
            tdata <= 'bx;
        end else begin
            if (tvalid && tready)
                tvalid <= 0;
            if (!tvalid || !tready) begin
                // ~- should not be inverted!
                state = state ^ state << 13;
                state = state ^ state >> 7;
                state = state ^ state << 17;
                if (state[9:8] == 0) begin
                    tvalid <= 1;
                    tdata <= state;
                end
            end
        end
    end
endmodule

```

Listing 3.66: axis_test.v

```

module axis_test(aclk, tready);
    input aclk, tready;
    wire aresetn, tvalid;
    wire [7:0] tdata;

    integer counter = 0;
    reg aresetn = 0;

    axis_master uut (aclk, aresetn, tvalid, tready, tdata);

    always @(posedge aclk) begin
        if (aresetn && tready && tvalid) begin
            if (counter == 0) assert(tdata == 19);
            if (counter == 1) assert(tdata == 99);
            if (counter == 2) assert(tdata == 1);
            if (counter == 3) assert(tdata == 244);
            if (counter == 4) assert(tdata == 133);
            if (counter == 5) assert(tdata == 209);
            if (counter == 6) assert(tdata == 241);
            if (counter == 7) assert(tdata == 137);
        end
    end
endmodule

```

(continues on next page)

(continued from previous page)

```

        if (counter == 8) assert(tdata == 176);
        if (counter == 9) assert(tdata == 6);
        counter <= counter + 1;
    end
    aresetn <= 1;
end
endmodule

```

Listing 3.67: test.yys

```

read_verilog -sv axis_master.v axis_test.v
hierarchy -top axis_test

proc; flatten;;
sat -seq 50 -prove-asserts

```

Result with unmodified `axis_master.v`:

Todo

replace inline code

```

Solving problem with 159344 variables and 442126 clauses..
SAT proof finished - model found: FAIL!

```

Result with fixed `axis_master.v`:

```

Solving problem with 159144 variables and 441626 clauses..
SAT proof finished - no model found: SUCCESS!

```

3.2.5 Dataflow tracking

Yosys can be used to answer questions such as “can this signal affect this other signal?” via its *dataflow tracking* support. For this, four special cells, `$get_tag`, `$set_tag`, `$overwrite_tag` and `$original_tag` are inserted into the design (e.g. by a custom Yosys pass) and then the `dft_tag` is run, which converts these cells into ordinary logic. Typically, one would then use `SBY` to prove assertions involving these cells.

Ordinarily in Yosys, the state of a bit is simply 0 or 1 (or one of the special values, `z` and `x`). During dataflow tracking they are augmented with a set of tags. For example, the state of a bit could be 0 and the set of tags “KEY” and “OVERFLOW”.

In addition to their usual operations on the logical bits, Yosys operations must now also process the status of the tags. For this, tags are simply *forwarded* or *propagated* (i.e. copied) from inputs to outputs, according to the following general rule:

A tag is forwarded from an input to an output if the input can affect the output, for that particular state of all other inputs.

For example, XOR, AND and OR cells propagate tags as follows:

1. XOR simply forwards all tags from its inputs to its output, because inputs to XOR can always affect the output.

2. AND forwards tags on a given input only if the other input is 1. Because if one input is 0, the other input can never affect the output.
3. Similarly, OR forwards tags only if the other input is 0.

There are two exceptions to this rule:

1. In general, propagation is only determined approximately. For example, unless the `dft_tag` code knows about a cell, it simply assumes the worst-case behaviour that all inputs can affect all outputs. Further, the code also does not consider that, when a signal affects multiple inputs of a cell, the resulting simultaneous changes of the inputs can cancel each other out, for example $A \wedge A$ or $A \wedge (B \wedge A)$ is independent of A , but its tags would be propagated nonetheless.
2. If tag groups are used, the rules are modified (see below).

Because of this propagation behaviour, we can answer questions about what signals are affected by a certain signal, by injecting a tag at that point in the circuit, and observing where the tag is visible.

Example use cases

As an example use case, consider a cryptographic processor which is not supposed to expose its secret keys to the outside world. We can tag all key bits with the "KEY" tag and use `SBY` to formally verify that no external signal ever carries the "KEY" tag, meaning that key information is not visible to the outside. As a caveat, we have to manually clear the "KEY" tag during cryptographic operations, as proving that the cryptographic operations themselves do not leak key information is beyond the ability of Yosys. However we can still easily detect, if e.g. an engineer forgot to remove debugging code that allows reading back key data.

As a different use case, we can modify all adders in the design to set the "OVERFLOW" tag on their output bits, if the addition overflowed, and then add asserts to all flip-flop inputs and output signals that they do not carry the "OVERFLOW" tag, i.e. that the results of overflowed additions never affect system state. Note that in this particular example we use the ability of tag insertion to be conditional on logic, in this case the overflow condition of an adder.

Semantics of dataflow tracking cells

`$set_tag` has inputs `A`, `SET`, `CLR`, an output `Y` and a string parameter `TAG`. The logic value of `A` and all tags other than the one named by the `TAG` parameter are simply copied to `Y`. If `SET` is 1, then the named tag is added to `Y`. Otherwise, if `CLR` is 1, then the named tag is removed. Otherwise, the tag is unchanged, i.e. it is present in `Y` if it is present in `A`.

`$get_tag` has an input `A` and an output `Y` and a string parameter `TAG`. `$get_tag` inspects `A` for the presence or absence of a tag of the given name and sets `Y` to 1 if the tag is present. The logical value of `A` is completely ignored.

`$overwrite_tag` functions like `$set_tag`, but lacks the `Y` output. Instead of providing a modified version of the input signal, it modifies the signal `A` “in-place”, i.e. if a signal is input to `$overwrite_tag`, that is equivalent to interposing a `$set_tag` between its driver and all cells it is connected to. The main purpose of `$overwrite_tag` is adding tags to signals produced within a module that cannot or should not be modified itself.

`$original_tag` functions identically to `$get_tag`, but ignores `$overwrite_tag`, i.e. when converting the `$overwrite_tag` to `$set_tag` as described above, it is equivalent to inserting the `$get_tag` *before* the `$set_tag`.

Tag groups

Tag groups are an advanced feature that modify the propagation rule discussed above. To use tag groups, simply name tags according to the schema "group:name". For example, "key:0", "key:a", "key:b" would be three tags in the "key" group.

The propagation rule is then amended by

Inputs cannot block the propagation of each other's tags for tags of the same group.

For example, an AND gate will propagate a given tag on one input, if the other input is either 1 or carries a tag of the same group. So if one input is 0, "key:a" and the other is 0, "key:b" the result would be 0, "key:a", "key:b", rather than simply 0. Note that if we add an unrelated "overflow" tag to the first input, it would still not be propagated.

3.3 Minimizing failing (or bugged) designs

Todo

pending merge of <https://github.com/YosysHQ/yosys/pull/5068>

This document is a how-to guide for reducing problematic designs to the bare minimum needed for reproducing the issue. This is a Yosys specific alternative to the Stack Overflow article: [How to create a Minimal, Reproducible Example](#), and is intended to help when there's something wrong with your design, or with Yosys itself.

Note

This guide assumes a moderate degree of familiarity with Yosys and requires some amount of problem solving ability.

3.3.1 Before you start

The first (and often overlooked) step, is to check for and *read* any error messages or warnings. Passing the `-q` flag when running Yosys will make it so that only warnings and error messages are written to the console. Don't just read the last message either, there may be warnings that indicate a problem before it happens. While some things may only be regarded as warnings, such as multiple drivers for the same signal or logic loops, these can cause problems in some synthesis flows but not others.

A Yosys error (one that starts with **ERROR:**) may give you a line number from your design, or the name of the object causing issues. If so, you may already have enough information to resolve the problem, or at least understand why it's happening.

Note

If you're not already, try using the latest version from the [Yosys GitHub](#). You may find that your issue has already been fixed! And even if it isn't, testing with two different versions is a good way to ensure reproducibility.

Another thing to be aware of is that Yosys generally doesn't perform rigorous checking of input designs to ensure they are valid. This is especially true for the `read_verilog` frontend. It is instead recommended that you try load it with `iverilog` or `verilator` first, as an invalid design can often lead to unexpected issues.

If you're using a custom synthesis script, try take a bit of time to figure out which command is failing. Calling `echo on` at the start of your script will `echo` each command executed; the last echo before the error should then be where the error has come from. Check the help message for the failing command; does it indicate limited support, or mention some other command that needs to be run first? You can also try to call `check` and/or `hierarchy -check` before the failure to see if they report and errors or warnings.

3.3.2 Minimizing RTLIL designs with bugpoint

Yosys provides the `bugpoint` command for reducing a failing design to the smallest portion of that design which still results in failure. While initially developed for Yosys crashes, `bugpoint` can also be used for designs that lead to non-fatal errors, or even failures in other tools that use the output of a Yosys script.

Note

Make sure to back up your code (design source and yosys script(s)) before making any modifications. Even if the code itself isn't important, this can help avoid "losing" the error while trying to debug it.

Can I use bugpoint?

The first thing to be aware of is that `bugpoint` is not available in every build of Yosys. Because the command works by invoking external processes, it requires that Yosys can spawn executables. Notably this means `bugpoint` is not able to be used in WebAssembly builds such as that available via YoWASP. The easiest way to check your build of Yosys is by running `yosys -h bugpoint`. If Yosys displays the help text for `bugpoint` then it is available for use.

Listing 3.68: `bugpoint` is unavailable

```
$ yosys -h bugpoint

-- Running command `help bugpoint' --
No such command or cell type: bugpoint
```

Next you need to separate loading the design from the failure point; you should be aiming to reproduce the failure by running `yosys -s <load.ys> -s <failure.ys>`. If the failure occurs while loading the design, such as during `read_verilog` you will instead have to minimize the input design yourself. Check out the instructions for *Minimizing Verilog designs* below.

Note

You should also be able to run the two scripts separately, calling first `yosys -s <load.ys> -p 'write_rtlil design.il'` and then `yosys -s <failure.ys> design.il`. If this doesn't work then it may mean that the failure isn't reproducible from RTLIL and `bugpoint` won't work either.

When we talk about failure points here, it doesn't just mean crashes or errors in Yosys. The `<failure.ys>` script can also be a user-defined failure such as the `select` command with one of the `-assert-*` options; an example where this might be useful is when a pass is supposed to remove a certain kind of cell, but there is some edge case where the cell is not removed. Another use-case would be minimizing a design which fails with the `equiv_opt` command, suggesting that the optimization in question alters the circuit in some way.

It is even possible to use `bugpoint` with failures *external* to Yosys, by making use of the `exec` command in `<failure.ys>`. This is especially useful when Yosys is outputting an invalid design, or when some other tool is incompatible with the design. Be sure to use the `exec -expect-*` options so that the pass/fail can be detected correctly. Multiple calls to `exec` can be made, or even entire shell scripts:

```
exec -expect-return 1 --bash <script.sh>
```

Our final failure we can use with `bugpoint` is one returned by a wrapper process, such as `valgrind` or `timeout`. In this case you will be calling something like `<wrapper> yosys -s <failure.ys> design.il`. Here, Yosys is run under a wrapper process which checks for some failure state, like a memory leak or excessive runtime.

How do I use bugpoint?

At this point you should have:

1. either an RTLIL file containing the design to minimize (referred to here as `design.il`), or a Yosys script, `<load.ys>`, which loads it; and
2. a Yosys script, `<failure.ys>`, which produces the failure and returns a non-zero return status.

Now call `yosys -qq -s <failure.ys> design.il` and take note of the error(s) that get printed. A template script, `<bugpoint.ys>`, is provided here which you can use. Make sure to configure it with the correct filenames and use only one of the methods to load the design. Fill in the `-grep` option with the error message printed just before. If you are using a wrapper process for your failure state, add the `-runner "<wrapper>"` option to the `bugpoint` call.

Listing 3.69: `<bugpoint.ys>` template script

```
# Load design
read_rtlil design.il
## OR
script <load.ys>

# Call bugpoint with failure
bugpoint -script <failure.ys> -grep "<string>"

# Save minimized design
write_rtlil min.il
```

The `-grep` option is used to search the log file generated by the Yosys under test. If the error message is generated by something else, such as a wrapper process or compiler sanitizer, then you should instead use `-err_grep`. For an OS error, like a `SEGVFAULT`, you can also use `-expect-return` to check the error code returned.

Note

Checking the error message or return status is optional, but highly recommended. `bugpoint` can quite easily introduce bugs by creating malformed designs that commands were not intended to handle. By having some way to check the error, `bugpoint` can ensure that it is the *right* error being reproduced. This is even more important when `<failure.ys>` contains more than one command.

By default, `bugpoint` is able to remove any part of the design. In order to keep certain parts, for instance because you already know they are related to the failure, you can use the `bugpoint_keep` attribute. This can be done with `(* bugpoint_keep *)` in Verilog, `attribute \bugpoint_keep 1` in RTLIL, or `setattr -set bugpoint_keep 1 [selection]` from a Yosys script. It is also possible to limit `bugpoint` to only removing certain *kinds* of objects, such as only removing entire modules or cells (instances of modules). For more about the options available, check `help bugpoint` or `bugpoint`.

In some situations, it may also be helpful to use `setenv` before `bugpoint` to set environment variables for

the spawned processes. An example of this is `setenv UBSAN_OPTIONS halt_on_error=1` for where you are trying to raise an error on undefined behaviour but only want the child process to halt on error.

Note

Using `setenv` in this way may or may not affect the current process. For instance the `UBSAN_OPTIONS halt_on_error` here only affects child processes, as does the *Yosys environment variable* `ABC` because they are only read on start-up. While others, such as `YOSYS_NOVERIFIC` and `HOME`, are evaluated each time they are used.

Once you have finished configuration, you can now run `yosys <bugpoint.js>`. The first thing `bugpoint` will do is test the input design fails. If it doesn't, make sure you are using the right `yosys` executable; unless the `-yosys` option is provided, it will use whatever the shell defaults to, *not* the current `yosys`. If you are using the `-runner` option, try replacing the `bugpoint` command with `write_rtlil test.il` and then on a new line, `!<wrapper> yosys -s <failure.js> test.il` to check it works as expected and returns a non-zero status.

See also

For more on script parsing and the use of `!`, check out *Script parsing*.

Depending on the size of your design, and the length of your `<failure.js>`, `bugpoint` may take some time; remember, it will run `yosys -s <failure.js>` on each iteration of the design. The bigger the design, the more iterations. The longer the `<failure.js>`, the longer each iteration will take. As the design shrinks and `bugpoint` converges, each iteration should take less and less time. Once all simplifications are exhausted and there are no more objects that can be removed, the script will continue and the minimized design can be saved.

What do I do with the minimized design?

First off, check the minimized design still fails. This is especially important if you're not using `write_rtlil` to output the minimized design. For example, if you ran *example bugpoint minimizer* below, then calling `yosys -s <failure.js> min.v` should still fail in the same way.

Listing 3.70: example `bugpoint` minimizer

```
read_verilog design.v
bugpoint -script <failure.js>
write_verilog min.v
```

The `write_rtlil` command is generally more reliable, since `bugpoint` will have run that exact code through the failing script. Other `write_*` commands convert from the RTLIL and then back again during the `read_*` which can result in differences which mean the design no longer fails.

Note

Simply calling Yosys with the output of `write_*`, as in `yosys -s <failure.js> min.v`, does not guarantee that the corresponding `read_*` will be used. For more about this, refer to *Loading a design*, or load the design explicitly with `yosys -p 'read_verilog min.v' -s <failure.js>`.

Once you've verified the failure still happens, check out *Identifying issues* for more on what to do next.

3.3.3 Minimizing Verilog designs

See also

This section is not specific to Yosys, so feel free to use another guide such as Stack Overflow's [How to create a Minimal, Reproducible Example](#).

Be sure to check any errors or warnings for messages that might identify source lines or object names that might be causing the failure, and back up your source code before modifying it. If you have multiple source files, you should start by reducing them down to a single file. If a specific file is failing to read, try removing everything else and just focus on that one. If your source uses the `include` directive, replace it with the contents of the file referenced.

Unlike RTLIL designs where we can use `bugpoint`, Yosys does not provide any tools for minimizing Verilog designs. Instead, you should use an external tool like [C-Reduce](#) (with the `--not-c` flag) or [sv-bugpoint](#).

C-Reduce

As a very brief overview for using C-Reduce, you want your failing source design (`test.v`), and some shell script which checks for the error being investigated (`test.sh`). Below is an [Example test.sh for C-Reduce](#) which uses `logger` and the `-expect error "<string>" 1` option to perform a similar role to `bugpoint -grep`, along with `verilator` to lint the code and make sure it is still valid.

Listing 3.71: Example test.sh for C-Reduce

```
#!/bin/bash
verilator --lint-only test.v &&/
yosys -p 'logger -expect error "unsupported" 1; read_verilog test.v'
```

Listing 3.72: input test.v

```
module top(input clk, a, b, c, output x, y, z);
    always @(posedge clk) begin
        if (a == 1'b1)
            $stop;
    end
    assign x = a;
    assign y = a ^ b;
    assign z = c;
endmodule
```

In this example `read_verilog test.v` is giving an error message that contains the string “unsupported” because the `$stop` system task is only supported in `initial` blocks. By calling `creduce ./test.sh test.v --not-c` we can minimize the design to just the failing code, while still being valid Verilog.

Listing 3.73: output test.v

```
module a;
always begin $stop;
end endmodule
```

sv-bugpoint

sv-bugpoint works quite similarly to C-Reduce, except it requires an output directory to be provided and the check script needs to accept the target file as an input argument: `sv-bugpoint outDir/ test.sh test.v`

Listing 3.74: Example test.sh for sv-bugpoint

```
#!/bin/bash
verilator --lint-only $1 &&/
yosys -p "logger -expect error \"unsupported\" 1; read_verilog $1"
```

Notice that the commands for `yosys -p` are now in double quotes (`"`), and the quotes around the error string are escaped (`\`). This is necessary for the `$1` argument substitution to work correctly.

Doing it manually

If for some reason you are unable to use a tool to minimize your code, you can still do it manually. But it can be a time consuming process and requires a lot of iteration. At any point in the process, you can check for anything that is unused or totally disconnected (ports, wires, etc) and remove them. If a specific module is causing the problem, try to set that as the top module instead. Any parameters should have their default values changed to match the failing usage.

As a rule of thumb, try to split things roughly in half at each step; similar to a “binary search”. If you have 10 cells (instances of modules) in your top module, and have no idea what is causing the issue, split them into two groups of 5 cells. For each group of cells, try remove them and see if the failure still happens. If the error still occurs with the first group removed, but disappears when the second group is removed, then the first group can be safely removed. If a module has no more instances, remove it entirely. Repeat this for each remaining group of cells until each group only has 1 cell in it and no more cells can be removed without making the error disappear. You can also repeat this for each module still in your design.

After minimizing the number of cells, do the same for the process blocks in your top module. And again for any generate blocks and combinational blocks. Remember to check for any ports or signals which are no longer used and remove those too. Any signals which are written but never read can also be removed.

Note

Depending on where the design is failing, there are some commands which may help in identifying unused objects in the design. `hierarchy` will identify which modules are used and which are not, but check for `$paramod` modules before removing unused ones. `debug clean` will list all unused wires in each module, as well as unused cells which were automatically generated (giving the line number of the source that generated them). Adding the `-purge` flag will also include named wires that would normally be ignored by `clean`. Though when there are large numbers of unused wires it is often easier to just delete sections of the code and see what happens.

Next, try to remove or reduce assignments (`a = b`) and operations (`a + b`). A good place to start is by checking for any wires/registers which are read but never written. Try removing the signal declaration and replacing references to it with `'0` or `'x`. Do this with any constants too. Try to replace strings with numeric values, and wide signals with smaller ones, then see if the error persists.

Check if there are any operations that you can simplify, like replacing `a & '0` with `'0`. If you have enable or reset logic, try removing it and see if the error still occurs. Try reducing `if .. else` and `case` blocks to a single case. Even if that doesn't work, you may still be able to remove some paths; start with cases that appear to be unreachable and go from there.

Note

When sharing code on the [Yosys GitHub](#), please try to keep things in English. Declarations and strings should stick to the letters a-z and numbers 0-9, unless the error is arising because of the names/characters used.

3.3.4 Identifying issues

When identifying issues, it is quite useful to understand the conditions under which the issue is occurring. While there are occasionally bugs that affect a significant number of designs, Yosys changes are tested on a variety of designs and operating systems which typically catch any such issues before they make it into the main branch. So what is it about your situation that makes it unusual?

Note

If you have access to a different platform you could also check if your issue is reproducible there. Some issues may be specific to the platform or build of Yosys.

Try to match the minimized design back to its original context. Could you achieve the same thing a different way, and if so, does this other method have the same issue? Try to change the design in small ways and see what happens; while `bugpoint` can reduce and simplify a design, it doesn't *change* much. What happens if you change operators, for example a left shift (or `$shl`) to a right shift (or `$shr`)? Try to see if the issue is tied to specific parameters, widths, or values.

Search [the existing issues](#) and see if someone has already made a bug report. This is where changing the design and finding the limits of what causes the failure really comes in handy. If you're more familiar with how the problem can arise, you may be able to find a related issue more easily. If an issue already exists for one case of the problem but you've found other cases, you can comment on the issue and help get it solved. If there are no existing or related issues already, then check out the steps for [Reporting bugs](#).

Warning

If you are using a fuzzer to find bugs, follow the instructions for [Identifying the root cause of bugs](#). **Do not** open more than one fuzzer generated issue at a time if you can not identify the root cause. If you are found to be doing this, your issues may be closed without further investigation.

3.4 Notes on Verilog support in Yosys

3.4.1 Unsupported Verilog-2005 Features

The following Verilog-2005 features are not supported by Yosys and there are currently no plans to add support for them:

- **Non-synthesizable language features as defined in**
IEC 62142(E):2005 / IEEE Std. 1364.1(E):2002
- The `tri`, `triand` and `trior` net types

- The `config` and `disable` keywords and library map files

3.4.2 Verilog Attributes and non-standard features

- The `full_case` attribute on case statements is supported (also the non-standard `// synopsys full_case` directive)
- The `parallel_case` attribute on case statements is supported (also the non-standard `// synopsys parallel_case` directive)
- The `// synopsys translate_off` and `// synopsys translate_on` directives are also supported (but the use of ``ifdef .. `endif`` is strongly recommended instead).
- The `nomem2reg` attribute on modules or arrays prohibits the automatic early conversion of arrays to separate registers. This is potentially dangerous. Usually the front-end has good reasons for converting an array to a list of registers. Prohibiting this step will likely result in incorrect synthesis results.
- The `mem2reg` attribute on modules or arrays forces the early conversion of arrays to separate registers.
- The `nomeminit` attribute on modules or arrays prohibits the creation of initialized memories. This effectively puts `mem2reg` on all memories that are written to in an `initial` block and are not ROMs.
- The `nolatches` attribute on modules or always-blocks prohibits the generation of logic-loops for latches. Instead all not explicitly assigned values default to x-bits. This does not affect clocked storage elements such as flip-flops.
- The `nosync` attribute on registers prohibits the generation of a storage element. The register itself will always have all bits set to 'x' (undefined). The variable may only be used as blocking assigned temporary variable within an always block. This is mostly used internally by Yosys to synthesize Verilog functions and access arrays.
- The `nowrshmsk` attribute on a register prohibits the generation of shift-and-mask type circuits for writing to bit slices of that register.
- The `onehot` attribute on wires mark them as one-hot state register. This is used for example for memory port sharing and set by the `fsm_map` pass.
- The `blackbox` attribute on modules is used to mark empty stub modules that have the same ports as the real thing but do not contain information on the internal configuration. This modules are only used by the synthesis passes to identify input and output ports of cells. The Verilog backend also does not output blackbox modules on default. `read_verilog`, unless called with `-noblackbox` will automatically set the blackbox attribute on any empty module it reads.
- The `noblackbox` attribute set on an empty module prevents `read_verilog` from automatically setting the blackbox attribute on the module.
- The `whitebox` attribute on modules triggers the same behavior as `blackbox`, but is for whitebox modules, i.e. library modules that contain a behavioral model of the cell type.
- The `lib_whitebox` attribute overwrites `whitebox` when `read_verilog` is run in `-lib` mode. Otherwise it's automatically removed.
- The `dynports` attribute is used by the Verilog front-end to mark modules that have ports with a width that depends on a parameter.
- The `hdlname` attribute is used by some passes to document the original (HDL) name of a module when renaming a module. It should contain a single name, or, when describing a hierarchical name in a flattened design, multiple names separated by a single space character.
- The `keep` attribute on cells and wires is used to mark objects that should never be removed by the optimizer. This is used for example for cells that have hidden connections that are not part of the

netlist, such as IO pads. Setting the `keep` attribute on a module has the same effect as setting it on all instances of the module.

- The `keep_hierarchy` attribute on cells and modules keeps the `flatten` command from flattening the indicated cells and modules.
- The `gate_cost_equivalent` attribute on a module can be used to specify the estimated cost of the module as a number of basic gate instances. See the help message of command `keep_hierarchy` which interprets this attribute.
- The `init` attribute on wires is set by the frontend when a register is initialized “FPGA-style” with `reg foo = val`. It can be used during synthesis to add the necessary reset logic.
- The `top` attribute on a module marks this module as the top of the design hierarchy. The `hierarchy` command sets this attribute when called with `-top`. Other commands, such as `flatten` and various backends use this attribute to determine the top module.
- The `src` attribute is set on cells and wires created by to the string `<hdl-file-name>:<line-number>` by the HDL front-end and is then carried through the synthesis. When entities are combined, a new |separated string is created that contains all the strings from the original entities.
- The `defaultvalue` attribute is used to store default values for module inputs. The attribute is attached to the input wire by the HDL front-end when the input is declared with a default value.
- The `parameter` and `localparam` attributes are used to mark wires that represent module parameters or localparams (when the HDL front-end is run in `-pwires` mode).
- Wires marked with the `hierconn` attribute are connected to wires with the same name (format `cell_name.identifier`) when they are imported from sub-modules by `flatten`.
- The `clkbuf_driver` attribute can be set on an output port of a blackbox module to mark it as a clock buffer output, and thus prevent `clkbufmap` from inserting another clock buffer on a net driven by such output.
- The `clkbuf_sink` attribute can be set on an input port of a module to request clock buffer insertion by the `clkbufmap` pass.
- The `clkbuf_inv` attribute can be set on an output port of a module with the value set to the name of an input port of that module. When the `clkbufmap` would otherwise insert a clock buffer on this output, it will instead try inserting the clock buffer on the input port (this is used to implement clock inverter cells that clock buffer insertion will “see through”).
- The `clkbuf_inhibit` is the default attribute to set on a wire to prevent automatic clock buffer insertion by `clkbufmap`. This behaviour can be overridden by providing a custom selection to `clkbufmap`.
- The `invertible_pin` attribute can be set on a port to mark it as invertible via a cell parameter. The name of the inversion parameter is specified as the value of this attribute. The value of the inversion parameter must be of the same width as the port, with 1 indicating an inverted bit and 0 indicating a non-inverted bit.
- The `iopad_external_pin` attribute on a blackbox module’s port marks it as the external-facing pin of an I/O pad, and prevents `iopadmap` from inserting another pad cell on it.
- The module attribute `abc9_lut` is an integer attribute indicating to `abc9` that this module describes a LUT with an area cost of this value, and propagation delays described using `specify` statements.
- The module attribute `abc9_box` is a boolean specifying a black/white-box definition, with propagation delays described using `specify` statements, for use by `abc9`.
- The port attribute `abc9_carry` marks the carry-in (if an input port) and carry-out (if output port) ports of a box. This information is necessary for `abc9` to preserve the integrity of carry-chains. Specifying this attribute onto a bus port will affect only its most significant bit.

- The module attribute `abc9_flop` is a boolean marking the module as a flip-flop. This allows `abc9` to analyse its contents in order to perform sequential synthesis.
- The frontend sets attributes `always_comb`, `always_latch` and `always_ff` on processes derived from SystemVerilog style always blocks according to the type of the always. These are checked for correctness in `proc_dlatch`.
- The cell attribute `wildcard_port_conns` represents wildcard port connections (SystemVerilog `.*`). These are resolved to concrete connections to matching wires in `hierarchy`.
- In addition to the `(* ... *)` attribute syntax, Yosys supports the non-standard `{* ... *}` attribute syntax to set default attributes for everything that comes after the `{* ... *}` statement. (Reset by adding an empty `{* *}` statement.)
- In module parameter and port declarations, and cell port and parameter lists, a trailing comma is ignored. This simplifies writing Verilog code generators a bit in some cases.
- Modules can be declared with `module mod_name(...)`; (with three dots instead of a list of module ports). With this syntax it is sufficient to simply declare a module port as ‘input’ or ‘output’ in the module body.
- When defining a macro with `\`define`, all text between triple double quotes is interpreted as macro body, even if it contains unescaped newlines. The triple double quotes are removed from the macro body. For example:

```
\`define MY_MACRO(a, b) """
    assign a = 23;
    assign b = 42;
"""
```

- The attribute `via_celltype` can be used to implement a Verilog task or function by instantiating the specified cell type. The value is the name of the cell type to use. For functions the name of the output port can be specified by appending it to the cell type separated by a whitespace. The body of the task or function is unused in this case and can be used to specify a behavioral model of the cell type for simulation. For example:

```
module my_add3(A, B, C, Y);
    parameter WIDTH = 8;
    input [WIDTH-1:0] A, B, C;
    output [WIDTH-1:0] Y;
    ...
endmodule

module top;
    ...
    (* via_celltype = "my_add3 Y" *)
    (* via_celltype_defparam_WIDTH = 32 *)
    function [31:0] add3;
        input [31:0] A, B, C;
        begin
            add3 = A + B + C;
        end
    endfunction
    ...
endmodule
```

- The `wiretype` attribute is added by the verilog parser for wires of a typedef'd type to indicate the

type identifier.

- Various `enum_value_{value}` attributes are added to wires of an enumerated type to give a map of possible enum items to their values.
- The `enum_base_type` attribute is added to enum items to indicate which enum they belong to (enums – anonymous and otherwise – are automatically named with an auto-incrementing counter). Note that enums are currently not strongly typed.
- A limited subset of DPI-C functions is supported. The plugin mechanism (see `help plugin`) can be used to load `.so` files with implementations of DPI-C routines. As a non-standard extension it is possible to specify a plugin alias using the `<alias>:` syntax. For example:

```
module dpitest;
  import "DPI-C" function foo:round = real my_round (real);
  parameter real r = my_round(12.345);
endmodule
```

```
$ yosys -p 'plugin -a foo -i /lib/libm.so; read_verilog dpitest.v'
```

- Sized constants (the syntax `<size>'s?[bodh]<value>`) support constant expressions as `<size>`. If the expression is not a simple identifier, it must be put in parentheses. Examples: `WIDTH'd42`, `(4+2)'b101010`
- The system tasks `$finish`, `$stop` and `$display` are supported in initial blocks in an unconditional context (only if/case statements on expressions over parameters and constant values are allowed). The intended use for this is synthesis-time DRC.
- There is limited support for converting `specify .. endspecify` statements to special `$specify2`, `$specify3`, and `$specrule` cells, for use in blackboxes and whiteboxes. Use `read_verilog -specify` to enable this functionality. (By default these blocks are ignored.)
- The `reprocess_after` internal attribute is used by the Verilog frontend to mark cells with bindings which might depend on the specified instantiated module. Modules with such cells will be reprocessed during the `hierarchy` pass once the referenced module definition(s) become available.
- The `smtlib2_module` attribute can be set on a blackbox module to specify a formal model directly using SMT-LIB 2. For such a module, the `smtlib2_comb_expr` attribute can be used on output ports to define their value using an SMT-LIB 2 expression. For example:

```
(* blackbox *)
(* smtlib2_module *)
module submod(a, b);
  input [7:0] a;
  (* smtlib2_comb_expr = "(bvnot a)" *)
  output [7:0] b;
endmodule
```

3.4.3 Non-standard or SystemVerilog features for formal verification

- Support for `assert`, `assume`, `restrict`, and `cover` is enabled when `read_verilog` is called with `-formal`.
- The system task `$initstate` evaluates to 1 in the initial state and to 0 otherwise.
- The system function `$anyconst` evaluates to any constant value. This is equivalent to declaring a reg as `rand const`, but also works outside of checkers. (Yosys also supports `rand const` outside checkers.)

- The system function `$anyseq` evaluates to any value, possibly a different value in each cycle. This is equivalent to declaring a reg as `rand`, but also works outside of checkers. (Yosys also supports `rand` variables outside checkers.)
- The system functions `$allconst` and `$allseq` can be used to construct formal exist-forall problems. Assumptions only hold if the trace satisfies the assumption for all `$allconst/$allseq` values. For assertions and cover statements it is sufficient if just one `$allconst/$allseq` value triggers the property (similar to `$anyconst/$anyseq`).
- Wires/registers declared using the `anyconst/anyseq/allconst/allseq` attribute (for example `(* anyconst *) reg [7:0] foobar;`) will behave as if driven by a `$anyconst/$anyseq/$allconst/$allseq` function.
- The SystemVerilog tasks `$past`, `$stable`, `$rose` and `$fell` are supported in any clocked block.
- The syntax `@($global_clock)` can be used to create FFs that have no explicit clock input (`$ff` cells). The same can be achieved by using `@(posedge <netname>)` or `@(negedge <netname>)` when `<netname>` is marked with the `(* gclk *)` Verilog attribute.

3.4.4 Supported features from SystemVerilog

When `read_verilog` is called with `-sv`, it accepts some language features from SystemVerilog:

- The `assert` statement from SystemVerilog is supported in its most basic form. In module context: `assert property (<expression>);` and within an always block: `assert(<expression>);`. It is transformed to an `$assert` cell.
- The `assume`, `restrict`, and `cover` statements from SystemVerilog are also supported. The same limitations as with the `assert` statement apply.
- The keywords `always_comb`, `always_ff` and `always_latch`, `logic` and `bit` are supported.
- Declaring free variables with `rand` and `rand const` is supported.
- Checkers without a port list that do not need to be instantiated (but instead behave like a named block) are supported.
- SystemVerilog packages are supported. Once a SystemVerilog file is read into a design with `read_verilog`, all its packages are available to SystemVerilog files being read into the same design afterwards.
- **typedefs are supported (including inside packages)**
 - type casts are currently not supported
- **enums are supported (including inside packages)**
 - but are currently not strongly typed
- **packed structs and unions are supported**
 - arrays of packed structs/unions are currently not supported
 - structure literals are currently not supported
- **multidimensional arrays are supported**
 - array assignment of unpacked arrays is currently not supported
 - array literals are currently not supported
- SystemVerilog interfaces (SVIs) are supported. Modports for specifying whether ports are inputs or outputs are supported.
- Assignments within expressions are supported.

- The `unique`, `unique0`, and `priority` SystemVerilog keywords are supported on `if` and `case` conditionals. (The Verilog frontend will process conditionals using these keywords by annotating their representation with the appropriate `full_case` and/or `parallel_case` attributes, which are described above.)
- SystemVerilog string literals are supported (triple-quoted strings and escape sequences such as line continuations and hex escapes).

YOSYS INTERNALS

Todo
less academic

Yosys is an extensible open source hardware synthesis tool. It is aimed at designers who are looking for an easily accessible, universal, and vendor-independent synthesis tool, as well as scientists who do research in electronic design automation (EDA) and are looking for an open synthesis framework that can be used to test algorithms on complex real-world designs.

Yosys can synthesize a large subset of Verilog 2005 and has been tested with a wide range of real-world designs, including the [OpenRISC 1200 CPU](#), the [openMSP430 CPU](#), the [OpenCores I2C master](#), and the [k68 CPU](#).

Todo
add RISC-V core example

Yosys is written in C++, targeting C++17 at minimum. This chapter describes some of the fundamental Yosys data structures. For the sake of simplicity the C++ type names used in the Yosys implementation are used in this chapter, even though the chapter only explains the conceptual idea behind it and can be used as reference to implement a similar system in any language.

4.1 Internal flow

A (usually short) synthesis script controls Yosys.

These scripts contain three types of commands:

- **Frontends**, that read input files (usually Verilog);
- **Passes**, that perform transformations on the design in memory;
- **Backends**, that write the design in memory to a file (various formats are available: Verilog, BLIF, EDIF, SPICE, BTOR, ...).

4.1.1 Flow overview

Todo
less academic

Figure 4.1 shows the simplified data flow within Yosys. Rectangles in the figure represent program modules and ellipses internal data structures that are used to exchange design data between the program modules.

Design data is read in using one of the frontend modules. The high-level HDL frontends for Verilog and VHDL code generate an abstract syntax tree (AST) that is then passed to the AST frontend. Note that both HDL frontends use the same AST representation that is powerful enough to cover the Verilog HDL and VHDL language.

The AST Frontend then compiles the AST to Yosys’s main internal data format, the RTL Intermediate Language (RTLIL). A more detailed description of this format is given in *The RTL Intermediate Language (RTLIL)*.

There is also a text representation of the RTLIL data structure that can be parsed using the RTLIL Frontend which is described in *RTLIL text representation*.

The design data may then be transformed using a series of passes that all operate on the RTLIL representation of the design.

Finally the design in RTLIL representation is converted back to text by one of the backends, namely the Verilog Backend for generating Verilog netlists and the RTLIL Backend for writing the RTLIL data in the same format that is understood by the RTLIL Frontend.

With the exception of the AST Frontend, which is called by the high-level HDL frontends and can’t be called directly by the user, all program modules are called by the user (usually using a synthesis script that contains text commands for Yosys).

By combining passes in different ways and/or adding additional passes to Yosys it is possible to adapt Yosys to a wide range of applications. For this to be possible it is key that (1) all passes operate on the same data structure (RTLIL) and (2) that this data structure is powerful enough to represent the design in different stages of the synthesis.

4.1.2 Control and data flow

Todo
less academic

The data- and control-flow of a typical synthesis tool is very similar to the data- and control-flow of a typical compiler: different subsystems are called in a predetermined order, each consuming the data generated by the last subsystem and generating the data for the next subsystem (see Fig. 4.2).

The first subsystem to be called is usually called a frontend. It does not process the data generated by another subsystem but instead reads the user input—in the case of a HDL synthesis tool, the behavioural HDL code.

The subsystems that consume data from previous subsystems and produce data for the next subsystems (usually in the same or a similar format) are called passes.

The last subsystem that is executed transforms the data generated by the last pass into a suitable output format and writes it to a disk file. This subsystem is usually called the backend.

In Yosys all frontends, passes and backends are directly available as commands in the synthesis script. Thus the user can easily create a custom synthesis flow just by calling passes in the right order in a synthesis

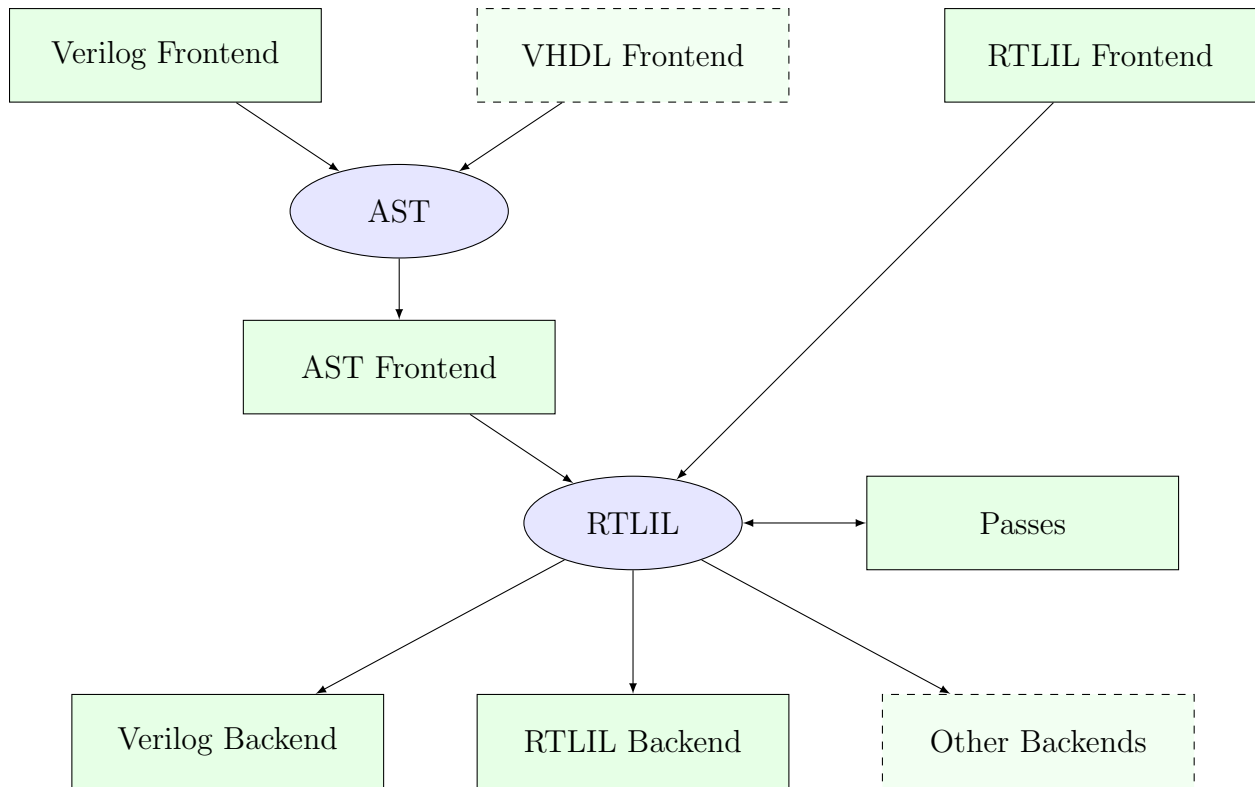


Fig. 4.1: Yosys simplified data flow (ellipses: data structures, rectangles: program modules)

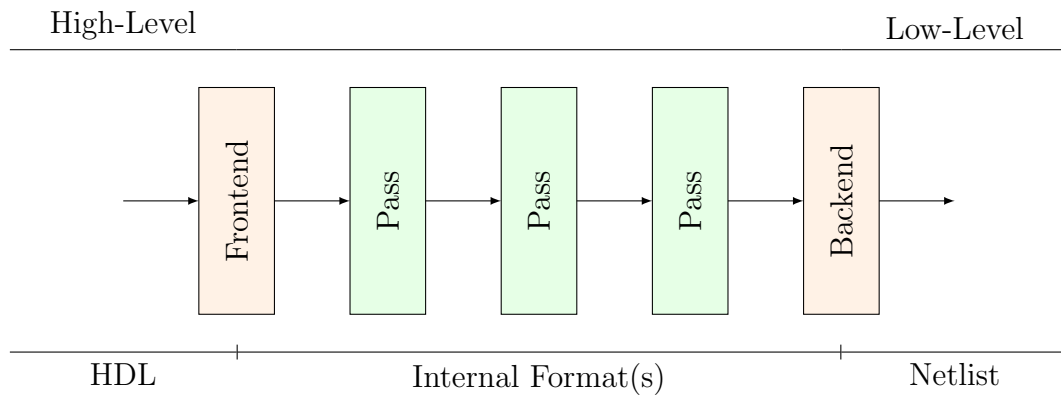


Fig. 4.2: General data- and control-flow of a synthesis tool

script.

4.1.3 The Verilog and AST frontends

This chapter provides an overview of the implementation of the Yosys Verilog and AST frontends. The Verilog frontend reads Verilog-2005 code and creates an abstract syntax tree (AST) representation of the input. This AST representation is then passed to the AST frontend that converts it to RTLIL data, as illustrated in Fig. 4.3.

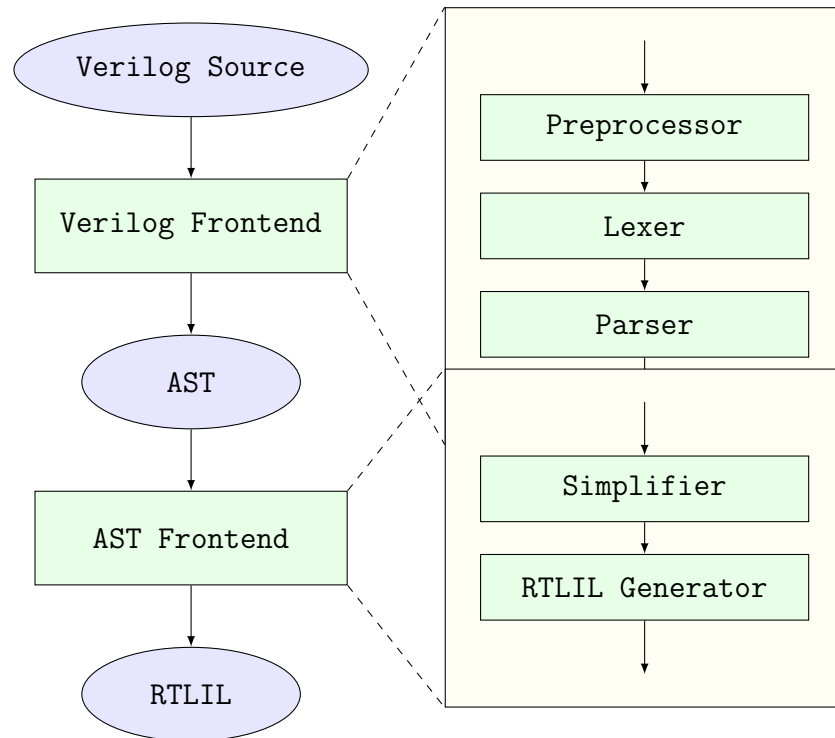


Fig. 4.3: Simplified Verilog to RTLIL data flow

Transforming Verilog to AST

The Verilog frontend converts the Verilog sources to an internal AST representation that closely resembles the structure of the original Verilog code. The Verilog frontend consists of three components, the Preprocessor, the Lexer and the Parser.

The source code to the Verilog frontend can be found in `frontends/verilog/` in the Yosys source tree.

The Verilog preprocessor

The Verilog preprocessor scans over the Verilog source code and interprets some of the Verilog compiler directives such as ``include`, ``define` and ``ifdef`.

It is implemented as a C++ function that is passed a file descriptor as input and returns the pre-processed Verilog code as a `std::string`.

The source code to the Verilog Preprocessor can be found in `frontends/verilog/preproc.cc` in the Yosys source tree.

The Verilog lexer

The Verilog Lexer is written using the lexer generator flex. Its source code can be found in `frontends/verilog/verilog_lexer.1` in the Yosys source tree. The lexer does little more than identifying all keywords and literals recognised by the Yosys Verilog frontend.

The lexer keeps track of the current location in the Verilog source code using some global variables. These variables are used by the constructor of AST nodes to annotate each node with the source code location it originated from.

Finally the lexer identifies and handles special comments such as “`// synopsys translate_off`” and “`// synopsys full_case`”. (It is recommended to use ``ifdef` constructs instead of the Synopsys `translate_on/off` comments and attributes such as `(* full_case *)` over “`// synopsys full_case`” whenever possible.)

The Verilog parser

The Verilog Parser is written using the parser generator bison. Its source code can be found in `frontends/verilog/verilog_parser.y` in the Yosys source tree.

It generates an AST using the `AST::AstNode` data structure defined in `frontends/ast/ast.h`. An `AST::AstNode` object has the following properties:

Table 4.1: AST node types with their corresponding Verilog constructs.

AST Node Type	Corresponding Verilog Construct
AST_NONE	This Node type should never be used.
AST_DESIGN	This node type is used for the top node of the AST tree. It has no corresponding Verilog construct.
AST_MODULE, AST_TASK, AST_FUNCTION	<code>module</code> , <code>task</code> and <code>function</code>
AST_WIRE	<code>input</code> , <code>output</code> , <code>wire</code> , <code>reg</code> and <code>integer</code>
AST_MEMORY	Verilog Arrays
AST_AUTOWIRE	Created by the simplifier when an undeclared signal name is used.
AST_PARAMETER, AST_LOCALPARAM	<code>parameter</code> and <code>localparam</code>
AST_PARASET	Parameter set in cell instantiation
AST_ARGUMENT	Port connection in cell instantiation
AST_RANGE	Bit-Index in a signal or element index in array
AST_CONSTANT	A literal value
AST_CELLTYPE	The type of cell in cell instantiation
AST_IDENTIFIER	An Identifier (signal name in expression or cell/task/etc. name in other contexts)
AST_PREFIX	Construct an identifier in the form <code><prefix>[<index>].<suffix></code> (used only in advanced generate constructs)
AST_FCALL, AST_TCALL	Call to function or task
AST_TO_SIGNED, AST_TO_UNSIGNED	The <code>\$signed()</code> and <code>\$unsigned()</code> functions
AST_CONCAT, AST_REPLICATE	The <code>{...}</code> and <code>{...{...}}</code> operators
AST_BIT_NOT, AST_BIT_AND, AST_BIT_OR, AST_BIT_XOR, AST_BIT_XNOR	The bitwise operators <code>~</code> , <code>&</code> , <code> </code> , <code>^</code> and <code>~^</code>
AST_REDUCE_AND, AST_REDUCE_OR, AST_REDUCE_XOR, AST_REDUCE_XNOR	The unary reduction operators <code>~</code> , <code>&</code> , <code> </code> , <code>^</code> and <code>~^</code>

continues on next page

Table 4.1 – continued from previous page

AST_REDUCE_BOOL	Conversion from multi-bit value to boolean value (equivalent to AST_REDUCE_OR)
AST_SHIFT_LEFT, AST_SHIFT_RIGHT, AST_SHIFT_SLEFT, AST_SHIFT_SRIGHT	The shift operators <<, >>, <<< and >>>
AST_LT, AST_LE, AST_EQ, AST_NE, AST_GE, AST_GT	The relational operators <, <=, ==, !=, >= and >
AST_ADD, AST_SUB, AST_MUL, AST_DIV, AST_MOD, AST_POW	The binary operators +, -, *, /, % and **
AST_POS, AST_NEG	The prefix operators + and -
AST_LOGIC_AND, AST_LOGIC_OR, AST_LOGIC_NOT	The logic operators &&, and !
AST_TERNARY	The ternary ?: -operator
AST_MEMRD AST_MEMWR	Read and write memories. These nodes are generated by the AST simplifier for writes/reads to/from Verilog arrays.
AST_ASSIGN	An assign statement
AST_CELL	A cell instantiation
AST_PRIMITIVE	A primitive cell (and , nand , or , etc.)
AST_ALWAYS, AST_INITIAL	Verilog always - and initial -blocks
AST_BLOCK	A begin-end -block
AST_ASSIGN_EQ, AST_ASSIGN_LE	Blocking (=) and nonblocking (<=) assignments within an always - or initial -block
AST_CASE, AST_COND, AST_DEFAULT	The case (if) statements, conditions within a case and the default case respectively
AST_FOR	A for -loop with an always - or initial -block
AST_GENVAR, AST_GENBLOCK, AST_GENFOR, AST_GENIF	The genvar and generate keywords and for and if within a generate block.
AST_POSEDGE, AST_NEGEDGE, AST_EDGE	Event conditions for always blocks.

- The node type
This enum (`AST::AstNodeType`) specifies the role of the node. [Table 4.1](#) contains a list of all node types.
- The child nodes
This is a list of pointers to all children in the abstract syntax tree.
- Attributes
As almost every AST node might have Verilog attributes assigned to it, the `AST::AstNode` has direct support for attributes. Note that the attribute values are again AST nodes.
- Node content
Each node might have additional content data. A series of member variables exist to hold such data. For example the member `std::string str` can hold a string value and is used e.g. in the `AST_IDENTIFIER` node type to store the identifier name.
- Source code location
Each `AST::AstNode` is automatically annotated with the current source code location by the `AST::AstNode` constructor. It is stored in the `std::string filename` and `int lineno` member variables.

The `AST::AstNode` constructor can be called with up to two child nodes that are automatically added to the list of child nodes for the new object. This simplifies the creation of AST nodes for simple expressions a bit. For example the bison code for parsing multiplications:

```

1 basic_expr '*' attr basic_expr {
2     $$ = new AstNode(AST_MUL, $1, $4);
3     append_attr($$, $3);
4 } |

```

The generated AST data structure is then passed directly to the AST frontend that performs the actual conversion to RTLIL.

Note that the Yosys command `read_verilog` provides the options `-yydebug` and `-dump_ast` that can be used to print the parse tree or abstract syntax tree respectively.

Transforming AST to RTLIL

The AST Frontend converts a set of modules in AST representation to modules in RTLIL representation and adds them to the current design. This is done in two steps: simplification and RTLIL generation.

The source code to the AST frontend can be found in `frontends/ast/` in the Yosys source tree.

AST simplification

A full-featured AST is too complex to be transformed into RTLIL directly. Therefore it must first be brought into a simpler form. This is done by calling the `AST::AstNode::simplify()` method of all `AST_MODULE` nodes in the AST. This initiates a recursive process that performs the following transformations on the AST data structure:

- Inline all task and function calls.
- Evaluate all `generate`-statements and unroll all `for`-loops.
- Perform const folding where it is necessary (e.g. in the value part of `AST_PARAMETER`, `AST_LOCALPARAM`, `AST_PARASET` and `AST_RANGE` nodes).
- Replace `AST_PRIMITIVE` nodes with appropriate `AST_ASSIGN` nodes.
- Replace dynamic bit ranges in the left-hand-side of assignments with `AST_CASE` nodes with `AST_COND` children for each possible case.
- Detect array access patterns that are too complicated for the `RTLIL::Memory` abstraction and replace them with a set of signals and cases for all reads and/or writes.
- Otherwise replace array accesses with `AST_MEMRD` and `AST_MEMWR` nodes.

In addition to these transformations, the simplifier also annotates the AST with additional information that is needed for the RTLIL generator, namely:

- All ranges (width of signals and bit selections) are not only const folded but (when a constant value is found) are also written to member variables in the `AST_RANGE` node.
- All identifiers are resolved and all `AST_IDENTIFIER` nodes are annotated with a pointer to the AST node that contains the declaration of the identifier. If no declaration has been found, an `AST_AUTOWIRE` node is created and used for the annotation.

This produces an AST that is fairly easy to convert to the RTLIL format.

Generating RTLIL

After AST simplification, the `AST::AstNode::genRTLIL()` method of each `AST_MODULE` node in the AST is called. This initiates a recursive process that generates equivalent RTLIL data for the AST data.

The `AST::AstNode::genRTLIL()` method returns an `RTLIL::SigSpec` structure. For nodes that represent expressions (operators, constants, signals, etc.), the cells needed to implement the calculation described by

the expression are created and the resulting signal is returned. That way it is easy to generate the circuits for large expressions using depth-first recursion. For nodes that do not represent an expression (such as `AST_CELL`), the corresponding circuit is generated and an empty `RTLIL::SigSpec` is returned.

Synthesizing Verilog always blocks

For behavioural Verilog code (code utilizing `always`- and `initial`-blocks) it is necessary to also generate `RTLIL::Process` objects. This is done in the following way:

Whenever `AST::AstNode::genRTLIL()` encounters an `always`- or `initial`-block, it creates an instance of `AST_INTERNAL::ProcessGenerator`. This object then generates the `RTLIL::Process` object for the block. It also calls `AST::AstNode::genRTLIL()` for all right-hand-side expressions contained within the block.

First the `AST_INTERNAL::ProcessGenerator` creates a list of all signals assigned within the block. It then creates a set of temporary signals using the naming scheme `$ <number> \ <original_name>` for each of the assigned signals.

Then an `RTLIL::Process` is created that assigns all intermediate values for each left-hand-side signal to the temporary signal in its `RTLIL::CaseRule/RTLIL::SwitchRule` tree.

Finally a `RTLIL::SyncRule` is created for the `RTLIL::Process` that assigns the temporary signals for the final values to the actual signals.

A process may also contain memory writes. A `RTLIL::MemWriteAction` is created for each of them.

Calls to `AST::AstNode::genRTLIL()` are generated for right hand sides as needed. When blocking assignments are used, `AST::AstNode::genRTLIL()` is configured using global variables to use the temporary signals that hold the correct intermediate values whenever one of the previously assigned signals is used in an expression.

Unfortunately the generation of a correct `RTLIL::CaseRule/RTLIL::SwitchRule` tree for behavioural code is a non-trivial task. The AST frontend solves the problem using the approach described on the following pages. The following example illustrates what the algorithm is supposed to do. Consider the following Verilog code:

```

1  always @(posedge clock) begin
2      out1 = in1;
3      if (in2)
4          out1 = !out1;
5      out2 <= out1;
6      if (in3)
7          out2 <= out2;
8      if (in4)
9          if (in5)
10             out3 <= in6;
11             else
12                 out3 <= in7;
13      out1 = out1 ^ out2;
14  end

```

This is translated by the Verilog and AST frontends into the following RTLIL code (attributes, cell parameters and wire declarations not included):

```

1  cell $logic_not $logic_not$<input>:4$2
2      connect \A \in1
3      connect \Y $logic_not$<input>:4$2_Y
4  end

```

(continues on next page)

(continued from previous page)

```

5  cell $xor $xor$<input>:13$3
6      connect \A $1\out1[0:0]
7      connect \B \out2
8      connect \Y $xor$<input>:13$3_Y
9  end
10 process $proc$<input>:1$1
11     assign $0\out3[0:0] \out3
12     assign $0\out2[0:0] $1\out1[0:0]
13     assign $0\out1[0:0] $xor$<input>:13$3_Y
14     switch \in2
15         case 1'1
16             assign $1\out1[0:0] $logic_not$<input>:4$2_Y
17         case
18             assign $1\out1[0:0] \in1
19     end
20     switch \in3
21         case 1'1
22             assign $0\out2[0:0] \out2
23         case
24     end
25     switch \in4
26         case 1'1
27             switch \in5
28                 case 1'1
29                     assign $0\out3[0:0] \in6
30                 case
31                     assign $0\out3[0:0] \in7
32             end
33         case
34     end
35     sync posedge \clock
36     update \out1 $0\out1[0:0]
37     update \out2 $0\out2[0:0]
38     update \out3 $0\out3[0:0]
39 end

```

Note that the two operators are translated into separate cells outside the generated process. The signal `out1` is assigned using blocking assignments and therefore `out1` has been replaced with a different signal in all expressions after the initial assignment. The signal `out2` is assigned using nonblocking assignments and therefore is not substituted on the right-hand-side expressions.

The `RTLIL::CaseRule`/`RTLIL::SwitchRule` tree must be interpreted the following way:

- On each case level (the body of the process is the root case), first the actions on this level are evaluated and then the switches within the case are evaluated. (Note that the last assignment on line 13 of the Verilog code has been moved to the beginning of the RTLIL process to line 13 of the RTLIL listing.)

I.e. the special cases deeper in the switch hierarchy override the defaults on the upper levels. The assignments in lines 12 and 22 of the RTLIL code serve as an example for this.

Note that in contrast to this, the order within the `RTLIL::SwitchRule` objects within a `RTLIL::CaseRule` is preserved with respect to the original AST and Verilog code.

- The whole `RTLIL::CaseRule`/`RTLIL::SwitchRule` tree describes an asynchronous circuit. I.e. the decision tree formed by the switches can be seen independently for each assigned signal. Whenever one

assigned signal changes, all signals that depend on the changed signals are to be updated. For example the assignments in lines 16 and 18 in the RTLIL code in fact influence the assignment in line 12, even though they are in the “wrong order”.

The only synchronous part of the process is in the `RTLIL::SyncRule` object generated at line 35 in the RTLIL code. The sync rule is the only part of the process where the original signals are assigned. The synchronization event from the original Verilog code has been translated into the synchronization type (posedge) and signal (`\clock`) for the `RTLIL::SyncRule` object. In the case of this simple example the `RTLIL::SyncRule` object is later simply transformed into a set of d-type flip-flops and the `RTLIL::CaseRule/RTLIL::SwitchRule` tree to a decision tree using multiplexers.

In more complex examples (e.g. asynchronous resets) the part of the `RTLIL::CaseRule/RTLIL::SwitchRule` tree that describes the asynchronous reset must first be transformed to the correct `RTLIL::SyncRule` objects. This is done by the `proc_arst` pass.

The ProcessGenerator algorithm

The `AST_INTERNAL::ProcessGenerator` uses the following internal state variables:

- `subst_rvalue_from` and `subst_rvalue_to`
These two variables hold the replacement pattern that should be used by `AST::AstNode::genRTLIL()` for signals with blocking assignments. After initialization of `AST_INTERNAL::ProcessGenerator` these two variables are empty.
- `subst_lvalue_from` and `subst_lvalue_to`
These two variables contain the mapping from left-hand-side signals (`\ <name>`) to the current temporary signal for the same thing (initially `$0\ <name>`).
- `current_case`
A pointer to a `RTLIL::CaseRule` object. Initially this is the root case of the generated `RTLIL::Process`.

As the algorithm runs these variables are continuously modified as well as pushed to the stack and later restored to their earlier values by popping from the stack.

On startup the `ProcessGenerator` generates a new `RTLIL::Process` object with an empty root case and initializes its state variables as described above. Then the `RTLIL::SyncRule` objects are created using the synchronization events from the `AST_ALWAYS` node and the initial values of `subst_lvalue_from` and `subst_lvalue_to`. Then the AST for this process is evaluated recursively.

During this recursive evaluation, three different relevant types of AST nodes can be discovered: `AST_ASSIGN_LE` (nonblocking assignments), `AST_ASSIGN_EQ` (blocking assignments) and `AST_CASE` (if or case statement).

Handling of nonblocking assignments

When an `AST_ASSIGN_LE` node is discovered, the following actions are performed by the `ProcessGenerator`:

- The left-hand-side is evaluated using `AST::AstNode::genRTLIL()` and mapped to a temporary signal name using `subst_lvalue_from` and `subst_lvalue_to`.
- The right-hand-side is evaluated using `AST::AstNode::genRTLIL()`. For this call, the values of `subst_rvalue_from` and `subst_rvalue_to` are used to map blocking-assigned signals correctly.
- Remove all assignments to the same left-hand-side as this assignment from the `current_case` and all cases within it.
- Add the new assignment to the `current_case`.

Handling of blocking assignments

When an `AST_ASSIGN_EQ` node is discovered, the following actions are performed by the ProcessGenerator:

- Perform all the steps that would be performed for a nonblocking assignment (see above).
- Remove the found left-hand-side (before lvalue mapping) from `subst_rvalue_from` and also remove the respective bits from `subst_rvalue_to`.
- Append the found left-hand-side (before lvalue mapping) to `subst_rvalue_from` and append the found right-hand-side to `subst_rvalue_to`.

Handling of cases and if-statements

When an `AST_CASE` node is discovered, the following actions are performed by the ProcessGenerator:

- The values of `subst_rvalue_from`, `subst_rvalue_to`, `subst_lvalue_from` and `subst_lvalue_to` are pushed to the stack.
- A new `RTLIL::SwitchRule` object is generated, the selection expression is evaluated using `AST::AstNode::genRTLIL()` (with the use of `subst_rvalue_from` and `subst_rvalue_to`) and added to the `RTLIL::SwitchRule` object and the object is added to the `current_case`.
- All lvalues assigned to within the `AST_CASE` node using blocking assignments are collected and saved in the local variable `this_case_eq_lvalue`.
- New temporary signals are generated for all signals in `this_case_eq_lvalue` and stored in `this_case_eq_ltemp`.
- The signals in `this_case_eq_lvalue` are mapped using `subst_rvalue_from` and `subst_rvalue_to` and the resulting set of signals is stored in `this_case_eq_rvalue`.

Then the following steps are performed for each `AST_COND` node within the `AST_CASE` node:

- Set `subst_rvalue_from`, `subst_rvalue_to`, `subst_lvalue_from` and `subst_lvalue_to` to the values that have been pushed to the stack.
- Remove `this_case_eq_lvalue` from `subst_lvalue_from/subst_lvalue_to`.
- Append `this_case_eq_lvalue` to `subst_lvalue_from` and append `this_case_eq_ltemp` to `subst_lvalue_to`.
- Push the value of `current_case`.
- Create a new `RTLIL::CaseRule`. Set `current_case` to the new object and add the new object to the `RTLIL::SwitchRule` created above.
- Add an assignment from `this_case_eq_rvalue` to `this_case_eq_ltemp` to the new `current_case`.
- Evaluate the compare value for this case using `AST::AstNode::genRTLIL()` (with the use of `subst_rvalue_from` and `subst_rvalue_to`) modify the new `current_case` accordingly.
- Recursion into the children of the `AST_COND` node.
- Restore `current_case` by popping the old value from the stack.

Finally the following steps are performed:

- The values of `subst_rvalue_from`, `subst_rvalue_to`, `subst_lvalue_from` and `subst_lvalue_to` are popped from the stack.
- The signals from `this_case_eq_lvalue` are removed from the `subst_rvalue_from/subst_rvalue_to`-pair.

- The value of `this_case_eq_lvalue` is appended to `subst_rvalue_from` and the value of `this_case_eq_ltemp` is appended to `subst_rvalue_to`.
- Map the signals in `this_case_eq_lvalue` using `subst_lvalue_from/subst_lvalue_to`.
- Remove all assignments to signals in `this_case_eq_lvalue` in `current_case` and all cases within it.
- Add an assignment from `this_case_eq_ltemp` to `this_case_eq_lvalue` to `current_case`.

Further analysis of the algorithm for cases and if-statements

With respect to nonblocking assignments the algorithm is easy: later assignments invalidate earlier assignments. For each signal assigned using nonblocking assignments exactly one temporary variable is generated (with the `$0`-prefix) and this variable is used for all assignments of the variable.

Note how all the `_eq`-variables become empty when no blocking assignments are used and many of the steps in the algorithm can then be ignored as a result of this.

For a variable with blocking assignments the algorithm shows the following behaviour: First a new temporary variable is created. This new temporary variable is then registered as the assignment target for all assignments for this variable within the cases for this `AST_CASE` node. Then for each case the new temporary variable is first assigned the old temporary variable. This assignment is overwritten if the variable is actually assigned in this case and is kept as a default value otherwise.

This yields an `RTLIL::CaseRule` that assigns the new temporary variable in all branches. So when all cases have been processed a final assignment is added to the containing block that assigns the new temporary variable to the old one. Note how this step always overrides a previous assignment to the old temporary variable. Other than nonblocking assignments, the old assignment could still have an effect somewhere in the design, as there have been calls to `AST::AstNode::genRTLIL()` with a `subst_rvalue_from/subst_rvalue_to`-tuple that contained the right-hand-side of the old assignment.

The proc pass

The `ProcessGenerator` converts a behavioural model in AST representation to a behavioural model in `RTLIL::Process` representation. The actual conversion from a behavioural model to an RTL representation is performed by the `proc` pass and the passes it launches:

- `proc_clean` and `proc_rmdead`
These two passes just clean up the `RTLIL::Process` structure. The `proc_clean` pass removes empty parts (eg. empty assignments) from the process and `proc_rmdead` detects and removes unreachable branches from the process's decision trees.
- `proc_arst`
This pass detects processes that describe d-type flip-flops with asynchronous resets and rewrites the process to better reflect what they are modelling: Before this pass, an asynchronous reset has two edge-sensitive sync rules and one top-level `RTLIL::SwitchRule` for the reset path. After this pass the sync rule for the reset is level-sensitive and the top-level `RTLIL::SwitchRule` has been removed.
- `proc_mux`
This pass converts the `RTLIL::CaseRule/RTLIL::SwitchRule`-tree to a tree of multiplexers per written signal. After this, the `RTLIL::Process` structure only contains the `RTLIL::SyncRule`s that describe the output registers.
- `proc_dff`
This pass replaces the `RTLIL::SyncRules` to d-type flip-flops (with asynchronous resets if necessary).
- `proc_memwr`
This pass replaces the `RTLIL::MemWriteActions` with `$memwr` cells.

- `proc_clean`

A final call to `proc_clean` removes the now empty `RTLIL::Process` objects.

Performing these last processing steps in passes instead of in the Verilog frontend has two important benefits:

First it improves the transparency of the process. Everything that happens in a separate pass is easier to debug, as the RTLIL data structures can be easily investigated before and after each of the steps.

Second it improves flexibility. This scheme can easily be extended to support other types of storage-elements, such as sr-latches or d-latches, without having to extend the actual Verilog frontend.

Todo

Synthesizing Verilog arrays

Add some information on the generation of `$memrd` and `$memwr` cells and how they are processed in the memory pass.

Todo

Synthesizing parametric designs

Add some information on the `RTLIL::Module::derive()` method and how it is used to synthesize parametric modules via the hierarchy pass.

4.2 Internal formats

Yosys uses two different internal formats. The first is used to store an abstract syntax tree (AST) of a Verilog input file. This format is simply called AST and is generated by the Verilog Frontend. This data structure is consumed by a subsystem called AST Frontend¹. This AST Frontend then generates a design in Yosys' main internal format, the Register-Transfer-Level-Intermediate-Language (RTLIL) representation. It does that by first performing a number of simplifications within the AST representation and then generating RTLIL from the simplified AST data structure.

The RTLIL representation is used by all passes as input and outputs. This has the following advantages over using different representational formats between different passes:

- The passes can be rearranged in a different order and passes can be removed or inserted.
- Passes can simply pass-thru the parts of the design they don't change without the need to convert between formats. In fact Yosys passes output the same data structure they received as input and performs all changes in place.
- All passes use the same interface, thus reducing the effort required to understand a pass when reading the Yosys source code, e.g. when adding additional features.

The RTLIL representation is basically a netlist representation with the following additional features:

- An internal cell library with fixed-function cells to represent RTL datapath and register cells as well as logical gate-level cells (single-bit gates and registers).
- Support for multi-bit values that can use individual bits from wires as well as constant bits to represent coarse-grain netlists.
- Support for basic behavioural constructs (if-then-else structures and multi-case switches with a sensitivity list for updating the outputs).

¹ In Yosys the term pass is only used to refer to commands that operate on the RTLIL data structure.

- Support for multi-port memories.

The use of RTLIL also has the disadvantage of having a very powerful format between all passes, even when doing gate-level synthesis where the more advanced features are not needed. In order to reduce complexity for passes that operate on a low-level representation, these passes check the features used in the input RTLIL and fail to run when unsupported high-level constructs are used. In such cases a pass that transforms the higher-level constructs to lower-level constructs must be called from the synthesis script first.

4.2.1 The RTL Intermediate Language (RTLIL)

All frontends, passes and backends in Yosys operate on a design in RTLIL representation. The only exception are the high-level frontends that use the AST representation as an intermediate step before generating RTLIL data.

In order to avoid reinventing names for the RTLIL classes, they are simply referred to by their full C++ name, i.e. including the `RTLIL::` namespace prefix, in this document.

Figure 4.4 shows a simplified Entity-Relationship Diagram (ER Diagram) of RTLIL. In $1 : N$ relationships the arrow points from the N side to the 1. For example one `RTLIL::Design` contains N (zero to many) instances of `RTLIL::Module`. A two-pointed arrow indicates a $1 : 1$ relationship.

The `RTLIL::Design` is the root object of the RTLIL data structure. There is always one “current design” in memory which passes operate on, frontends add data to and backends convert to exportable formats. But in some cases passes internally generate additional `RTLIL::Design` objects. For example when a pass is reading an auxiliary Verilog file such as a cell library, it might create an additional `RTLIL::Design` object and call the Verilog frontend with this other object to parse the cell library.

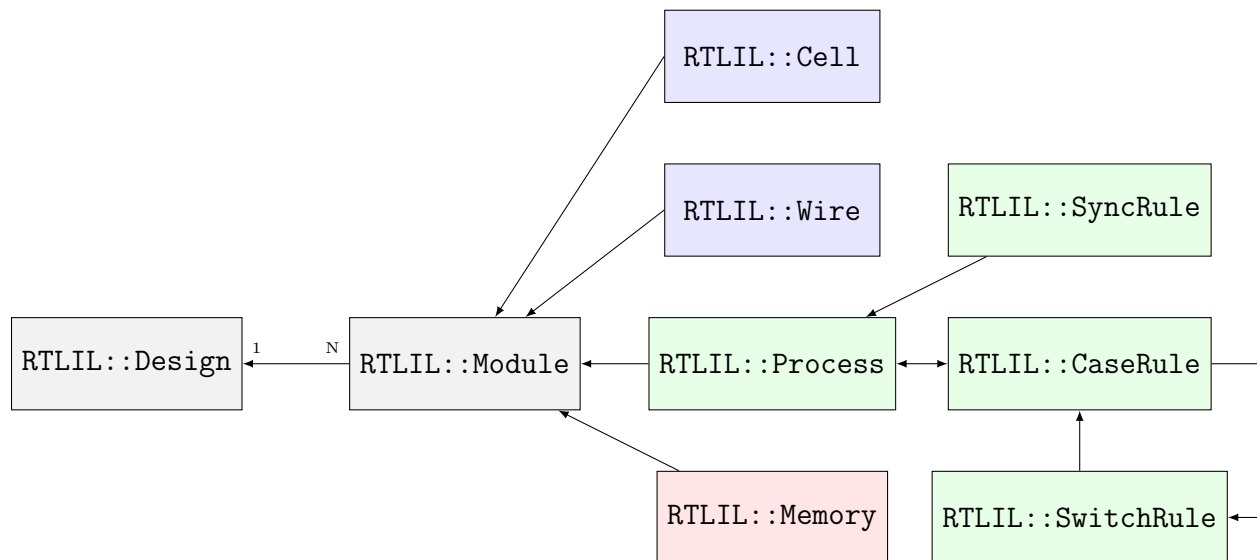


Fig. 4.4: Simplified RTLIL Entity-Relationship Diagram

There is only one active `RTLIL::Design` object that is used by all frontends, passes and backends called by the user, e.g. using a synthesis script. The `RTLIL::Design` then contains zero to many `RTLIL::Module` objects. This corresponds to modules in Verilog or entities in VHDL. Each module in turn contains objects from three different categories:

- `RTLIL::Cell` and `RTLIL::Wire` objects represent classical netlist data.
- `RTLIL::Process` objects represent the decision trees (if-then-else statements, etc.) and synchronization declarations (clock signals and sensitivity) from Verilog always and VHDL process blocks.

- `RTLIL::Memory` objects represent addressable memories (arrays).

Usually the output of the synthesis procedure is a netlist, i.e. all `RTLIL::Process` and `RTLIL::Memory` objects must be replaced by `RTLIL::Cell` and `RTLIL::Wire` objects by synthesis passes.

All features of the HDL that cannot be mapped directly to these RTLIL classes must be transformed to an RTLIL-compatible representation by the HDL frontend. This includes Verilog-features such as generate-blocks, loops and parameters.

The following sections contain a more detailed description of the different parts of RTLIL and rationale behind some of the design decisions.

RTLIL identifiers

All identifiers in RTLIL (such as module names, port names, signal names, cell types, etc.) follow the following naming convention: they must either start with a backslash (\) or a dollar sign (\$).

Identifiers starting with a backslash are public visible identifiers. Usually they originate from one of the HDL input files. For example the signal name `\sig42` is most likely a signal that was declared using the name `sig42` in an HDL input file. On the other hand the signal name `$sig42` is an auto-generated signal name. The backends convert all identifiers that start with a dollar sign to identifiers that do not collide with identifiers that start with a backslash.

This has three advantages:

- First, it is impossible that an auto-generated identifier collides with an identifier that was provided by the user.
- Second, the information about which identifiers were originally provided by the user is always available which can help guide some optimizations. For example, `opt_clean` tries to preserve signals with a user-provided name but doesn't hesitate to delete signals that have auto-generated names when they just duplicate other signals. Note that this can be overridden with the `-purge` option to also delete internal nets with user-provided names.
- Third, the delicate job of finding suitable auto-generated public visible names is deferred to one central location. Internally auto-generated names that may hold important information for Yosys developers can be used without disturbing external tools. For example the Verilog backend assigns names in the form `_123_`.

Whitespace and control characters (any character with an ASCII code 32 or less) are not allowed in RTLIL identifiers; most frontends and backends cannot support these characters in identifiers.

In order to avoid programming errors, the RTLIL data structures check if all identifiers start with either a backslash or a dollar sign, and contain no whitespace or control characters. Violating these rules results in a runtime error.

All RTLIL identifiers are case sensitive.

Some transformations, such as flattening, may have to change identifiers provided by the user to avoid name collisions. When that happens, attribute `hdlname` is attached to the object with the changed identifier. This attribute contains one name (if emitted directly by the frontend, or is a result of disambiguation) or multiple names separated by spaces (if a result of flattening). All names specified in the `hdlname` attribute are public and do not include the leading \.

RTLIL::Design and RTLIL::Module

The `RTLIL::Design` object is basically just a container for `RTLIL::Module` objects. In addition to a list of `RTLIL::Module` objects the `RTLIL::Design` also keeps a list of selected objects, i.e. the objects that passes should operate on. In most cases the whole design is selected and therefore passes operate on the whole design. But this mechanism can be useful for more complex synthesis jobs in which only parts of the design should be affected by certain passes.

Besides the objects shown in the *ER diagram* above, an `RTLIL::Module` object contains the following additional properties:

- The module name
- A list of attributes
- A list of connections between wires
- An optional frontend callback used to derive parametrized variations of the module

The attributes can be Verilog attributes imported by the Verilog frontend or attributes assigned by passes. They can be used to store additional metadata about modules or just mark them to be used by certain part of the synthesis script but not by others.

Verilog and VHDL both support parametric modules (known as “generic entities” in VHDL). The RTLIL format does not support parametric modules itself. Instead each module contains a callback function into the AST frontend to generate a parametrized variation of the `RTLIL::Module` as needed. This callback then returns the auto-generated name of the parametrized variation of the module. (A hash over the parameters and the module name is used to prohibit the same parametrized variation from being generated twice. For modules with only a few parameters, a name directly containing all parameters is generated instead of a hash string.)

RTLIL::Cell and RTLIL::Wire

A module contains zero to many `RTLIL::Cell` and `RTLIL::Wire` objects. Objects of these types are used to model netlists. Usually the goal of all synthesis efforts is to convert all modules to a state where the functionality of the module is implemented only by cells from a given cell library and wires to connect these cells with each other. Note that module ports are just wires with a special property.

An `RTLIL::Wire` object has the following properties:

- The wire name
- A list of attributes
- A width (buses are just wires with a width more than 1)
- Bus direction (MSB to LSB or vice versa)
- Lowest valid bit index (LSB or MSB depending on bus direction)
- If the wire is a port: port number and direction (input/output/inout)

As with modules, the attributes can be Verilog attributes imported by the Verilog frontend or attributes assigned by passes.

In Yosys, busses (signal vectors) are represented using a single wire object with a width more than 1. So Yosys does not convert signal vectors to individual signals. This makes some aspects of RTLIL more complex but enables Yosys to be used for coarse grain synthesis where the cells of the target architecture operate on entire signal vectors instead of single bit wires.

In Verilog and VHDL, busses may have arbitrary bounds, and LSB can have either the lowest or the highest bit index. In RTLIL, bit 0 always corresponds to LSB; however, information from the HDL frontend is preserved so that the bus will be correctly indexed in error messages, backend output, constraint files, etc.

An `RTLIL::Cell` object has the following properties:

- The cell name and type
- A list of attributes
- A list of parameters (for parametric cells)
- Cell ports and the connections of ports to wires and constants

The connections of ports to wires are coded by assigning an `RTLIL::SigSpec` to each cell port. The `RTLIL::SigSpec` data type is described in the next section.

RTLIL::SigSpec

A “signal” is everything that can be applied to a cell port. I.e.

- Any constant value of arbitrary bit-width
1em For example: 1337, 16'b0000010100111001, 1'b1, 1'bx
- All bits of a wire or a selection of bits from a wire
1em For example: mywire, mywire[24], mywire[15:8]
- Concatenations of the above
1em For example: {16'd1337, mywire[15:8]}

The `RTLIL::SigSpec` data type is used to represent signals. The `RTLIL::Cell` object contains one `RTLIL::SigSpec` for each cell port.

In addition, connections between wires are represented using a pair of `RTLIL::SigSpec` objects. Such pairs are needed in different locations. Therefore the type name `RTLIL::SigSig` was defined for such a pair.

RTLIL::Process

When a high-level HDL frontend processes behavioural code it splits it up into data path logic (e.g. the expression `a + b` is replaced by the output of an adder that takes `a` and `b` as inputs) and an `RTLIL::Process` that models the control logic of the behavioural code. Let's consider a simple example:

```

1 module ff_with_en_and_async_reset(clock, reset, enable, d, q);
2   input clock, reset, enable, d;
3   output reg q;
4   always @(posedge clock, posedge reset)
5       if (reset)
6           q <= 0;
7       else if (enable)
8           q <= d;
9   endmodule

```

In this example there is no data path and therefore the `RTLIL::Module` generated by the frontend only contains a few `RTLIL::Wire` objects and an `RTLIL::Process`. The `RTLIL::Process` in RTLIL syntax:

```

1 process $proc$ff_with_en_and_async_reset.v:4$1
2     assign $0\q[0:0] \q
3     switch \reset
4         case 1'1
5             assign $0\q[0:0] 1'0
6         case
7             switch \enable
8                 case 1'1
9                     assign $0\q[0:0] \d
10                case
11                end
12            end
13        sync posedge \clock
14            update \q $0\q[0:0]
15        sync posedge \reset

```

(continues on next page)

(continued from previous page)

```

16     update \q $0\q[0:0]
17 end

```

This `RTLIL::Process` contains two `RTLIL::SyncRule` objects, two `RTLIL::SwitchRule` objects and five `RTLIL::CaseRule` objects. The wire `$0\q[0:0]` is an automatically created wire that holds the next value of `\q`. The lines 2..12 describe how `$0\q[0:0]` should be calculated. The lines 13..16 describe how the value of `$0\q[0:0]` is used to update `\q`.

An `RTLIL::Process` is a container for zero or more `RTLIL::SyncRule` objects and exactly one `RTLIL::CaseRule` object, which is called the root case.

An `RTLIL::SyncRule` object contains an (optional) synchronization condition (signal and edge-type), zero or more assignments (`RTLIL::SigSig`), and zero or more memory writes (`RTLIL::MemWriteAction`). The always synchronization condition is used to break combinatorial loops when a latch should be inferred instead.

An `RTLIL::CaseRule` is a container for zero or more assignments (`RTLIL::SigSig`) and zero or more `RTLIL::SwitchRule` objects. An `RTLIL::SwitchRule` objects is a container for zero or more `RTLIL::CaseRule` objects.

In the above example the lines 2..12 are the root case. Here `$0\q[0:0]` is first assigned the old value `\q` as default value (line 2). The root case also contains an `RTLIL::SwitchRule` object (lines 3..12). Such an object is very similar to the C switch statement as it uses a control signal (`\reset` in this case) to determine which of its cases should be active. The `RTLIL::SwitchRule` object then contains one `RTLIL::CaseRule` object per case. In this example there is a case¹ for `\reset == 1` that causes `$0\q[0:0]` to be set (lines 4 and 5) and a default case that in turn contains a switch that sets `$0\q[0:0]` to the value of `\d` if `\enable` is active (lines 6..11).

A case can specify zero or more compare values that will determine whether it matches. Each of the compare values must be the exact same width as the control signal. When more than one compare value is specified, the case matches if any of them matches the control signal; when zero compare values are specified, the case always matches (i.e. it is the default case).

A switch prioritizes cases from first to last: multiple cases can match, but only the first matched case becomes active. This normally synthesizes to a priority encoder. The `parallel_case` attribute allows passes to assume that no more than one case will match, and `full_case` attribute allows passes to assume that exactly one case will match; if these invariants are ever dynamically violated, the behavior is undefined. These attributes are useful when an invariant invisible to the synthesizer causes the control signal to never take certain bit patterns.

The lines 13..16 then cause `\q` to be updated whenever there is a positive clock edge on `\clock` or `\reset`.

In order to generate such a representation, the language frontend must be able to handle blocking and nonblocking assignments correctly. However, the language frontend does not need to identify the correct type of storage element for the output signal or generate multiplexers for the decision tree. This is done by passes that work on the RTLIL representation. Therefore it is relatively easy to substitute these steps with other algorithms that target different target architectures or perform optimizations or other transformations on the decision trees before further processing them.

One of the first actions performed on a design in RTLIL representation in most synthesis scripts is identifying asynchronous resets. This is usually done using the `proc_arst` pass. This pass transforms the above example to the following `RTLIL::Process`:

```

1 process $proc$ff_with_en_and_async_reset.v:4$1
2     assign $0\q[0:0] \q

```

(continues on next page)

¹ The syntax `1'1` in the RTLIL code specifies a constant with a length of one bit (the first 1), and this bit is a one (the second 1).

(continued from previous page)

```

3      switch \enable
4          case 1'1
5              assign $0\q[0:0] \d
6          case
7      end
8      sync posedge \clock
9          update \q $0\q[0:0]
10     sync high \reset
11         update \q 1'0
12 end

```

This pass has transformed the outer `RTLIL::SwitchRule` into a modified `RTLIL::SyncRule` object for the `\reset` signal. Further processing converts the `RTLIL::Process` into e.g. a d-type flip-flop with asynchronous reset and a multiplexer for the enable signal:

```

1 cell $adff $procdff$6
2     parameter \ARST_POLARITY 1'1
3     parameter \ARST_VALUE 1'0
4     parameter \CLK_POLARITY 1'1
5     parameter \WIDTH 1
6     connect \ARST \reset
7     connect \CLK \clock
8     connect \D $0\q[0:0]
9     connect \Q \q
10 end
11 cell $mux $procmux$3
12     parameter \WIDTH 1
13     connect \A \q
14     connect \B \d
15     connect \S \enable
16     connect \Y $0\q[0:0]
17 end

```

Different combinations of passes may yield different results. Note that `$adff` and `$mux` are internal cell types that still need to be mapped to cell types from the target cell library.

Some passes refuse to operate on modules that still contain `RTLIL::Process` objects as the presence of these objects in a module increases the complexity. Therefore the passes to translate processes to a netlist of cells are usually called early in a synthesis script. The proc pass calls a series of other passes that together perform this conversion in a way that is suitable for most synthesis tasks.

RTLIL::Memory

For every array (memory) in the HDL code an `RTLIL::Memory` object is created. A memory object has the following properties:

- The memory name
- A list of attributes
- The width of an addressable word
- The size of the memory in number of words

All read accesses to the memory are transformed to `$memrd` cells and all write accesses to `$memwr` cells by the language frontend. These cells consist of independent read- and write-ports to the memory. Memory

initialization is transformed to `$meminit` cells by the language frontend. The `\MEMID` parameter on these cells is used to link them together and to the `RTLIL::Memory` object they belong to.

The rationale behind using separate cells for the individual ports versus creating a large multiport memory cell right in the language frontend is that the separate `$memrd` and `$memwr` cells can be consolidated using resource sharing. As resource sharing is a non-trivial optimization problem where different synthesis tasks can have different requirements it lends itself to do the optimisation in separate passes and merge the `RTLIL::Memory` objects and `$memrd` and `$memwr` cells to multiport memory blocks after resource sharing is completed.

The memory pass performs this conversion and can (depending on the options passed to it) transform the memories directly to d-type flip-flops and address logic or yield multiport memory blocks (represented using `$mem` cells).

See *Memories* for details about the memory cell types.

4.3 Working with the Yosys codebase

This section goes into additional detail on the Yosys source code and git repository. This information is not needed for simply using Yosys, but may be of interest for developers looking to customise Yosys builds.

4.3.1 Writing extensions

Todo
check text is coherent

Todo
update to use <code>/code_examples/extensions/test*.log</code>

This chapter contains some bits and pieces of information about programming yosys extensions. Don't be afraid to ask questions on the YosysHQ Slack.

Todo
mention coding guide

Quick guide

Code examples from this section are included in the `docs/source/code_examples/extensions` directory of the Yosys source code.

Program components and data formats

See *The RTL Intermediate Language (RTLIL)* document for more information about the internal data storage format used in Yosys and the classes that it provides.

This document will focus on the much simpler version of RTLIL left after the commands `proc` and `memory` (or `memory -nomap`):

It is possible to only work on this simpler version:

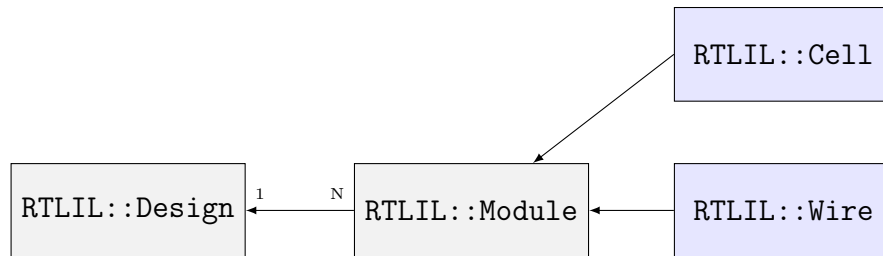


Fig. 4.5: Simplified RTLIL entity-relationship diagram without memories and processes

Todo

consider replacing inline code

```

for (RTLIL::Module *module : design->selected_modules()) {
    if (module->has_memories_warn() || module->has_processes_warn())
        continue;
    ....
}

```

When trying to understand what a command does, creating a small test case to look at the output of `dump` and `show` before and after the command has been executed can be helpful. [Selections](#) has more information on using these commands.

Creating a command**Todo**

add/expand supporting text

Let's create a very simple test command which prints the arguments we called it with, and lists off the current design's modules.

Listing 4.1: Example command `my_cmd` from `my_cmd.cc`

```

#include <kernel/yosys.h>
USING_YOSYS_NAMESPACE

struct MyPass : public Pass {
    MyPass() : Pass("my_cmd", "just a simple test") { }
    void execute(std::vector<std::string> args, RTLIL::Design *design) override
    {
        log("Arguments to my_cmd:\n");
        for (auto &arg : args)
            log(" %s\n", arg.c_str());

        log("Modules in current design:\n");
        for (auto mod : design->modules())
            log(" %s (%d wires, %d cells)\n", log_id(mod),

```

(continues on next page)

(continued from previous page)

```

        GetSize(mod->wires()), GetSize(mod->cells()));
    }
} MyPass;

```

Note that we are making a global instance of a class derived from `Yosys::Pass`, which we get by including `kernel/yosys.h`.

Compiling to a plugin

Yosys can be extended by adding additional C++ code to the Yosys code base, or by loading plugins into Yosys. For maintainability it is generally recommended to create plugins.

The following command compiles our example `my_cmd` to a Yosys plugin:

Todo

replace inline code

```

yosys-config --exec --cxx --cxxflags --ldflags \
-o my_cmd.so -shared my_cmd.cc --ldlibs

```

Or shorter:

```

yosys-config --build my_cmd.so my_cmd.cc

```

Running Yosys with the `-m` option allows the plugin to be used. Here's a quick example that also uses the `-p` option to run `my_cmd foo bar`.

```

$ yosys -m ./my_cmd.so -p 'my_cmd foo bar'

```

```

-- Running command `my_cmd foo bar' --

```

```

Arguments to my_cmd:

```

```

  my_cmd

```

```

  foo

```

```

  bar

```

```

Modules in current design:

```

Creating modules from scratch

Let's create the following module using the RTLIL API:

Listing 4.2: `absval_ref.v`

```

module absval_ref(input signed [3:0] a, output [3:0] y);
    assign y = a[3] ? -a : a;
endmodule

```

We'll do the same as before and format it as a `Yosys::Pass`.

Listing 4.3: test1 - creating the absval module, from my_cmd.cc

```

struct Test1Pass : public Pass {
    Test1Pass() : Pass("test1", "creating the absval module") { }
    void execute(std::vector<std::string>, RTLIL::Design *design) override
    {
        if (design->has("\\absval") != 0)
            log_error("A module with the name absval already exists!\n");

        RTLIL::Module *module = design->addModule("\\absval");
        log("Name of this module: %s\n", log_id(module));

        RTLIL::Wire *a = module->addWire("\\a", 4);
        a->port_input = true;
        a->port_id = 1;

        RTLIL::Wire *y = module->addWire("\\y", 4);
        y->port_output = true;
        y->port_id = 2;

        RTLIL::Wire *a_inv = module->addWire(NEW_ID, 4);
        module->addNeg(NEW_ID, a, a_inv, true);
        module->addMux(NEW_ID, a, a_inv, RTLIL::SigSpec(a, 3), y);

        module->fixup_ports();
    }
} Test1Pass;

```

```
$ yosys -m ./my_cmd.so -p 'test1' -Q
```

```
-- Running command `test1' --
Name of this module: absval
```


And if we look at the schematic for this new module we see the following:

Modifying modules

Most commands modify existing modules, not create new ones.

When modifying existing modules, stick to the following DOs and DON'Ts:

- Do not remove wires. Simply disconnect them and let a successive `clean` command worry about removing it.
- Use `module->fixup_ports()` after changing the `port_*` properties of wires.
- You can safely remove cells or change the `connections` property of a cell, but be careful when changing the size of the `SigSpec` connected to a cell port.
- Use the `SigMap` helper class (see next section) when you need a unique handle for each signal bit.

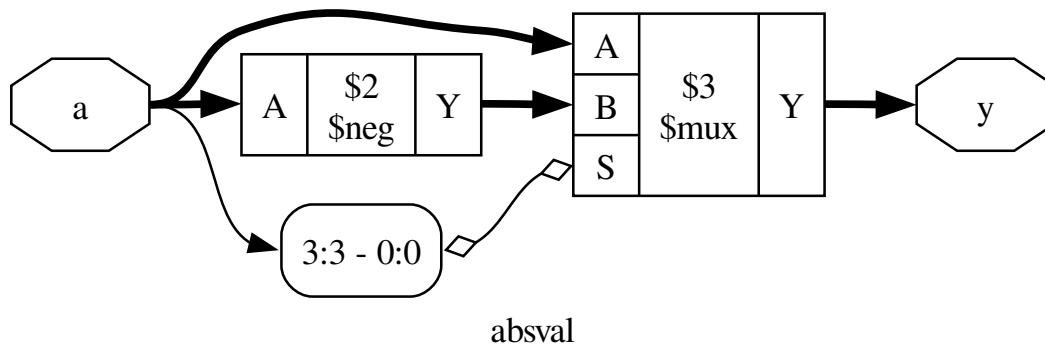Fig. 4.6: Output of `yosys -m ./my_cmd.so -p 'test1; show'`

Using the SigMap helper class

Consider the following module:

Listing 4.4: `sigmap_test.v`

```
module test(input a, output x, y);
    assign x = a, y = a;
endmodule
```

In this case `a`, `x`, and `y` are all different names for the same signal. However:

Todo

use `my_cmd.cc` `literalincludes`

```
RTLIL::SigSpec a(module->wire("\\a")), x(module->wire("\\x")),
               y(module->wire("\\y"));
log("%d %d %d\n", a == x, x == y, y == a); // will print "0 0 0"
```

The `SigMap` helper class can be used to map all such aliasing signals to a unique signal from the group (usually the wire that is directly driven by a cell or port).

```
SigMap sigmap(module);
log("%d %d %d\n", sigmap(a) == sigmap(x), sigmap(x) == sigmap(y),
    sigmap(y) == sigmap(a)); // will print "1 1 1"
```


Printing log messages

The `log()` function is a `printf()`-like function that can be used to create log messages.

Use `log_signal()` to create a C-string for a `SigSpec` object:

```
log("Mapped signal x: %s\n", log_signal(sigmap(x)));
```

The pointer returned by `log_signal()` is automatically freed by the log framework at a later time.

Use `log_id()` to create a C-string for an `RTLIL::IdString`:

```
log("Name of this module: %s\n", log_id(module->name));
```

Use `log_header()` and `log_push()/log_pop()` to structure log messages:

Todo

replace inline code

```
log_header(design, "Doing important stuff!\n");
log_push();
for (int i = 0; i < 10; i++)
    log("Log message #%d.\n", i);
log_pop();
```

Error handling

Use `log_error()` to report a non-recoverable error:

Todo

replace inline code

```
if (design->modules.count(module->name) != 0)
    log_error("A module with the name %s already exists!\n",
        RTLIL::id2cstr(module->name));
```

Use `log_cmd_error()` to report a recoverable error:

```
if (design->selection().empty())
    log_cmd_error("This command can't operator on an empty selection!\n");
```

Use `log_assert()` and `log_abort()` instead of `assert()` and `abort()`.

The “stubnets” example module

The following is the complete code of the “stubnets” example module. It is included in the Yosys source distribution under `docs/source/code_examples/stubnets`.

Listing 4.5: stubnets.cc

```

1  // This is free and unencumbered software released into the public domain.
2  //
3  // Anyone is free to copy, modify, publish, use, compile, sell, or
4  // distribute this software, either in source code form or as a compiled
5  // binary, for any purpose, commercial or non-commercial, and by any
6  // means.
7
8  #include <kernel/yosys.h>
9  #include <kernel/sigtools.h>
10
11 #include <string>
12 #include <map>
13 #include <set>
14
15 USING_YOSYS_NAMESPACE
16 PRIVATE_NAMESPACE_BEGIN
17
18 // this function is called for each module in the design
19 static void find_stub_nets(RTLIL::Design *design, RTLIL::Module *module, bool report_
    ↳bits)
20 {
21     // use a SigMap to convert nets to a unique representation
22     SigMap sigmap(module);
23
24     // count how many times a single-bit signal is used
25     std::map<RTLIL::SigBit, int> bit_usage_count;
26
27     // count output lines for this module (needed only for summary output at the end)
28     int line_count = 0;
29
30     log("Looking for stub wires in module %s:\n", RTLIL::id2cstr(module->name));
31
32     // For all ports on all cells
33     for (auto &cell_iter : module->cells_)
34     for (auto &conn : cell_iter.second->connections())
35     {
36         // Get the signals on the port
37         // (use sigmap to get a unique signal name)
38         RTLIL::SigSpec sig = sigmap(conn.second);
39
40         // add each bit to bit_usage_count, unless it is a constant
41         for (auto &bit : sig)
42             if (bit.wire != NULL)
43                 bit_usage_count[bit]++;
44     }
45
46     // for each wire in the module
47     for (auto &wire_iter : module->wires_)
48     {
49         RTLIL::Wire *wire = wire_iter.second;

```

(continues on next page)

(continued from previous page)

```

50
51 // .. but only selected wires
52 if (!design->selected(module, wire))
53     continue;
54
55 // add +1 usage if this wire actually is a port
56 int usage_offset = wire->port_id > 0 ? 1 : 0;
57
58 // we will record which bits of the (possibly multi-bit) wire are stub
59 ↪signals std::set<int> stub_bits;
60
61 // get a signal description for this wire and split it into separate bits
62 RTLIL::SigSpec sig = sigmap(wire);
63
64 // for each bit (unless it is a constant):
65 // check if it is used at least two times and add to stub_bits otherwise
66 for (int i = 0; i < GetSize(sig); i++)
67     if (sig[i].wire != NULL && (bit_usage_count[sig[i]] + usage_
68 ↪offset) < 2)
69         stub_bits.insert(i);
70
71 // continue if no stub bits found
72 if (stub_bits.size() == 0)
73     continue;
74
75 // report stub bits and/or stub wires, don't report single bits
76 // if called with report_bits set to false.
77 if (GetSize(stub_bits) == GetSize(sig)) {
78     log(" found stub wire: %s\n", RTLIL::id2cstr(wire->name));
79 } else {
80     if (!report_bits)
81         continue;
82     log(" found wire with stub bits: %s [", RTLIL::id2cstr(wire->
83 ↪name));
84     for (int bit : stub_bits)
85         log("%s%d", bit == *stub_bits.begin() ? "" : ", ", bit);
86     log("]\n");
87 }
88
89 // we have outputted a line, increment summary counter
90 line_count++;
91
92 // report summary
93 if (report_bits)
94     log(" found %d stub wires or wires with stub bits.\n", line_count);
95 else
96     log(" found %d stub wires.\n", line_count);
97 }
98 // each pass contains a singleton object that is derived from Pass

```

(continues on next page)

(continued from previous page)

```

99 struct StubnetsPass : public Pass {
100     StubnetsPass() : Pass("stubnets") { }
101     void execute(std::vector<std::string> args, RTLIL::Design *design) override
102     {
103         // variables to mirror information from passed options
104         bool report_bits = 0;
105
106         log_header(design, "Executing STUBNETS pass (find stub nets).\n");
107
108         // parse options
109         size_t argidx;
110         for (argidx = 1; argidx < args.size(); argidx++) {
111             std::string arg = args[argidx];
112             if (arg == "-report_bits") {
113                 report_bits = true;
114                 continue;
115             }
116             break;
117         }
118
119         // handle extra options (e.g. selection)
120         extra_args(args, argidx, design);
121
122         // call find_stub_nets() for each module that is either
123         // selected as a whole or contains selected objects.
124         for (auto &it : design->modules_)
125             if (design->selected_module(it.first))
126                 find_stub_nets(design, it.second, report_bits);
127     }
128 } StubnetsPass;
129
130 PRIVATE_NAMESPACE_END

```

Listing 4.6: Makefile

```

1  .PHONY: all dots examples
2  all: dots examples
3  dots:
4  examples:
5
6  .PHONY: test
7  test: stubnets.so
8      yosys -ql test1.log -m ./stubnets.so test.v -p "stubnets"
9      yosys -ql test2.log -m ./stubnets.so test.v -p "opt; stubnets"
10     yosys -ql test3.log -m ./stubnets.so test.v -p "techmap; opt; stubnets -report_
11     ↪bits"
12     tail test1.log test2.log test3.log
13
14 stubnets.so: stubnets.cc
15     yosys-config --exec --cxx --cxxflags -I../.. --ldflags -o $$@ -shared $^ --
16     ↪ldlibs

```

(continues on next page)

(continued from previous page)

```

16 .PHONY: clean
17 clean:
18     rm -f test1.log test2.log test3.log
19     rm -f stubnets.so stubnets.d

```

Listing 4.7: test.v

```

1 module uut(in1, in2, in3, out1, out2);
2
3 input [8:0] in1, in2, in3;
4 output [8:0] out1, out2;
5
6 assign out1 = in1 + in2 + (in3 >> 4);
7
8 endmodule

```

4.3.2 Compiling with Verific library

The easiest way to get Yosys with Verific support is to [contact YosysHQ](#) for a [Tabby CAD Suite](#) evaluation license and download link. The TabbyCAD Suite includes additional patches and a custom extensions library in order to get the most out of the Verific parser when using Yosys.

If you already have a license for the Verific parser, in either source or binary form, you may be able to compile Yosys with partial Verific support yourself.

The Yosys-Verific patch

YosysHQ maintains and develops a patch for Verific in order to better integrate with Yosys and to provide features required by some of the formal verification front-end tools. To license this patch for your own Yosys builds, [contact YosysHQ](#).

Warning

While synthesis from RTL may be possible without this patch, YosysHQ provides no guarantees of correctness and is unable to provide support.

We recommend against using unpatched Yosys+Verific builds in conjunction with the formal verification front-end tools unless you are familiar with their inner workings. There are cases where the tools will appear to work, while producing incorrect results.

Note

Some of the formal verification front-end tools may not be fully supported without the full TabbyCAD suite. If you want to use these tools, including SBY, make sure to ask us if the Yosys-Verific patch is right for you.

Compile options

To enable Verific support `ENABLE_VERIFIC` has to be set to 1 and `VERIFIC_DIR` needs to point to the location where the library is located.

Parameter	Default	Description
<code>ENABLE_VERIFIC</code>	0	Enable compilation with Verific
<code>VERIFIC_DIR</code>	<code>/usr/local/src/verific_lib</code>	Library and headers location

Since there are multiple Verific library builds and they can have different features, there are compile options to select them.

Parameter	Default	Description
<code>ENABLE_VERIFIC_SYSTEMVERILOG</code>	1	SystemVerilog support
<code>ENABLE_VERIFIC_VHDL</code>	1	VHDL support
<code>ENABLE_VERIFIC_HIER_TREE</code>	1	Hierarchy tree support
<code>ENABLE_VERIFIC_YOSYSHQ_EXTENSIONS</code>	0	YosysHQ specific extensions support
<code>ENABLE_VERIFIC_EDIF</code>	0	EDIF support
<code>ENABLE_VERIFIC_LIBERTY</code>	0	Liberty file support

To find the compile options used for a given Yosys build, call `yosys-config --cxxflags`. This documentation was built with the following compile options:

```
--cxxflags      -O2 -flto=auto -ffat-lto-objects -fexceptions -g \
                 -grecord-gcc-switches -pipe -Wall -Werror=format-security \
                 -Wp,-U_FORTIFY_SOURCE,-D_FORTIFY_SOURCE=3 \
                 -Wp,-D_GLIBCXX_ASSERTIONS \
                 -specs=/usr/lib/rpm/redhat/redhat-hardened-cc1 \
                 -fstack-protector-strong \
                 -specs=/usr/lib/rpm/redhat/redhat-annobin-cc1 -m64 \
                 -march=x86-64 -mtune=generic -fasynchronous-unwind-tables \
                 -fstack-clash-protection -fcf-protection -mtls-dialect=gnu2 \
                 -fno-omit-frame-pointer -mno-omit-leaf-frame-pointer \
                 -Wall -Wextra -ggdb -I"/usr/include/yosys" -MD -MP \
                 -D_YOSYS_ -fPIC -I/usr/include -DYOSYS_VER=\"0.56+30\" \
                 -DYOSYS_MAJOR=0 -DYOSYS_MINOR=56 -DYOSYS_COMMIT=30 \
                 -std=c++17 -O3 -DYOSYS_ENABLE_READLINE \
                 -DYOSYS_ENABLE_PLUGINS -DYOSYS_ENABLE_GLOB \
                 -DYOSYS_ENABLE_ZLIB -DTCL_WITH_EXTERNAL_TOMMATH \
                 -DWITH_GZFILEOP -DYOSYS_ENABLE_TCL -DYOSYS_ENABLE_ABC \
                 -DYOSYS_ENABLE_COVER
```

Note

The YosysHQ specific extensions are only available with the TabbyCAD suite.

Required Verific features

The following features, along with their corresponding Yosys build parameters, are required for the Yosys-Verific patch:

- RTL elaboration with
 - SystemVerilog with `ENABLE_VERIFIC_SYSTEMVERILOG`, and/or
 - VHDL support with `ENABLE_VERIFIC_VHDL`.
- Hierarchy tree support and static elaboration with `ENABLE_VERIFIC_HIER_TREE`.

Please be aware that the following Verific configuration build parameter needs to be enabled in order to create the fully supported build:

```
database/DBCompileFlags.h:
    DB_PRESERVE_INITIAL_VALUE
```

Note

Yosys+Verific builds may compile without these features, but we provide no guarantees and cannot offer support if they are disabled or the Yosys-Verific patch is not used.

Optional Verific features

The following Verific features are available with TabbyCAD and can be enabled in Yosys builds:

- EDIF support with `ENABLE_VERIFIC_EDIF`, and
- Liberty file support with `ENABLE_VERIFIC_LIBERTY`.

Partially supported builds

This section describes Yosys+Verific configurations which we have confirmed as working in the past, however they are not a part of our regular tests so we cannot guarantee they are still functional.

To be able to compile Yosys with Verific, the Verific library must have support for at least one HDL language with RTL elaboration enabled. The following table lists a series of build configurations which are possible, but only provide a limited subset of features. Please note that support is limited without YosysHQ specific extensions of Verific library.

Configuration values:

- a. `ENABLE_VERIFIC_SYSTEMVERILOG`
- b. `ENABLE_VERIFIC_VHDL`
- c. `ENABLE_VERIFIC_HIER_TREE`
- d. `ENABLE_VERIFIC_YOSYSHQ_EXTENSIONS`

Features	Configuration values			
	a	b	c	d
SystemVerilog + RTL elaboration	1	0	0	0
VHDL + RTL elaboration	0	1	0	0
SystemVerilog + VHDL + RTL elaboration	1	1	0	0
SystemVerilog + RTL elaboration + Static elaboration + Hier tree	1	0	1	0
VHDL + RTL elaboration + Static elaboration + Hier tree	0	1	1	0
SystemVerilog + VHDL + RTL elaboration + Static elaboration + Hier tree	1	1	1	0

Note

In case your Verific build has EDIF and/or Liberty support, you can enable those options. These are not mentioned above for simplification and since they are disabled by default.

4.3.3 Writing a new backend using FunctionalIR

What is FunctionalIR

To simplify the writing of backends for functional languages or similar targets, Yosys provides an alternative intermediate representation called FunctionalIR which maps more directly on those targets.

FunctionalIR represents the design as a function `(inputs, current_state) -> (outputs, next_state)`. This function is broken down into a series of assignments to variables. Each assignment is a simple operation, such as an addition. Complex operations are broken up into multiple steps. For example, an RTLIL addition will be translated into a sign/zero extension of the inputs, followed by an addition.

Like SSA form, each variable is assigned to exactly once. We can thus treat variables and assignments as equivalent and, since this is a graph-like representation, those variables are also called “nodes”. Unlike RTLIL’s cells and wires representation, this representation is strictly ordered (topologically sorted) with definitions preceding their use.

Every node has a “sort” (the FunctionalIR term for what might otherwise be called a “type”). The sorts available are

- `bit[n]` for an `n`-bit bitvector, and
- `memory[n,m]` for an immutable array of `2**n` values of sort `bit[m]`.

In terms of actual code, Yosys provides a class `Functional::IR` that represents a design in FunctionalIR. `Functional::IR::from_module` generates an instance from an RTLIL module. The entire design is stored as a whole in an internal data structure. To access the design, the `Functional::Node` class provides a reference to a particular node in the design. The `Functional::IR` class supports the syntax `for(auto node : ir)` to iterate over every node.

`Functional::IR` also keeps track of inputs, outputs and states. By a “state” we mean a pair of a “current state” input and a “next state” output. One such pair is created for every register and for every memory. Every input, output and state has a name (equal to their name in RTLIL), a sort and a kind. The kind field usually remains as the default value `$input`, `$output` or `$state`, however some RTLIL cells such as `$assert` or `$anyseq` generate auxiliary inputs/outputs/states that are given a different kind to distinguish them from ordinary RTLIL inputs/outputs/states.

- To access an individual input/output/state, use `ir.input(name, kind)`, `ir.output(name, kind)` or `ir.state(name, kind)`. `kind` defaults to the default kind.

- To iterate over all inputs/outputs/states of a certain kind, methods `ir.inputs`, `ir.outputs`, `ir.states` are provided. Their argument defaults to the default kinds mentioned.
- To iterate over inputs/outputs/states of any kind, use `ir.all_inputs`, `ir.all_outputs` and `ir.all_states`.
- Outputs have a node that indicate the value of the output, this can be retrieved via `output.value()`.
- States have a node that indicate the next value of the state, this can be retrieved via `state.next_value()`. They also have an initial value that is accessed as either `state.initial_value_signal()` or `state.initial_value_memory()`, depending on their sort.

Each node has a “function”, which defines its operation (for a complete list of functions and a specification of their operation, see `functional.h`). Functions are represented as an enum `Functional::Fn` and the function field can be accessed as `node.fn()`. Since the most common operation is a switch over the function that also accesses the arguments, the `Node` class provides a method `visit` that implements the visitor pattern. For example, for an addition node `node` with arguments `n1` and `n2`, `node.visit(visitor)` would call `visitor.add(node, n1, n2)`. Thus typically one would implement a class with a method for every function. Visitors should inherit from either `Functional::AbstractVisitor<ReturnType>` or `Functional::DefaultVisitor<ReturnType>`. The former will produce a compiler error if a case is unhandled, the latter will call `default_handler(node)` instead. Visitor methods should be marked as `override` to provide compiler errors if the arguments are wrong.

Utility classes

`functional.h` also provides utility classes that are independent of the main `FunctionalIR` representation but are likely to be useful for backends.

`Functional::Writer` provides a simple formatting class that wraps a `std::ostream` and provides the following methods:

- `writer << value` wraps `os << value`.
- `writer.print(fmt, value0, value1, value2, ...)` replaces `{0}`, `{1}`, `{2}`, etc in the string `fmt` with `value0`, `value1`, `value2`, resp. Each value is formatted using `os << value`. It is also possible to write `{}` to refer to one past the last index, i.e. `{1} {} {} {7} {}` is equivalent to `{1} {2} {3} {7} {8}`.
- `writer.print_with(fn, fmt, value0, value1, value2, ...)` functions much the same as `print` but it uses `os << fn(value)` to print each value and falls back to `os << value` if `fn(value)` is not legal.

`Functional::Scope` keeps track of variable names in a target language. It is used to translate between different sets of legal characters and to avoid accidentally re-defining identifiers. Users should derive a class from `Scope` and supply the following:

- `Scope<Id>` takes a template argument that specifies a type that’s used to uniquely distinguish variables. Typically this would be `int` (if variables are used for `Functional::IR` nodes) or `IdString`.
- The derived class should provide a constructor that calls `reserve` for every reserved word in the target language.
- A method `bool is_character_legal(char c, int index)` has to be provided that returns `true` iff `c` is legal in an identifier at position `index`.

Given an instance `scope` of the derived class, the following methods are then available:

- `scope.reserve(std::string name)` marks the given name as being in-use
- `scope.unique_name(IdString suggestion)` generates a previously unused name and attempts to make it similar to `suggestion`.

- `scope(Id id, IdString suggestion)` functions similar to `unique_name`, except that multiple calls with the same `id` are guaranteed to retrieve the same name (independent of `suggestion`).

`sexpr.h` provides classes that represent and pretty-print s-expressions. S-expressions can be constructed with `SExpr::list`, for example `SExpr expr = SExpr::list("add", "x", SExpr::list("mul", "y", "z"))` represents `(add x (mul y z))` (by adding using `SExprUtil::list` to the top of the file, `list` can be used as shorthand for `SExpr::list`). For prettyprinting, `SExprWriter` wraps an `std::ostream` and provides the following methods:

- `writer << sexpr` writes the provided expression to the output, breaking long lines and adding appropriate indentation.
- `writer.open(sexpr)` is similar to `writer << sexpr` but will omit the last closing parenthesis. Further arguments can then be added separately with `<<` or `open`. This allows for printing large s-expressions without needing to construct the whole expression in memory first.
- `writer.open(sexpr, false)` is similar to `writer.open(sexpr)` but further arguments will not be indented. This is used to avoid unlimited indentation on structures with unlimited nesting.
- `writer.close(n = 1)` closes the last `n` open s-expressions.
- `writer.push()` and `writer.pop()` are used to automatically close s-expressions. `writer.pop()` closes all s-expressions opened since the last call to `writer.push()`.
- `writer.comment(string)` writes a comment on a separate-line. `writer.comment(string, true)` appends a comment to the last printed s-expression.
- `writer.flush()` flushes any buffering and should be called before any direct access to the underlying `std::ostream`. It does not close unclosed parentheses.
- The destructor calls `flush` but also closes all unclosed parentheses.

Example: A minimal functional backend

At its most basic, there are three steps we need to accomplish for a minimal functional backend. First, we need to convert our design into `FunctionalIR`. This is most easily done by calling the `Functional::IR::from_module()` static method with our top-level module, or iterating over and converting each of the modules in our design. Second, we need to handle each of the `Functional::Nodes` in our design. Iterating over the `Functional::IR` includes reading the module inputs and current state, but not writing the results. So our final step is to handle the outputs and next state.

In order to add an output command to Yosys, we implement the `Yosys::Backend` class and provide an instance of it:

Listing 4.8: Example source code for a minimal functional backend, `dummy.cc`

```
#include "kernel/functional.h"
#include "kernel/yosys.h"

USING_YOSYS_NAMESPACE
PRIVATE_NAMESPACE_BEGIN

struct FunctionalDummyBackend : public Backend {
    FunctionalDummyBackend() : Backend("functional_dummy", "dump generated_
↪Functional IR") {}
    void execute(std::ostream &f, std::string filename, std::vector<std::string>_
↪args, RTLIL::Design *design) override
    {
```

(continues on next page)

(continued from previous page)

```

// backend pass boiler plate
log_header(design, "Executing dummy functional backend.\n");

size_t argidx = 1;
extra_args(f, filename, args, argidx, design);

for (auto module : design->selected_modules())
{
    log("Processing module `%s`.\n", module->name.c_str());

    // convert module to FunctionalIR
    auto ir = Functional::IR::from_module(module);
    *f << "module " << module->name.c_str() << "\n";

    // write node functions
    for (auto node : ir)
        *f << "  assign " << id2cstr(node.name())
            << " = " << node.to_string() << "\n";
    *f << "\n";

    // write outputs and next state
    for (auto output : ir.outputs())
        *f << " " << id2cstr(output->kind)
            << " " << id2cstr(output->name)
            << " = " << id2cstr(output->value().name()) << "\n";
    for (auto state : ir.states())
        *f << " " << id2cstr(state->kind)
            << " " << id2cstr(state->name)
            << " = " << id2cstr(state->next_value().name()) << "\n";
    *f << "\n";
}
}
} FunctionalDummyBackend;

PRIVATE_NAMESPACE_END

```

Because we are using the Backend class, our "functional_dummy" is registered as the `write_functional_dummy` command. The `execute` method is the part that runs when the user calls the command, handling any options, preparing the output file for writing, and iterating over selected modules in the design. Since we don't have any options here, we set `argidx = 1` and call the `extra_args()` method. This method will read the command arguments, raising an error if there are any unexpected ones. It will also assign the pointer `f` to the output file, or `stdout` if none is given.

Note

For more on adding new commands to Yosys and how they work, refer to *Writing extensions*.

For this minimal example all we are doing is printing out each node. The `node.name()` method returns an `RTLIL::IdString`, which we convert for printing with `id2cstr()`. Then, to print the function of the node, we use `node.to_string()` which gives us a string of the form `function(args)`. The `function` part is the result of `Functional::IR::fn_to_string(node.fn())`; while `args` is the zero or more arguments passed to the function, most commonly the name of another node. Behind the scenes, the `node.to_string()` method

actually wraps `node.visit(visitor)` with a private visitor whose return type is `std::string`.

Finally we iterate over the module's outputs and states, using `Functional::IROutput::value()` and `Functional::IRState::next_value()` respectively in order to get the results of the transfer function.

Example: Adapting SMT-LIB backend for Rosette

This section will introduce the SMT-LIB functional backend (*write_functional_smt2*) and what changes are needed to work with another s-expression target, *Rosette* (*write_functional_rosette*).

Overview

Rosette is a solver-aided programming language that extends *Racket* with language constructs for program synthesis, verification, and more. To verify or synthesize code, Rosette compiles it to logical constraints solved with off-the-shelf *SMT* solvers.

—<https://emina.github.io/rosette/>

Rosette, being backed by *SMT* solvers and written with s-expressions, uses code very similar to the *write_functional_smt2* output. As a result, the SMT-LIB functional backend can be used as a starting point for implementing a Rosette backend.

Full code listings for the initial SMT-LIB backend and the converted Rosette backend are included in the Yosys source repository under `backends/functional` as `smtlib.cc` and `smtlib_rosette.cc` respectively. Note that the Rosette language is an extension of the Racket language; this guide tends to refer to Racket when talking about the underlying semantics/syntax of the language.

The major changes from the SMT-LIB backend are as follows:

- all of the `Smt` prefixes in names are replaced with `Smtr` to mean `smtlib_rosette`;
- syntax is adjusted for Racket;
- data structures for input/output/state are changed from using `declare-datatype` with statically typed fields, to using `struct` with no static typing;
- the transfer function also loses its static typing;
- sign/zero extension in Rosette use the output width instead of the number of extra bits, gaining static typing;
- the single scope is traded for a global scope with local scope for each struct;
- initial state is provided as a constant value instead of a set of assertions;
- and the `-provides` option is introduced to more easily use generated code within Rosette based applications.

Scope

Our first addition to the *minimal backend* above is that for both SMT-LIB and Rosette backends, we are now targetting real languages which bring with them their own sets of constraints with what we can use as identifiers. This is where the `Functional::Scope` class described above comes in; by using this class we can safely rename our identifiers in the generated output without worrying about collisions or illegal names/characters.

In the SMT-LIB version, the `SmtScope` class implements `Scope<int>`; provides a constructor that iterates over a list of reserved keywords, calling `reserve` on each; and defines the `is_character_legal` method to reject any characters which are not allowed in SMT-LIB variable names to then be replaced with underscores in the output. To use this scope we create an instance of it, and call the `Scope::unique_name()` method to generate a unique and legal name for each of our identifiers.

In the Rosette version we update the list of legal ascii characters in the `is_character_legal` method to only those allowed in Racket variable names.

Listing 4.9: diff of `Scope` class

```
-struct SmtScope : public Functional::Scope<int> {
-    SmtScope() {
+struct SmtrScope : public Functional::Scope<int> {
+    SmtrScope() {
+        for(const char **p = reserved_keywords; *p != nullptr; p++)
+            reserve(*p);
+    }
+    bool is_character_legal(char c, int index) override {
-        return isascii(c) && (isalpha(c) || (isdigit(c) && index > 0) || strchr(
-↪ "~!@$%^&*_-+=<>./", c));
+        return isascii(c) && (isalpha(c) || (isdigit(c) && index > 0) || strchr(
+↪ "@$%^&*_-+=.", c));
+    }
+};
```

For the reserved keywords we trade the SMT-LIB specification for Racket to prevent parts of our design from accidentally being treated as Racket code. We also no longer need to reserve `pair`, `first`, and `second`. In `write_functional_smt2` these are used for combining the `(inputs, current_state)` and `(outputs, next_state)` into a single variable. Racket provides this functionality natively with `cons`, which we will see later.

Listing 4.10: diff of `reserved_keywords` list

```
const char *reserved_keywords[] = {
- // reserved keywords from the smtlib spec
- ...
+ // reserved keywords from the racket spec
+ ...

    // reserved for our own purposes
- "pair", "Pair", "first", "second",
- "inputs", "state",
+ "inputs", "state", "name",
    nullptr
};
```

Note

We skip over the actual list of reserved keywords from both the smtlib and racket specifications to save on space in this document.

Sort

Next up in `write_functional_smt2` we see the `Sort` class. This is a wrapper for the `Functional::Sort` class, providing the additional functionality of mapping variable declarations to s-expressions with the `to_sexpr()` method. The main change from `SmtSort` to `SmtrSort` is a syntactical one with signals represented as `bitvectors`, and memories as `lists` of signals.

Listing 4.11: diff of Sort wrapper

```

SEExpr to_sexpr() const {
    if(sort.is_memory()) {
-         return list("Array", list("_", "BitVec", sort.addr_width()),
+         return list("list", list("bitvector", sort.addr_width()), list(
↪ list("_", "BitVec", sort.data_width()));
+         return list("bitvector", sort.data_width()));
    } else if(sort.is_signal()) {
-         return list("_", "BitVec", sort.width());
+         return list("bitvector", sort.width());
    } else {
        log_error("unknown sort");
    }
}

```

Struct

As we saw in the *minimal backend* above, the `Functional::IR` class tracks the set of inputs, the set of outputs, and the set of “state” variables. The SMT-LIB backend maps each of these sets into its own `SmtStruct`, with each variable getting a corresponding field in the struct and a specified *Sort*. *write_functional_smt2* then defines each of these structs as a new `datatype`, with each element being strongly-typed.

In Rosette, rather than defining new datatypes for our structs, we use the native `struct`. We also only declare each field by name because Racket provides less static typing. For ease of use, we provide the expected type for each field as comments.

Listing 4.12: diff of write_definition method

```

void write_definition(SEExprWriter &w) {
-     w.open(list("declare-datatype", name));
-     w.open(list());
-     w.open(list(name));
-     for(const auto &field : fields)
-         w << list(field.accessor, field.sort.to_sexpr());
-     w.close(3);
+     vector<SEExpr> field_list;
+     for(const auto &field : fields) {
+         field_list.emplace_back(field.name);
+     }
+     w.push();
+     w.open(list("struct", name, field_list, "#:transparent"));
+     if (field_names.size()) {
+         for (const auto &field : fields) {
+             auto bv_type = field.sort.to_sexpr();
+             w.comment(field.name + " " + bv_type.to_string());
+         }
+     }
+     w.pop();
}

```

Each field is added to the `SmtStruct` with the `insert` method, which also reserves a unique name (or accessor) within the *Scope*. These accessors combine the struct name and field name and are globally unique, being used in the `access` method for reading values from the input/current state.

Listing 4.13: Struct::access() method

```
SEExpr access(SEExpr record, IdString name) {
    size_t i = field_names.at(name);
    return list(fields[i].accessor, std::move(record));
}
```

In Rosette, struct fields are accessed as `<struct_name>-<field_name>` so including the struct name in the field name would be redundant. For `write_functional_rosette` we instead choose to make field names unique only within the struct, while accessors are unique across the whole module. We thus modify the class constructor and `insert` method to support this; providing one scope that is local to the struct (`local_scope`) and one which is shared across the whole module (`global_scope`), leaving the `access` method unchanged.

Listing 4.14: diff of struct constructor

```
- SmtStruct(std::string name, SmtScope &scope) : scope(scope), name(name) {}
- void insert(IdString field_name, SmtSort sort) {
+ SmtStruct(std::string name, SmtScope &scope) : global_scope(scope), local_
↪scope(), name(name) {}
+ void insert(IdString field_name, SmtSort sort) {
    field_names(field_name);
-    auto accessor = scope.unique_name("\\\" + name + \"_\" + RTLIL::unescape_
↪id(field_name));
-    fields.emplace_back(Field{sort, accessor});
+    auto base_name = local_scope.unique_name(field_name);
+    auto accessor = name + \"-\" + base_name;
+    global_scope.reserve(accessor);
+    fields.emplace_back(Field{sort, accessor, base_name});
}
```

Finally, `SmtStruct` also provides a `write_value` template method which calls a provided function on each element in the struct. This is used later for assigning values to the output/next state pair. The only change here is to remove the check for zero-argument constructors since this is not necessary with Rosette structs.

Listing 4.15: diff of write_value method

```
template<typename Fn> void write_value(SEExprWriter &w, Fn fn) {
-    if(field_names.empty()) {
-        // Zero-argument constructors in SMTLIB must not be called as_
↪functions.
-        w << name;
-    } else {
-        w.open(list(name));
-        for(auto field_name : field_names) {
-            w << fn(field_name);
-            w.comment(RTLIL::unescape_id(field_name), true);
-        }
-        w.close();
+    w.open(list(name));
+    for(auto field_name : field_names) {
+        w << fn(field_name);
+        w.comment(RTLIL::unescape_id(field_name), true);
+    }
}
```

(continues on next page)

(continued from previous page)

```
+         w.close();
    }
```

PrintVisitor

Remember in the *minimal backend* we converted nodes into strings for writing using the `node.to_string()` method, which wrapped `node.visit()` with a private visitor. We now want a custom visitor which can convert nodes into s-expressions. This is where the `PrintVisitor` comes in, implementing the abstract `Functional::AbstractVisitor` class with a return type of `SExpr`. For most functions, the Rosette output is very similar to the corresponding SMT-LIB function with minor adjustments for syntax.

Listing 4.16: portion of `Functional::AbstractVisitor` implementation diff showing similarities

```
SExpr logical_shift_left(Node, Node a, Node b) override { return list("bvshl",
↪ n(a), extend(n(b), b.width(), a.width())); }
SExpr logical_shift_right(Node, Node a, Node b) override { return list("bvlsr",
↪ n(a), extend(n(b), b.width(), a.width())); }
SExpr arithmetic_shift_right(Node, Node a, Node b) override { return list(
↪ "bvashr", n(a), extend(n(b), b.width(), a.width())); }
- SExpr mux(Node, Node a, Node b, Node s) override { return list("ite", to_
↪ bool(n(s)), n(b), n(a)); }
- SExpr constant(Node, RTLIL::Const const &value) override { return smt_
↪ const(value); }
- SExpr memory_read(Node, Node mem, Node addr) override { return list("select",
↪ n(mem), n(addr)); }
- SExpr memory_write(Node, Node mem, Node addr, Node data) override { return list(
↪ "store", n(mem), n(addr), n(data)); }
+ SExpr mux(Node, Node a, Node b, Node s) override { return list("if", to_
↪ bool(n(s)), n(b), n(a)); }
+ SExpr constant(Node, RTLIL::Const const& value) override { return list("bv",
↪ smt_const(value), value.size()); }
+ SExpr memory_read(Node, Node mem, Node addr) override { return list("list-ref-bv
↪ ", n(mem), n(addr)); }
+ SExpr memory_write(Node, Node mem, Node addr, Node data) override { return list(
↪ "list-set-bv", n(mem), n(addr), n(data)); }
```

However there are some differences in the two formats with regards to how booleans are handled, with Rosette providing built-in functions for conversion.

Listing 4.17: portion of `Functional::AbstractVisitor` implementation diff showing differences

```
SExpr from_bool(SExpr &&arg) {
-     return list("ite", std::move(arg), "#b1", "#b0");
+     return list("bool->bitvector", std::move(arg));
}
SExpr to_bool(SExpr &&arg) {
-     return list("=", std::move(arg), "#b1");
+     return list("bitvector->bool", std::move(arg));
}
```

Of note here is the rare instance of the Rosette implementation *gaining* static typing rather than losing it.

Where SMT_LIB calls zero/sign extension with the number of extra bits needed (given by `out_width - a.width()`), Rosette instead specifies the type of the output (given by `list("bitvector", out_width)`).

Listing 4.18: zero/sign extension implementation diff

```
-      SExpr zero_extend(Node, Node a, int out_width) override { return list(list("_",
↪ "zero_extend", out_width - a.width()), n(a)); }
-      SExpr sign_extend(Node, Node a, int out_width) override { return list(list("_",
↪ "sign_extend", out_width - a.width()), n(a)); }
+      SExpr zero_extend(Node, Node a, int out_width) override { return list("zero-
↪ extend", n(a), list("bitvector", out_width)); }
+      SExpr sign_extend(Node, Node a, int out_width) override { return list("sign-
↪ extend", n(a), list("bitvector", out_width)); }
```

Note

Be sure to check the source code for the full list of differences here.

Module

With most of the supporting classes out of the way, we now reach our three main steps from the *minimal backend*. These are all handled by the `SmtModule` class, with the mapping from RTLIL module to FunctionalIR happening in the constructor. Each of the three `SmtStructs`; inputs, outputs, and state; are also created in the constructor, with each value in the corresponding lists in the IR being *inserted*.

Listing 4.19: SmtModule constructor

```
SmtModule(Module *module)
: ir(Functional::IR::from_module(module))
, scope()
, name(scope.unique_name(module->name))
, input_struct(scope.unique_name(module->name.str() + "_Inputs"), scope)
, output_struct(scope.unique_name(module->name.str() + "_Outputs"),
↪ scope)
, state_struct(scope.unique_name(module->name.str() + "_State"), scope)
{
scope.reserve(name + "-initial");
for (auto input : ir.inputs())
input_struct.insert(input->name, input->sort);
for (auto output : ir.outputs())
output_struct.insert(output->name, output->sort);
for (auto state : ir.states())
state_struct.insert(state->name, state->sort);
}
```

Since Racket uses the `-` to access struct fields, the `SmtModule` instead uses an underscore for the name of the initial state.

Listing 4.20: diff of Module constructor

```
-         scope.reserve(name + "-initial");
+         scope.reserve(name + "_initial");
```

The `write` method is then responsible for writing the FunctionalIR to the output file, formatted for the corresponding backend. `SmtModule::write()` breaks the output file down into four parts: defining the three structs, declaring the `pair` datatype, defining the transfer function (`inputs, current_state`) -> (`outputs, next_state`) with `write_eval`, and declaring the initial state with `write_initial`. The only change for the `SmtModule` is that the `pair` declaration isn't needed.

Listing 4.21: diff of Module::write() method

```
void write(std::ostream &out)
{
    SExprWriter w(out);

    input_struct.write_definition(w);
    output_struct.write_definition(w);
    state_struct.write_definition(w);

-         w << list("declare-datatypes",
-                 list(list("Pair", 2)),
-                 list(list("par", list("X", "Y"), list(list("pair", list("first",
- ↪ "X"), list("second", "Y")))))));
-
    write_eval(w);
    write_initial(w);
}
```

The `write_eval` method is where the FunctionalIR nodes, outputs, and next state are handled. Just as with the *minimal backend*, we iterate over the nodes with `for(auto n : ir)`, and then use the `Struct::write_value()` method for the `output_struct` and `state_struct` to iterate over the outputs and next state respectively.

Listing 4.22: iterating over FunctionalIR nodes in SmtModule::write_eval()

```
for(auto n : ir)
    if(!inlined(n)) {
        w.open(list("let", list(list(node_to_sexpr(n), n.
- ↪ visit(visitor)))), false);
        w.comment(SmtSort(n.sort()).to_sexpr().to_string(),
- ↪ true);
    }
```

The main differences between our two backends here are syntactical. First we change the `define-fun` for the Racket style `define` which drops the explicitly typed inputs/outputs. And then we change the final result from a `pair` to the native `cons` which acts in much the same way, returning both the `outputs` and the `next_state` in a single variable.

Listing 4.23: diff of Module::write_eval() transfer function declaration

```

-      w.open(list("define-fun", name,
-                list(list("inputs", input_struct.name),
-                    list("state", state_struct.name)),
-                list("Pair", output_struct.name, state_struct.name)));
+      w.open(list("define", list(name, "inputs", "state")));

```

Listing 4.24: diff of output/next state handling Module::write_eval()

```

-      w.open(list("pair"));
+      w.open(list("cons"));
      output_struct.write_value(w, [&](IdString name) { return node_to_
↳sexpr(ir.output(name).value()); });
      state_struct.write_value(w, [&](IdString name) { return node_to_
↳sexpr(ir.state(name).next_value()); });
      w.pop();

```

For the `write_initial` method, the SMT-LIB backend uses `declare-const` and `asserts` which must always hold true. For Rosette we instead define the initial state as any other variable that can be used by external code. This variable, `[name]_initial`, can then be used in the `[name]` function call; allowing the Rosette code to be used in the generation of the `next_state`, whereas the SMT-LIB code can only verify that a given `next_state` is correct.

Listing 4.25: diff of Module::write_initial() method

```

void write_initial(SExprWriter &w)
{
-      std::string initial = name + "-initial";
-      w << list("declare-const", initial, state_struct.name);
+      w.push();
+      auto initial = name + "_initial";
+      w.open(list("define", initial));
+      w.open(list(state_struct.name));
      for (auto state : ir.states()) {
-          if(state->sort.is_signal())
-              w << list("assert", list("=", state_struct.
↳access(initial, state->name), smt_const(state->initial_value_signal())));
-          else if(state->sort.is_memory()) {
+          if (state->sort.is_signal())
+              w << list("bv", smt_const(state->initial_value_
↳signal()), state->sort.width());
+          else if (state->sort.is_memory()) {
              const auto &contents = state->initial_value_memory();
+              w.open(list("list"));
              for(int i = 0; i < 1<<state->sort.addr_width(); i++) {
-                  auto addr = smt_const(RTLIL::Const(i, state->
↳sort.addr_width()));
-                  w << list("assert", list("=", list("select",
↳state_struct.access(initial, state->name), addr), smt_const(contents[i])));
+                  w << list("bv", smt_const(contents[i]), state->

```

(continues on next page)

(continued from previous page)

```

↪sort.data_width());
+
+           }
+       }
+       w.close();
+       w.pop();
+   }

```

Backend

The final part is the **Backend** itself, with much of the same boiler plate as the *minimal backend*. The main difference is that we use the *Module* to perform the actual processing.

Listing 4.26: The FunctionalSmtBackend

```

struct FunctionalSmtBackend : public Backend {
    FunctionalSmtBackend() : Backend("functional_smt2", "Generate SMT-LIB from
↪Functional IR") {}

    void help() override { log("\nFunctional SMT Backend.\n\n"); }

    void execute(std::ostream *&f, std::string filename, std::vector<std::string>
↪args, RTLIL::Design *design) override
    {
        log_header(design, "Executing Functional SMT Backend.\n");

        size_t argidx = 1;
        extra_args(f, filename, args, argidx, design);

        for (auto module : design->selected_modules()) {
            log("Processing module `%s`.\n", module->name.c_str());
            SmtModule smt(module);
            smt.write(*f);
        }
    }
} FunctionalSmtBackend;

```

There are two additions here for Rosette. The first is that the output file needs to start with the `#lang` definition which tells the compiler/interpreter that we want to use the Rosette language module. The second is that the `write_functional_rosette` command takes an optional argument, `-provides`. If this argument is given, then the output file gets an additional line declaring that everything in the file should be exported for use; allowing the file to be treated as a Racket package with structs and mapping function available for use externally.

Listing 4.27: relevant portion of diff of `Backend::execute()` method

```

+         *f << "#lang rosette/safe\n";
+         if (provides) {
+             *f << "(provide (all-defined-out))\n";
+         }

```

(continues on next page)

(continued from previous page)

4.3.4 Identifying the root cause of bugs

This document references Yosys internals and is intended for people interested in solving or investigating Yosys bugs. This also applies if you are using a fuzzing tool; fuzzers have a tendency to find many variations of the same bug, so identifying the root cause is important for avoiding issue spam.

If you're familiar with C/C++, you might try to have a look at the source code of the command that's failing. Even if you can't fix the problem yourself, it can be very helpful for anyone else investigating if you're able to identify where the issue is arising.

Finding the failing command

Using the `-L` flag can help here, allowing you to specify a file to log to, such as `yosys -L out.log -s script.js`. Most commands will print a header message when they begin; something like 2.48. **Executing HIERARCHY pass (managing design hierarchy)**. The last header message will usually be the failing command. There are some commands which don't print a header message, so you may want to add `echo on` to the start of your script. The `echo` command echoes each command executed, along with any arguments given to it. For the `hierarchy` example above this might be `yosys> hierarchy -check`.

Note

It may also be helpful to use the `log` command to add messages which you can then search for either in the terminal or the logfile. This can be quite useful if your script contains script-passes, like the *Synth commands*, which call many sub-commands and you're not sure exactly which script-pass is calling the failing command.

Minimizing scripts

Warning

This section is intended as **advanced usage**, and generally not necessary for normal bug reports.

If you're using a command line prompt, such as `yosys -p 'synth_xilinx' -o design.json design.v`, consider converting it to a script. It's generally much easier to iterate over changes to a script in a file rather than one on the command line, as well as being better for sharing with others.

Listing 4.28: example script, `script.js`, for prompt `yosys -p 'synth_xilinx' -o design.json design.v`

```
read_verilog design.v
synth_xilinx
write_json design.json
```

Next up you want to remove everything *after* the error occurs. If your final command calls sub-commands, replace it with its contents first. In the case of the *Synth commands*, as well as certain other script-passes, you can use the `-run` option to simplify this. For example we can replace `synth -top <top> -lut` with the *example replacement script for synth command*. The options `-top <top> -lut` can be provided to each `synth` step, or to just the step(s) where it is relevant, as done here.

Listing 4.29: example replacement script for `synth` command

```
synth -top <top> -run :coarse
synth -lut -run coarse:fine
synth -lut -run fine:check
synth -run check:
```

Say we ran *example replacement script for synth command* and were able to remove the `synth -run check:` and still got our error, then we check the log and we see the last thing before the error was 7.2. Executing `MEMORY_MAP` pass (converting memories to logic and flip-flops). By checking the output of `yosys -h synth` (or the `synth` help page) we can see that the *memory_map* pass is called in the `fine` step. We can then update our script to the following:

Listing 4.30: example replacement script for `synth` when *memory_map* is failing

```
synth -top <top> -run :fine
opt -fast -full
memory_map
```

By giving `synth` the option `-run :fine`, we are telling it to run from the beginning of the script until the `fine` step, where we then give it the exact commands to run. There are some cases where the commands given in the help output are not an exact match for what is being run, but are instead a simplification. If you find that replacing the script-pass with its contents causes the error to disappear, or change, try calling the script-pass with `echo on` to see exactly what commands are being called and what options are used.

Warning

Before continuing further, *back up your code*. The following steps can remove context and lead to over-minimizing scripts, hiding underlying issues. Check out *Why context matters* to learn more.

When a problem is occurring many steps into a script, minimizing the design at the start of the script isn't always enough to identify the cause of the issue. Each extra step of the script can lead to larger sections of the input design being needed for the specific problem to be preserved until it causes a crash. So to find the smallest possible reproducer it can sometimes be helpful to remove commands prior to the failure point.

The simplest way to do this is by writing out the design, resetting the current state, and reading back the design:

```
write_rtlil <design.il>; design -reset; read_rtlil <design.il>;
```

In most cases, this can be inserted immediately before the failing command while still producing the error, allowing you to *minimize your RTLIL* with the `<design.il>` output. For our previous example with *memory_map*, if *resetting the design immediately before failure* still gives the same error, then we should now be able to call `yosys design.il -p 'memory_map'` to reproduce it.

Listing 4.31: resetting the design immediately before failure

```
synth -top <top> -run :fine
opt -fast -full
write_rtlil design.il; design -reset; read_rtlil design.il;
memory_map
```

If that doesn't give the error (or doesn't give the same error), then you should try to move the write/reset/read

earlier in the script until it does. If you have no idea where exactly you should put the reset, the best way is to use a “binary search” type approach, reducing the possible options by half after each attempt.

Note

By default, `write_rtlil` doesn’t include platform specific IP blocks and other primitive cell models which are typically loaded with a `read_verilog -lib` command at the start of the synthesis script. You may have to duplicate these commands *after* the call to `design -reset`. It is also possible to write out *everything* with `select =*`; `write_rtlil -selected <design.il>`.

As an example, your script has 16 commands in it before failing on the 17th. If resetting immediately before the 17th doesn’t reproduce the error, try between the 8th and 9th (8 is half of the total 16). If that produces the error then you can remove everything before the `read_rtlil` and try reset again in the middle of what’s left, making sure to use a different name for the output file so that you don’t overwrite what you’ve already got. If the error isn’t produced then you need to go earlier still, so in this case you would do between the 4th and 5th (4 is half of the previous 8). Repeat this until you can’t reduce the remaining commands any further.

A more conservative, but more involved, method is to remove or comment out commands prior to the failing command. Each command, or group of commands, can be disabled one at a time while checking if the error still occurs, eventually giving the smallest subset of commands needed to take the original input through to the error. The difficulty with this method is that depending on your design, some commands may be necessary even if they aren’t needed to reproduce the error. For example, if your design includes `process` blocks, many commands will fail unless you run the `proc` command. While this approach can do a better job of maintaining context, it is often easier to *recover* the context after the design has been minimized for producing the error. For more on recovering context, checkout [Why context matters](#).

Why context matters

Sometimes when a command is raising an error, you’re seeing a symptom rather than the underlying issue. It’s possible that an earlier command may be putting the design in an invalid state, which isn’t picked up until the error is raised. This is particularly true for the pre-packaged *Synth commands*, which rely on a combination of generic and architecture specific passes. As new features are added to Yosys and more designs are supported, the types of cells output by a pass can grow and change; and sometimes this leads to a mismatch in what a pass is intended to handle.

If you minimized your script, and removed commands prior to the failure to get a smaller reproducer, try to work backwards and find which commands may have contributed to the design failing. From the minimized design you should have some understanding of the cell or cells which are producing the error; but where did those cells come from? The name and/or type of the cell can often point you in the right direction:

```
# internal cell types start with a $
# lowercase for word-level, uppercase for bit-level
$and
$_AND_

# cell types with $__ are typically intermediate cells used in techmapping
$__MUL16X16

# cell types without a $ are either user-defined or architecture specific
my_module
SB_MAC16

# object names might give you the name of the pass that created them
```

(continues on next page)

(continued from previous page)

```
$procdff$1204
$memory\rom$rdmux[0][0][0]$a$1550

# or even the line number in the Yosys source
$auto$muxcover.cc:557:implement_best_cover$2152
$auto$alumacc.cc:495:replace_alu$1209
```

Try running the unminimized script and search the log for the names of the objects in your minimized design. In the case of cells you can also search for the type of the cell. Remember that calling `stat` will list all the types of cells currently used in the design, and `select -list =*` will list the names of all the current objects. You can add these commands to your script, or use an interactive terminal to run each command individually. Adding them to the script can be more repeatable, but if it takes a long time to run to the point you're interested in then an interactive shell session can give you more flexibility once you reach that point. You can also add a call to the `shell` command at any point in a script to start an interactive session at a given point; allowing you to script any preparation steps, then come back once it's done.

The `--dump-design` option

Yosys provides the `--dump-design` option (or `-P` for short) for dumping the design at specific steps of the script based on the log header. If the last step before an error is 7.2. Executing `MEMORY_MAP` pass (converting memories to logic and flip-flops), then calling Yosys with `--dump-design 7.2:bad.il` will save the design *before* this command runs, in the file `bad.il`.

It is also possible to use this option multiple times, e.g. `-P2:hierarchy.il -P7 -P7.2:bad.il`, to get multiple dumps in the same run. This can make it easier to follow the design through each step to find where certain cells or connections are coming from. `--dump-design ALL` is also allowed, writing out the design at each log header.

A worked example

Say you did all the minimization and found that an error in `synth_xilinx` occurs when a call to `techmap -map +/xilinx/cells_map.v` with `MIN_MUX_INPUTS` defined parses a `$_MUX16_` with all inputs set to 1'x. You could fix the bug in `+/xilinx/cells_map.v`, but that might only solve this one case while leaving other problems that haven't been found yet. So you step through the original script, calling `stat` after each step to find when the `$_MUX16_` is added.

You find that the `$_MUX16_` is introduced by a call to `muxcover`, but all the inputs are defined, so calling `techmap` now works as expected. From running `bugpoint` with the failing `techmap` you know that the cell with index 2297 will fail, so you call `select top/*$2297` to limit to just that cell. This can then be saved with `design -save pre_bug` or `write_rtlil -selected pre_bug`, so that you don't have to re-run all the earlier steps to get back here.

Next you step through the remaining commands and call `dump` after each to find when the inputs are disconnected. You find that `opt -full` has optimized away portions of the circuit, leading to `opt_expr` setting the undriven mux inputs to x, but failing to remove the now unnecessary `$_MUX16_`. Now you've identified a problem in `opt_expr` that affects all of the wide muxes, and could happen in any synthesis flow, not just `synth_xilinx`.

See also

This example is taken from [YosysHQ/yosys#4590](#) and can be reproduced with a version of Yosys between 0.45 and 0.51.

4.3.5 Contributing to Yosys

Note

For information on making a pull request on github, refer to our [CONTRIBUTING.md](#) file.

Coding Style

Formatting of code

- Yosys code is using tabs for indentation. Tabs are 8 characters.
- A continuation of a statement in the following line is indented by two additional tabs.
- Lines are as long as you want them to be. A good rule of thumb is to break lines at about column 150.
- Opening braces can be put on the same or next line as the statement opening the block (if, switch, for, while, do). Put the opening brace on its own line for larger blocks, especially blocks that contains blank lines.
- Otherwise stick to the [Linux Kernel Coding Style](#).

C++ Language

Yosys is written in C++17.

In general Yosys uses `int` instead of `size_t`. To avoid compiler warnings for implicit type casts, always use `GetSize(foobar)` instead of `foobar.size()`. (`GetSize()` is defined in `kernel/yosys.h`)

Use range-based for loops whenever applicable.

Reporting bugs

- use the [bug report template](#)
- short title briefly describing the issue, e.g.
 techmap of wide mux with undefined inputs raises error during synth_xilinx
 - tells us what's happening ("raises error")
 - gives the command affected (**techmap**)
 - an overview of the input design ("wide mux with undefined inputs")
 - and some context where it was found ("during **synth_xilinx**")

Reproduction Steps

- ideally a code-block (starting and ending with triple backquotes) containing the minimized design (Verilog or RTLIL), followed by a code-block containing the minimized yosys script OR a command line call to yosys with code-formatting (starting and ending with single backquotes)

```
min.v
```verilog
// minimized Verilog design
```

min.js
```

(continues on next page)

(continued from previous page)

```
...
read_verilog min.v
# minimum sequence of commands to reproduce error
...

OR

`yosys -p ': minimum sequence of commands;' min.v`
```

- alternatively can provide a single code-block which includes the minimized design as a “here document” followed by the sequence of commands which reproduce the error
 - see *Loading a design* for more on heredocs.

```
...
read_rtlil <<EOF
# minimized RTLIL design
EOF
# minimum sequence of commands
...
```

- any environment variables or command line options should also be mentioned
- if the problem occurs for a range of values/designs, what is that range
- if you’re using an external tool, such as **valgrind**, to detect the issue, what version of that tool are you using and what options are you giving it

Warning

Please try to avoid the use of any external plugins/tools in the reproduction steps if they are not directly related to the issue being raised. This includes frontend plugins such as GHDL or slang; use `write_rtlil` on the minimized design instead. This also includes tools which provide a wrapper around Yosys such as OpenLane; you should instead minimize your input and reproduction steps to just the Yosys part.

“Expected Behaviour”

- if you have a similar design/script that doesn’t give the error, include it here as a reference
- if the bug is that an error *should* be raised but isn’t, are there any other commands with similar error messages

“Actual Behaviour”

- any error messages go here
- any details relevant to the crash that were found with `--trace` or `--debug` flags
- if you identified the point of failure in the source code, you could mention it here, or as a comment below
 - if possible, use a permalink to the source on GitHub
 - you can browse the source repository for a certain commit with the failure and open the source file, select the relevant lines (click on the line number for the first relevant line, then while holding

shift click on the line number for the last relevant line), click on the ... that appears and select “Copy permalink”

- should look something like `https://github.com/YosysHQ/yosys/blob/<commit_hash>/path/to/file#L139-L147`
- clicking on “Preview” should reveal a code block containing the lines of source specified, with a link to the source file at the given commit

Additional details

- once you have created the issue, any additional details can be added as a comment on that issue
- could include any additional context as to what you were doing when you first encountered the bug
- was this issue discovered through the use of a fuzzer
- if you’ve minimized the script, consider including the `bugpoint` script you used, or the original script, e.g.

Minimized with

```
...
read_verilog design.v
# original sequence of commands prior to error
bugpoint -script <failure.js> -grep "<string>"
write_rtlil min.il
...
```

OR

Minimized from

```
`yosys -p ': original sequence of commands to produce error;' design.v`
```

- if you’re able to, it may also help to share the original un-minimized design
 - if the design is too big for a comment, consider turning it into a [Gist](#)

4.3.6 Testing Yosys

Todo

more about the included test suite and how to add tests

Automatic testing

The [Yosys Git repo](#) has automatic testing of builds and running of the included test suite on both Ubuntu and macOS, as well as across range of compiler versions. For up to date information, including OS versions, refer to [the git actions page](#).

Todo

are unit tests currently working

4.4 Techmap by example

As a quick recap, the `techmap` command replaces cells in the design with implementations given as Verilog code (called “map files”). It can replace Yosys’ internal cell types (such as `$or`) as well as user-defined cell types.

- Verilog parameters are used extensively to customize the internal cell types.
- Additional special parameters are used by techmap to communicate meta-data to the map files.
- Special wires are used to instruct techmap how to handle a module in the map file.
- Generate blocks and recursion are powerful tools for writing map files.

Code examples used in this document are included in the Yosys code base under `docs/source/code_examples/techmap`.

4.4.1 Mapping OR3X1

Todo

add/expand supporting text

Note

This is a simple example for demonstration only. Techmap shouldn’t be used to implement basic logic optimization.

Listing 4.32: `red_or3x1_map.v`

```
module \${reduce_or} (A, Y);

    parameter A_SIGNED = 0;
    parameter A_WIDTH = 0;
    parameter Y_WIDTH = 0;

    input [A_WIDTH-1:0] A;
    output [Y_WIDTH-1:0] Y;

    function integer min;
        input integer a, b;
        begin
            if (a < b)
                min = a;
            else
                min = b;
        end
    endfunction

    genvar i;
    generate begin
        if (A_WIDTH == 0) begin
```


(continues on next page)

(continued from previous page)

```

        assign Y = 0;
    end
    if (A_WIDTH == 1) begin
        assign Y = A;
    end
    if (A_WIDTH == 2) begin
        wire ybuf;
        OR3X1 g (.A(A[0]), .B(A[1]), .C(1'b0), .Y(ybuf));
        assign Y = ybuf;
    end
    if (A_WIDTH == 3) begin
        wire ybuf;
        OR3X1 g (.A(A[0]), .B(A[1]), .C(A[2]), .Y(ybuf));
        assign Y = ybuf;
    end
    if (A_WIDTH > 3) begin
        localparam next_stage_sz = (A_WIDTH+2) / 3;
        wire [next_stage_sz-1:0] next_stage;
        for (i = 0; i < next_stage_sz; i = i+1) begin
            localparam bits = min(A_WIDTH - 3*i, 3);
            assign next_stage[i] = |A[3*i +: bits];
        end
        assign Y = |next_stage;
    end
end endgenerate
endmodule

```

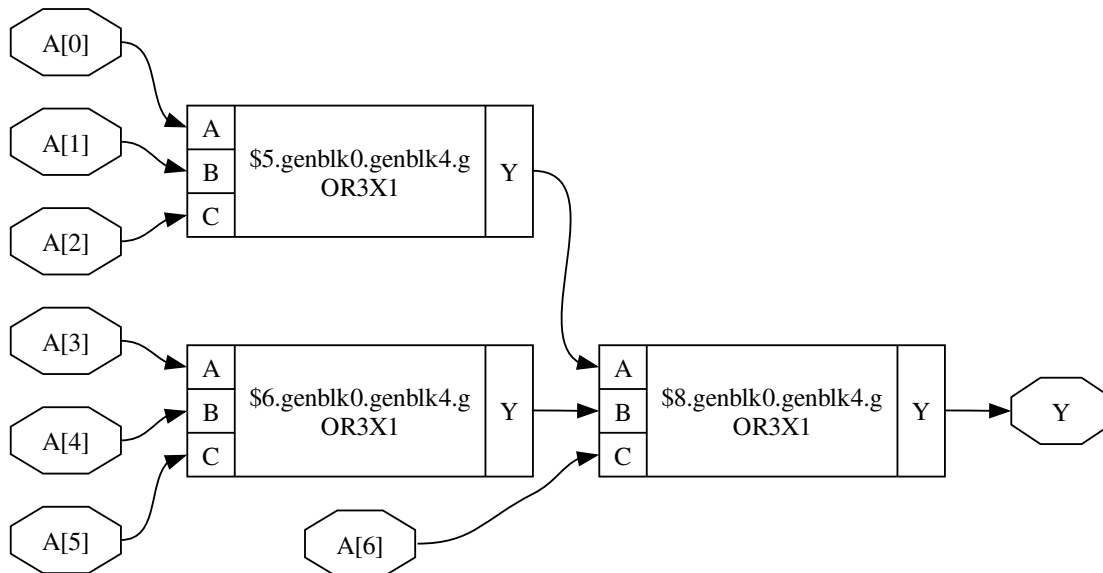

Listing 4.33: red_or3x1_test.y

```

read_verilog red_or3x1_test.v
hierarchy -check -top test

techmap -map red_or3x1_map.v;;

splitnets -ports
show -prefix red_or3x1 -format dot -notitle -lib red_or3x1_cells.v

```

Listing 4.34: red_or3x1_test.v

```


module test (A, Y);
    input [6:0] A;
    output Y;
    assign Y = |A;
endmodule

```

4.4.2 Conditional techmap

- In some cases only cells with certain properties should be substituted.
- The special wire `_TECHMAP_FAIL_` can be used to disable a module in the map file for a certain set of parameters.
- The wire `_TECHMAP_FAIL_` must be set to a constant value. If it is non-zero then the module is disabled for this set of parameters.
- Example use-cases:
 - coarse-grain cell types that only operate on certain bit widths
 - memory resources for different memory geometries (width, depth, ports, etc.)

Example:

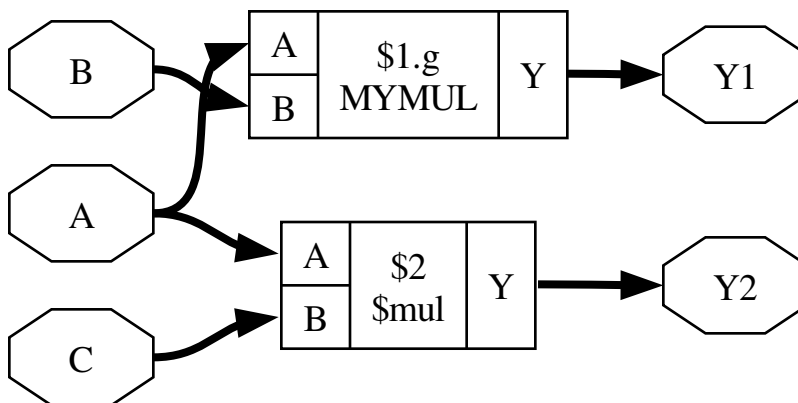

Listing 4.35: sym_mul_map.v

```

module \ $mul (A, B, Y);
    parameter A_SIGNED = 0;
    parameter B_SIGNED = 0;
    parameter A_WIDTH = 1;
    parameter B_WIDTH = 1;
    parameter Y_WIDTH = 1;

    input [A_WIDTH-1:0] A;
    input [B_WIDTH-1:0] B;
    output [Y_WIDTH-1:0] Y;

    wire _TECHMAP_FAIL_ = A_WIDTH != B_WIDTH || B_WIDTH != Y_WIDTH;

    MYMUL #( .WIDTH(Y_WIDTH) ) g ( .A(A), .B(B), .Y(Y) );
endmodule

```

Listing 4.36: sym_mul_test.v

```

module test(A, B, C, Y1, Y2);
    input [7:0] A, B, C;
    output [7:0] Y1 = A * B;
    output [15:0] Y2 = A * C;
endmodule

```

Listing 4.37: sym_mul_test.js

```

read_verilog sym_mul_test.v
hierarchy -check -top test

techmap -map sym_mul_map.v;;

show -prefix sym_mul -format dot -notitle -lib sym_mul_cells.v

```

4.4.3 Scripting in map modules


- The special wires `_TECHMAP_DO_*` can be used to run Yosys scripts in the context of the replacement module.
- The wire that comes first in alphabetical order is interpreted as string (must be connected to constants) that is executed as script. Then the wire is removed. Repeat.
- You can even call `techmap` recursively!
- Example use-cases:
 - Using always blocks in map module: call *proc*
 - Perform expensive optimizations (such as *freduce*) on cells where this is known to work well.
 - Interacting with custom commands.

Note

PROTIP:

Commands such as `shell`, `show -pause`, and `dump` can be used in the `_TECHMAP_DO_*` scripts for debugging map modules.

Example:

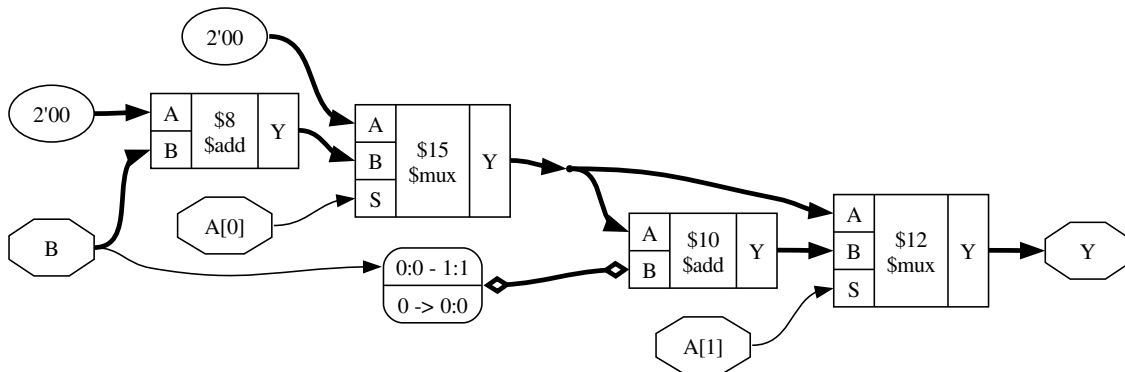

Listing 4.38: mymul_map.v

```
module MYMUL(A, B, Y);
    parameter WIDTH = 1;
    input [WIDTH-1:0] A, B;
    output reg [WIDTH-1:0] Y;

    wire [1023:0] _TECHMAP_DO_ = "proc; clean";

    integer i;
    always @* begin
        Y = 0;
        for (i = 0; i < WIDTH; i=i+1)
            if (A[i])
                Y = Y + (B << i);
    end
endmodule
```

Listing 4.39: mymul_test.v

```
module test(A, B, Y);
    input [1:0] A, B;
    output [1:0] Y = A * B;
endmodule
```

Listing 4.40: mymul_test.ys

```
read_verilog mymul_test.v
hierarchy -check -top test
```

(continues on next page)

(continued from previous page)

```

techmap -map sym_mul_map.v \
        -map mymul_map.v;;

rename test test_mapped
read_verilog mymul_test.v
miter -equiv test test_mapped miter
flatten miter

sat -verify -prove trigger 0 miter


splitnets -ports test_mapped/A
show -prefix mymul -format dot -notitle test_mapped

```

4.4.4 Handling constant inputs

- The special parameters `_TECHMAP_CONSTMSK_<port-name>` and `_TECHMAP_CONSTVAL_<port-name>` can be used to handle constant input values to cells.
- The former contains 1-bits for all constant input bits on the port.
- The latter contains the constant bits or undef (x) for non-constant bits.
- Example use-cases:
 - Converting arithmetic (for example multiply to shift).
 - Identify constant addresses or enable bits in memory interfaces.

Example:

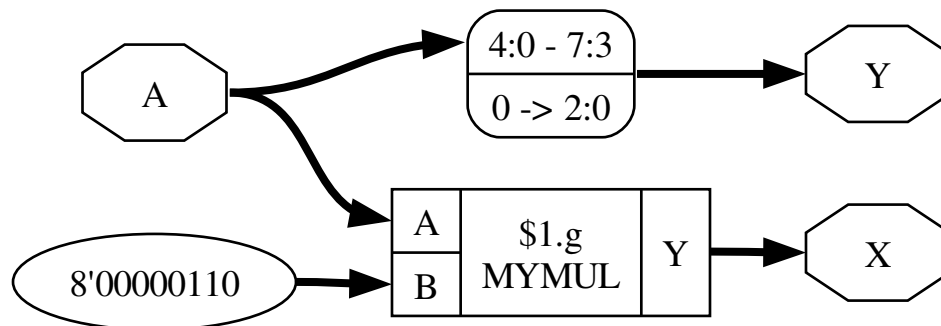

Listing 4.41: mulshift_map.v

```

module MYMUL(A, B, Y);
    parameter WIDTH = 1;
    input [WIDTH-1:0] A, B;
    output reg [WIDTH-1:0] Y;

```

(continues on next page)

(continued from previous page)

```

parameter _TECHMAP_CONSTVAL_A_ = WIDTH'bx;
parameter _TECHMAP_CONSTVAL_B_ = WIDTH'bx;

reg _TECHMAP_FAIL_;
wire [1023:0] _TECHMAP_DO_ = "proc; clean";

integer i;
always @* begin
    _TECHMAP_FAIL_ <= 1;
    for (i = 0; i < WIDTH; i=i+1) begin
        if (_TECHMAP_CONSTVAL_A_ === WIDTH'd1 << i) begin
            _TECHMAP_FAIL_ <= 0;
            Y <= B << i;
        end
        if (_TECHMAP_CONSTVAL_B_ === WIDTH'd1 << i) begin
            _TECHMAP_FAIL_ <= 0;
            Y <= A << i;
        end
    end
end
endmodule

```

Listing 4.42: mulshift_test.v

```

module test (A, X, Y);
input [7:0] A;
output [7:0] X = A * 8'd 6;
output [7:0] Y = A * 8'd 8;
endmodule

```

Listing 4.43: mulshift_test.yys

```

read_verilog mulshift_test.v
hierarchy -check -top test

techmap -map sym_mul_map.v \
        -map mulshift_map.v;;

show -prefix mulshift -format dot -notitle -lib sym_mul_cells.v


```

4.4.5 Handling shorted inputs

- The special parameters `_TECHMAP_BITS_CONNMAP_` and `_TECHMAP_CONNMAP_<port-name>_` can be used to handle shorted inputs.
- Each bit of the port correlates to an `_TECHMAP_BITS_CONNMAP_` bits wide number in `_TECHMAP_CONNMAP_<port-name>_`.
- Each unique signal bit is assigned its own number. Identical fields in the `_TECHMAP_CONNMAP_<port-name>_` parameters mean shorted signal bits.
- The numbers 0-3 are reserved for 0, 1, x, and z respectively.

- Example use-cases:
 - Detecting shared clock or control signals in memory interfaces.
 - In some cases this can be used for optimization.

Example:

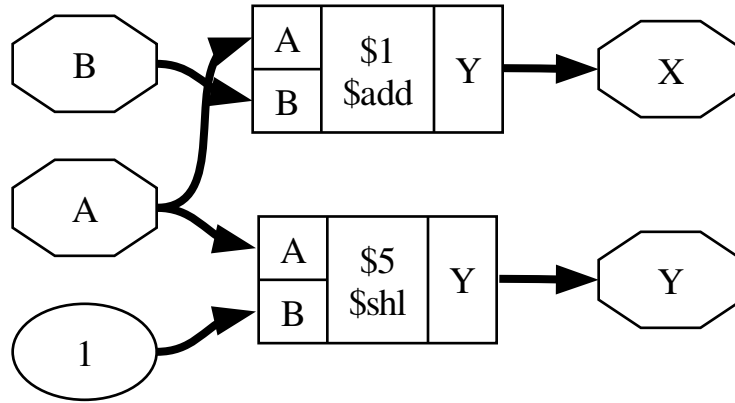

Listing 4.44: addshift_map.v

```

module \add (A, B, Y);
  parameter A_SIGNED = 0;
  parameter B_SIGNED = 0;
  parameter A_WIDTH = 1;
  parameter B_WIDTH = 1;
  parameter Y_WIDTH = 1;

  input [A_WIDTH-1:0] A;
  input [B_WIDTH-1:0] B;
  output [Y_WIDTH-1:0] Y;

  parameter _TECHMAP_BITS_CONNMAP_ = 0;
  parameter _TECHMAP_CONNMAP_A_ = 0;
  parameter _TECHMAP_CONNMAP_B_ = 0;

  wire _TECHMAP_FAIL_ = A_WIDTH != B_WIDTH || B_WIDTH < Y_WIDTH ||
    _TECHMAP_CONNMAP_A_ != _TECHMAP_CONNMAP_B_;

  assign Y = A << 1;
endmodule

```

Listing 4.45: addshift_test.v

```

module test (A, B, X, Y);
  input [7:0] A, B;

```

(continues on next page)

(continued from previous page)

```
output [7:0] X = A + B;  
output [7:0] Y = A + A;  
endmodule
```

Listing 4.46: addshift_test.yys

```
read_verilog addshift_test.v  
hierarchy -check -top test  
  
techmap -map addshift_map.v;;  
  
show -prefix addshift -format dot -notitle
```

4.4.6 Notes on using techmap

- Don't use positional cell parameters in map modules.
- You can use the `$__-` prefix for internal cell types to avoid collisions with the user-namespace. But always use two underscores or the internal consistency checker will trigger on these cells.
- Techmap has two major use cases:
 - Creating good logic-level representation of arithmetic functions. This also means using dedicated hardware resources such as half- and full-adder cells in ASICs or dedicated carry logic in FPGAs.
 - Mapping of coarse-grain resources such as block memory or DSP cells.

4.5 Hashing and associative data structures in Yosys

4.5.1 Container classes based on hashing

Yosys uses `dict<K, T>` and `pool<T>` as main container classes. `dict<K, T>` is essentially a replacement for `std::unordered_map<K, T>` and `pool<T>` is a replacement for `std::unordered_set<T>`. The main characteristics are:

- **`dict<K, T>` and `pool<T>` are about 2x faster than the std containers**
(though this claim hasn't been verified for over 10 years)
- **references to elements in a `dict<K, T>` or `pool<T>` are invalidated by**
insert and remove operations (similar to `std::vector<T>` on `push_back()`).
- **some iterators are invalidated by `erase()`. specifically, iterators**
that have not passed the erased element yet are invalidated. (`erase()` itself returns valid iterator to the next element.)
- **no iterators are invalidated by `insert()`. elements are inserted at**
`begin()`. i.e. only a new iterator that starts at `begin()` will see the inserted elements.
- **the method `.count(key, iterator)` is like `.count(key)` but only**
considers elements that can be reached via the iterator.
- **iterators can be compared. `it1 < it2` means that the position of `t2`**
can be reached via `t1` but not vice versa.
- **the method `.sort()` can be used to sort the elements in the container**
the container stays sorted until elements are added or removed.

- `dict<K, T>` and `pool<T>` will have the same order of iteration across all compilers, standard libraries and architectures.

In addition to `dict<K, T>` and `pool<T>` there is also an `idict<K>` that creates a bijective map from `K` to the integers. For example:

```
idict<string, 42> si;
log("%d\n", si("hello"));      // will print 42
log("%d\n", si("world"));      // will print 43
log("%d\n", si.at("world"));    // will print 43
log("%d\n", si.at("dummy"));    // will throw exception
log("%s\n", si[42].c_str());    // will print hello
log("%s\n", si[43].c_str());    // will print world
log("%s\n", si[44].c_str());    // will throw exception
```

It is not possible to remove elements from an `idict`.

Finally `mfp<K>` implements a merge-find set data structure (aka. disjoint-set or union-find) over the type `K` (“mfp” = merge-find-promote).

4.5.2 The hash function

The hash function generally used in Yosys is the XOR version of DJB2:

```
state = ((state << 5) + state) ^ value
```

This is an old-school hash designed to hash ASCII characters. Yosys doesn’t hash a lot of ASCII text, but it still happens to be a local optimum due to factors described later.

Hash function quality is multi-faceted and highly dependent on what is being hashed. Yosys isn’t concerned by any cryptographic qualities, instead the goal is minimizing total hashing collision risk given the data patterns within Yosys. In general, a good hash function typically folds values into a state accumulator with a mathematical function that is fast to compute and has some beneficial properties. One of these is the avalanche property, which demands that a small change such as flipping a bit or incrementing by one in the input produces a large, unpredictable change in the output. Additionally, the bit independence criterion states that any pair of output bits should change independently when any single input bit is inverted. These properties are important for avoiding hash collision on data patterns like the hash of a sequence not colliding with its permutation, not losing from the state the information added by hashing preceding elements, etc.

DJB2 lacks these properties. Instead, since Yosys hashes large numbers of data structures composed of incrementing integer IDs, Yosys abuses the predictability of DJB2 to get lower hash collisions, with regular nature of the hashes surviving through the interaction with the “modulo prime” operations in the associative data structures. For example, some most common objects in Yosys are interned `IdStrings` of incrementing indices or `SigBits` with bit offsets into wire (represented by its unique `IdString` name) as the typical case. This is what makes DJB2 a local optimum. Additionally, the ADD version of DJB2 (like above but with addition instead of XOR) is used to this end for some types, abandoning the general pattern of folding values into a state value.

4.5.3 Making a type hashable

Let’s first take a look at the external interface on a simplified level. Generally, to get the hash for `T obj`, you would call the utility function `run_hash<T>(const T& obj)`, corresponding to `hash_ops<T>::hash(obj)`, the default implementation of which uses `hash_ops<T>::hash_into(Hasher(), obj)`. `Hasher` is the class actually implementing the hash function, hiding its initialized internal state, and passing it out on `hash_t yield()` with perhaps some finalization steps.

`hash_ops<T>` is the star of the show. By default it pulls the `Hasher h` through a `Hasher T::hash_into(Hasher h)` method. That's the method you have to implement to make a record (class or struct) type easily hashable with Yosys hashlib associative data structures.

`hash_ops<T>` is specialized for built-in types like `int` or `bool` and treats pointers the same as integers, so it doesn't dereference pointers. Since many RTLIL data structures like `RTLIL::Wire` carry their own unique index `Hasher::hash_t hashidx`, there are specializations for `hash_ops<Wire*>` and others in `kernel/hashlib.h` that actually dereference the pointers and call `hash_into` on the instances pointed to.

`hash_ops<T>` is also specialized for simple compound types like `std::pair<U>` by calling `hash_into` in sequence on its members. For flexible size containers like `std::vector<U>` the size of the container is hashed first. That is also how implementing hashing for a custom record data type should be - unless there is strong reason to do otherwise, call `h.eat(m)` on the `Hasher h` you have received for each member in sequence and `return h`;

The `hash_ops<T>::hash(obj)` method is not intended to be called when context of implementing the hashing for a record or other compound type. When writing it, you should connect it to `hash_ops<T>::hash_into(Hasher h)` as shown below. If you have a strong reason to do so, and you have to create a special implementation for top-level hashing, look at how `hash_ops<RTLIL::SigBit>::hash(...)` is implemented in `kernel/rtlil.h`.

4.5.4 Porting plugins from the legacy interface

Previously, the interface to implement hashing on custom types was just `unsigned int T::hash() const`. This meant hashes for members were computed independently and then ad-hoc combined with the hash function with some xorshift operations thrown in to mix bits together somewhat. A plugin can stay compatible with both versions prior and after the break by implementing both interfaces based on the existence and value of `YS_HASHING_VERSION`.

Listing 4.47: Example hash compatibility wrapper

```
#ifndef YS_HASHING_VERSION
unsigned int T::hash() const {
    return mkhash(a, b);
}
#elif YS_HASHING_VERSION == 1
Hasher T::hash_into(Hasher h) const {
    h.eat(a);
    h.eat(b);
    return h;
}
Hasher T::hash() const {
    Hasher h;
    h.eat(*this);
    return h;
}
#else
#error "Unsupported hashing interface"
#endif
```

Feel free to contact Yosys maintainers with related issues.

A PRIMER ON DIGITAL CIRCUIT SYNTHESIS

This chapter contains a short introduction to the basic principles of digital circuit synthesis.

5.1 Levels of abstraction

Digital circuits can be represented at different levels of abstraction. During the design process a circuit is usually first specified using a higher level abstraction. Implementation can then be understood as finding a functionally equivalent representation at a lower abstraction level. When this is done automatically using software, the term synthesis is used.

So synthesis is the automatic conversion of a high-level representation of a circuit to a functionally equivalent low-level representation of a circuit. Figure 5.1 lists the different levels of abstraction and how they relate to different kinds of synthesis.

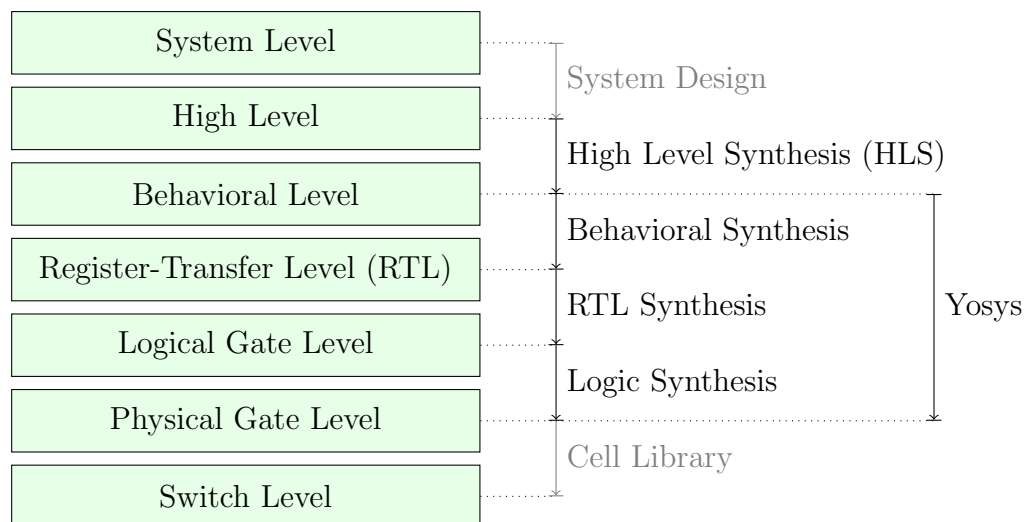


Fig. 5.1: Different levels of abstraction and synthesis.

Regardless of the way a lower level representation of a circuit is obtained (synthesis or manual design), the lower level representation is usually verified by comparing simulation results of the lower level and the higher level representation¹. Therefore even if no synthesis is used, there must still be a simulatable representation of the circuit in all levels to allow for verification of the design.

Note: The exact meaning of terminology such as “High-Level” is of course not fixed over time. For example the HDL “ABEL” was first introduced in 1985 as “A High-Level Design Language for Programmable Logic

¹ In recent years formal equivalence checking also became an important verification method for validating RTL and lower abstraction representation of the design.

Devices” [LHBB85], but would not be considered a “High-Level Language” today.

5.1.1 System level

The System Level abstraction of a system only looks at its biggest building blocks like CPUs and computing cores. At this level the circuit is usually described using traditional programming languages like C/C++ or Matlab. Sometimes special software libraries are used that are aimed at simulation circuits on the system level, such as SystemC.

Usually no synthesis tools are used to automatically transform a system level representation of a circuit to a lower-level representation. But system level design tools exist that can be used to connect system level building blocks.

The IEEE 1685-2009 standard defines the IP-XACT file format that can be used to represent designs on the system level and building blocks that can be used in such system level designs. [A+10]

5.1.2 High level

The high-level abstraction of a system (sometimes referred to as algorithmic level) is also often represented using traditional programming languages, but with a reduced feature set. For example when representing a design at the high level abstraction in C, pointers can only be used to mimic concepts that can be found in hardware, such as memory interfaces. Full featured dynamic memory management is not allowed as it has no corresponding concept in digital circuits.

Tools exist to synthesize high level code (usually in the form of C/C++/SystemC code with additional metadata) to behavioural HDL code (usually in the form of Verilog or VHDL code). Aside from the many commercial tools for high level synthesis there are also a number of FOSS tools for high level synthesis.

5.1.3 Behavioural level

At the behavioural abstraction level a language aimed at hardware description such as Verilog or VHDL is used to describe the circuit, but so-called behavioural modelling is used in at least part of the circuit description. In behavioural modelling there must be a language feature that allows for imperative programming to be used to describe data paths and registers. This is the `always`-block in Verilog and the `process`-block in VHDL.

In behavioural modelling, code fragments are provided together with a sensitivity list; a list of signals and conditions. In simulation, the code fragment is executed whenever a signal in the sensitivity list changes its value or a condition in the sensitivity list is triggered. A synthesis tool must be able to transfer this representation into an appropriate datapath followed by the appropriate types of register.

For example consider the following Verilog code fragment:

```
1 always @(posedge clk)
2     y <= a + b;
```

In simulation the statement `y <= a + b` is executed whenever a positive edge on the signal `clk` is detected. The synthesis result however will contain an adder that calculates the sum `a + b` all the time, followed by a d-type flip-flop with the adder output on its D-input and the signal `y` on its Q-output.

Usually the imperative code fragments used in behavioural modelling can contain statements for conditional execution (`if`- and `case`-statements in Verilog) as well as loops, as long as those loops can be completely unrolled.

Interestingly there seems to be no other FOSS Tool that is capable of performing Verilog or VHDL behavioural syntheses besides Yosys.

5.1.4 Register-Transfer Level (RTL)

On the Register-Transfer Level the design is represented by combinatorial data paths and registers (usually d-type flip flops). The following Verilog code fragment is equivalent to the previous Verilog example, but is in RTL representation:

```

1 assign tmp = a + b;           // combinatorial data path
2
3 always @(posedge clk)        // register
4     y <= tmp;
```

A design in RTL representation is usually stored using HDLs like Verilog and VHDL. But only a very limited subset of features is used, namely minimalistic always-blocks (Verilog) or process-blocks (VHDL) that model the register type used and unconditional assignments for the datapath logic. The use of HDLs on this level simplifies simulation as no additional tools are required to simulate a design in RTL representation.

Many optimizations and analyses can be performed best at the RTL level. Examples include FSM detection and optimization, identification of memories or other larger building blocks and identification of shareable resources.

Note that RTL is the first abstraction level in which the circuit is represented as a graph of circuit elements (registers and combinatorial cells) and signals. Such a graph, when encoded as list of cells and connections, is called a netlist.

RTL synthesis is easy as each circuit node element in the netlist can simply be replaced with an equivalent gate-level circuit. However, usually the term RTL synthesis does not only refer to synthesizing an RTL netlist to a gate level netlist but also to performing a number of highly sophisticated optimizations within the RTL representation, such as the examples listed above.

A number of FOSS tools exist that can perform isolated tasks within the domain of RTL synthesis steps. But there seems to be no FOSS tool that covers a wide range of RTL synthesis operations.

5.1.5 Logical gate level

At the logical gate level the design is represented by a netlist that uses only cells from a small number of single-bit cells, such as basic logic gates (AND, OR, NOT, XOR, etc.) and registers (usually D-Type Flip-flops).

A number of netlist formats exists that can be used on this level, e.g. the Electronic Design Interchange Format (EDIF), but for ease of simulation often a HDL netlist is used. The latter is a HDL file (Verilog or VHDL) that only uses the most basic language constructs for instantiation and connecting of cells.

There are two challenges in logic synthesis: First finding opportunities for optimizations within the gate level netlist and second the optimal (or at least good) mapping of the logic gate netlist to an equivalent netlist of physically available gate types.

The simplest approach to logic synthesis is two-level logic synthesis, where a logic function is converted into a sum-of-products representation, e.g. using a Karnaugh map. This is a simple approach, but has exponential worst-case effort and cannot make efficient use of physical gates other than AND/NAND-, OR/NOR- and NOT-Gates.

Therefore modern logic synthesis tools utilize much more complicated multi-level logic synthesis algorithms [BHSV90]. Most of these algorithms convert the logic function to a Binary-Decision-Diagram (BDD) or And-Inverter-Graph (AIG) and work from that representation. The former has the advantage that it has a unique normalized form. The latter has much better worst case performance and is therefore better suited for the synthesis of large logic functions.

Good FOSS tools exist for multi-level logic synthesis.

Yosys contains basic logic synthesis functionality but can also use ABC for the logic synthesis step. Using ABC is recommended.

5.1.6 Physical gate level

On the physical gate level only gates are used that are physically available on the target architecture. In some cases this may only be NAND, NOR and NOT gates as well as D-Type registers. In other cases this might include cells that are more complex than the cells used at the logical gate level (e.g. complete half-adders). In the case of an FPGA-based design the physical gate level representation is a netlist of LUTs with optional output registers, as these are the basic building blocks of FPGA logic cells.

For the synthesis tool chain this abstraction is usually the lowest level. In case of an ASIC-based design the cell library might contain further information on how the physical cells map to individual switches (transistors).

5.1.7 Switch level

A switch level representation of a circuit is a netlist utilizing single transistors as cells. Switch level modelling is possible in Verilog and VHDL, but is seldom used in modern designs, as in modern digital ASIC or FPGA flows the physical gates are considered the atomic build blocks of the logic circuit.

5.1.8 Yosys

Yosys is a Verilog HDL synthesis tool. This means that it takes a behavioural design description as input and generates an RTL, logical gate or physical gate level description of the design as output. Yosys' main strengths are behavioural and RTL synthesis. A wide range of commands (synthesis passes) exist within Yosys that can be used to perform a wide range of synthesis tasks within the domain of behavioural, RTL and logic synthesis. Yosys is designed to be extensible and therefore is a good basis for implementing custom synthesis tools for specialised tasks.

5.2 Features of synthesizable Verilog

The subset of Verilog [A+06] that is synthesizable is specified in a separate IEEE standards document, the IEEE standard 1364.1-2002 [A+02]. This standard also describes how certain language constructs are to be interpreted in the scope of synthesis.

This section provides a quick overview of the most important features of synthesizable Verilog, structured in order of increasing complexity.

5.2.1 Structural Verilog

Structural Verilog (also known as Verilog Netlists) is a Netlist in Verilog syntax. Only the following language constructs are used in this case:

- Constant values
- Wire and port declarations
- Static assignments of signals to other signals
- Cell instantiations

Many tools (especially at the back end of the synthesis chain) only support structural Verilog as input. ABC is an example of such a tool. Unfortunately there is no standard specifying what Structural Verilog actually is, leading to some confusion about what syntax constructs are supported in structural Verilog when it comes to features such as attributes or multi-bit signals.

5.2.2 Expressions in Verilog

In all situations where Verilog accepts a constant value or signal name, expressions using arithmetic operations such as `+`, `-` and `*`, boolean operations such as `&` (AND), `|` (OR) and `^` (XOR) and many others (comparison operations, unary operator, etc.) can also be used.

During synthesis these operators are replaced by cells that implement the respective function.

Many FOSS tools that claim to be able to process Verilog in fact only support basic structural Verilog and simple expressions. Yosys can be used to convert full featured synthesizable Verilog to this simpler subset, thus enabling such applications to be used with a richer set of Verilog features.

5.2.3 Behavioural modelling

Code that utilizes the Verilog `always` statement is using Behavioural Modelling. In behavioural modelling, a circuit is described by means of imperative program code that is executed on certain events, namely any change, a rising edge, or a falling edge of a signal. This is a very flexible construct during simulation but is only synthesizable when one of the following is modelled:

- **Asynchronous or latched logic**

In this case the sensitivity list must contain all expressions that are used within the `always` block. The syntax `@*` can be used for these cases. Examples of this kind include:

```

1  // asynchronous
2  always @* begin
3      if (add_mode)
4          y <= a + b;
5      else
6          y <= a - b;
7  end
8
9  // latched
10 always @* begin
11     if (!hold)
12         y <= a + b;
13 end

```

Note that latched logic is often considered bad style and in many cases just the result of sloppy HDL design. Therefore many synthesis tools generate warnings whenever latched logic is generated.

- **Synchronous logic (with optional synchronous reset)**

This is logic with d-type flip-flops on the output. In this case the sensitivity list must only contain the respective clock edge. Example:

```

1  // counter with synchronous reset
2  always @(posedge clk) begin
3      if (reset)
4          y <= 0;
5      else
6          y <= y + 1;
7  end

```

- **Synchronous logic with asynchronous reset**

This is logic with d-type flip-flops with asynchronous resets on the output. In this case the sensitivity list must only contain the respective clock and reset edges. The values assigned in the reset branch must be constant. Example:

```
1 // counter with asynchronous reset
2 always @(posedge clk, posedge reset) begin
3     if (reset)
4         y <= 0;
5     else
6         y <= y + 1;
7 end
```

Many synthesis tools support a wider subset of flip-flops that can be modelled using always-statements (including Yosys). But only the ones listed above are covered by the Verilog synthesis standard and when writing new designs one should limit herself or himself to these cases.

In behavioural modelling, blocking assignments (=) and non-blocking assignments (<=) can be used. The concept of blocking vs. non-blocking assignment is one of the most misunderstood constructs in Verilog [CI00].

The blocking assignment behaves exactly like an assignment in any imperative programming language, while with the non-blocking assignment the right hand side of the assignment is evaluated immediately but the actual update of the left hand side register is delayed until the end of the time-step. For example the Verilog code `a <= b; b <= a;` exchanges the values of the two registers.

5.2.4 Functions and tasks

Verilog supports Functions and Tasks to bundle statements that are used in multiple places (similar to Procedures in imperative programming). Both constructs can be implemented easily by substituting the function/task-call with the body of the function or task.

5.2.5 Conditionals, loops and generate-statements

Verilog supports `if-else`-statements and `for`-loops inside `always`-statements.

It also supports both features in `generate`-statements on the module level. This can be used to selectively enable or disable parts of the module based on the module parameters (`if-else`) or to generate a set of similar subcircuits (`for`).

While the `if-else`-statement inside an `always`-block is part of behavioural modelling, the three other cases are (at least for a synthesis tool) part of a built-in macro processor. Therefore it must be possible for the synthesis tool to completely unroll all loops and evaluate the condition in all `if-else`-statement in `generate`-statements using const-folding..

5.2.6 Arrays and memories

Verilog supports arrays. This is in general a synthesizable language feature. In most cases arrays can be synthesized by generating addressable memories. However, when complex or asynchronous access patterns are used, it is not possible to model an array as memory. In these cases the array must be modelled using individual signals for each word and all accesses to the array must be implemented using large multiplexers.

In some cases it would be possible to model an array using memories, but it is not desired. Consider the following delay circuit:

```
1 module (clk, in_data, out_data);
2
3 parameter BITS = 8;
4 parameter STAGES = 4;
5
6 input clk;
```

(continues on next page)

(continued from previous page)

```

7  input [BITS-1:0] in_data;
8  output [BITS-1:0] out_data;
9  reg [BITS-1:0] ffs [STAGES-1:0];
10
11 integer i;
12 always @(posedge clk) begin
13     ffs[0] <= in_data;
14     for (i = 1; i < STAGES; i = i+1)
15         ffs[i] <= ffs[i-1];
16 end
17
18 assign out_data = ffs[STAGES-1];
19
20 endmodule

```

This could be implemented using an addressable memory with STAGES input and output ports. A better implementation would be to use a simple chain of flip-flops (a so-called shift register). This better implementation can either be obtained by first creating a memory-based implementation and then optimizing it based on the static address signals for all ports or directly identifying such situations in the language front end and converting all memory accesses to direct accesses to the correct signals.

5.3 Challenges in digital circuit synthesis

This section summarizes the most important challenges in digital circuit synthesis. Tools can be characterized by how well they address these topics.

5.3.1 Standards compliance

The most important challenge is compliance with the HDL standards in question (in case of Verilog the IEEE Standards 1364.1-2002 and 1364-2005). This can be broken down in two items:

- Completeness of implementation of the standard
- Correctness of implementation of the standard

Completeness is mostly important to guarantee compatibility with existing HDL code. Once a design has been verified and tested, HDL designers are very reluctant regarding changes to the design, even if it is only about a few minor changes to work around a missing feature in a new synthesis tool.

Correctness is crucial. In some areas this is obvious (such as correct synthesis of basic behavioural models). But it is also crucial for the areas that concern minor details of the standard, such as the exact rules for handling signed expressions, even when the HDL code does not target different synthesis tools. This is because (unlike software source code that is only processed by compilers), in most design flows HDL code is not only processed by the synthesis tool but also by one or more simulators and sometimes even a formal verification tool. It is key for this verification process that all these tools use the same interpretation for the HDL code.

5.3.2 Optimizations

Generally it is hard to give a one-dimensional description of how well a synthesis tool optimizes the design. First of all because not all optimizations are applicable to all designs and all synthesis tasks. Some optimizations work (best) on a coarse-grained level (with complex cells such as adders or multipliers) and others work (best) on a fine-grained level (single bit gates). Some optimizations target area and others target speed. Some work well on large designs while others don't scale well and can only be applied to small designs.

A good tool is capable of applying a wide range of optimizations at different levels of abstraction and gives the designer control over which optimizations are performed (or skipped) and what the optimization goals are.

5.3.3 Technology mapping

Technology mapping is the process of converting the design into a netlist of cells that are available in the target architecture. In an ASIC flow this might be the process-specific cell library provided by the fab. In an FPGA flow this might be LUT cells as well as special function units such as dedicated multipliers. In a coarse-grain flow this might even be more complex special function units.

An open and vendor independent tool is especially of interest if it supports a wide range of different types of target architectures.

5.4 Script-based synthesis flows

A digital design is usually started by implementing a high-level or system-level simulation of the desired function. This description is then manually transformed (or re-implemented) into a synthesizable lower-level description (usually at the behavioural level) and the equivalence of the two representations is verified by simulating both and comparing the simulation results.

Then the synthesizable description is transformed to lower-level representations using a series of tools and the results are again verified using simulation. This process is illustrated in Fig. 5.2.

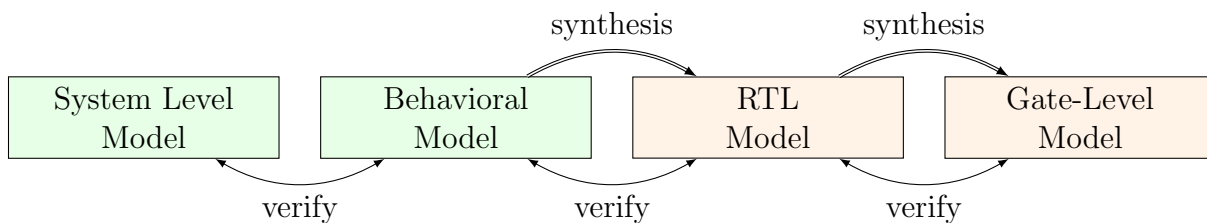


Fig. 5.2: Typical design flow. Green boxes represent manually created models. Orange boxes represent models generated by synthesis tools.

In this example the System Level Model and the Behavioural Model are both manually written design files. After the equivalence of system level model and behavioural model has been verified, the lower level representations of the design can be generated using synthesis tools. Finally the RTL Model and the Gate-Level Model are verified and the design process is finished.

However, in any real-world design effort there will be multiple iterations for this design process. The reason for this can be the late change of a design requirement or the fact that the analysis of a low-abstraction model (e.g. gate-level timing analysis) revealed that a design change is required in order to meet the design requirements (e.g. maximum possible clock speed).

Whenever the behavioural model or the system level model is changed their equivalence must be re-verified by re-running the simulations and comparing the results. Whenever the behavioural model is changed the synthesis must be re-run and the synthesis results must be re-verified.

In order to guarantee reproducibility it is important to be able to re-run all automatic steps in a design project with a fixed set of settings easily. Because of this, usually all programs used in a synthesis flow can be controlled using scripts. This means that all functions are available via text commands. When such a tool provides a GUI, this is complementary to, and not instead of, a command line interface.

Usually a synthesis flow in an UNIX/Linux environment would be controlled by a shell script that calls all required tools (synthesis and simulation/verification in this example) in the correct order. Each of these

tools would be called with a script file containing commands for the respective tool. All settings required for the tool would be provided by these script files so that no manual interaction would be necessary. These script files are considered design sources and should be kept under version control just like the source code of the system level and the behavioural model.

5.5 Methods from compiler design

Some parts of synthesis tools involve problem domains that are traditionally known from compiler design. This section addresses some of these domains.

5.5.1 Lexing and parsing

The best known concepts from compiler design are probably lexing and parsing. These are two methods that together can be used to process complex computer languages easily. [ASU86]

A lexer consumes single characters from the input and generates a stream of lexical tokens that consist of a type and a value. For example the Verilog input `assign foo = bar + 42;` might be translated by the lexer to the list of lexical tokens given in Tab. 5.1.

Table 5.1: Exemplary token list for the statement `assign foo = bar + 42;`

| Token-Type | Token-Value |
|----------------|-------------|
| TOK_ASSIGN | - |
| TOK_IDENTIFIER | "foo" |
| TOK_EQ | - |
| TOK_IDENTIFIER | "bar" |
| TOK_PLUS | - |
| TOK_NUMBER | 42 |
| TOK_SEMICOLON | - |

The lexer is usually generated by a lexer generator (e.g. flex) from a description file that is using regular expressions to specify the text pattern that should match the individual tokens.

The lexer is also responsible for skipping ignored characters (such as whitespace outside string constants and comments in the case of Verilog) and converting the original text snippet to a token value.

Note that individual keywords use different token types (instead of a keyword type with different token values). This is because the parser usually can only use the Token-Type to make a decision on the grammatical role of a token.

The parser then transforms the list of tokens into a parse tree that closely resembles the productions from the computer languages grammar. As the lexer, the parser is also typically generated by a code generator (e.g. bison) from a grammar description in Backus-Naur Form (BNF).

Let's consider the following BNF (in Bison syntax):

```

1 assign_stmt: TOK_ASSIGN TOK_IDENTIFIER TOK_EQ expr TOK_SEMICOLON;
2 expr: TOK_IDENTIFIER | TOK_NUMBER | expr TOK_PLUS expr;
```

The parser converts the token list to the parse tree in Fig. 5.3. Note that the parse tree never actually exists as a whole as data structure in memory. Instead the parser calls user-specified code snippets (so-called reduce-functions) for all inner nodes of the parse tree in depth-first order.

In some very simple applications (e.g. code generation for stack machines) it is possible to perform the task at hand directly in the reduce functions. But usually the reduce functions are only used to build an

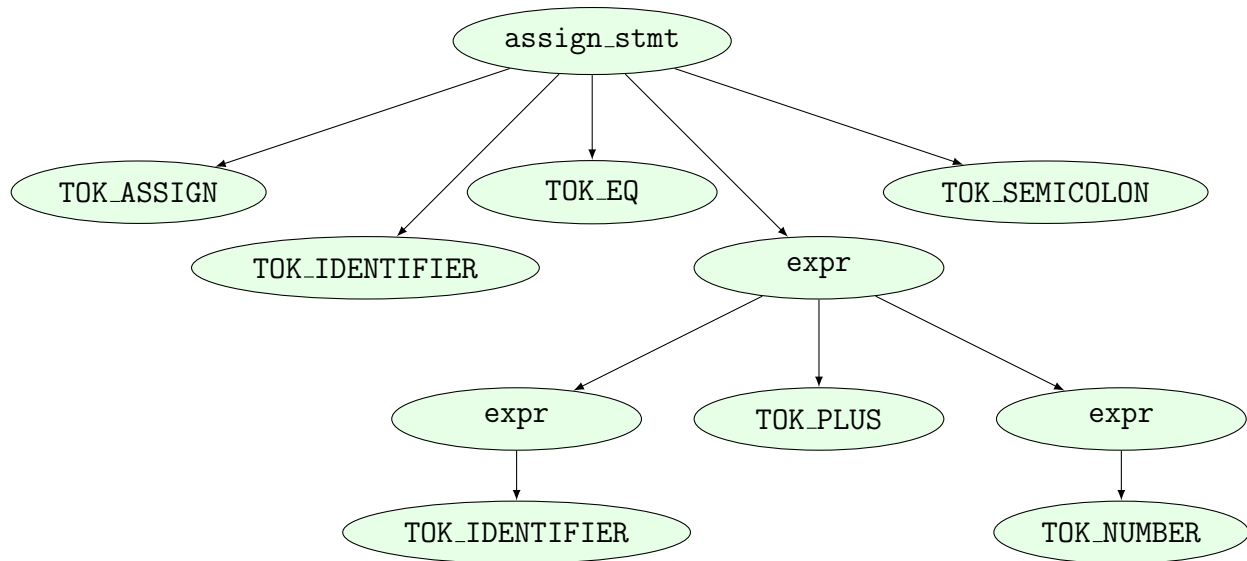


Fig. 5.3: Example parse tree for the Verilog expression `assign foo = bar + 42;`

in-memory data structure with the relevant information from the parse tree. This data structure is called an abstract syntax tree (AST).

The exact format for the abstract syntax tree is application specific (while the format of the parse tree and token list are mostly dictated by the grammar of the language at hand). Figure 5.4 illustrates what an AST for the parse tree in Fig. 5.3 could look like.

Usually the AST is then converted into yet another representation that is more suitable for further processing. In compilers this is often an assembler-like three-address-code intermediate representation. [ASU86]

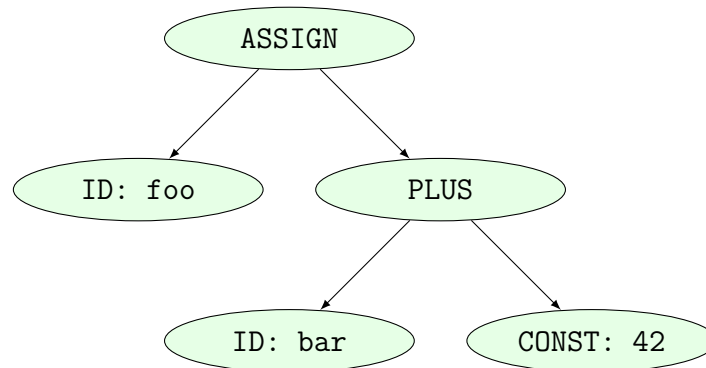


Fig. 5.4: Example abstract syntax tree for the Verilog expression `assign foo = bar + 42;`

5.5.2 Multi-pass compilation

Complex problems are often best solved when split up into smaller problems. This is certainly true for compilers as well as for synthesis tools. The components responsible for solving the smaller problems can be connected in two different ways: through Single-Pass Pipelining and by using Multiple Passes.

Traditionally a parser and lexer are connected using the pipelined approach: The lexer provides a function that is called by the parser. This function reads data from the input until a complete lexical token has been read. Then this token is returned to the parser. So the lexer does not first generate a complete list of lexical

tokens and then pass it to the parser. Instead they run concurrently and the parser can consume tokens as the lexer produces them.

The single-pass pipelining approach has the advantage of lower memory footprint (at no time must the complete design be kept in memory) but has the disadvantage of tighter coupling between the interacting components.

Therefore single-pass pipelining should only be used when the lower memory footprint is required or the components are also conceptually tightly coupled. The latter certainly is the case for a parser and its lexer. But when data is passed between two conceptually loosely coupled components it is often beneficial to use a multi-pass approach.

In the multi-pass approach the first component processes all the data and the result is stored in a in-memory data structure. Then the second component is called with this data. This reduces complexity, as only one component is running at a time. It also improves flexibility as components can be exchanged easier.

Most modern compilers are multi-pass compilers.

5.5.3 Static Single Assignment (SSA) form

In imperative programming (and behavioural HDL design) it is possible to assign the same variable multiple times. This can either mean that the variable is independently used in two different contexts or that the final value of the variable depends on a condition.

The following examples show C code in which one variable is used independently in two different contexts:

```

1 void demo1()
2 {
3     int a = 1;
4     printf("%d\n", a);
5
6     a = 2;
7     printf("%d\n", a);
8 }

```

```

void demo1()
{
    int a = 1;
    printf("%d\n", a);

    int b = 2;
    printf("%d\n", b);
}

```

```

1 void demo2(bool foo)
2 {
3     int a;
4     if (foo) {
5         a = 23;
6         printf("%d\n", a);
7     } else {
8         a = 42;
9         printf("%d\n", a);
10    }
11 }

```

```
void demo2(bool foo)
{
    int a, b;
    if (foo) {
        a = 23;
        printf("%d\n", a);
    } else {
        b = 42;
        printf("%d\n", b);
    }
}
```

In both examples the left version (only variable **a**) and the right version (variables **a** and **b**) are equivalent. Therefore it is desired for further processing to bring the code in an equivalent form for both cases.

In the following example the variable is assigned twice but it cannot be easily replaced by two variables:

```
void demo3(bool foo)
{
    int a = 23
    if (foo)
        a = 42;
    printf("%d\n", a);
}
```

Static single assignment (SSA) form is a representation of imperative code that uses identical representations for the left and right version of demos 1 and 2, but can still represent demo 3. In SSA form each assignment assigns a new variable (usually written with an index). But it also introduces a special Φ -function to merge the different instances of a variable when needed. In C-pseudo-code the demo 3 would be written as follows using SSA form:

```
void demo3(bool foo)
{
    int a_1, a_2, a_3;
    a_1 = 23
    if (foo)
        a_2 = 42;
    a_3 = phi(a_1, a_2);
    printf("%d\n", a_3);
}
```

The Φ -function is usually interpreted as “these variables must be stored in the same memory location” during code generation. Most modern compilers for imperative languages such as C/C++ use SSA form for at least some of its passes as it is very easy to manipulate and analyse.

RTLIL TEXT REPRESENTATION

This appendix documents the text representation of RTLIL in extended Backus-Naur form (EBNF).

The grammar is not meant to represent semantic limitations. That is, the grammar is “permissive”, and later stages of processing perform more rigorous checks.

The grammar is also not meant to represent the exact grammar used in the RTLIL frontend, since that grammar is specific to processing by lex and yacc, is even more permissive, and is somewhat less understandable than simple EBNF notation.

Finally, note that all statements (rules ending in `-stmt`) terminate in an end-of-line. Because of this, a statement cannot be broken into multiple lines.

6.1 Lexical elements

6.1.1 Characters

An RTLIL file is a stream of bytes. Strictly speaking, a “character” in an RTLIL file is a single byte. The lexer treats multi-byte encoded characters as consecutive single-byte characters. While other encodings *may* work, UTF-8 is known to be safe to use. Byte order marks at the beginning of the file will cause an error.

ASCII spaces (32) and tabs (9) separate lexer tokens.

A `nonws` character, used in identifiers, is any character whose encoding consists solely of bytes above ASCII space (32).

An `eo1` is one or more consecutive ASCII newlines (10) and carriage returns (13).

6.1.2 Identifiers

There are two types of identifiers in RTLIL:

- Publically visible identifiers
- Auto-generated identifiers

| | |
|---------------------------------|---|
| <code><id></code> | <code>::= <public-id> <autogen-id></code> |
| <code><public-id></code> | <code>::= \ <nonws>+</code> |
| <code><autogen-id></code> | <code>::= \$ <nonws>+</code> |

6.1.3 Values

A *value* consists of a width in bits and a bit representation, most significant bit first. Bits may be any of:

- 0: A logic zero value
- 1: A logic one value

- **x**: An unknown logic value (or don't care in case patterns)
- **z**: A high-impedance value (or don't care in case patterns)
- **m**: A marked bit (internal use only)
- **-**: A don't care value

An *integer* is simply a signed integer value in decimal format. **Warning:** Integer constants are limited to 32 bits. That is, they may only be in the range $[-2147483648, 2147483648]$. Integers outside this range will result in an error.

```
<value>      ::= <decimal-digit>+ ' ' <binary-digit>*  
<decimal-digit> ::= 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9  
<binary-digit>  ::= 0 | 1 | x | z | m | -  
<integer>      ::= -? <decimal-digit>+
```

6.1.4 Strings

A string is a series of characters delimited by double-quote characters. Within a string, any character except ASCII NUL (0) may be used. In addition, certain escapes can be used:

- **\n**: A newline
- **\t**: A tab
- **\ooo**: A character specified as a one, two, or three digit octal value

All other characters may be escaped by a backslash, and become the following character. Thus:

- ****: A backslash
- **\"**: A double-quote
- **\r**: An 'r' character

6.1.5 Comments

A comment starts with a **#** character and proceeds to the end of the line. All comments are ignored.

6.2 File

A file consists of an optional autoindex statement followed by zero or more modules.

```
<file> ::= <autoidx-stmt>? <module>*
```

6.2.1 Autoindex statements

The autoindex statement sets the global autoindex value used by Yosys when it needs to generate a unique name, e.g. **flattenN**. The **N** part is filled with the value of the global autoindex value, which is subsequently incremented. This global has to be dumped into RTLIL, otherwise e.g. dumping and running a pass would have different properties than just running a pass on a warm design.

```
<autoidx-stmt> ::= autoidx <integer> <eol>
```

6.2.2 Modules

Declares a module, with zero or more attributes, consisting of zero or more wires, memories, cells, processes, and connections.

```

<module>          ::= <attr-stmt>* <module-stmt> <module-body> <module-end-stmt>
<module-stmt>     ::= module <id> <eol>
<module-body>     ::= (<param-stmt>
                        | <wire>
                        | <memory>
                        | <cell>
                        | <process>)*
<param-stmt>      ::= parameter <id> <constant>? <eol>
<constant>        ::= <value> | <integer> | <string>
<module-end-stmt> ::= end <eol>

```

6.2.3 Attribute statements

Declares an attribute with the given identifier and value.

```

<attr-stmt> ::= attribute <id> <constant> <eol>

```

6.2.4 Signal specifications

A signal is anything that can be applied to a cell port, i.e. a constant value, all bits or a selection of bits from a wire, or concatenations of those.

Warning: When an integer constant is a sigspec, it is always 32 bits wide, 2's complement. For example, a constant of -1 is the same as `32'11111111111111111111111111111111`, while a constant of 1 is the same as `32'1`.

See *RTLIL::SigSpec* for an overview of signal specifications.

```

<sigspec> ::= <constant>
            | <wire-id>
            | <sigspec> [ <integer> (:<integer>)? ]
            | { <sigspec>* }

```

6.2.5 Connections

Declares a connection between the given signals.

```

<conn-stmt> ::= connect <sigspec> <sigspec> <eol>

```

6.2.6 Wires

Declares a wire, with zero or more attributes, with the given identifier and options in the enclosing module.

See *RTLIL::Cell* and *RTLIL::Wire* for an overview of wires.

```

<wire>          ::= <attr-stmt>* <wire-stmt>
<wire-stmt>     ::= wire <wire-option>* <wire-id> <eol>
<wire-id>       ::= <id>
<wire-option>   ::= width <integer>
                  | offset <integer>

```

(continues on next page)

(continued from previous page)

```

|   input <integer>
|   output <integer>
|   inout <integer>
|   upto
|   signed

```

6.2.7 Memories

Declares a memory, with zero or more attributes, with the given identifier and options in the enclosing module.

See *RTLIL::Memory* for an overview of memory cells, and *Memories* for details about memory cell types.

```

<memory>      ::= <attr-stmt>* <memory-stmt>
<memory-stmt> ::= memory <memory-option>* <id> <eol>
<memory-option> ::= width <integer>
                  |   size <integer>
                  |   offset <integer>

```

6.2.8 Cells

Declares a cell, with zero or more attributes, with the given identifier and type in the enclosing module.

Cells perform functions on input signals. See *Internal cell library* for a detailed list of cell types.

```

<cell>      ::= <attr-stmt>* <cell-stmt> <cell-body-stmt>* <cell-end-stmt>
<cell-stmt> ::= cell <cell-type> <cell-id> <eol>
<cell-id>   ::= <id>
<cell-type> ::= <id>
<cell-body-stmt> ::= parameter (signed | real)? <id> <constant> <eol>
                  | connect <id> <sigspec> <eol>
<cell-end-stmt> ::= end <eol>

```

6.2.9 Processes

Declares a process, with zero or more attributes, with the given identifier in the enclosing module. The body of a process consists of zero or more assignments followed by zero or more switches and zero or more syncs.

See *RTLIL::Process* for an overview of processes.

```

<process>      ::= <attr-stmt>* <proc-stmt> <process-body> <proc-end-stmt>
<proc-stmt>    ::= process <id> <eol>
<process-body> ::= <assign-stmt>* <switch>* <sync>*
<assign-stmt>  ::= assign <dest-sigspec> <src-sigspec> <eol>
<dest-sigspec> ::= <sigspec>
<src-sigspec>  ::= <sigspec>
<proc-end-stmt> ::= end <eol>

```

6.2.10 Switches

Switches test a signal for equality against a list of cases. Each case specifies a comma-separated list of signals to check against. If there are no signals in the list, then the case is the default case. The body of a case consists of zero or more assignments followed by zero or more switches. Both switches and cases may have zero or more attributes.

```

<switch>          ::= <switch-stmt> <case>* <switch-end-stmt>
<switch-stmt>     ::= <attr-stmt>* switch <sigspec> <eol>
<case>           ::= <attr-stmt>* <case-stmt> <case-body>
<case-stmt>       ::= case <compare>? <eol>
<compare>         ::= <sigspec> (, <sigspec>)*
<case-body>       ::= <assign-stmt>* <switch>*
<switch-end-stmt> ::= end <eol>

```

6.2.11 Syncs

Syncs update signals with other signals when an event happens. Such an event may be:

- An edge or level on a signal
- Global clock ticks
- Initialization
- Always

```

<sync>            ::= <sync-stmt> <update-stmt>*
<sync-stmt>       ::= sync <sync-type> <sigspec> <eol>
                   | sync global <eol>
                   | sync init <eol>
                   | sync always <eol>
<sync-type>       ::= low | high | posedge | negedge | edge
<update-stmt>     ::= update <dest-sigspec> <src-sigspec> <eol>

```


AUXILIARY LIBRARIES

The Yosys source distribution contains some auxiliary libraries that are compiled into Yosys and can be used in plugins.

7.1 BigInt

The files in `libs/bigint/` provide a library for performing arithmetic with arbitrary length integers. It is written by Matt McCutchen.

The BigInt library is used for evaluating constant expressions, e.g. using the `ConstEval` class provided in `kernel/consteval.h`.

See also: <http://mattmccutchen.net/bigint/>

7.2 dlfcn-win32

The `dlfcn` library enables runtime loading of plugins without requiring recompilation of Yosys. The files in `libs/dlfcn-win32` provide an implementation of `dlfcn` for Windows.

See also: <https://github.com/dlfcn-win32/dlfcn-win32>

7.3 ezSAT

The files in `libs/ezsat` provide a library for simplifying generating CNF formulas for SAT solvers. It also contains bindings of MiniSAT. The ezSAT library is written by C. Wolf. It is used by the `sat` pass.

7.4 fst

`libfst` files from `gtkwave` are included in `libs/fst` to support reading/writing signal traces from/to the GTKWave developed FST format. This is primarily used in the `sim` command.

7.5 json11

For reading/writing designs from/to JSON, `read_json` and `write_json` should be used. For everything else there is the `json11` library:

`json11` is a tiny JSON library for C++11, providing JSON parsing and serialization.

This library is used for outputting machine-readable statistics (`stat` with `-json` flag), using the RPC frontend (`connect_rpc`), and the yosys-witness `yw` format.

7.6 MiniSAT

The files in `libs/minisat` provide a high-performance SAT solver, used by the `sat` command.

7.7 SHA1

The files in `libs/sha1/` provide a public domain SHA1 implementation written by Steve Reid, Bruce Guenter, and Volker Grabsch. It is used for generating unique names when specializing parameterized modules.

7.8 SubCircuit

The files in `libs/subcircuit` provide a library for solving the subcircuit isomorphism problem. It is written by C. Wolf and based on the Ullmann Subgraph Isomorphism Algorithm [Ull76]. It is used by the `extract` pass.

AUXILIARY PROGRAMS

Besides the main yosys executable, the Yosys distribution contains a set of additional helper programs.

8.1 yosys-config

The `yosys-config` tool (an auto-generated shell-script) can be used to query compiler options and other information needed for building loadable modules for Yosys. See *Writing extensions* for details.

```
Usage: ./yosys-config [--exec] [--prefix pf] args..
       ./yosys-config --build modname.so cppsources..

Replacement args:
--cxx      g++
--cxxflags -O2 -flto=auto -ffat-lto-objects -fexceptions -g \
           -grecord-gcc-switches -pipe -Wall -Werror=format-security \
           -Wp,-U_FORTIFY_SOURCE,-D_FORTIFY_SOURCE=3 \
           -Wp,-D_GLIBCXX_ASSERTIONS \
           -specs=/usr/lib/rpm/redhat/redhat-hardened-cc1 \
           -fstack-protector-strong \
           -specs=/usr/lib/rpm/redhat/redhat-annobin-cc1 -m64 \
           -march=x86-64 -mtune=generic -fasynchronous-unwind-tables \
           -fstack-clash-protection -fcf-protection -mtls-dialect=gnu2 \
           -fno-omit-frame-pointer -mno-omit-leaf-frame-pointer \
           -Wall -Wextra -ggdb -I"/usr/include/yosys" -MD -MP \
           -D_YOSYS_ -fPIC -I/usr/include -DYOSYS_VER=\"0.56+30\" \
           -DYOSYS_MAJOR=0 -DYOSYS_MINOR=56 -DYOSYS_COMMIT=30 \
           -std=c++17 -O3 -DYOSYS_ENABLE_READLINE \
           -DYOSYS_ENABLE_PLUGINS -DYOSYS_ENABLE_GLOB \
           -DYOSYS_ENABLE_ZLIB -DTCL_WITH_EXTERNAL_TOMMATH \
           -DWITH_GZFILEOP -DYOSYS_ENABLE_TCL -DYOSYS_ENABLE_ABC \
           -DYOSYS_ENABLE_COVER
--linkflags -rdynamic
--ldflags   (alias of --linkflags)
--libs      -lstdc++ -lm -lrt -lreadline -lffi -ldl -lz -ltcl9.0 -ltclstub -
↳ltommath
--ldlibs     (alias of --libs)
--bindir     /usr/bin
--datdir     /usr/share/yosys
```

All other args are passed through as they are.

(continues on next page)

(continued from previous page)

Use `--exec` to call a command instead of generating output. Example usage:

```
./yosys-config --exec --cxx --cxxflags --ldflags -o plugin.so -shared plugin.cc --libs
```

The above command can be abbreviated as:

```
./yosys-config --build plugin.so plugin.cc
```

Use `--prefix` to change the prefix for the special args from `'--'` to something else. Example:

```
./yosys-config --prefix @ bindir: @bindir
```

The args `--bindir` and `--datdir` can be directly followed by a slash and additional text. Example:

```
./yosys-config --datdir/simlib.v
```

8.2 yosys-filterlib

Todo

how does a filterlib rules-file work?

The `yosys-filterlib` tool is a small utility that can be used to strip or extract information from a Liberty file. This can be useful for removing sensitive or proprietary information such as timing or other trade secrets.

```
Usage: filterlib [rules-file [liberty-file]]
       or: filterlib -verilogsim [liberty-file]
```

8.3 yosys-abc

This is a fork of ABC with a small set of custom modifications that have not yet been accepted upstream. Not all versions of Yosys work with all versions of ABC. So Yosys comes with its own `yosys-abc` to avoid compatibility issues between the two.

8.4 yosys-smtbmc

The `yosys-smtbmc` tool is a utility used by SBY for interacting with smt solvers.

```
yosys-smtbmc [options] <yosys_smt2_output>
```

```
-h, --help
      show this message
```

```
-t <num_steps>
```

(continues on next page)

(continued from previous page)

```

-t <skip_steps>:<num_steps>
-t <skip_steps>:<step_size>:<num_steps>
    default: skip_steps=0, step_size=1, num_steps=20

-g
    generate an arbitrary trace that satisfies
    all assertions and assumptions.

-i
    instead of BMC run temporal induction

-c
    instead of regular BMC run cover analysis

-m <module_name>
    name of the top module

--smtc <constr_filename>
    read constraints file

--cex <cex_filename>
    read cex file as written by ABC's "write_cex -n"

--aig <prefix>
    read AIGER map file (as written by Yosys' "write_aiger -map")
    and AIGER witness file. The file names are <prefix>.aim for
    the map file and <prefix>.aiw for the witness file.

--aig <aim_filename>:<aiw_filename>
    like above, but for map files and witness files that do not
    share a filename prefix (or use different file extensions).

--aig-noheader
    the AIGER witness file does not include the status and
    properties lines.

--yw <yosys_witness_filename>
    read a Yosys witness.

--btorwit <btor_witness_filename>
    read a BTOR witness.

--noinfo
    only run the core proof, do not collect and print any
    additional information (e.g. which assert failed)

--presat
    check if the design with assumptions but without assertions
    is SAT before checking if assertions are UNSAT. This will
    detect if there are contradicting assumptions. In some cases
    this will also help to "warm up" the solver, potentially
    yielding a speedup.

```

(continues on next page)

(continued from previous page)

```
--final-only
    only check final constraints, assume base case

--assume-skipped <start_step>
    assume asserts in skipped steps in BMC.
    no assumptions are created for skipped steps
    before <start_step>.

--dump-vcd <vcd_filename>
    write trace to this VCD file
    (hint: use 'write_smt2 -wires' for maximum
    coverage of signals in generated VCD file)

--dump-yw <yw_filename>
    write trace as a Yosys witness trace

--dump-vlogtb <verilog_filename>
    write trace as Verilog test bench

--vlogtb-top <hierarchical_name>
    use the given entity as top module for the generated
    Verilog test bench. The <hierarchical_name> is relative
    to the design top module without the top module name.

--dump-smtc <constr_filename>
    write trace as constraints file

--smtc-init
    write just the last state as initial constraint to smtc file

--smtc-top <old>[:<new>]
    replace <old> with <new> in constraints dumped to smtc
    file and only dump object below <old> in design hierarchy.

--noinit
    do not assume initial conditions in state 0

--dump-all
    when using -g or -i, create a dump file for each
    step. The character '%' is replaced in all dump
    filenames with the step number.

--append <num_steps>
    add <num_steps> time steps at the end of the trace
    when creating a counter example (this additional time
    steps will still be constrained by assumptions)

--binary
    dump anyconst values as raw bit strings

--keep-going
```

(continues on next page)

(continued from previous page)

```

    continue BMC after the first failed assertion and report
    further failed assertions. To output multiple traces
    covering all found failed assertions, the character '%' is
    replaced in all dump filenames with an increasing number.
    In cover mode, don't stop when a cover trace contains a failed
    assertion.

--check-witness
    check that the used witness file contains sufficient
    constraints to force an assertion failure.

--detect-loops
    check if states are unique in temporal induction counter examples
    (this feature is experimental and incomplete)

--incremental
    run in incremental mode (experimental)

--track-assumes
    track individual assumptions and report a subset of used
    assumptions that are sufficient for the reported outcome. This
    can be used to debug PREUNSAT failures as well as to find a
    smaller set of sufficient assumptions.

--minimize-assumes
    when using --track-assumes, solve for a minimal set of sufficient assumptions.

-s <solver>
    set SMT solver: z3, yices, boolector, bitwuzla, cvc4, cvc5, mathsat, dummy
    default: yices

-S <opt>
    pass <opt> as command line argument to the solver

--timeout <value>
    set the solver timeout to the specified value (in seconds).

--logic <smt2_logic>
    use the specified SMT2 logic (e.g. QF_AUFBV)

--dummy <filename>
    if solver is "dummy", read solver output from that file
    otherwise: write solver output to that file

--smt2-option <option>=<value>
    enable an SMT-LIBv2 option.

-v
    enable debug output

--unroll
    unroll uninterpreted functions

```

(continues on next page)

(continued from previous page)

```
--noincr
    don't use incremental solving, instead restart solver for
    each (check-sat). This also avoids (push) and (pop).

--noprogess
    disable timer display during solving
    (this option is set implicitly on Windows)

--dump-smt2 <filename>
    write smt2 statements to file

--info <smt2-info-stmt>
    include the specified smt2 info statement in the smt2 output

--nocomments
    strip all comments from the generated smt2 code
```

8.5 yosys-witness

`yosys-witness` is a new tool to inspect and convert yosys witness traces. This is used in SBY and SCY for producing traces in a consistent format independent of the solver.

Usage: `yosys-witness [OPTIONS] COMMAND [ARGS]...`

Options:

`--help` Show this message and exit.

Commands:

| | |
|----------------------|--|
| <code>aiw2yw</code> | Convert an AIGER witness trace into a Yosys witness trace. |
| <code>display</code> | Display a Yosys witness trace in a human readable format. |
| <code>stats</code> | Display statistics of a Yosys witness trace. |
| <code>wit2yw</code> | Convert a BTOR witness trace into a Yosys witness trace. |
| <code>yw2aiw</code> | Convert a Yosys witness trace into an AIGER witness trace. |
| <code>yw2yw</code> | Transform a Yosys witness trace. |

Note

`yosys-witness` requires [click](#) Python package for use.

Todo

see if we can get the two hanging appnotes as lit references

INTERNAL CELL LIBRARY

The intermediate language used by Yosys (RTLIL) represents logic and memory with a series of cells. This section provides details for those cells, breaking them down into two major categories: coarse-grain word-level cells; and fine-grain gate-level cells. An additional section contains a list of properties which may be shared across multiple cells.

9.1 Word-level cells

Most of the RTL cells closely resemble the operators available in HDLs such as Verilog or VHDL. Therefore Verilog operators are used in the following sections to define the behaviour of the RTL cells.

Note that all RTL cells have parameters indicating the size of inputs and outputs. When passes modify RTL cells they must always keep the values of these parameters in sync with the size of the signals connected to the inputs and outputs.

Simulation models for the RTL cells can be found in the file `techlibs/common/simlib.v` in the Yosys source tree.

9.1.1 Unary operators

All unary RTL cells have one input port **A** and one output port **Y**. They also have the following parameters:

A_SIGNED

Set to a non-zero value if the input **A** is signed and therefore should be sign-extended when needed.

A_WIDTH

The width of the input port **A**.

Y_WIDTH

The width of the output port **Y**.

Table 9.1: Cell types for unary operators with their corresponding Verilog expressions.

| Verilog | Cell Type |
|-------------------------|----------------------------|
| <code>Y = ~A</code> | <code>\$not</code> |
| <code>Y = +A</code> | <code>\$pos</code> |
| <code>Y = -A</code> | <code>\$neg</code> |
| <code>Y = &A</code> | <code>\$reduce_and</code> |
| <code>Y = A</code> | <code>\$reduce_or</code> |
| <code>Y = ^A</code> | <code>\$reduce_xor</code> |
| <code>Y = ~^A</code> | <code>\$reduce_xnor</code> |
| <code>Y = A</code> | <code>\$reduce_bool</code> |
| <code>Y = !A</code> | <code>\$logic_not</code> |

For the unary cells that output a logical value (*\$reduce_and*, *\$reduce_or*, *\$reduce_xor*, *\$reduce_xnor*, *\$reduce_bool*, *\$logic_not*), when the *Y_WIDTH* parameter is greater than 1, the output is zero-extended, and only the least significant bit varies.

Note that *\$reduce_or* and *\$reduce_bool* generally represent the same logic function. But the *read_verilog* frontend will generate them in different situations. A *\$reduce_or* cell is generated when the prefix *|* operator is being used. A *\$reduce_bool* cell is generated when a bit vector is used as a condition in an if-statement or *?:-*expression.

yosys> help \$buf

A simple coarse-grain buffer cell type for the experimental buffered-normalized mode. Note this cell does't get removed by 'opt_clean' and is not recommended for general use.

Properties

is_evaluateable

Simulation model (verilog)

Listing 9.1: simlib.v

```

98 module \ $buf (A, Y);
99
100     parameter WIDTH = 0;
101
102     input [WIDTH-1:0] A;
103     output [WIDTH-1:0] Y;
104
105     assign Y = A;
106
107 endmodule

```

yosys> help \$logic_not

A logical inverter. This corresponds to the Verilog unary prefix '!' operator.

Properties

is_evaluateable

Simulation model (verilog)

Listing 9.2: simlib.v

```

1513 module \ $logic_not (A, Y);
1514
1515     parameter A_SIGNED = 0;
1516     parameter A_WIDTH = 0;
1517     parameter Y_WIDTH = 0;
1518
1519     input [A_WIDTH-1:0] A;
1520     output [Y_WIDTH-1:0] Y;
1521
1522     generate
1523         if (A_SIGNED) begin:BLOCK1
1524             assign Y = !$signed(A);
1525         end else begin:BLOCK2

```

(continues on next page)

(continued from previous page)

```

1526         assign Y = !A;
1527     end
1528 endgenerate
1529
1530 endmodule

```

yosys> help \$neg

An arithmetic inverter. This corresponds to the Verilog unary prefix ‘-’ operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.3: simlib.v

```

118 module \neg (A, Y);
119
120     parameter A_SIGNED = 0;
121     parameter A_WIDTH = 0;
122     parameter Y_WIDTH = 0;
123
124     input [A_WIDTH-1:0] A;
125     output [Y_WIDTH-1:0] Y;
126
127     generate
128         if (A_SIGNED) begin:BLOCK1
129             assign Y = -$signed(A);
130         end else begin:BLOCK2
131             assign Y = -A;
132         end
133     endgenerate
134
135 endmodule

```

yosys> help \$not

Bit-wise inverter

This corresponds to the Verilog unary prefix ‘~’ operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.4: simlib.v

```

40 module \not (A, Y);
41
42     parameter A_SIGNED = 0;
43     parameter A_WIDTH = 0;
44     parameter Y_WIDTH = 0;
45
46     input [A_WIDTH-1:0] A;

```

(continues on next page)

(continued from previous page)

```

47     output [Y_WIDTH-1:0] Y;
48
49     generate
50         if (A_SIGNED) begin:BLOCK1
51             assign Y = ~$signed(A);
52         end else begin:BLOCK2
53             assign Y = ~A;
54         end
55     endgenerate
56
57 endmodule

```

yosys> help \$pos

A buffer. This corresponds to the Verilog unary prefix '+' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.5: simlib.v

```

68 module \ $pos (A, Y);
69
70     parameter A_SIGNED = 0;
71     parameter A_WIDTH = 0;
72     parameter Y_WIDTH = 0;
73
74     input [A_WIDTH-1:0] A;
75     output [Y_WIDTH-1:0] Y;
76
77     generate
78         if (A_SIGNED) begin:BLOCK1
79             assign Y = $signed(A);
80         end else begin:BLOCK2
81             assign Y = A;
82         end
83     endgenerate
84
85 endmodule

```

yosys> help \$reduce_and

An AND reduction. This corresponds to the Verilog unary prefix '&' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.6: simlib.v

```

270 module \ $reduce_and (A, Y);
271
272     parameter A_SIGNED = 0;

```

(continues on next page)

(continued from previous page)

```

273     parameter A_WIDTH = 0;
274     parameter Y_WIDTH = 0;
275
276     input [A_WIDTH-1:0] A;
277     output [Y_WIDTH-1:0] Y;
278
279     generate
280         if (A_SIGNED) begin:BLOCK1
281             assign Y = &$signed(A);
282         end else begin:BLOCK2
283             assign Y = &A;
284         end
285     endgenerate
286
287 endmodule

```

yosys> help \$reduce_bool

An OR reduction. This cell type is used instead of \$reduce_or when a signal is implicitly converted to a boolean signal, e.g. for operands of '&&' and '||'.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.7: simlib.v

```

383 module \ $reduce_bool (A, Y);
384
385     parameter A_SIGNED = 0;
386     parameter A_WIDTH = 0;
387     parameter Y_WIDTH = 0;
388
389     input [A_WIDTH-1:0] A;
390     output [Y_WIDTH-1:0] Y;
391
392     generate
393         if (A_SIGNED) begin:BLOCK1
394             assign Y = !(!$signed(A));
395         end else begin:BLOCK2
396             assign Y = !(A);
397         end
398     endgenerate
399
400 endmodule

```

yosys> help \$reduce_or

An OR reduction. This corresponds to the Verilog unary prefix '|' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.8: simlib.v

```

298 module \${reduce_or} (A, Y);
299
300     parameter A_SIGNED = 0;
301     parameter A_WIDTH = 0;
302     parameter Y_WIDTH = 0;
303
304     input [A_WIDTH-1:0] A;
305     output [Y_WIDTH-1:0] Y;
306
307     generate
308         if (A_SIGNED) begin:BLOCK1
309             assign Y = |$signed(A);
310         end else begin:BLOCK2
311             assign Y = |A;
312         end
313     endgenerate
314
315 endmodule

```

yosys> help \$reduce_xnor

A XNOR reduction. This corresponds to the Verilog unary prefix '~^' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.9: simlib.v

```

354 module \${reduce_xnor} (A, Y);
355
356     parameter A_SIGNED = 0;
357     parameter A_WIDTH = 0;
358     parameter Y_WIDTH = 0;
359
360     input [A_WIDTH-1:0] A;
361     output [Y_WIDTH-1:0] Y;
362
363     generate
364         if (A_SIGNED) begin:BLOCK1
365             assign Y = ~^$signed(A);
366         end else begin:BLOCK2
367             assign Y = ~^A;
368         end
369     endgenerate
370
371 endmodule

```

yosys> help \$reduce_xor

A XOR reduction. This corresponds to the Verilog unary prefix '^' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.10: simlib.v

```

326 module \${reduce_xor} (A, Y);
327
328     parameter A_SIGNED = 0;
329     parameter A_WIDTH = 0;
330     parameter Y_WIDTH = 0;
331
332     input [A_WIDTH-1:0] A;
333     output [Y_WIDTH-1:0] Y;
334
335     generate
336         if (A_SIGNED) begin:BLOCK1
337             assign Y = ^$signed(A);
338         end else begin:BLOCK2
339             assign Y = ^A;
340         end
341     endgenerate
342
343 endmodule

```

9.1.2 Binary operators

All binary RTL cells have two input ports A and B and one output port Y. They also have the following parameters:

A_SIGNED

Set to a non-zero value if the input A is signed and therefore should be sign-extended when needed.

A_WIDTH

The width of the input port A.

B_SIGNED

Set to a non-zero value if the input B is signed and therefore should be sign-extended when needed.

B_WIDTH

The width of the input port B.

Y_WIDTH

The width of the output port Y.

Table 9.2: Cell types for binary operators with their corresponding Verilog expressions.

| Verilog | Cell Type | Verilog | Cell Type |
|------------------|--------------------|--------------|-------------------|
| $Y = A \& B$ | <i>\$and</i> | $Y = A ** B$ | <i>\$pow</i> |
| $Y = A B$ | <i>\$or</i> | $Y = A < B$ | <i>\$lt</i> |
| $Y = A \wedge B$ | <i>\$xor</i> | $Y = A <= B$ | <i>\$le</i> |
| $Y = A \sim B$ | <i>\$xnor</i> | $Y = A == B$ | <i>\$eq</i> |
| $Y = A \ll B$ | <i>\$shl</i> | $Y = A != B$ | <i>\$ne</i> |
| $Y = A \gg B$ | <i>\$shr</i> | $Y = A >= B$ | <i>\$ge</i> |
| $Y = A \lll B$ | <i>\$sshl</i> | $Y = A > B$ | <i>\$gt</i> |
| $Y = A \ggg B$ | <i>\$sshr</i> | $Y = A + B$ | <i>\$add</i> |
| $Y = A \&\& B$ | <i>\$logic_and</i> | $Y = A - B$ | <i>\$sub</i> |
| $Y = A B$ | <i>\$logic_or</i> | $Y = A * B$ | <i>\$mul</i> |
| $Y = A === B$ | <i>\$eqx</i> | $Y = A / B$ | <i>\$div</i> |
| $Y = A !== B$ | <i>\$nex</i> | $Y = A \% B$ | <i>\$mod</i> |
| N/A | <i>\$shift</i> | N/A | <i>\$divfloor</i> |
| N/A | <i>\$shiftx</i> | N/A | <i>\$modfloor</i> |

The *\$shl* and *\$shr* cells implement logical shifts, whereas the *\$sshl* and *\$sshr* cells implement arithmetic shifts. The *\$shl* and *\$sshl* cells implement the same operation. All four of these cells interpret the second operand as unsigned, and require B_SIGNED to be zero.

Two additional shift operator cells are available that do not directly correspond to any operator in Verilog, *\$shift* and *\$shiftx*. The *\$shift* cell performs a right logical shift if the second operand is positive (or unsigned), and a left logical shift if it is negative. The *\$shiftx* cell performs the same operation as the *\$shift* cell, but the vacated bit positions are filled with undef (x) bits, and corresponds to the Verilog indexed part-select expression.

For the binary cells that output a logical value (*\$logic_and*, *\$logic_or*, *\$eqx*, *\$nex*, *\$lt*, *\$le*, *\$eq*, *\$ne*, *\$ge*, *\$gt*), when the Y_WIDTH parameter is greater than 1, the output is zero-extended, and only the least significant bit varies.

Division and modulo cells are available in two rounding modes. The original *\$div* and *\$mod* cells are based on truncating division, and correspond to the semantics of the verilog / and % operators. The *\$divfloor* and *\$modfloor* cells represent flooring division and flooring modulo, the latter of which corresponds to the % operator in Python. See the following table for a side-by-side comparison between the different semantics.

Table 9.3: Comparison between different rounding modes for division and modulo cells.

| Division | Result | Truncating
\$div | \$mod | Flooring
\$divfloor | \$modfloor |
|----------|--------|---------------------|-------|------------------------|------------|
| -10 / 3 | -3.3 | -3 | -1 | -4 | 2 |
| 10 / -3 | -3.3 | -3 | 1 | -4 | -2 |
| -10 / -3 | 3.3 | 3 | -1 | 3 | -1 |
| 10 / 3 | 3.3 | 3 | 1 | 3 | 1 |

```
yosys> help $add
```

Addition of inputs ‘A’ and ‘B’. This corresponds to the Verilog ‘+’ operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.11: simlib.v

```

973 module \${add} (A, B, Y);
974
975     parameter A_SIGNED = 0;
976     parameter B_SIGNED = 0;
977     parameter A_WIDTH = 0;
978     parameter B_WIDTH = 0;
979     parameter Y_WIDTH = 0;
980
981     input [A_WIDTH-1:0] A;
982     input [B_WIDTH-1:0] B;
983     output [Y_WIDTH-1:0] Y;
984
985     generate
986         if (A_SIGNED && B_SIGNED) begin:BLOCK1
987             assign Y = $signed(A) + $signed(B);
988         end else begin:BLOCK2
989             assign Y = A + B;
990         end
991     endgenerate
992
993 endmodule

```

yosys> help \$and

A bit-wise AND. This corresponds to the Verilog '&' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.12: simlib.v

```

146 module \${and} (A, B, Y);
147
148     parameter A_SIGNED = 0;
149     parameter B_SIGNED = 0;
150     parameter A_WIDTH = 0;
151     parameter B_WIDTH = 0;
152     parameter Y_WIDTH = 0;
153
154     input [A_WIDTH-1:0] A;
155     input [B_WIDTH-1:0] B;
156     output [Y_WIDTH-1:0] Y;
157
158     generate
159         if (A_SIGNED && B_SIGNED) begin:BLOCK1
160             assign Y = $signed(A) & $signed(B);
161         end else begin:BLOCK2
162             assign Y = A & B;
163         end
164     end

```

(continues on next page)

(continued from previous page)

```

164     endgenerate
165
166 endmodule

```

yosys> help \$bweqx

Bit-wise case equality

A bit-wise version of *\$eqx*.

Properties

- *is_evaluable*
- *x-aware*

Simulation model (verilog)

Listing 9.13: simlib.v

```

2005 module \bweqx (A, B, Y);
2006
2007     parameter WIDTH = 0;
2008
2009     input [WIDTH-1:0] A, B;
2010     output [WIDTH-1:0] Y;
2011
2012     genvar i;
2013     generate
2014         for (i = 0; i < WIDTH; i = i + 1) begin:slices
2015             assign Y[i] = A[i] == B[i];
2016         end
2017     endgenerate
2018
2019 endmodule

```

yosys> help \$div

Divider

This corresponds to the Verilog `/` operator, performing division and truncating the result (rounding towards 0).

Properties

- *is_evaluable*
- *x-output*

Simulation model (verilog)

Listing 9.14: simlib.v

```

1332 module \div (A, B, Y);
1333
1334     parameter A_SIGNED = 0;
1335     parameter B_SIGNED = 0;
1336     parameter A_WIDTH = 0;
1337     parameter B_WIDTH = 0;

```

(continues on next page)

(continued from previous page)

```

1338     parameter Y_WIDTH = 0;
1339
1340     input [A_WIDTH-1:0] A;
1341     input [B_WIDTH-1:0] B;
1342     output [Y_WIDTH-1:0] Y;
1343
1344     generate
1345         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1346             assign Y = $signed(A) / $signed(B);
1347         end else begin:BLOCK2
1348             assign Y = A / B;
1349         end
1350     endgenerate
1351
1352 endmodule

```

yosys> help \$divfloor

Division with floored result (rounded towards negative infinity).

Properties

is_evaluable

Simulation model (verilog)

Listing 9.15: simlib.v

```

1395 module \divfloor (A, B, Y);
1396
1397     parameter A_SIGNED = 0;
1398     parameter B_SIGNED = 0;
1399     parameter A_WIDTH = 0;
1400     parameter B_WIDTH = 0;
1401     parameter Y_WIDTH = 0;
1402
1403     input [A_WIDTH-1:0] A;
1404     input [B_WIDTH-1:0] B;
1405     output [Y_WIDTH-1:0] Y;
1406
1407     generate
1408         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1409             localparam WIDTH =
1410                 A_WIDTH >= B_WIDTH && A_WIDTH >= Y_WIDTH ? A_WIDTH :
1411                 B_WIDTH >= A_WIDTH && B_WIDTH >= Y_WIDTH ? B_WIDTH : Y_WIDTH;
1412             wire [WIDTH:0] A_buf, B_buf, N_buf;
1413             assign A_buf = $signed(A);
1414             assign B_buf = $signed(B);
1415             assign N_buf = (A[A_WIDTH-1] == B[B_WIDTH-1]) || A == 0 ? A_buf :
1416                 ↪$signed(A_buf - (B[B_WIDTH-1] ? B_buf+1 : B_buf-1));
1417             assign Y = $signed(N_buf) / $signed(B_buf);
1418         end else begin:BLOCK2
1419             assign Y = A / B;
1420         end
1421     endgenerate

```

(continues on next page)

(continued from previous page)

```

1421
1422 endmodule

```

```
yosys> help $eq
```

An equality comparison between inputs ‘A’ and ‘B’. This corresponds to the Verilog ‘==’ operator.

Properties

- is_evaluable*

Simulation model (verilog)

Listing 9.16: simlib.v

```

782 module \ $eq (A, B, Y);
783
784     parameter A_SIGNED = 0;
785     parameter B_SIGNED = 0;
786     parameter A_WIDTH = 0;
787     parameter B_WIDTH = 0;
788     parameter Y_WIDTH = 0;
789
790     input [A_WIDTH-1:0] A;
791     input [B_WIDTH-1:0] B;
792     output [Y_WIDTH-1:0] Y;
793
794     generate
795         if (A_SIGNED && B_SIGNED) begin:BLOCK1
796             assign Y = $signed(A) == $signed(B);
797         end else begin:BLOCK2
798             assign Y = A == B;
799         end
800     endgenerate
801
802 endmodule

```

```
yosys> help $eqx
```

Case equality

An exact equality comparison between inputs ‘A’ and ‘B’. Also known as the case equality operator. This corresponds to the Verilog ‘===’ operator. Unlike equality comparison that can give ‘x’ as output, an exact equality comparison will strictly give ‘0’ or ‘1’ as output, even if input includes ‘x’ or ‘z’ values.

Properties

- is_evaluable*
- x-aware*

Simulation model (verilog)

Listing 9.17: simlib.v

```

847 module \ $eqx (A, B, Y);
848

```

(continues on next page)

(continued from previous page)

```

849     parameter A_SIGNED = 0;
850     parameter B_SIGNED = 0;
851     parameter A_WIDTH = 0;
852     parameter B_WIDTH = 0;
853     parameter Y_WIDTH = 0;
854
855     input [A_WIDTH-1:0] A;
856     input [B_WIDTH-1:0] B;
857     output [Y_WIDTH-1:0] Y;
858
859     generate
860         if (A_SIGNED && B_SIGNED) begin:BLOCK1
861             assign Y = $signed(A) === $signed(B);
862         end else begin:BLOCK2
863             assign Y = A === B;
864         end
865     endgenerate
866
867 endmodule

```

yosys> help \$ge

A greater-than-or-equal-to comparison between inputs 'A' and 'B'. This corresponds to the Verilog '>=' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.18: simlib.v

```

910 module \ $ge (A, B, Y);
911
912     parameter A_SIGNED = 0;
913     parameter B_SIGNED = 0;
914     parameter A_WIDTH = 0;
915     parameter B_WIDTH = 0;
916     parameter Y_WIDTH = 0;
917
918     input [A_WIDTH-1:0] A;
919     input [B_WIDTH-1:0] B;
920     output [Y_WIDTH-1:0] Y;
921
922     generate
923         if (A_SIGNED && B_SIGNED) begin:BLOCK1
924             assign Y = $signed(A) >= $signed(B);
925         end else begin:BLOCK2
926             assign Y = A >= B;
927         end
928     endgenerate
929
930 endmodule

```

yosys> help \$gt

A greater-than comparison between inputs ‘A’ and ‘B’. This corresponds to the Verilog ‘>’ operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.19: simlib.v

```

942 module \>gt (A, B, Y);
943
944     parameter A_SIGNED = 0;
945     parameter B_SIGNED = 0;
946     parameter A_WIDTH = 0;
947     parameter B_WIDTH = 0;
948     parameter Y_WIDTH = 0;
949
950     input [A_WIDTH-1:0] A;
951     input [B_WIDTH-1:0] B;
952     output [Y_WIDTH-1:0] Y;
953
954     generate
955         if (A_SIGNED && B_SIGNED) begin:BLOCK1
956             assign Y = $signed(A) > $signed(B);
957         end else begin:BLOCK2
958             assign Y = A > B;
959         end
960     endgenerate
961
962 endmodule

```

yosys> help \$le

A less-than-or-equal-to comparison between inputs ‘A’ and ‘B’. This corresponds to the Verilog ‘<=’ operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.20: simlib.v

```

750 module \<= (A, B, Y);
751
752     parameter A_SIGNED = 0;
753     parameter B_SIGNED = 0;
754     parameter A_WIDTH = 0;
755     parameter B_WIDTH = 0;
756     parameter Y_WIDTH = 0;
757
758     input [A_WIDTH-1:0] A;
759     input [B_WIDTH-1:0] B;
760     output [Y_WIDTH-1:0] Y;
761

```

(continues on next page)

(continued from previous page)

```

762     generate
763         if (A_SIGNED && B_SIGNED) begin:BLOCK1
764             assign Y = $signed(A) <= $signed(B);
765         end else begin:BLOCK2
766             assign Y = A <= B;
767         end
768     endgenerate
769
770 endmodule

```

yosys> help \$logic_and

A logical AND. This corresponds to the Verilog '&&' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.21: simlib.v

```

1541 module \ $logic_and (A, B, Y);
1542
1543     parameter A_SIGNED = 0;
1544     parameter B_SIGNED = 0;
1545     parameter A_WIDTH = 0;
1546     parameter B_WIDTH = 0;
1547     parameter Y_WIDTH = 0;
1548
1549     input [A_WIDTH-1:0] A;
1550     input [B_WIDTH-1:0] B;
1551     output [Y_WIDTH-1:0] Y;
1552
1553     generate
1554         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1555             assign Y = $signed(A) && $signed(B);
1556         end else begin:BLOCK2
1557             assign Y = A && B;
1558         end
1559     endgenerate
1560
1561 endmodule

```

yosys> help \$logic_or

A logical OR. This corresponds to the Verilog '||' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.22: simlib.v

```

1572 module \ $logic_or (A, B, Y);
1573

```

(continues on next page)

(continued from previous page)

```

1574     parameter A_SIGNED = 0;
1575     parameter B_SIGNED = 0;
1576     parameter A_WIDTH = 0;
1577     parameter B_WIDTH = 0;
1578     parameter Y_WIDTH = 0;
1579
1580     input [A_WIDTH-1:0] A;
1581     input [B_WIDTH-1:0] B;
1582     output [Y_WIDTH-1:0] Y;
1583
1584     generate
1585         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1586             assign Y = $signed(A) || $signed(B);
1587         end else begin:BLOCK2
1588             assign Y = A || B;
1589         end
1590     endgenerate
1591
1592 endmodule

```

yosys> help \$lt

A less-than comparison between inputs 'A' and 'B'. This corresponds to the Verilog '<' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.23: simlib.v

```

718 module \ $lt (A, B, Y);
719
720     parameter A_SIGNED = 0;
721     parameter B_SIGNED = 0;
722     parameter A_WIDTH = 0;
723     parameter B_WIDTH = 0;
724     parameter Y_WIDTH = 0;
725
726     input [A_WIDTH-1:0] A;
727     input [B_WIDTH-1:0] B;
728     output [Y_WIDTH-1:0] Y;
729
730     generate
731         if (A_SIGNED && B_SIGNED) begin:BLOCK1
732             assign Y = $signed(A) < $signed(B);
733         end else begin:BLOCK2
734             assign Y = A < B;
735         end
736     endgenerate
737
738 endmodule

```

yosys> help \$mod

Modulo

This corresponds to the Verilog '%' operator, giving the module (or remainder) of division and truncating the result (rounding towards 0).

Invariant: $\$div(A, B) * B + \$mod(A, B) == A$

Properties

- *is_evaluable*
- *x-output*

Simulation model (verilog)

Listing 9.24: simlib.v

```

1364 module \$(mod (A, B, Y);
1365
1366     parameter A_SIGNED = 0;
1367     parameter B_SIGNED = 0;
1368     parameter A_WIDTH = 0;
1369     parameter B_WIDTH = 0;
1370     parameter Y_WIDTH = 0;
1371
1372     input [A_WIDTH-1:0] A;
1373     input [B_WIDTH-1:0] B;
1374     output [Y_WIDTH-1:0] Y;
1375
1376     generate
1377         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1378             assign Y = $signed(A) % $signed(B);
1379         end else begin:BLOCK2
1380             assign Y = A % B;
1381         end
1382     endgenerate
1383
1384 endmodule

```

yosys> help \$modfloor

Modulo/remainder of division with floored result (rounded towards negative infinity).

Invariant: $\$divfloor(A, B) * B + \$modfloor(A, B) == A$

Properties

- *is_evaluable*

Simulation model (verilog)

Listing 9.25: simlib.v

```

1435 module \$(modfloor (A, B, Y);
1436
1437     parameter A_SIGNED = 0;
1438     parameter B_SIGNED = 0;
1439     parameter A_WIDTH = 0;
1440     parameter B_WIDTH = 0;
1441     parameter Y_WIDTH = 0;

```

(continues on next page)

(continued from previous page)

```

1442
1443     input [A_WIDTH-1:0] A;
1444     input [B_WIDTH-1:0] B;
1445     output [Y_WIDTH-1:0] Y;
1446
1447     generate
1448         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1449             localparam WIDTH = B_WIDTH >= Y_WIDTH ? B_WIDTH : Y_WIDTH;
1450             wire [WIDTH-1:0] B_buf, Y_trunc;
1451             assign B_buf = $signed(B);
1452             assign Y_trunc = $signed(A) % $signed(B);
1453             // flooring mod is the same as truncating mod for positive division
1454             → results (A and B have // the same sign), as well as when there's no remainder.
1455             // For all other cases, they behave as `floor - trunc = B`
1456             assign Y = (A[A_WIDTH-1] == B[B_WIDTH-1]) || Y_trunc == 0 ? Y_trunc :
1457             → $signed(B_buf) + $signed(Y_trunc);
1458             end else begin:BLOCK2
1459                 // no difference between truncating and flooring for unsigned
1460                 assign Y = A % B;
1461             end
1462         endgenerate
1463     endmodule

```

yosys> help \$mul

Multiplication of inputs 'A' and 'B'. This corresponds to the Verilog '*' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.26: simlib.v

```

1037 module \ $mul (A, B, Y);
1038
1039     parameter A_SIGNED = 0;
1040     parameter B_SIGNED = 0;
1041     parameter A_WIDTH = 0;
1042     parameter B_WIDTH = 0;
1043     parameter Y_WIDTH = 0;
1044
1045     input [A_WIDTH-1:0] A;
1046     input [B_WIDTH-1:0] B;
1047     output [Y_WIDTH-1:0] Y;
1048
1049     generate
1050         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1051             assign Y = $signed(A) * $signed(B);
1052         end else begin:BLOCK2
1053             assign Y = A * B;
1054         end
1055     endgenerate

```

(continues on next page)

(continued from previous page)

```

1055     endgenerate
1056
1057 endmodule

```

yosys> help \$ne

An inequality comparison between inputs 'A' and 'B'. This corresponds to the Verilog '!=' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.27: simlib.v

```

814 module \ $ne (A, B, Y);
815
816     parameter A_SIGNED = 0;
817     parameter B_SIGNED = 0;
818     parameter A_WIDTH = 0;
819     parameter B_WIDTH = 0;
820     parameter Y_WIDTH = 0;
821
822     input [A_WIDTH-1:0] A;
823     input [B_WIDTH-1:0] B;
824     output [Y_WIDTH-1:0] Y;
825
826     generate
827         if (A_SIGNED && B_SIGNED) begin:BLOCK1
828             assign Y = $signed(A) != $signed(B);
829         end else begin:BLOCK2
830             assign Y = A != B;
831         end
832     endgenerate
833
834 endmodule

```

yosys> help \$nex

Case inequality

This corresponds to the Verilog '!===' operator.

Refer to [\\$eqx](#) for more details.

Properties

- *is_evaluable*
- *x-aware*

Simulation model (verilog)

Listing 9.28: simlib.v

```

878 module \ $nex (A, B, Y);
879
880     parameter A_SIGNED = 0;

```

(continues on next page)

(continued from previous page)

```

881     parameter B_SIGNED = 0;
882     parameter A_WIDTH = 0;
883     parameter B_WIDTH = 0;
884     parameter Y_WIDTH = 0;
885
886     input [A_WIDTH-1:0] A;
887     input [B_WIDTH-1:0] B;
888     output [Y_WIDTH-1:0] Y;
889
890     generate
891         if (A_SIGNED && B_SIGNED) begin:BLOCK1
892             assign Y = $signed(A) !== $signed(B);
893         end else begin:BLOCK2
894             assign Y = A !== B;
895         end
896     endgenerate
897
898 endmodule

```

yosys> help \$or

A bit-wise OR. This corresponds to the Verilog ‘|’ operator.

Properties

is_evaluateable

Simulation model (verilog)

Listing 9.29: simlib.v

```

177 module \ $or (A, B, Y);
178
179     parameter A_SIGNED = 0;
180     parameter B_SIGNED = 0;
181     parameter A_WIDTH = 0;
182     parameter B_WIDTH = 0;
183     parameter Y_WIDTH = 0;
184
185     input [A_WIDTH-1:0] A;
186     input [B_WIDTH-1:0] B;
187     output [Y_WIDTH-1:0] Y;
188
189     generate
190         if (A_SIGNED && B_SIGNED) begin:BLOCK1
191             assign Y = $signed(A) | $signed(B);
192         end else begin:BLOCK2
193             assign Y = A | B;
194         end
195     endgenerate
196
197 endmodule

```

yosys> help \$pow

Exponentiation of an input ($Y = A ** B$). This corresponds to the Verilog ‘**’ operator.

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.30: simlib.v

```

1477 module \$(pow (A, B, Y);
1478
1479     parameter A_SIGNED = 0;
1480     parameter B_SIGNED = 0;
1481     parameter A_WIDTH = 0;
1482     parameter B_WIDTH = 0;
1483     parameter Y_WIDTH = 0;
1484
1485     input [A_WIDTH-1:0] A;
1486     input [B_WIDTH-1:0] B;
1487     output [Y_WIDTH-1:0] Y;
1488
1489     generate
1490         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1491             assign Y = $signed(A) ** $signed(B);
1492         end else if (A_SIGNED) begin:BLOCK2
1493             assign Y = $signed(A) ** B;
1494         end else if (B_SIGNED) begin:BLOCK3
1495             assign Y = A ** $signed(B);
1496         end else begin:BLOCK4
1497             assign Y = A ** B;
1498         end
1499     endgenerate
1500
1501 endmodule

```

yosys> help \$shift

Variable shifter

Performs a right logical shift if the second operand is positive (or unsigned), and a left logical shift if it is negative.

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.31: simlib.v

```

535 module \$(shift (A, B, Y);
536
537     parameter A_SIGNED = 0;
538     parameter B_SIGNED = 0;
539     parameter A_WIDTH = 0;
540     parameter B_WIDTH = 0;
541     parameter Y_WIDTH = 0;
542
543     input [A_WIDTH-1:0] A;

```

(continues on next page)

(continued from previous page)

```

544     input [B_WIDTH-1:0] B;
545     output [Y_WIDTH-1:0] Y;
546
547     generate
548         if (A_SIGNED) begin:BLOCK1
549             if (B_SIGNED) begin:BLOCK2
550                 assign Y = $signed(B) < 0 ? $signed(A) << -B : $signed(A) >> B;
551             end else begin:BLOCK3
552                 assign Y = $signed(A) >> B;
553             end
554         end else begin:BLOCK4
555             if (B_SIGNED) begin:BLOCK5
556                 assign Y = $signed(B) < 0 ? A << -B : A >> B;
557             end else begin:BLOCK6
558                 assign Y = A >> B;
559             end
560         end
561     endgenerate
562
563 endmodule

```

yosys> help \$shiftx

Indexed part-select

Same as the *\$shift* cell, but fills with 'x'.

Properties

- *is_evaluable*
- *x-output*

Simulation model (verilog)

Listing 9.32: simlib.v

```

572 module \ $shiftx (A, B, Y);
573
574     parameter A_SIGNED = 0;
575     parameter B_SIGNED = 0;
576     parameter A_WIDTH = 0;
577     parameter B_WIDTH = 0;
578     parameter Y_WIDTH = 0;
579
580     input [A_WIDTH-1:0] A;
581     input [B_WIDTH-1:0] B;
582     output [Y_WIDTH-1:0] Y;
583
584     generate
585         if (Y_WIDTH > 0)
586             if (B_SIGNED) begin:BLOCK1
587                 assign Y = A[$signed(B) +: Y_WIDTH];
588             end else begin:BLOCK2
589                 assign Y = A[B +: Y_WIDTH];

```

(continues on next page)

(continued from previous page)

```

590         end
591     endgenerate
592
593 endmodule

```

yosys> help \$shl

A logical shift-left operation. This corresponds to the Verilog '<<' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.33: simlib.v

```

411 module \ $shl (A, B, Y);
412
413     parameter A_SIGNED = 0;
414     parameter B_SIGNED = 0;
415     parameter A_WIDTH = 0;
416     parameter B_WIDTH = 0;
417     parameter Y_WIDTH = 0;
418
419     input [A_WIDTH-1:0] A;
420     input [B_WIDTH-1:0] B;
421     output [Y_WIDTH-1:0] Y;
422
423     generate
424         if (A_SIGNED) begin:BLOCK1
425             assign Y = $signed(A) << B;
426         end else begin:BLOCK2
427             assign Y = A << B;
428         end
429     endgenerate
430
431 endmodule

```

yosys> help \$shr

A logical shift-right operation. This corresponds to the Verilog '>>' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.34: simlib.v

```

442 module \ $shr (A, B, Y);
443
444     parameter A_SIGNED = 0;
445     parameter B_SIGNED = 0;
446     parameter A_WIDTH = 0;
447     parameter B_WIDTH = 0;
448     parameter Y_WIDTH = 0;

```

(continues on next page)

(continued from previous page)

```

449
450     input [A_WIDTH-1:0] A;
451     input [B_WIDTH-1:0] B;
452     output [Y_WIDTH-1:0] Y;
453
454     generate
455         if (A_SIGNED) begin:BLOCK1
456             assign Y = $signed(A) >> B;
457         end else begin:BLOCK2
458             assign Y = A >> B;
459         end
460     endgenerate
461
462 endmodule

```

yosys> help \$sshl

An arithmetic shift-left operation. This corresponds to the Verilog '<<<' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.35: simlib.v

```

474 module \sshl (A, B, Y);
475
476     parameter A_SIGNED = 0;
477     parameter B_SIGNED = 0;
478     parameter A_WIDTH = 0;
479     parameter B_WIDTH = 0;
480     parameter Y_WIDTH = 0;
481
482     input [A_WIDTH-1:0] A;
483     input [B_WIDTH-1:0] B;
484     output [Y_WIDTH-1:0] Y;
485
486     generate
487         if (A_SIGNED) begin:BLOCK1
488             assign Y = $signed(A) <<< B;
489         end else begin:BLOCK2
490             assign Y = A <<< B;
491         end
492     endgenerate
493
494 endmodule

```

yosys> help \$sshr

An arithmetic shift-right operation. This corresponds to the Verilog '>>>' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.36: simlib.v

```

506 module \$sshr (A, B, Y);
507
508     parameter A_SIGNED = 0;
509     parameter B_SIGNED = 0;
510     parameter A_WIDTH = 0;
511     parameter B_WIDTH = 0;
512     parameter Y_WIDTH = 0;
513
514     input [A_WIDTH-1:0] A;
515     input [B_WIDTH-1:0] B;
516     output [Y_WIDTH-1:0] Y;
517
518     generate
519         if (A_SIGNED) begin:BLOCK1
520             assign Y = $signed(A) >>> B;
521         end else begin:BLOCK2
522             assign Y = A >>> B;
523         end
524     endgenerate
525
526 endmodule

```

yosys> help \$sub

Subtraction between inputs 'A' and 'B'. This corresponds to the Verilog '-' operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.37: simlib.v

```

1005 module \$sub (A, B, Y);
1006
1007     parameter A_SIGNED = 0;
1008     parameter B_SIGNED = 0;
1009     parameter A_WIDTH = 0;
1010     parameter B_WIDTH = 0;
1011     parameter Y_WIDTH = 0;
1012
1013     input [A_WIDTH-1:0] A;
1014     input [B_WIDTH-1:0] B;
1015     output [Y_WIDTH-1:0] Y;
1016
1017     generate
1018         if (A_SIGNED && B_SIGNED) begin:BLOCK1
1019             assign Y = $signed(A) - $signed(B);
1020         end else begin:BLOCK2
1021             assign Y = A - B;
1022         end
1023     endgenerate
1024

```

(continues on next page)

(continued from previous page)

```
1025 endmodule
```

```
yosys> help $xnor
```

A bit-wise XNOR. This corresponds to the Verilog ‘ $\sim^{\wedge}$ ’ operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.38: simlib.v

```
239 module \ $xnor (A, B, Y);
240
241     parameter A_SIGNED = 0;
242     parameter B_SIGNED = 0;
243     parameter A_WIDTH = 0;
244     parameter B_WIDTH = 0;
245     parameter Y_WIDTH = 0;
246
247     input [A_WIDTH-1:0] A;
248     input [B_WIDTH-1:0] B;
249     output [Y_WIDTH-1:0] Y;
250
251     generate
252         if (A_SIGNED && B_SIGNED) begin:BLOCK1
253             assign Y = $signed(A) ~^ $signed(B);
254         end else begin:BLOCK2
255             assign Y = A ~^ B;
256         end
257     endgenerate
258
259 endmodule
```

```
yosys> help $xor
```

A bit-wise XOR. This corresponds to the Verilog ‘ $\wedge$ ’ operator.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.39: simlib.v

```
208 module \ $xor (A, B, Y);
209
210     parameter A_SIGNED = 0;
211     parameter B_SIGNED = 0;
212     parameter A_WIDTH = 0;
213     parameter B_WIDTH = 0;
214     parameter Y_WIDTH = 0;
215
216     input [A_WIDTH-1:0] A;
217     input [B_WIDTH-1:0] B;
```

(continues on next page)

(continued from previous page)

```

218     output [Y_WIDTH-1:0] Y;
219
220     generate
221         if (A_SIGNED && B_SIGNED) begin:BLOCK1
222             assign Y = $signed(A) ^ $signed(B);
223         end else begin:BLOCK2
224             assign Y = A ^ B;
225         end
226     endgenerate
227
228 endmodule

```

9.1.3 Multiplexers

Multiplexers are generated by the Verilog HDL frontend for `?:`-expressions. Multiplexers are also generated by the proc pass to map the decision trees from RTLIL::Process objects to logic.

The simplest multiplexer cell type is `$mux`. Cells of this type have a `WIDTH` parameter and data inputs `A` and `B` and a data output `Y`, all of the specified width. This cell also has a single bit control input `S`. If `S` is 0 the value from the input `A` is sent to the output, if it is 1 the value from the `B` input is sent to the output. So the `$mux` cell implements the function $Y = S ? B : A$.

The `$pmux` cell is used to multiplex between many inputs using a one-hot select signal. Cells of this type have a `WIDTH` and a `S_WIDTH` parameter and inputs `A`, `B`, and `S` and an output `Y`. The `S` input is `S_WIDTH` bits wide. The `A` input and the output are both `WIDTH` bits wide and the `B` input is `WIDTH*S_WIDTH` bits wide. When all bits of `S` are zero, the value from `A` input is sent to the output. If the n 'th bit from `S` is set, the value n 'th `WIDTH` bits wide slice of the `B` input is sent to the output. When more than one bit from `S` is set the output is undefined. Cells of this type are used to model “parallel cases” (defined by using the `parallel_case` attribute, the `unique` or `unique0` SystemVerilog keywords, or detected by an optimization).

The `$tribuf` cell is used to implement tristate logic. Cells of this type have a `WIDTH` parameter and inputs `A` and `EN` and an output `Y`. The `A` input and `Y` output are `WIDTH` bits wide, and the `EN` input is one bit wide. When `EN` is 0, the output is not driven. When `EN` is 1, the value from `A` input is sent to the `Y` output. Therefore, the `$tribuf` cell implements the function $Y = EN ? A : 'bz$.

Behavioural code with cascaded if-then-else- and case-statements usually results in trees of multiplexer cells. Many passes (from various optimizations to FSM extraction) heavily depend on these multiplexer trees to understand dependencies between signals. Therefore optimizations should not break these multiplexer trees (e.g. by replacing a multiplexer between a calculated signal and a constant zero with an `$and` gate).

yosys> help \$bmux

Binary-encoded multiplexer

Selects between ‘slices’ of `A` where each value of `S` corresponds to a unique slice.

Properties

`is_evaluable`

Simulation model (verilog)

Listing 9.40: simlib.v

```

1658 module \ $bmux (A, S, Y);
1659

```

(continues on next page)

(continued from previous page)

```

1660     parameter WIDTH = 0;
1661     parameter S_WIDTH = 0;
1662
1663     input [(WIDTH << S_WIDTH)-1:0] A;
1664     input [S_WIDTH-1:0] S;
1665     output [WIDTH-1:0] Y;
1666
1667     wire [WIDTH-1:0] bm0_out, bm1_out;
1668
1669     generate
1670         if (S_WIDTH > 1) begin:muxlogic
1671             \bwmux #(.WIDTH(WIDTH), .S_WIDTH(S_WIDTH-1)) bm0 (.A(A[(WIDTH << (S_
1672 →WIDTH - 1))-1:0]), .S(S[S_WIDTH-2:0]), .Y(bm0_out));
1673             \bwmux #(.WIDTH(WIDTH), .S_WIDTH(S_WIDTH-1)) bm1 (.A(A[(WIDTH << S_
1674 →WIDTH)-1:WIDTH << (S_WIDTH - 1)]), .S(S[S_WIDTH-2:0]), .Y(bm1_out));
1675             assign Y = S[S_WIDTH-1] ? bm1_out : bm0_out;
1676         end else if (S_WIDTH == 1) begin:simple
1677             assign Y = S ? A[2*WIDTH-1:WIDTH] : A[WIDTH-1:0];
1678         end else begin:passthru
1679             assign Y = A;
1680         end
1681     endgenerate
1682 endmodule

```

yosys> help \$bwmux

Bit-wise multiplexer

Equivalent to a series of 1-bit wide *\$mux* cells.

Properties

is_evaluate

Simulation model (verilog)

Listing 9.41: simlib.v

```

2027 module \bwmux (A, B, S, Y);
2028
2029     parameter WIDTH = 0;
2030
2031     input [WIDTH-1:0] A, B;
2032     input [WIDTH-1:0] S;
2033     output [WIDTH-1:0] Y;
2034
2035     genvar i;
2036     generate
2037         for (i = 0; i < WIDTH; i = i + 1) begin:slices
2038             assign Y[i] = S[i] ? B[i] : A[i];
2039         end
2040     endgenerate
2041
2042 endmodule

```

yosys> help \$demux

Demultiplexer i.e routing single input to several outputs based on select signal. Unselected outputs are driven to zero.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.42: simlib.v

```

1733 module \demux (A, S, Y);
1734
1735     parameter WIDTH = 1;
1736     parameter S_WIDTH = 1;
1737
1738     input [WIDTH-1:0] A;
1739     input [S_WIDTH-1:0] S;
1740     output [(WIDTH << S_WIDTH)-1:0] Y;
1741
1742     genvar i;
1743     generate
1744         for (i = 0; i < (1 << S_WIDTH); i = i + 1) begin:slices
1745             assign Y[i*WIDTH+:WIDTH] = (S == i) ? A : 0;
1746         end
1747     endgenerate
1748
1749 endmodule

```

yosys> help \$mux

Multiplexer i.e selecting between two inputs based on select signal.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.43: simlib.v

```

1639 module \mux (A, B, S, Y);
1640
1641     parameter WIDTH = 0;
1642
1643     input [WIDTH-1:0] A, B;
1644     input S;
1645     output [WIDTH-1:0] Y;
1646
1647     assign Y = S ? B : A;
1648
1649 endmodule

```

yosys> help \$pmux

Priority-encoded multiplexer

Selects between ‘slices’ of B where each slice corresponds to a single bit of S. Outputs A when all bits of S are low.

Properties

- *is_evaluable*
- *x-output*

Simulation model (verilog)

Listing 9.44: simlib.v

```

1691 module \${pmux} (A, B, S, Y);
1692
1693     parameter WIDTH = 0;
1694     parameter S_WIDTH = 0;
1695
1696     input [WIDTH-1:0] A;
1697     input [WIDTH*S_WIDTH-1:0] B;
1698     input [S_WIDTH-1:0] S;
1699     output reg [WIDTH-1:0] Y;
1700
1701     integer i;
1702     reg found_active_sel_bit;
1703
1704     always @* begin
1705         Y = A;
1706         found_active_sel_bit = 0;
1707         for (i = 0; i < S_WIDTH; i = i+1)
1708             case (S[i])
1709                 1'b1: begin
1710                     Y = found_active_sel_bit ? 'bx : B >> (WIDTH*i);
1711                     found_active_sel_bit = 1;
1712                 end
1713                 1'b0: ;
1714                 1'bx: begin
1715                     Y = 'bx;
1716                     found_active_sel_bit = 'bx;
1717                 end
1718             endcase
1719     end
1720
1721 endmodule

```

yosys> help \$tribuf

A tri-state buffer. This buffer conditionally drives the output with the value of the input based on the enable signal.

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.45: simlib.v

```

1808 module \${tribuf} (A, EN, Y);
1809
1810     parameter WIDTH = 0;

```

(continues on next page)

(continued from previous page)

```

1811
1812     input [WIDTH-1:0] A;
1813     input EN;
1814     output [WIDTH-1:0] Y;
1815
1816     assign Y = EN ? A : 'bz;
1817
1818 endmodule

```

9.1.4 Registers

SR-type latches are represented by *\$sr* cells. These cells have input ports **SET** and **CLR** and an output port **Q**. They have the following parameters:

WIDTH

The width of inputs **SET** and **CLR** and output **Q**.

SET_POLARITY

The set input bits are active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

CLR_POLARITY

The reset input bits are active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

Both set and reset inputs have separate bits for every output bit. When both the set and reset inputs of an *\$sr* cell are active for a given bit index, the reset input takes precedence.

D-type flip-flops are represented by *\$dff* cells. These cells have a clock port **CLK**, an input port **D** and an output port **Q**. The following parameters are available for *\$dff* cells:

WIDTH

The width of input **D** and output **Q**.

CLK_POLARITY

Clock is active on the positive edge if this parameter has the value 1'b1 and on the negative edge if this parameter is 1'b0.

D-type flip-flops with asynchronous reset are represented by *\$adff* cells. As the *\$dff* cells they have **CLK**, **D** and **Q** ports. In addition they also have a single-bit **ARST** input port for the reset pin and the following additional two parameters:

ARST_POLARITY

The asynchronous reset is active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

ARST_VALUE

The state of **Q** will be set to this value when the reset is active.

Usually these cells are generated by the *proc* pass using the information in the designs *RTLIL::Process* objects.

D-type flip-flops with synchronous reset are represented by *\$sdff* cells. As the *\$dff* cells they have **CLK**, **D** and **Q** ports. In addition they also have a single-bit **SRST** input port for the reset pin and the following additional two parameters:

SRST_POLARITY

The synchronous reset is active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

SRST_VALUE

The state of Q will be set to this value when the reset is active.

Note that the *\$adff* and *\$sdff* cells can only be used when the reset value is constant.

D-type flip-flops with asynchronous load are represented by *\$aldff* cells. As the *\$dff* cells they have CLK, D and Q ports. In addition they also have a single-bit ALOAD input port for the async load enable pin, a AD input port with the same width as data for the async load data, and the following additional parameter:

ALOAD_POLARITY

The asynchronous load is active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

D-type flip-flops with asynchronous set and reset are represented by *\$dffsr* cells. As the *\$dff* cells they have CLK, D and Q ports. In addition they also have multi-bit SET and CLR input ports and the corresponding polarity parameters, like *\$sr* cells.

D-type flip-flops with enable are represented by *\$dfffe*, *\$adfffe*, *\$aldfffe*, *\$dffsre*, *\$sdfffe*, and *\$sdfffce* cells, which are enhanced variants of *\$dff*, *\$adff*, *\$aldff*, *\$dffsr*, *\$sdff* (with reset over enable) and *\$sdff* (with enable over reset) cells, respectively. They have the same ports and parameters as their base cell. In addition they also have a single-bit EN input port for the enable pin and the following parameter:

EN_POLARITY

The enable input is active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

D-type latches are represented by *\$dlatch* cells. These cells have an enable port EN, an input port D, and an output port Q. The following parameters are available for *\$dlatch* cells:

WIDTH

The width of input D and output Q.

EN_POLARITY

The enable input is active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

The latch is transparent when the EN input is active.

D-type latches with reset are represented by *\$adlatch* cells. In addition to *\$dlatch* ports and parameters, they also have a single-bit ARST input port for the reset pin and the following additional parameters:

ARST_POLARITY

The asynchronous reset is active-high if this parameter has the value 1'b1 and active-low if this parameter is 1'b0.

ARST_VALUE

The state of Q will be set to this value when the reset is active.

D-type latches with set and reset are represented by *\$dlatchsr* cells. In addition to *\$dlatch* ports and parameters, they also have multi-bit SET and CLR input ports and the corresponding polarity parameters, like *\$sr* cells.

```
yosys> help $adff
```

```
Simulation model (verilog)
```


Listing 9.46: simlib.v

```

2423 module \${dff} (CLK, ARST, D, Q);
2424
2425     parameter WIDTH = 0;
2426     parameter CLK_POLARITY = 1'b1;
2427     parameter ARST_POLARITY = 1'b1;
2428     parameter ARST_VALUE = 0;
2429
2430     input CLK, ARST;
2431     input [WIDTH-1:0] D;
2432     output reg [WIDTH-1:0] Q;
2433     wire pos_clk = CLK == CLK_POLARITY;
2434     wire pos_arst = ARST == ARST_POLARITY;
2435
2436     always @(posedge pos_clk, posedge pos_arst) begin
2437         if (pos_arst)
2438             Q <= ARST_VALUE;
2439         else
2440             Q <= D;
2441     end
2442
2443 endmodule

```

yosys> help \$dff

Simulation model (verilog)

Listing 9.47: simlib.v

```

2498 module \${dffe} (CLK, ARST, EN, D, Q);
2499
2500     parameter WIDTH = 0;
2501     parameter CLK_POLARITY = 1'b1;
2502     parameter EN_POLARITY = 1'b1;
2503     parameter ARST_POLARITY = 1'b1;
2504     parameter ARST_VALUE = 0;
2505
2506     input CLK, ARST, EN;
2507     input [WIDTH-1:0] D;
2508     output reg [WIDTH-1:0] Q;
2509     wire pos_clk = CLK == CLK_POLARITY;
2510     wire pos_arst = ARST == ARST_POLARITY;
2511
2512     always @(posedge pos_clk, posedge pos_arst) begin
2513         if (pos_arst)
2514             Q <= ARST_VALUE;
2515         else if (EN == EN_POLARITY)
2516             Q <= D;
2517     end
2518
2519 endmodule

```

yosys> help \$dlatch

Simulation model (verilog)

Listing 9.48: simlib.v

```

2623 module \sadlatch (EN, ARST, D, Q);
2624
2625     parameter WIDTH = 0;
2626     parameter EN_POLARITY = 1'b1;
2627     parameter ARST_POLARITY = 1'b1;
2628     parameter ARST_VALUE = 0;
2629
2630     input EN, ARST;
2631     input [WIDTH-1:0] D;
2632     output reg [WIDTH-1:0] Q;
2633
2634     always @* begin
2635         if (ARST == ARST_POLARITY)
2636             Q = ARST_VALUE;
2637         else if (EN == EN_POLARITY)
2638             Q = D;
2639     end
2640
2641 endmodule

```

yosys> help \$aldff

Simulation model (verilog)

Listing 9.49: simlib.v

```

2448 module \saldff (CLK, ALOAD, AD, D, Q);
2449
2450     parameter WIDTH = 0;
2451     parameter CLK_POLARITY = 1'b1;
2452     parameter ALOAD_POLARITY = 1'b1;
2453
2454     input CLK, ALOAD;
2455     input [WIDTH-1:0] AD;
2456     input [WIDTH-1:0] D;
2457     output reg [WIDTH-1:0] Q;
2458     wire pos_clk = CLK == CLK_POLARITY;
2459     wire pos_aload = ALOAD == ALOAD_POLARITY;
2460
2461     always @(posedge pos_clk, posedge pos_aload) begin
2462         if (pos_aload)
2463             Q <= AD;
2464         else
2465             Q <= D;
2466     end
2467
2468 endmodule

```

yosys> help \$aldffe

Simulation model (verilog)

Listing 9.50: simlib.v

```

2524 module \${dffe} (CLK, ALOAD, AD, EN, D, Q);
2525
2526     parameter WIDTH = 0;
2527     parameter CLK_POLARITY = 1'b1;
2528     parameter EN_POLARITY = 1'b1;
2529     parameter ALOAD_POLARITY = 1'b1;
2530
2531     input CLK, ALOAD, EN;
2532     input [WIDTH-1:0] D;
2533     input [WIDTH-1:0] AD;
2534     output reg [WIDTH-1:0] Q;
2535     wire pos_clk = CLK == CLK_POLARITY;
2536     wire pos_aload = ALOAD == ALOAD_POLARITY;
2537
2538     always @(posedge pos_clk, posedge pos_aload) begin
2539         if (pos_aload)
2540             Q <= AD;
2541         else if (EN == EN_POLARITY)
2542             Q <= D;
2543     end
2544
2545 endmodule

```

yosys> help \$dff

Simulation model (verilog)

Listing 9.51: simlib.v

```

2315 module \${dff} (CLK, D, Q);
2316
2317     parameter WIDTH = 0;
2318     parameter CLK_POLARITY = 1'b1;
2319
2320     input CLK;
2321     input [WIDTH-1:0] D;
2322     output reg [WIDTH-1:0] Q;
2323     wire pos_clk = CLK == CLK_POLARITY;
2324
2325     always @(posedge pos_clk) begin
2326         Q <= D;
2327     end
2328
2329 endmodule

```

yosys> help \$dffe

Simulation model (verilog)

Listing 9.52: simlib.v

```

2334 module \dffe (CLK, EN, D, Q);
2335
2336     parameter WIDTH = 0;
2337     parameter CLK_POLARITY = 1'b1;
2338     parameter EN_POLARITY = 1'b1;
2339
2340     input CLK, EN;
2341     input [WIDTH-1:0] D;
2342     output reg [WIDTH-1:0] Q;
2343     wire pos_clk = CLK == CLK_POLARITY;
2344
2345     always @(posedge pos_clk) begin
2346         if (EN == EN_POLARITY) Q <= D;
2347     end
2348
2349 endmodule

```

yosys> help \$dffsr

Simulation model (verilog)

Listing 9.53: simlib.v

```

2355 module \dffsr (CLK, SET, CLR, D, Q);
2356
2357     parameter WIDTH = 0;
2358     parameter CLK_POLARITY = 1'b1;
2359     parameter SET_POLARITY = 1'b1;
2360     parameter CLR_POLARITY = 1'b1;
2361
2362     input CLK;
2363     input [WIDTH-1:0] SET, CLR, D;
2364     output reg [WIDTH-1:0] Q;
2365
2366     wire pos_clk = CLK == CLK_POLARITY;
2367     wire [WIDTH-1:0] pos_set = SET_POLARITY ? SET : ~SET;
2368     wire [WIDTH-1:0] pos_clr = CLR_POLARITY ? CLR : ~CLR;
2369
2370     genvar i;
2371     generate
2372         for (i = 0; i < WIDTH; i = i+1) begin:bitslices
2373             always @(posedge pos_set[i], posedge pos_clr[i], posedge pos_clk)
2374                 if (pos_clr[i])
2375                     Q[i] <= 0;
2376                 else if (pos_set[i])
2377                     Q[i] <= 1;
2378                 else
2379                     Q[i] <= D[i];
2380         end
2381     endgenerate
2382

```

(continues on next page)

(continued from previous page)

```
2383 endmodule
```

```
yosys> help $dffsre
```

```
Simulation model (verilog)
```

Listing 9.54: simlib.v

```
2388 module \dffsre (CLK, SET, CLR, EN, D, Q);
2389
2390     parameter WIDTH = 0;
2391     parameter CLK_POLARITY = 1'b1;
2392     parameter SET_POLARITY = 1'b1;
2393     parameter CLR_POLARITY = 1'b1;
2394     parameter EN_POLARITY = 1'b1;
2395
2396     input CLK, EN;
2397     input [WIDTH-1:0] SET, CLR, D;
2398     output reg [WIDTH-1:0] Q;
2399
2400     wire pos_clk = CLK == CLK_POLARITY;
2401     wire [WIDTH-1:0] pos_set = SET_POLARITY ? SET : ~SET;
2402     wire [WIDTH-1:0] pos_clr = CLR_POLARITY ? CLR : ~CLR;
2403
2404     genvar i;
2405     generate
2406         for (i = 0; i < WIDTH; i = i+1) begin:bitslices
2407             always @(posedge pos_set[i], posedge pos_clr[i], posedge pos_clk)
2408                 if (pos_clr[i])
2409                     Q[i] <= 0;
2410                 else if (pos_set[i])
2411                     Q[i] <= 1;
2412                 else if (EN == EN_POLARITY)
2413                     Q[i] <= D[i];
2414         end
2415     endgenerate
2416
2417 endmodule
```

```
yosys> help $dlatch
```

```
Simulation model (verilog)
```

Listing 9.55: simlib.v

```
2604 module \dlatch (EN, D, Q);
2605
2606     parameter WIDTH = 0;
2607     parameter EN_POLARITY = 1'b1;
2608
2609     input EN;
2610     input [WIDTH-1:0] D;
2611     output reg [WIDTH-1:0] Q;
```

(continues on next page)

(continued from previous page)

```

2612
2613     always @* begin
2614         if (EN == EN_POLARITY)
2615             Q = D;
2616     end
2617
2618 endmodule

```

yosys> help \$dlatchsr

Simulation model (verilog)

Listing 9.56: simlib.v

```

2647 module \ $dlatchsr (EN, SET, CLR, D, Q);
2648
2649     parameter WIDTH = 0;
2650     parameter EN_POLARITY = 1'b1;
2651     parameter SET_POLARITY = 1'b1;
2652     parameter CLR_POLARITY = 1'b1;
2653
2654     input EN;
2655     input [WIDTH-1:0] SET, CLR, D;
2656     output reg [WIDTH-1:0] Q;
2657
2658     wire pos_en = EN == EN_POLARITY;
2659     wire [WIDTH-1:0] pos_set = SET_POLARITY ? SET : ~SET;
2660     wire [WIDTH-1:0] pos_clr = CLR_POLARITY ? CLR : ~CLR;
2661
2662     genvar i;
2663     generate
2664         for (i = 0; i < WIDTH; i = i+1) begin:bitslices
2665             always @*
2666                 if (pos_clr[i])
2667                     Q[i] = 0;
2668                 else if (pos_set[i])
2669                     Q[i] = 1;
2670                 else if (pos_en)
2671                     Q[i] = D[i];
2672         end
2673     endgenerate
2674
2675 endmodule

```

yosys> help \$sdff

Simulation model (verilog)

Listing 9.57: simlib.v

```

2473 module \ $sdff (CLK, SRST, D, Q);
2474
2475     parameter WIDTH = 0;

```

(continues on next page)

(continued from previous page)

```

2476     parameter CLK_POLARITY = 1'b1;
2477     parameter SRST_POLARITY = 1'b1;
2478     parameter SRST_VALUE = 0;
2479
2480     input CLK, SRST;
2481     input [WIDTH-1:0] D;
2482     output reg [WIDTH-1:0] Q;
2483     wire pos_clk = CLK == CLK_POLARITY;
2484     wire pos_srst = SRST == SRST_POLARITY;
2485
2486     always @(posedge pos_clk) begin
2487         if (pos_srst)
2488             Q <= SRST_VALUE;
2489         else
2490             Q <= D;
2491     end
2492
2493 endmodule

```

yosys> help \$sdffce

Simulation model (verilog)

Listing 9.58: simlib.v

```

2576 module \sdffce (CLK, SRST, EN, D, Q);
2577
2578     parameter WIDTH = 0;
2579     parameter CLK_POLARITY = 1'b1;
2580     parameter EN_POLARITY = 1'b1;
2581     parameter SRST_POLARITY = 1'b1;
2582     parameter SRST_VALUE = 0;
2583
2584     input CLK, SRST, EN;
2585     input [WIDTH-1:0] D;
2586     output reg [WIDTH-1:0] Q;
2587     wire pos_clk = CLK == CLK_POLARITY;
2588     wire pos_srst = SRST == SRST_POLARITY;
2589
2590     always @(posedge pos_clk) begin
2591         if (EN == EN_POLARITY) begin
2592             if (pos_srst)
2593                 Q <= SRST_VALUE;
2594             else
2595                 Q <= D;
2596         end
2597     end
2598
2599 endmodule

```

yosys> help \$sdffe

Simulation model (verilog)

Listing 9.59: simlib.v

```

2550 module \${sdf} (CLK, SRST, EN, D, Q);
2551
2552     parameter WIDTH = 0;
2553     parameter CLK_POLARITY = 1'b1;
2554     parameter EN_POLARITY = 1'b1;
2555     parameter SRST_POLARITY = 1'b1;
2556     parameter SRST_VALUE = 0;
2557
2558     input CLK, SRST, EN;
2559     input [WIDTH-1:0] D;
2560     output reg [WIDTH-1:0] Q;
2561     wire pos_clk = CLK == CLK_POLARITY;
2562     wire pos_srst = SRST == SRST_POLARITY;
2563
2564     always @(posedge pos_clk) begin
2565         if (pos_srst)
2566             Q <= SRST_VALUE;
2567         else if (EN == EN_POLARITY)
2568             Q <= D;
2569     end
2570
2571 endmodule

```

yosys> help \$sr

Simulation model (verilog)

Listing 9.60: simlib.v

```

2265 module \${sr} (SET, CLR, Q);
2266
2267     parameter WIDTH = 0;
2268     parameter SET_POLARITY = 1'b1;
2269     parameter CLR_POLARITY = 1'b1;
2270
2271     input [WIDTH-1:0] SET, CLR;
2272     output reg [WIDTH-1:0] Q;
2273
2274     wire [WIDTH-1:0] pos_set = SET_POLARITY ? SET : ~SET;
2275     wire [WIDTH-1:0] pos_clr = CLR_POLARITY ? CLR : ~CLR;
2276
2277     genvar i;
2278     generate
2279         for (i = 0; i < WIDTH; i = i+1) begin:bitslices
2280             always @*
2281                 if (pos_clr[i])
2282                     Q[i] <= 0;
2283                 else if (pos_set[i])
2284                     Q[i] <= 1;
2285             end
2286         endgenerate

```

(continues on next page)

(continued from previous page)

```

2287
2288 endmodule

```

9.1.5 Memories

Memories are either represented using RTLIL::Memory objects, `$memrd_v2`, `$memwr_v2`, and `$mемinit_v2` cells, or by `$mem_v2` cells alone.

In the first alternative the RTLIL::Memory objects hold the general metadata for the memory (bit width, size in number of words, etc.) and for each port a `$memrd_v2` (read port) or `$memwr_v2` (write port) cell is created. Having individual cells for read and write ports has the advantage that they can be consolidated using resource sharing passes. In some cases this drastically reduces the number of required ports on the memory cell. In this alternative, memory initialization data is represented by `$mемinit_v2` cells, which allow delaying constant folding for initialization addresses and data until after the frontend finishes.

The `$memrd_v2` cells have a clock input CLK, an enable input EN, an address input ADDR, a data output DATA, an asynchronous reset input ARST, and a synchronous reset input SRST. They also have the following parameters:

MEMID

The name of the RTLIL::Memory object that is associated with this read port.

ABITS

The number of address bits (width of the ADDR input port).

WIDTH

The number of data bits (width of the DATA output port). Note that this may be a power-of-two multiple of the underlying memory's width – such ports are called wide ports and access an aligned group of cells at once. In this case, the corresponding low bits of ADDR must be tied to 0.

CLK_ENABLE

When this parameter is non-zero, the clock is used. Otherwise this read port is asynchronous and the CLK input is not used.

CLK_POLARITY

Clock is active on the positive edge if this parameter has the value 1'b1 and on the negative edge if this parameter is 1'b0.

TRANSPARENCY_MASK

This parameter is a bitmask of write ports that this read port is transparent with. The bits of this parameter are indexed by the write port's PORTID parameter. Transparency can only be enabled between synchronous ports sharing a clock domain. When transparency is enabled for a given port pair, a read and write to the same address in the same cycle will return the new value. Otherwise the old value is returned.

COLLISION_X_MASK

This parameter is a bitmask of write ports that have undefined collision behavior with this port. The bits of this parameter are indexed by the write port's PORTID parameter. This behavior can only be enabled between synchronous ports sharing a clock domain. When undefined collision is enabled for a given port pair, a read and write to the same address in the same cycle will return the undefined (all-X) value. This option is exclusive (for a given port pair) with the transparency option.

ARST_VALUE

Whenever the ARST input is asserted, the data output will be reset to this value. Only used for synchronous ports.

SRST_VALUE

Whenever the SRST input is synchronously asserted, the data output will be reset to this value. Only

used for synchronous ports.

INIT_VALUE

The initial value of the data output, for synchronous ports.

CE_OVER_SRST

If this parameter is non-zero, the **SRST** input is only recognized when **EN** is true. Otherwise, **SRST** is recognized regardless of **EN**.

The `$memwr_v2` cells have a clock input **CLK**, an enable input **EN** (one enable bit for each data bit), an address input **ADDR** and a data input **DATA**. They also have the following parameters:

MEMID

The name of the `RTLIL::Memory` object that is associated with this write port.

ABITS

The number of address bits (width of the **ADDR** input port).

WIDTH

The number of data bits (width of the **DATA** output port). Like with `$memrd_v2` cells, the width is allowed to be any power-of-two multiple of memory width, with the corresponding restriction on address.

CLK_ENABLE

When this parameter is non-zero, the clock is used. Otherwise this write port is asynchronous and the **CLK** input is not used.

CLK_POLARITY

Clock is active on positive edge if this parameter has the value `1'b1` and on the negative edge if this parameter is `1'b0`.

PORTID

An identifier for this write port, used to index write port bit mask parameters.

PRIORITY_MASK

This parameter is a bitmask of write ports that this write port has priority over in case of writing to the same address. The bits of this parameter are indexed by the other write port's **PORTID** parameter. Write ports can only have priority over write ports with lower port ID. When two ports write to the same address and neither has priority over the other, the result is undefined. Priority can only be set between two synchronous ports sharing the same clock domain.

The `$meminit_v2` cells have an address input **ADDR**, a data input **DATA**, with the width of the **DATA** port equal to **WIDTH** parameter times **WORDS** parameter, and a bit enable mask input **EN** with width equal to **WIDTH** parameter. All three of the inputs must resolve to a constant for synthesis to succeed.

MEMID

The name of the `RTLIL::Memory` object that is associated with this initialization cell.

ABITS

The number of address bits (width of the **ADDR** input port).

WIDTH

The number of data bits per memory location.

WORDS

The number of consecutive memory locations initialized by this cell.

PRIORITY

The cell with the higher integer value in this parameter wins an initialization conflict.

The HDL frontend models a memory using `RTLIL::Memory` objects and asynchronous `$memrd_v2` and `$memwr_v2` cells. The `memory` pass (i.e. its various sub-passes) migrates `$dff` cells into the `$memrd_v2`

and `$memwr_v2` cells making them synchronous, then converts them to a single `$mem_v2` cell and (optionally) maps this cell type to `$dff` cells for the individual words and multiplexer-based address decoders for the read and write interfaces. When the last step is disabled or not possible, a `$mem_v2` cell is left in the design.

The `$mem_v2` cell provides the following parameters:

MEMID

The name of the original RTLIL::Memory object that became this `$mem_v2` cell.

SIZE

The number of words in the memory.

ABITS

The number of address bits.

WIDTH

The number of data bits per word.

INIT

The initial memory contents.

RD_PORTS

The number of read ports on this memory cell.

RD_WIDE_CONTINUATION

This parameter is `RD_PORTS` bits wide, containing a bitmask of “wide continuation” read ports. Such ports are used to represent the extra data bits of wide ports in the combined cell, and must have all control signals identical with the preceding port, except for address, which must have the proper sub-cell address encoded in the low bits.

RD_CLK_ENABLE

This parameter is `RD_PORTS` bits wide, containing a clock enable bit for each read port.

RD_CLK_POLARITY

This parameter is `RD_PORTS` bits wide, containing a clock polarity bit for each read port.

RD_TRANSPARENCY_MASK

This parameter is `RD_PORTS*WR_PORTS` bits wide, containing a concatenation of all `TRANSPARENCY_MASK` values of the original `$memrd_v2` cells.

RD_COLLISION_X_MASK

This parameter is `RD_PORTS*WR_PORTS` bits wide, containing a concatenation of all `COLLISION_X_MASK` values of the original `$memrd_v2` cells.

RD_CE_OVER_SRST

This parameter is `RD_PORTS` bits wide, determining relative synchronous reset and enable priority for each read port.

RD_INIT_VALUE

This parameter is `RD_PORTS*WIDTH` bits wide, containing the initial value for each synchronous read port.

RD_ARST_VALUE

This parameter is `RD_PORTS*WIDTH` bits wide, containing the asynchronous reset value for each synchronous read port.

RD_SRST_VALUE

This parameter is `RD_PORTS*WIDTH` bits wide, containing the synchronous reset value for each synchronous read port.

WR_PORTS

The number of write ports on this memory cell.

WR_WIDE_CONTINUATION

This parameter is WR_PORTS bits wide, containing a bitmask of “wide continuation” write ports.

WR_CLK_ENABLE

This parameter is WR_PORTS bits wide, containing a clock enable bit for each write port.

WR_CLK_POLARITY

This parameter is WR_PORTS bits wide, containing a clock polarity bit for each write port.

WR_PRIORITY_MASK

This parameter is WR_PORTS*WR_PORTS bits wide, containing a concatenation of all PRIORITY_MASK values of the original *\$memwr_v2* cells.

The *\$mem_v2* cell has the following ports:

RD_CLK

This input is RD_PORTS bits wide, containing all clock signals for the read ports.

RD_EN

This input is RD_PORTS bits wide, containing all enable signals for the read ports.

RD_ADDR

This input is RD_PORTS*ABITS bits wide, containing all address signals for the read ports.

RD_DATA

This output is RD_PORTS*WIDTH bits wide, containing all data signals for the read ports.

RD_ARST

This input is RD_PORTS bits wide, containing all asynchronous reset signals for the read ports.

RD_SRST

This input is RD_PORTS bits wide, containing all synchronous reset signals for the read ports.

WR_CLK

This input is WR_PORTS bits wide, containing all clock signals for the write ports.

WR_EN

This input is WR_PORTS*WIDTH bits wide, containing all enable signals for the write ports.

WR_ADDR

This input is WR_PORTS*ABITS bits wide, containing all address signals for the write ports.

WR_DATA

This input is WR_PORTS*WIDTH bits wide, containing all data signals for the write ports.

The *memory_collect* pass can be used to convert discrete *\$memrd_v2*, *\$memwr_v2*, and *\$meminit_v2* cells belonging to the same memory to a single *\$mem_v2* cell, whereas the *memory_unpack* pass performs the inverse operation. The *memory_dff* pass can combine asynchronous memory ports that are fed by or feeding registers into synchronous memory ports. The *memory_bram* pass can be used to recognize *\$mem_v2* cells that can be implemented with a block RAM resource on an FPGA. The *memory_map* pass can be used to implement *\$mem_v2* cells as basic logic: word-wide DFFs and address decoders.

```
yosys> help $mem
```

```
Simulation model (verilog)
```

Listing 9.61: simlib.v

```

2934 module \$_mem (RD_CLK, RD_EN, RD_ADDR, RD_DATA, WR_CLK, WR_EN, WR_ADDR, WR_DATA);
2935
2936     parameter MEMID = "";
2937     parameter signed SIZE = 4;
2938     parameter signed OFFSET = 0;
2939     parameter signed ABITS = 2;
2940     parameter signed WIDTH = 8;
2941     parameter signed INIT = 1'bx;
2942
2943     parameter signed RD_PORTS = 1;
2944     parameter RD_CLK_ENABLE = 1'b1;
2945     parameter RD_CLK_POLARITY = 1'b1;
2946     parameter RD_TRANSPARENT = 1'b1;
2947
2948     parameter signed WR_PORTS = 1;
2949     parameter WR_CLK_ENABLE = 1'b1;
2950     parameter WR_CLK_POLARITY = 1'b1;
2951
2952     input [RD_PORTS-1:0] RD_CLK;
2953     input [RD_PORTS-1:0] RD_EN;
2954     input [RD_PORTS*ABITS-1:0] RD_ADDR;
2955     output reg [RD_PORTS*WIDTH-1:0] RD_DATA;
2956
2957     input [WR_PORTS-1:0] WR_CLK;
2958     input [WR_PORTS*WIDTH-1:0] WR_EN;
2959     input [WR_PORTS*ABITS-1:0] WR_ADDR;
2960     input [WR_PORTS*WIDTH-1:0] WR_DATA;
2961
2962     reg [WIDTH-1:0] memory [SIZE-1:0];
2963
2964     integer i, j;
2965     reg [WR_PORTS-1:0] LAST_WR_CLK;
2966     reg [RD_PORTS-1:0] LAST_RD_CLK;
2967
2968     function port_active;
2969         input clk_enable;
2970         input clk_polarity;
2971         input last_clk;
2972         input this_clk;
2973         begin
2974             casez ({clk_enable, clk_polarity, last_clk, this_clk})
2975                 4'b0???: port_active = 1;
2976                 4'b1101: port_active = 1;
2977                 4'b1010: port_active = 1;
2978                 default: port_active = 0;
2979             endcase
2980         end
2981     endfunction
2982
2983     initial begin
2984         for (i = 0; i < SIZE; i = i+1)

```

(continues on next page)

(continued from previous page)

```

2985         memory[i] = INIT >>> (i*WIDTH);
2986     end
2987
2988     always @(RD_CLK, RD_ADDR, RD_DATA, WR_CLK, WR_EN, WR_ADDR, WR_DATA) begin
2989         `ifdef SIMLIB_MEMDELAY
2990             #`SIMLIB_MEMDELAY;
2991         `endif
2992         for (i = 0; i < RD_PORTS; i = i+1) begin
2993             if (!RD_TRANSPARENT[i] && RD_CLK_ENABLE[i] && RD_EN[i] && port_
2994 ↪ active(RD_CLK_ENABLE[i], RD_CLK_POLARITY[i], LAST_RD_CLK[i], RD_CLK[i])) begin
2995                 // $display("Read from %s: addr=%b data=%b", MEMID, RD_ADDR[i*ABITS_
2996 ↪ +: ABITS], memory[RD_ADDR[i*ABITS +: ABITS] - OFFSET]);
2997                 RD_DATA[i*WIDTH +: WIDTH] <= memory[RD_ADDR[i*ABITS +: ABITS] -
2998 ↪ OFFSET];
2999             end
3000         end
3001         for (i = 0; i < WR_PORTS; i = i+1) begin
3002             if (port_active(WR_CLK_ENABLE[i], WR_CLK_POLARITY[i], LAST_WR_CLK[i],
3003 ↪ WR_CLK[i]))
3004                 for (j = 0; j < WIDTH; j = j+1)
3005                     if (WR_EN[i*WIDTH+j]) begin
3006                         // $display("Write to %s: addr=%b data=%b", MEMID, WR_
3007 ↪ ADDR[i*ABITS +: ABITS], WR_DATA[i*WIDTH+j]);
3008                         memory[WR_ADDR[i*ABITS +: ABITS] - OFFSET][j] = WR_
3009 ↪ DATA[i*WIDTH+j];
3010                     end
3011             end
3012         end
3013         for (i = 0; i < RD_PORTS; i = i+1) begin
3014             if ((RD_TRANSPARENT[i] || !RD_CLK_ENABLE[i]) && port_active(RD_CLK_
3015 ↪ ENABLE[i], RD_CLK_POLARITY[i], LAST_RD_CLK[i], RD_CLK[i])) begin
3016                 // $display("Transparent read from %s: addr=%b data=%b", MEMID, RD_
3017 ↪ ADDR[i*ABITS +: ABITS], memory[RD_ADDR[i*ABITS +: ABITS] - OFFSET]);
3018                 RD_DATA[i*WIDTH +: WIDTH] <= memory[RD_ADDR[i*ABITS +: ABITS] -
3019 ↪ OFFSET];
3020             end
3021         end
3022         LAST_RD_CLK <= RD_CLK;
3023         LAST_WR_CLK <= WR_CLK;
3024     end
3025 endmodule

```

yosys> help \$mem_v2

Simulation model (verilog)

Listing 9.62: simlib.v

```

3023 module \$_mem_v2 (RD_CLK, RD_EN, RD_ARST, RD_SRST, RD_ADDR, RD_DATA, WR_CLK, WR_EN,
    ↪ WR_ADDR, WR_DATA);
3024
3025     parameter MEMID = "";
3026     parameter signed SIZE = 4;
3027     parameter signed OFFSET = 0;
3028     parameter signed ABITS = 2;
3029     parameter signed WIDTH = 8;
3030     parameter signed INIT = 1'bx;
3031
3032     parameter signed RD_PORTS = 1;
3033     parameter RD_CLK_ENABLE = 1'b1;
3034     parameter RD_CLK_POLARITY = 1'b1;
3035     parameter RD_TRANSPARENCY_MASK = 1'b0;
3036     parameter RD_COLLISION_X_MASK = 1'b0;
3037     parameter RD_WIDE_CONTINUATION = 1'b0;
3038     parameter RD_CE_OVER_SRST = 1'b0;
3039     parameter RD_ARST_VALUE = 1'b0;
3040     parameter RD_SRST_VALUE = 1'b0;
3041     parameter RD_INIT_VALUE = 1'b0;
3042
3043     parameter signed WR_PORTS = 1;
3044     parameter WR_CLK_ENABLE = 1'b1;
3045     parameter WR_CLK_POLARITY = 1'b1;
3046     parameter WR_PRIORITY_MASK = 1'b0;
3047     parameter WR_WIDE_CONTINUATION = 1'b0;
3048
3049     input [RD_PORTS-1:0] RD_CLK;
3050     input [RD_PORTS-1:0] RD_EN;
3051     input [RD_PORTS-1:0] RD_ARST;
3052     input [RD_PORTS-1:0] RD_SRST;
3053     input [RD_PORTS*ABITS-1:0] RD_ADDR;
3054     output reg [RD_PORTS*WIDTH-1:0] RD_DATA;
3055
3056     input [WR_PORTS-1:0] WR_CLK;
3057     input [WR_PORTS*WIDTH-1:0] WR_EN;
3058     input [WR_PORTS*ABITS-1:0] WR_ADDR;
3059     input [WR_PORTS*WIDTH-1:0] WR_DATA;
3060
3061     reg [WIDTH-1:0] memory [SIZE-1:0];
3062
3063     integer i, j, k;
3064     reg [WR_PORTS-1:0] LAST_WR_CLK;
3065     reg [RD_PORTS-1:0] LAST_RD_CLK;
3066
3067     function port_active;
3068         input clk_enable;
3069         input clk_polarity;
3070         input last_clk;
3071         input this_clk;
3072         begin

```

(continues on next page)

(continued from previous page)

```

3073         casez ({clk_enable, clk_polarity, last_clk, this_clk})
3074             4'b0??? : port_active = 1;
3075             4'b1101 : port_active = 1;
3076             4'b1010 : port_active = 1;
3077             default : port_active = 0;
3078         endcase
3079     end
3080 endfunction
3081
3082 initial begin
3083     for (i = 0; i < SIZE; i = i+1)
3084         memory[i] = INIT >>> (i*WIDTH);
3085     RD_DATA = RD_INIT_VALUE;
3086 end
3087
3088 always @(RD_CLK, RD_ARST, RD_ADDR, RD_DATA, WR_CLK, WR_EN, WR_ADDR, WR_DATA)
3089 ↪begin
3090     `ifdef SIMLIB_MEMDELAY
3091         #`SIMLIB_MEMDELAY;
3092     `endif
3093     for (i = 0; i < RD_PORTS; i = i+1) begin
3094         if (RD_CLK_ENABLE[i] && RD_EN[i] && port_active(RD_CLK_ENABLE[i], RD_
3095 ↪CLK_POLARITY[i], LAST_RD_CLK[i], RD_CLK[i])) begin
3096             // $display("Read from %s: addr=%b data=%b", MEMID, RD_ADDR[i*ABITS
3097 ↪+: ABITS], memory[RD_ADDR[i*ABITS +: ABITS] - OFFSET]);
3098             RD_DATA[i*WIDTH +: WIDTH] <= memory[RD_ADDR[i*ABITS +: ABITS] -
3099 ↪OFFSET];
3100
3101             for (j = 0; j < WR_PORTS; j = j+1) begin
3102                 if (RD_TRANSPARENCY_MASK[i*WR_PORTS + j] && port_active(WR_CLK_
3103 ↪ENABLE[j], WR_CLK_POLARITY[j], LAST_WR_CLK[j], WR_CLK[j]) && RD_ADDR[i*ABITS +:
3104 ↪ABITS] == WR_ADDR[j*ABITS +: ABITS])
3105                     for (k = 0; k < WIDTH; k = k+1)
3106                         if (WR_EN[j*WIDTH+k])
3107                             RD_DATA[i*WIDTH+k] <= WR_DATA[j*WIDTH+k];
3108                 if (RD_COLLISION_X_MASK[i*WR_PORTS + j] && port_active(WR_CLK_
3109 ↪ENABLE[j], WR_CLK_POLARITY[j], LAST_WR_CLK[j], WR_CLK[j]) && RD_ADDR[i*ABITS +:
3110 ↪ABITS] == WR_ADDR[j*ABITS +: ABITS])
3111                     for (k = 0; k < WIDTH; k = k+1)
3112                         if (WR_EN[j*WIDTH+k])
3113                             RD_DATA[i*WIDTH+k] <= 1'bx;
3114             end
3115         end
3116     end
3117
3118     for (i = 0; i < WR_PORTS; i = i+1) begin
3119         if (port_active(WR_CLK_ENABLE[i], WR_CLK_POLARITY[i], LAST_WR_CLK[i],
3120 ↪WR_CLK[i]))
3121             for (j = 0; j < WIDTH; j = j+1)
3122                 if (WR_EN[i*WIDTH+j]) begin
3123                     // $display("Write to %s: addr=%b data=%b", MEMID, WR_
3124 ↪ADDR[i*ABITS +: ABITS], WR_DATA[i*WIDTH+j]);

```

(continues on next page)

(continued from previous page)

```

3115         memory[WR_ADDR[i*ABITS +: ABITS] - OFFSET][j] = WR_
↪DATA[i*WIDTH+j];
3116     end
3117 end
3118
3119     for (i = 0; i < RD_PORTS; i = i+1) begin
3120         if (!RD_CLK_ENABLE[i]) begin
3121             // $display("Combinatorial read from %s: addr=%b data=%b", MEMID,
↪RD_ADDR[i*ABITS +: ABITS], memory[RD_ADDR[i*ABITS +: ABITS] - OFFSET]);
3122             RD_DATA[i*WIDTH +: WIDTH] <= memory[RD_ADDR[i*ABITS +: ABITS] -
↪OFFSET];
3123         end
3124     end
3125
3126     for (i = 0; i < RD_PORTS; i = i+1) begin
3127         if (RD_SRST[i] && port_active(RD_CLK_ENABLE[i], RD_CLK_POLARITY[i],
↪LAST_RD_CLK[i], RD_CLK[i]) && (RD_EN[i] || !RD_CE_OVER_SRST[i]))
3128             RD_DATA[i*WIDTH +: WIDTH] <= RD_SRST_VALUE[i*WIDTH +: WIDTH];
3129         if (RD_ARST[i])
3130             RD_DATA[i*WIDTH +: WIDTH] <= RD_ARST_VALUE[i*WIDTH +: WIDTH];
3131     end
3132
3133     LAST_RD_CLK <= RD_CLK;
3134     LAST_WR_CLK <= WR_CLK;
3135 end
3136
3137 endmodule

```

yosys> help \$meminit

Simulation model (verilog)

Listing 9.63: simlib.v

```

2885 module \ $meminit (ADDR, DATA);
2886
2887     parameter MEMID = "";
2888     parameter ABITS = 8;
2889     parameter WIDTH = 8;
2890     parameter WORDS = 1;
2891
2892     parameter PRIORITY = 0;
2893
2894     input [ABITS-1:0] ADDR;
2895     input [WORDS*WIDTH-1:0] DATA;
2896
2897     initial begin
2898         if (MEMID != "") begin
2899             $display("ERROR: Found non-simulatable instance of $meminit!");
2900             $finish;
2901         end
2902     end

```

(continues on next page)

(continued from previous page)

```

2903
2904 endmodule

```

```
yosys> help $meminit_v2
```

```
Simulation model (verilog)
```

Listing 9.64: simlib.v

```

2909 module \ $meminit_v2 (ADDR, DATA, EN);
2910
2911     parameter MEMID = "";
2912     parameter ABITS = 8;
2913     parameter WIDTH = 8;
2914     parameter WORDS = 1;
2915
2916     parameter PRIORITY = 0;
2917
2918     input [ABITS-1:0] ADDR;
2919     input [WORDS*WIDTH-1:0] DATA;
2920     input [WIDTH-1:0] EN;
2921
2922     initial begin
2923         if (MEMID != "") begin
2924             $display("ERROR: Found non-simulatable instance of $meminit_v2!");
2925             $finish;
2926         end
2927     end
2928
2929 endmodule

```

```
yosys> help $memrd
```

```
Simulation model (verilog)
```

Listing 9.65: simlib.v

```

2776 module \ $memrd (CLK, EN, ADDR, DATA);
2777
2778     parameter MEMID = "";
2779     parameter ABITS = 8;
2780     parameter WIDTH = 8;
2781
2782     parameter CLK_ENABLE = 0;
2783     parameter CLK_POLARITY = 0;
2784     parameter TRANSPARENT = 0;
2785
2786     input CLK, EN;
2787     input [ABITS-1:0] ADDR;
2788     output [WIDTH-1:0] DATA;
2789
2790     initial begin
2791         if (MEMID != "") begin

```

(continues on next page)

(continued from previous page)

```

2792         $display("ERROR: Found non-simulatable instance of $memrd!");
2793         $finish;
2794     end
2795 end
2796
2797 endmodule

```

yosys> help \$memrd_v2

Simulation model (verilog)

Listing 9.66: simlib.v

```

2801 module \ $memrd_v2 (CLK, EN, ARST, SRST, ADDR, DATA);
2802
2803     parameter MEMID = "";
2804     parameter ABITS = 8;
2805     parameter WIDTH = 8;
2806
2807     parameter CLK_ENABLE = 0;
2808     parameter CLK_POLARITY = 0;
2809     parameter TRANSPARENCY_MASK = 0;
2810     parameter COLLISION_X_MASK = 0;
2811     parameter ARST_VALUE = 0;
2812     parameter SRST_VALUE = 0;
2813     parameter INIT_VALUE = 0;
2814     parameter CE_OVER_SRST = 0;
2815
2816     input CLK, EN, ARST, SRST;
2817     input [ABITS-1:0] ADDR;
2818     output [WIDTH-1:0] DATA;
2819
2820     initial begin
2821         if (MEMID != "") begin
2822             $display("ERROR: Found non-simulatable instance of $memrd_v2!");
2823             $finish;
2824         end
2825     end
2826
2827 endmodule

```

yosys> help \$memwr

Simulation model (verilog)

Listing 9.67: simlib.v

```

2832 module \ $memwr (CLK, EN, ADDR, DATA);
2833
2834     parameter MEMID = "";
2835     parameter ABITS = 8;
2836     parameter WIDTH = 8;
2837

```

(continues on next page)

(continued from previous page)

```

2838     parameter CLK_ENABLE = 0;
2839     parameter CLK_POLARITY = 0;
2840     parameter PRIORITY = 0;
2841
2842     input CLK;
2843     input [WIDTH-1:0] EN;
2844     input [ABITS-1:0] ADDR;
2845     input [WIDTH-1:0] DATA;
2846
2847     initial begin
2848         if (MEMID != "") begin
2849             $display("ERROR: Found non-simulatable instance of $memwr!");
2850             $finish;
2851         end
2852     end
2853
2854 endmodule

```

yosys> help \$memwr_v2

Simulation model (verilog)

Listing 9.68: simlib.v

```

2857 module \ $memwr_v2 (CLK, EN, ADDR, DATA);
2858
2859     parameter MEMID = "";
2860     parameter ABITS = 8;
2861     parameter WIDTH = 8;
2862
2863     parameter CLK_ENABLE = 0;
2864     parameter CLK_POLARITY = 0;
2865     parameter PORTID = 0;
2866     parameter PRIORITY_MASK = 0;
2867
2868     input CLK;
2869     input [WIDTH-1:0] EN;
2870     input [ABITS-1:0] ADDR;
2871     input [WIDTH-1:0] DATA;
2872
2873     initial begin
2874         if (MEMID != "") begin
2875             $display("ERROR: Found non-simulatable instance of $memwr_v2!");
2876             $finish;
2877         end
2878     end
2879
2880 endmodule

```

9.1.6 Finite state machines

Todo

Describe `$fsm` cell

yosys> help \$fsm

Simulation model (verilog)

Listing 9.69: simlib.v

```

2681 module \fsm (CLK, ARST, CTRL_IN, CTRL_OUT);
2682
2683     parameter NAME = "";
2684
2685     parameter CLK_POLARITY = 1'b1;
2686     parameter ARST_POLARITY = 1'b1;
2687
2688     parameter CTRL_IN_WIDTH = 1;
2689     parameter CTRL_OUT_WIDTH = 1;
2690
2691     parameter STATE_BITS = 1;
2692     parameter STATE_NUM = 1;
2693     parameter STATE_NUM_LOG2 = 1;
2694     parameter STATE_RST = 0;
2695     parameter STATE_TABLE = 1'b0;
2696
2697     parameter TRANS_NUM = 1;
2698     parameter TRANS_TABLE = 4'b0x0x;
2699
2700     input CLK, ARST;
2701     input [CTRL_IN_WIDTH-1:0] CTRL_IN;
2702     output reg [CTRL_OUT_WIDTH-1:0] CTRL_OUT;
2703
2704     wire pos_clk = CLK == CLK_POLARITY;
2705     wire pos_arst = ARST == ARST_POLARITY;
2706
2707     reg [STATE_BITS-1:0] state;
2708     reg [STATE_BITS-1:0] state_tmp;
2709     reg [STATE_BITS-1:0] next_state;
2710
2711     reg [STATE_BITS-1:0] tr_state_in;
2712     reg [STATE_BITS-1:0] tr_state_out;
2713     reg [CTRL_IN_WIDTH-1:0] tr_ctrl_in;
2714     reg [CTRL_OUT_WIDTH-1:0] tr_ctrl_out;
2715
2716     integer i;
2717
2718     task tr_fetch;
2719         input [31:0] tr_num;

```

(continues on next page)

(continued from previous page)

```

2720     reg [31:0] tr_pos;
2721     reg [STATE_NUM_LOG2-1:0] state_num;
2722     begin
2723         tr_pos = (2*STATE_NUM_LOG2+CTRL_IN_WIDTH+CTRL_OUT_WIDTH)*tr_num;
2724         tr_ctrl_out = TRANS_TABLE >> tr_pos;
2725         tr_pos = tr_pos + CTRL_OUT_WIDTH;
2726         state_num = TRANS_TABLE >> tr_pos;
2727         tr_state_out = STATE_TABLE >> (STATE_BITS*state_num);
2728         tr_pos = tr_pos + STATE_NUM_LOG2;
2729         tr_ctrl_in = TRANS_TABLE >> tr_pos;
2730         tr_pos = tr_pos + CTRL_IN_WIDTH;
2731         state_num = TRANS_TABLE >> tr_pos;
2732         tr_state_in = STATE_TABLE >> (STATE_BITS*state_num);
2733         tr_pos = tr_pos + STATE_NUM_LOG2;
2734     end
2735 endtask
2736
2737 always @(posedge pos_clk, posedge pos_arst) begin
2738     if (pos_arst) begin
2739         state_tmp = STATE_TABLE[STATE_BITS*(STATE_RST+1)-1:STATE_BITS*STATE_
↪RST];
2740         for (i = 0; i < STATE_BITS; i = i+1)
2741             if (state_tmp[i] === 1'bz)
2742                 state_tmp[i] = 0;
2743         state <= state_tmp;
2744     end else begin
2745         state_tmp = next_state;
2746         for (i = 0; i < STATE_BITS; i = i+1)
2747             if (state_tmp[i] === 1'bz)
2748                 state_tmp[i] = 0;
2749         state <= state_tmp;
2750     end
2751 end
2752
2753 always @(state, CTRL_IN) begin
2754     next_state <= STATE_TABLE[STATE_BITS*(STATE_RST+1)-1:STATE_BITS*STATE_RST];
2755     CTRL_OUT <= 'bx;
2756     // $display("---");
2757     // $display("Q: %b %b", state, CTRL_IN);
2758     for (i = 0; i < TRANS_NUM; i = i+1) begin
2759         tr_fetch(i);
2760         // $display("T: %b %b -> %b %b [%d]", tr_state_in, tr_ctrl_in, tr_state_
↪out, tr_ctrl_out, i);
2761         casez ({state, CTRL_IN})
2762             {tr_state_in, tr_ctrl_in}: begin
2763                 // $display("-> %b %b <- MATCH", state, CTRL_IN);
2764                 {next_state, CTRL_OUT} <= {tr_state_out, tr_ctrl_out};
2765             end
2766         endcase
2767     end
2768 end
2769

```

(continues on next page)

(continued from previous page)

2770 `endmodule`

9.1.7 Coarse arithmetics

Todo

Add information about *\$alu*, *\$fa*, *\$macc_v2*, and *\$lcu* cells.

The *\$macc* cell type represents a generalized multiply and accumulate operation. The cell is purely combinational. It outputs the result of summing up a sequence of products and other injected summands.

```
Y = 0 +- a0factor1 * a0factor2 +- a1factor1 * a1factor2 +- ...
      + B[0] + B[1] + ...
```

The A port consists of concatenated pairs of multiplier inputs (“factors”). A zero length factor2 acts as a constant 1, turning factor1 into a simple summand.

In this pseudocode, *u(foo)* means an unsigned int that’s foo bits long.

```
struct A {
    u(CONFIG.mul_info[0].factor1_len) a0factor1;
    u(CONFIG.mul_info[0].factor2_len) a0factor2;
    u(CONFIG.mul_info[1].factor1_len) a1factor1;
    u(CONFIG.mul_info[1].factor2_len) a1factor2;
    ...
};
```

The cell’s CONFIG parameter determines the layout of cell port A. The CONFIG parameter carries the following information:

```
struct CONFIG {
    u4 num_bits;
    struct mul_info {
        bool is_signed;
        bool is_subtract;
        u(num_bits) factor1_len;
        u(num_bits) factor2_len;
    }[num_ports];
};
```

B is an array of concatenated 1-bit-wide unsigned integers to also be summed up.

yosys> help \$alu

Arithmetic logic unit

A building block supporting both binary addition/subtraction operations, and indirectly, comparison operations. Typically created by the *alumacc* pass, which transforms: *\$add*, *\$sub*, *\$lt*, *\$le*, *\$ge*, *\$gt*, *\$eq*, *\$eqx*, *\$ne*, *\$nex* cells into this *\$alu* cell.

Properties

is_evaluateable

Simulation model (verilog)

Listing 9.70: simlib.v

```

657 module \$(alu) (A, B, CI, BI, X, Y, CO);
658
659     parameter A_SIGNED = 0;
660     parameter B_SIGNED = 0;
661     parameter A_WIDTH = 1;
662     parameter B_WIDTH = 1;
663     parameter Y_WIDTH = 1;
664
665     input [A_WIDTH-1:0] A;          // Input operand
666     input [B_WIDTH-1:0] B;          // Input operand
667     output [Y_WIDTH-1:0] X;         // A xor B (sign-extended, optional B inversion,
668                                     // used in combination with
669                                     // reduction-AND for $eq/$ne ops)
670     output [Y_WIDTH-1:0] Y;         // Sum
671
672     input CI;                       // Carry-in (set for $sub)
673     input BI;                       // Invert-B (set for $sub)
674     output [Y_WIDTH-1:0] CO;        // Carry-out
675
676     wire [Y_WIDTH-1:0] AA, BB;
677
678     generate
679         if (A_SIGNED && B_SIGNED) begin:BLOCK1
680             assign AA = $signed(A), BB = BI ? ~$signed(B) : $signed(B);
681         end else begin:BLOCK2
682             assign AA = $unsigned(A), BB = BI ? ~$unsigned(B) : $unsigned(B);
683         end
684     endgenerate
685
686     // this is 'x' if Y and CO should be all 'x', and '0' otherwise
687     wire y_co_undef = ^{A, A, B, B, CI, CI, BI, BI};
688
689     assign X = AA ^ BB;
690     // Full adder
691     assign Y = (AA + BB + CI) ^ {Y_WIDTH{y_co_undef}};
692
693     function get_carry;
694         input a, b, c;
695         get_carry = (a&b) | (a&c) | (b&c);
696     endfunction
697
698     genvar i;
699     generate
700         assign CO[0] = get_carry(AA[0], BB[0], CI) ^ y_co_undef;
701         for (i = 1; i < Y_WIDTH; i = i+1) begin:BLOCK3
702             assign CO[i] = get_carry(AA[i], BB[i], CO[i-1]) ^ y_co_undef;
703         end
704     endgenerate
705
706 endmodule

```


yosys> help \$fa

Properties

is_evaluable

Simulation model (verilog)

Listing 9.71: simlib.v

```

597 module \fa (A, B, C, X, Y);
598
599     parameter WIDTH = 1;
600
601     input [WIDTH-1:0] A, B, C;
602     output [WIDTH-1:0] X, Y;
603
604     wire [WIDTH-1:0] t1, t2, t3;
605
606     assign t1 = A ^ B, t2 = A & B, t3 = C & t1;
607     assign Y = t1 ^ C, X = (t2 | t3) ^ (Y ^ Y);
608
609 endmodule

```

yosys> help \$lcu

Lookahead carry unit A building block dedicated to fast computation of carry-bits used in binary arithmetic operations. By replacing the ripple carry structure used in full-adder blocks, the more significant bits of the sum can be expected to be computed more quickly. Typically created during techmap of \$alu cells (see the “_90_alu” rule in +/techmap.v).

Properties

is_evaluable

Simulation model (verilog)

Listing 9.72: simlib.v

```

625 module \lcu (P, G, CI, CO);
626
627     parameter WIDTH = 1;
628
629     input [WIDTH-1:0] P;    // Propagate
630     input [WIDTH-1:0] G;    // Generate
631     input CI;               // Carry-in
632
633     output reg [WIDTH-1:0] CO; // Carry-out
634
635     integer i;
636     always @* begin
637         CO = 'bx;
638         if (~{P, G, CI} != 1'bx) begin
639             CO[0] = G[0] || (P[0] && CI);
640             for (i = 1; i < WIDTH; i = i+1)
641                 CO[i] = G[i] || (P[i] && CO[i-1]);
642         end
643     end

```

(continues on next page)

(continued from previous page)

```

644
645 endmodule

```

yosys> help \$macc

Multiply and accumulate. A building block for summing any number of negated and unnegated signals and arithmetic products of pairs of signals. Cell port A concatenates pairs of signals to be multiplied together. When the second signal in a pair is zero length, a constant 1 is used instead as the second factor. Cell port B concatenates 1-bit-wide signals to also be summed, such as “carry in” in adders. Typically created by the `alumacc` pass, which transforms `$add` and `$mul` into `$macc` cells.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.73: `simlib.v`

```

1073 module \macc (A, B, Y);
1074
1075     parameter A_WIDTH = 0;
1076     parameter B_WIDTH = 0;
1077     parameter Y_WIDTH = 0;
1078     // CONFIG determines the layout of A, as explained below
1079     parameter CONFIG = 4'b0000;
1080     parameter CONFIG_WIDTH = 4;
1081
1082     // In the terms used for this cell, there's mixed meanings for the term "port".
1083     ↪To disambiguate:
1084     // A cell port is for example the A input (it is constructed in C++ as cell->
1085     ↪setPort(ID::A, ...))
1086     // Multiplier ports are pairs of multiplier inputs ("factors").
1087     // If the second signal in such a pair is zero length, no multiplication is
1088     ↪necessary, and the first signal is just added to the sum.
1089     input [A_WIDTH-1:0] A; // Cell port A is the concatenation of all arithmetic
1090     ↪ports
1091     input [B_WIDTH-1:0] B; // Cell port B is the concatenation of single-bit
1092     ↪unsigned signals to be also added to the sum
1093     output reg [Y_WIDTH-1:0] Y; // Output sum
1094
1095     // Xilinx XSIM does not like $clog2() below..
1096     function integer my_clog2;
1097         input integer v;
1098         begin
1099             if (v > 0)
1100                 v = v - 1;
1101             my_clog2 = 0;
1102             while (v) begin
1103                 v = v >> 1;
1104                 my_clog2 = my_clog2 + 1;
1105             end
1106         end
1107     endfunction
1108
1109

```

(continues on next page)

(continued from previous page)

```

1104 // Bits that a factor's length field in CONFIG per factor in cell port A
1105 localparam integer num_bits = CONFIG[3:0] > 0 ? CONFIG[3:0] : 1;
1106 // Number of multiplier ports
1107 localparam integer num_ports = (CONFIG_WIDTH-4) / (2 + 2*num_bits);
1108 // Minium bit width of an induction variable to iterate over all bits of cell
1109 →port A
1110 localparam integer num_abits = my_clog2(A_WIDTH) > 0 ? my_clog2(A_WIDTH) : 1;
1111
1112 // In this pseudocode, u(foo) means an unsigned int that's foo bits long.
1113 // The CONFIG parameter carries the following information:
1114 // struct CONFIG {
1115 //     u4 num_bits;
1116 //     struct port_field {
1117 //         bool is_signed;
1118 //         bool is_subtract;
1119 //         u(num_bits) factor1_len;
1120 //         u(num_bits) factor2_len;
1121 //     }[num_ports];
1122 // };
1123
1124 // The A cell port carries the following information:
1125 // struct A {
1126 //     u(CONFIG.port_field[0].factor1_len) port0factor1;
1127 //     u(CONFIG.port_field[0].factor2_len) port0factor2;
1128 //     u(CONFIG.port_field[1].factor1_len) port1factor1;
1129 //     u(CONFIG.port_field[1].factor2_len) port1factor2;
1130 //     ...
1131 // };
1132 // and log(sizeof(A)) is num_abits.
1133 // No factor1 may have a zero length.
1134 // A factor2 having a zero length implies factor2 is replaced with a constant 1.
1135
1136 // Additionally, B is an array of 1-bit-wide unsigned integers to also be
1137 →summed up.
1138 // Finally, we have:
1139 // Y = port0factor1 * port0factor2 + port1factor1 * port1factor2 + ...
1140 //     * B[0] + B[1] + ...
1141
1142 function [2*num_ports*num_abits-1:0] get_port_offsets;
1143 input [CONFIG_WIDTH-1:0] cfg;
1144 integer i, cursor;
1145 begin
1146     cursor = 0;
1147     get_port_offsets = 0;
1148     for (i = 0; i < num_ports; i = i+1) begin
1149         get_port_offsets[(2*i + 0)*num_abits +: num_abits] = cursor;
1150         cursor = cursor + cfg[4 + i*(2 + 2*num_bits) + 2 +: num_bits];
1151         get_port_offsets[(2*i + 1)*num_abits +: num_abits] = cursor;
1152         cursor = cursor + cfg[4 + i*(2 + 2*num_bits) + 2 + num_bits +: num_
1153 →bits];
1154     end
1155 end

```

(continues on next page)

(continued from previous page)

```

1153     endfunction
1154
1155     localparam [2*num_ports*num_abits-1:0] port_offsets = get_port_offsets(CONFIG);
1156
1157     `define PORT_IS_SIGNED    (0 + CONFIG[4 + i*(2 + 2*num_bits)])
1158     `define PORT_DO_SUBTRACT (0 + CONFIG[4 + i*(2 + 2*num_bits) + 1])
1159     `define PORT_SIZE_A      (0 + CONFIG[4 + i*(2 + 2*num_bits) + 2 +: num_bits])
1160     `define PORT_SIZE_B      (0 + CONFIG[4 + i*(2 + 2*num_bits) + 2 + num_bits +:
↪num_bits])
1161     `define PORT_OFFSET_A    (0 + port_offsets[2*i*num_abits +: num_abits])
1162     `define PORT_OFFSET_B    (0 + port_offsets[2*i*num_abits + num_abits +: num_
↪abits])
1163
1164     integer i, j;
1165     reg [Y_WIDTH-1:0] tmp_a, tmp_b;
1166
1167     always @* begin
1168         Y = 0;
1169         for (i = 0; i < num_ports; i = i+1)
1170             begin
1171                 tmp_a = 0;
1172                 tmp_b = 0;
1173
1174                 for (j = 0; j < `PORT_SIZE_A; j = j+1)
1175                     tmp_a[j] = A[`PORT_OFFSET_A + j];
1176
1177                 if (`PORT_IS_SIGNED && `PORT_SIZE_A > 0)
1178                     for (j = `PORT_SIZE_A; j < Y_WIDTH; j = j+1)
1179                         tmp_a[j] = tmp_a[`PORT_SIZE_A-1];
1180
1181                 for (j = 0; j < `PORT_SIZE_B; j = j+1)
1182                     tmp_b[j] = A[`PORT_OFFSET_B + j];
1183
1184                 if (`PORT_IS_SIGNED && `PORT_SIZE_B > 0)
1185                     for (j = `PORT_SIZE_B; j < Y_WIDTH; j = j+1)
1186                         tmp_b[j] = tmp_b[`PORT_SIZE_B-1];
1187
1188                 if (`PORT_SIZE_B > 0)
1189                     tmp_a = tmp_a * tmp_b;
1190
1191                 if (`PORT_DO_SUBTRACT)
1192                     Y = Y - tmp_a;
1193                 else
1194                     Y = Y + tmp_a;
1195             end
1196         for (i = 0; i < B_WIDTH; i = i+1) begin
1197             Y = Y + B[i];
1198         end
1199     end
1200
1201     `undef PORT_IS_SIGNED
1202     `undef PORT_DO_SUBTRACT

```

(continues on next page)

(continued from previous page)

```

1203   `undef PORT_SIZE_A
1204   `undef PORT_SIZE_B
1205   `undef PORT_OFFSET_A
1206   `undef PORT_OFFSET_B
1207
1208 endmodule

```

yosys> help \$macc_v2

Multiply and add. This cell represents a generic fused multiply-add operation, it supersedes the earlier \$macc cell.

Properties

is_evaluable

Simulation model (verilog)

Listing 9.74: simlib.v

```

1220 module \macc_v2 (A, B, C, Y);
1221
1222     parameter NPRODUCTS = 0;
1223     parameter NADDENDS = 0;
1224     parameter A_WIDTHS = 16'h0000;
1225     parameter B_WIDTHS = 16'h0000;
1226     parameter C_WIDTHS = 16'h0000;
1227     parameter Y_WIDTH = 0;
1228
1229     parameter PRODUCT_NEGATED = 1'bx;
1230     parameter ADDEND_NEGATED = 1'bx;
1231     parameter A_SIGNED = 1'bx;
1232     parameter B_SIGNED = 1'bx;
1233     parameter C_SIGNED = 1'bx;
1234
1235     function integer sum_widths1;
1236         input [(16*NPRODUCTS)-1:0] widths;
1237         integer i;
1238         begin
1239             sum_widths1 = 0;
1240             for (i = 0; i < NPRODUCTS; i++) begin
1241                 sum_widths1 = sum_widths1 + widths[16*i+:16];
1242             end
1243         end
1244     endfunction
1245
1246     function integer sum_widths2;
1247         input [(16*NADDENDS)-1:0] widths;
1248         integer i;
1249         begin
1250             sum_widths2 = 0;
1251             for (i = 0; i < NADDENDS; i++) begin
1252                 sum_widths2 = sum_widths2 + widths[16*i+:16];
1253             end
1254         end

```

(continues on next page)

(continued from previous page)

```

1255     endfunction
1256
1257     input [sum_widths1(A_WIDTHS)-1:0] A; // concatenation of LHS factors
1258     input [sum_widths1(B_WIDTHS)-1:0] B; // concatenation of RHS factors
1259     input [sum_widths2(C_WIDTHS)-1:0] C; // concatenation of summands
1260     output reg [Y_WIDTH-1:0] Y; // output sum
1261
1262     integer i, j, ai, bi, ci, aw, bw, cw;
1263     reg [Y_WIDTH-1:0] product;
1264     reg [Y_WIDTH-1:0] addend, oper_a, oper_b;
1265
1266     always @* begin
1267         Y = 0;
1268         ai = 0;
1269         bi = 0;
1270         for (i = 0; i < NPRODUCTS; i = i+1)
1271             begin
1272                 aw = A_WIDTHS[16*i+:16];
1273                 bw = B_WIDTHS[16*i+:16];
1274
1275                 oper_a = 0;
1276                 oper_b = 0;
1277                 for (j = 0; j < Y_WIDTH && j < aw; j = j + 1)
1278                     oper_a[j] = A[ai + j];
1279                 for (j = 0; j < Y_WIDTH && j < bw; j = j + 1)
1280                     oper_b[j] = B[bi + j];
1281                 // A_SIGNED[i] == B_SIGNED[i] as RTLIL invariant
1282                 if (A_SIGNED[i] && B_SIGNED[i]) begin
1283                     for (j = aw; j > 0 && j < Y_WIDTH; j = j + 1)
1284                         oper_a[j] = oper_a[j - 1];
1285                     for (j = bw; j > 0 && j < Y_WIDTH; j = j + 1)
1286                         oper_b[j] = oper_b[j - 1];
1287                 end
1288
1289                 product = oper_a * oper_b;
1290
1291                 if (PRODUCT_NEGATED[i])
1292                     Y = Y - product;
1293                 else
1294                     Y = Y + product;
1295
1296                 ai = ai + aw;
1297                 bi = bi + bw;
1298             end
1299
1300         ci = 0;
1301         for (i = 0; i < NADDENDS; i = i+1)
1302             begin
1303                 cw = C_WIDTHS[16*i+:16];
1304
1305                 addend = 0;
1306                 for (j = 0; j < Y_WIDTH && j < cw; j = j + 1)

```

(continues on next page)

(continued from previous page)

```

1307         addend[j] = C[ci + j];
1308     if (C_SIGNED[i]) begin
1309         for (j = cw; j > 0 && j < Y_WIDTH; j = j - 1)
1310             addend[j] = addend[j - 1];
1311     end
1312
1313     if (ADDEND_NEGATED[i])
1314         Y = Y - addend;
1315     else
1316         Y = Y + addend;
1317
1318     ci = ci + cw;
1319 end
1320 end
1321
1322 endmodule

```

9.1.8 Arbitrary logic functions

The *\$lut* cell type implements a single-output LUT (lookup table). It implements an arbitrary logic function with its `\LUT` parameter to map input port `\A` to values of `\Y` output port values. In pseudocode: $Y = \text{\LUT}[A]$. `\A` has width set by parameter `\WIDTH` and `\Y` has a width of 1. Every logic function with a single bit output has a unique *\$lut* representation.

The *\$sop* cell type implements a sum-of-products expression, also known as disjunctive normal form (DNF). It implements an arbitrary logic function. Its structure mimics a programmable logic array (PLA). Output port `\Y` is the sum of products of the bits of the input port `\A` as defined by parameter `\TABLE`. `\A` is `\WIDTH` bits wide. The number of products in the sum is set by parameter `\DEPTH`, and each product has two bits for each input bit - for the presence of the unnegated and negated version of said input bit in the product. Therefore the `\TABLE` parameter holds $2 * \text{\WIDTH} * \text{\DEPTH}$ bits.

For example:

Let `\WIDTH` be 3. We would like to represent $Y = \sim A[0] + A[1] \sim A[2]$. There are 2 products to be summed, so `\DEPTH` shall be 2.

```

~A[2]-----+
 A[2]-----|
~A[1]---+||
 A[1]---+|||
~A[0]---+|||
 A[0]---+|||
      ||||| product formula
      010000 ~\A[0]
      001001 \A[1]~\A[2]

```

So the value of `\TABLE` will become 010000001001.

Any logic function with a single bit output can be represented with *\$sop* but may have variously minimized or ordered summands represented in the `\TABLE` values.

```
yosys> help $lut
```

Properties

is_evaluable

Simulation model (verilog)

Listing 9.75: simlib.v

```

1755 module \${lut} (A, Y);
1756
1757     parameter WIDTH = 0;
1758     parameter LUT = 0;
1759
1760     input [WIDTH-1:0] A;
1761     output Y;
1762
1763     \${mux} #(.WIDTH(1), .S_WIDTH(WIDTH)) mux(.A(LUT[(1<<WIDTH)-1:0]), .S(A), .Y(Y));
1764
1765 endmodule

```

yosys> help \$sop

Properties

is_evaluable

Simulation model (verilog)

Listing 9.76: simlib.v

```

1771 module \${sop} (A, Y);
1772
1773     parameter WIDTH = 0;
1774     parameter DEPTH = 0;
1775     parameter TABLE = 0;
1776
1777     input [WIDTH-1:0] A;
1778     output reg Y;
1779
1780     integer i, j;
1781     reg match;
1782
1783     always @* begin
1784         Y = 0;
1785         for (i = 0; i < DEPTH; i=i+1) begin
1786             match = 1;
1787             for (j = 0; j < WIDTH; j=j+1) begin
1788                 if (TABLE[2*WIDTH*i + 2*j + 0] && A[j]) match = 0;
1789                 if (TABLE[2*WIDTH*i + 2*j + 1] && !A[j]) match = 0;
1790             end
1791             if (match) Y = 1;
1792         end
1793     end
1794
1795 endmodule

```


9.1.9 Specify rules

Todo

\$specify2, *\$specify3*, and *\$specrule* cells.

yosys> help \$specify2

Properties

is_evaluable

Simulation model (verilog)

Listing 9.77: simlib.v

```

1823 module \ $specify2 (EN, SRC, DST);
1824
1825     parameter FULL = 0;
1826     parameter SRC_WIDTH = 1;
1827     parameter DST_WIDTH = 1;
1828
1829     parameter SRC_DST_PEN = 0;
1830     parameter SRC_DST_POL = 0;
1831
1832     parameter T_RISE_MIN = 0;
1833     parameter T_RISE_TYP = 0;
1834     parameter T_RISE_MAX = 0;
1835
1836     parameter T_FALL_MIN = 0;
1837     parameter T_FALL_TYP = 0;
1838     parameter T_FALL_MAX = 0;
1839
1840     input EN;
1841     input [SRC_WIDTH-1:0] SRC;
1842     input [DST_WIDTH-1:0] DST;
1843
1844     localparam SD = SRC_DST_PEN ? (SRC_DST_POL ? 1 : 2) : 0;
1845
1846     `ifdef SIMLIB_SPECIFY
1847     specify
1848         if (EN && SD==0 && !FULL) (SRC => DST) = (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX,
1849 ↪ T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1849         if (EN && SD==0 && FULL) (SRC *> DST) = (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX,
1850 ↪ T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1850         if (EN && SD==1 && !FULL) (SRC +=> DST) = (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX,
1851 ↪ T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1851         if (EN && SD==1 && FULL) (SRC +=> DST) = (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX,
1852 ↪ T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1852         if (EN && SD==2 && !FULL) (SRC ==> DST) = (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX,
1853 ↪ T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1853         if (EN && SD==2 && FULL) (SRC ==> DST) = (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX,
1854 ↪ T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);

```

(continues on next page)

(continued from previous page)

```

1854     endspecify
1855     `endif
1856
1857 endmodule

```

yosys> help \$specify3

Properties

is_evaluable

Simulation model (verilog)

Listing 9.78: simlib.v

```

1862 module \ $specify3 (EN, SRC, DST, DAT);
1863
1864     parameter FULL = 0;
1865     parameter SRC_WIDTH = 1;
1866     parameter DST_WIDTH = 1;
1867
1868     parameter EDGE_EN = 0;
1869     parameter EDGE_POL = 0;
1870
1871     parameter SRC_DST_PEN = 0;
1872     parameter SRC_DST_POL = 0;
1873
1874     parameter DAT_DST_PEN = 0;
1875     parameter DAT_DST_POL = 0;
1876
1877     parameter T_RISE_MIN = 0;
1878     parameter T_RISE_TYP = 0;
1879     parameter T_RISE_MAX = 0;
1880
1881     parameter T_FALL_MIN = 0;
1882     parameter T_FALL_TYP = 0;
1883     parameter T_FALL_MAX = 0;
1884
1885     input EN;
1886     input [SRC_WIDTH-1:0] SRC;
1887     input [DST_WIDTH-1:0] DST, DAT;
1888
1889     localparam ED = EDGE_EN ? (EDGE_POL ? 1 : 2) : 0;
1890     localparam SD = SRC_DST_PEN ? (SRC_DST_POL ? 1 : 2) : 0;
1891     localparam DD = DAT_DST_PEN ? (DAT_DST_POL ? 1 : 2) : 0;
1892
1893     `ifdef SIMLIB_SPECIFY
1894     specify
1895         // DD=0
1896
1897         if (EN && DD==0 && SD==0 && ED==0 && !FULL) (
1898             SRC => (DST : DAT))
1899         <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1900         if (EN && DD==0 && SD==0 && ED==0 && FULL) (
1901             SRC *> (DST : DAT))
1902         <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);

```

(continues on next page)

(continued from previous page)

```

1899     if (EN && DD==0 && SD==0 && ED==1 && !FULL) (posedge SRC => (DST : DAT))
1900     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1901     if (EN && DD==0 && SD==0 && ED==1 && FULL) (posedge SRC *> (DST : DAT))
1902     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1903     if (EN && DD==0 && SD==0 && ED==2 && !FULL) (negedge SRC => (DST : DAT))
1904     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1905     if (EN && DD==0 && SD==0 && ED==2 && FULL) (negedge SRC *> (DST : DAT))
1906     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1907     if (EN && DD==0 && SD==1 && ED==0 && !FULL) (      SRC +=> (DST : DAT))
1908     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1909     if (EN && DD==0 && SD==1 && ED==0 && FULL) (      SRC +=> (DST : DAT))
1910     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1911     if (EN && DD==0 && SD==1 && ED==1 && !FULL) (posedge SRC +=> (DST : DAT))
1912     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1913     if (EN && DD==0 && SD==1 && ED==1 && FULL) (posedge SRC +=> (DST : DAT))
1914     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1915     if (EN && DD==0 && SD==1 && ED==2 && !FULL) (negedge SRC +=> (DST : DAT))
1916     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1917     if (EN && DD==0 && SD==1 && ED==2 && FULL) (negedge SRC +=> (DST : DAT))
1918     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1919     if (EN && DD==0 && SD==2 && ED==0 && !FULL) (      SRC --> (DST : DAT))
1920     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1921     if (EN && DD==0 && SD==2 && ED==0 && FULL) (      SRC --> (DST : DAT))
1922     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1923     if (EN && DD==0 && SD==2 && ED==1 && !FULL) (posedge SRC --> (DST : DAT))
1924     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1925     if (EN && DD==0 && SD==2 && ED==1 && FULL) (posedge SRC --> (DST : DAT))
1926     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1927     if (EN && DD==0 && SD==2 && ED==2 && !FULL) (negedge SRC --> (DST : DAT))
1928     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1929     if (EN && DD==0 && SD==2 && ED==2 && FULL) (negedge SRC --> (DST : DAT))
1930     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1931     // DD=1
1932     if (EN && DD==1 && SD==0 && ED==0 && !FULL) (      SRC => (DST +: DAT))
1933     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1934     if (EN && DD==1 && SD==0 && ED==0 && FULL) (      SRC *> (DST +: DAT))
1935     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1936     if (EN && DD==1 && SD==0 && ED==1 && !FULL) (posedge SRC => (DST +: DAT))
1937     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1938     if (EN && DD==1 && SD==0 && ED==1 && FULL) (posedge SRC *> (DST +: DAT))
1939     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1940     if (EN && DD==1 && SD==0 && ED==2 && !FULL) (negedge SRC => (DST +: DAT))
1941     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1942     if (EN && DD==1 && SD==0 && ED==2 && FULL) (negedge SRC *> (DST +: DAT))
1943     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1944     if (EN && DD==1 && SD==1 && ED==0 && !FULL) (      SRC +=> (DST +: DAT))
1945     <=> (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);

```

(continues on next page)

(continued from previous page)

```

1928     if (EN && DD==1 && SD==1 && ED==0 && FULL) (      SRC +=> (DST +: DAT))
1929     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1929     if (EN && DD==1 && SD==1 && ED==1 && !FULL) (posedge SRC +=> (DST +: DAT))
1929     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1930     if (EN && DD==1 && SD==1 && ED==1 && FULL) (posedge SRC +=> (DST +: DAT))
1930     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1931     if (EN && DD==1 && SD==1 && ED==2 && !FULL) (negedge SRC +=> (DST +: DAT))
1931     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1932     if (EN && DD==1 && SD==1 && ED==2 && FULL) (negedge SRC +=> (DST +: DAT))
1932     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1933
1934     if (EN && DD==1 && SD==2 && ED==0 && !FULL) (      SRC ==> (DST +: DAT))
1934     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1935     if (EN && DD==1 && SD==2 && ED==0 && FULL) (      SRC ==> (DST +: DAT))
1935     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1936     if (EN && DD==1 && SD==2 && ED==1 && !FULL) (posedge SRC ==> (DST +: DAT))
1936     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1937     if (EN && DD==1 && SD==2 && ED==1 && FULL) (posedge SRC ==> (DST +: DAT))
1937     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1938     if (EN && DD==1 && SD==2 && ED==2 && !FULL) (negedge SRC ==> (DST +: DAT))
1938     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1939     if (EN && DD==1 && SD==2 && ED==2 && FULL) (negedge SRC ==> (DST +: DAT))
1939     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1940
1941     // DD=2
1942
1943     if (EN && DD==2 && SD==0 && ED==0 && !FULL) (      SRC ==> (DST -: DAT))
1943     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1944     if (EN && DD==2 && SD==0 && ED==0 && FULL) (      SRC ==> (DST -: DAT))
1944     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1945     if (EN && DD==2 && SD==0 && ED==1 && !FULL) (posedge SRC ==> (DST -: DAT))
1945     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1946     if (EN && DD==2 && SD==0 && ED==1 && FULL) (posedge SRC ==> (DST -: DAT))
1946     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1947     if (EN && DD==2 && SD==0 && ED==2 && !FULL) (negedge SRC ==> (DST -: DAT))
1947     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1948     if (EN && DD==2 && SD==0 && ED==2 && FULL) (negedge SRC ==> (DST -: DAT))
1948     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1949
1950     if (EN && DD==2 && SD==1 && ED==0 && !FULL) (      SRC +=> (DST -: DAT))
1950     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1951     if (EN && DD==2 && SD==1 && ED==0 && FULL) (      SRC +=> (DST -: DAT))
1951     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1952     if (EN && DD==2 && SD==1 && ED==1 && !FULL) (posedge SRC +=> (DST -: DAT))
1952     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1953     if (EN && DD==2 && SD==1 && ED==1 && FULL) (posedge SRC +=> (DST -: DAT))
1953     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1954     if (EN && DD==2 && SD==1 && ED==2 && !FULL) (negedge SRC +=> (DST -: DAT))
1954     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1955     if (EN && DD==2 && SD==1 && ED==2 && FULL) (negedge SRC +=> (DST -: DAT))
1955     ⇨= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1956

```

(continues on next page)

(continued from previous page)

```

1957         if (EN && DD==2 && SD==2 && ED==0 && !FULL) (          SRC ==> (DST -: DAT))
↪= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1958         if (EN && DD==2 && SD==2 && ED==0 &&  FULL) (          SRC ==> (DST -: DAT))
↪= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1959         if (EN && DD==2 && SD==2 && ED==1 && !FULL) (posedge SRC ==> (DST -: DAT))
↪= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1960         if (EN && DD==2 && SD==2 && ED==1 &&  FULL) (posedge SRC ==> (DST -: DAT))
↪= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1961         if (EN && DD==2 && SD==2 && ED==2 && !FULL) (negedge SRC ==> (DST -: DAT))
↪= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1962         if (EN && DD==2 && SD==2 && ED==2 &&  FULL) (negedge SRC ==> (DST -: DAT))
↪= (T_RISE_MIN:T_RISE_TYP:T_RISE_MAX, T_FALL_MIN:T_FALL_TYP:T_FALL_MAX);
1963     endspecify
1964 `endif
1965
1966 endmodule

```

yosys> help \$specrule

Properties

is_evaluable

Simulation model (verilog)

Listing 9.79: simlib.v

```

1971 module \specrule (EN_SRC, EN_DST, SRC, DST);
1972
1973     parameter TYPE = "";
1974     parameter T_LIMIT = 0;
1975     parameter T_LIMIT2 = 0;
1976
1977     parameter SRC_WIDTH = 1;
1978     parameter DST_WIDTH = 1;
1979
1980     parameter SRC_PEN = 0;
1981     parameter SRC_POL = 0;
1982
1983     parameter DST_PEN = 0;
1984     parameter DST_POL = 0;
1985
1986     input EN_SRC, EN_DST;
1987     input [SRC_WIDTH-1:0] SRC;
1988     input [DST_WIDTH-1:0] DST;
1989
1990     `ifdef SIMLIB_SPECIFY
1991     specify
1992         // TBD
1993     endspecify
1994     `endif
1995
1996 endmodule

```

9.1.10 Formal verification cells

Note

Some front-ends may not support the generic *\$check* cell, in such cases calling `chformal -lower` will convert each *\$check* cell into it's equivalent. See *chformal* for more.

Todo

Describe formal cells

\$check, *\$assert*, *\$assume*, *\$live*, *\$fair*, *\$cover*, *\$equiv*, *\$initstate*, *\$anyconst*, *\$anyseq*, *\$anyinit*, *\$allconst*, and *\$allseq*.

Also *\$ff* and *\$_FF_* cells.

```
yosys> help $allconst
```

Properties

is_evaluable

Simulation model (verilog)

Listing 9.80: simlib.v

```
2175 module \ $allconst (Y);
2176
2177     parameter WIDTH = 0;
2178
2179     output [WIDTH-1:0] Y;
2180
2181     assign Y = 'bx;
2182
2183 endmodule
```

```
yosys> help $allseq
```

Properties

is_evaluable

Simulation model (verilog)

Listing 9.81: simlib.v

```
2188 module \ $allseq (Y);
2189
2190     parameter WIDTH = 0;
2191
2192     output [WIDTH-1:0] Y;
2193
2194     assign Y = 'bx;
2195
2196 endmodule
```

yosys> help \$anyconst

Properties

is_evaluable

Simulation model (verilog)

Listing 9.82: simlib.v

```

2128 module \ $anyconst (Y);
2129
2130     parameter WIDTH = 0;
2131
2132     output [WIDTH-1:0] Y;
2133
2134     assign Y = 'bx;
2135
2136 endmodule

```

yosys> help \$anyinit

Simulation model (verilog)

Listing 9.83: simlib.v

```

2157 module \ $anyinit (D, Q);
2158
2159     parameter WIDTH = 0;
2160
2161     input [WIDTH-1:0] D;
2162     output reg [WIDTH-1:0] Q;
2163
2164     initial Q <= 'bx;
2165
2166     always @(`SIMLIB_GLOBAL_CLOCK) begin
2167         Q <= D;
2168     end
2169
2170 endmodule

```

yosys> help \$anyseq

Properties

is_evaluable

Simulation model (verilog)

Listing 9.84: simlib.v

```

2141 module \ $anyseq (Y);
2142
2143     parameter WIDTH = 0;
2144
2145     output [WIDTH-1:0] Y;
2146

```

(continues on next page)

(continued from previous page)

```

2147     assign Y = 'bx;
2148
2149 endmodule

```

```
yosys> help $assert
```

```

    Properties
        is_evaluable
    Simulation model (verilog)

```

Listing 9.85: simlib.v

```

2047 module \assert (A, EN);
2048
2049     input A, EN;
2050
2051     `ifndef SIMLIB_NOCHECKS
2052     always @* begin
2053         if (A !== 1'b1 && EN === 1'b1) begin
2054             $display("Assertion %m failed!");
2055             $stop;
2056         end
2057     end
2058     `endif
2059
2060 endmodule

```

```
yosys> help $assume
```

```

    Properties
        is_evaluable
    Simulation model (verilog)

```

Listing 9.86: simlib.v

```

2065 module \assume (A, EN);
2066
2067     input A, EN;
2068
2069     `ifndef SIMLIB_NOCHECKS
2070     always @* begin
2071         if (A !== 1'b1 && EN === 1'b1) begin
2072             $display("Assumption %m failed!");
2073             $stop;
2074         end
2075     end
2076     `endif
2077
2078 endmodule

```

```
yosys> help $cover
```


Properties*is_evaluable*

Simulation model (verilog)

Listing 9.87: simlib.v

```

2101 module \${cover} (A, EN);
2102
2103     input A, EN;
2104
2105 endmodule

```

yosys> help \$equiv

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.88: simlib.v

```

2201 module \${equiv} (A, B, Y);
2202
2203     input A, B;
2204     output Y;
2205
2206     assign Y = (A !== 1'bx && A !== B) ? 1'bx : A;
2207
2208     `ifndef SIMLIB_NOCHECKS
2209     always @* begin
2210         if (A !== 1'bx && A !== B) begin
2211             $display("Equivalence failed!");
2212             $stop;
2213         end
2214     end
2215     `endif
2216
2217 endmodule

```

yosys> help \$fair

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.89: simlib.v

```

2092 module \${fair} (A, EN);
2093
2094     input A, EN;
2095
2096 endmodule

```

yosys> help \$ff

Simulation model (verilog)

Listing 9.90: simlib.v

```
2298 module \dff (D, Q);
2299
2300     parameter WIDTH = 0;
2301
2302     input [WIDTH-1:0] D;
2303     output reg [WIDTH-1:0] Q;
2304
2305     always @(`SIMLIB_GLOBAL_CLOCK) begin
2306         Q <= D;
2307     end
2308
2309 endmodule
```

yosys> help \$initstate

Properties

is_evaluable

Simulation model (verilog)

Listing 9.91: simlib.v

```
2110 module \initstate (Y);
2111
2112     output reg Y = 1;
2113     reg [3:0] cnt = 1;
2114     reg trig = 0;
2115
2116     initial trig <= 1;
2117
2118     always @(cnt, trig) begin
2119         Y <= |cnt;
2120         cnt <= cnt + |cnt;
2121     end
2122
2123 endmodule
```

yosys> help \$live

Properties

is_evaluable

Simulation model (verilog)

Listing 9.92: simlib.v

```
2083 module \live (A, EN);
2084
2085     input A, EN;
2086
2087 endmodule
```

Formal support cells

```
yosys> help $future_ff
```

```
Simulation model (verilog)
```

Listing 9.93: simlib.v

```
3200 module \future_ff (A, Y);
3201
3202     parameter WIDTH = 0;
3203
3204     input [WIDTH-1:0] A;
3205     output [WIDTH-1:0] Y;
3206
3207     assign Y = A;
3208
3209 endmodule
```

```
yosys> help $get_tag
```

```
Simulation model (verilog)
```

Listing 9.94: simlib.v

```
3159 module \get_tag (A, Y);
3160
3161     parameter TAG = "";
3162     parameter WIDTH = 0;
3163
3164     input [WIDTH-1:0] A;
3165     output [WIDTH-1:0] Y;
3166
3167     assign Y = A;
3168
3169 endmodule
```

```
yosys> help $original_tag
```

```
Simulation model (verilog)
```

Listing 9.95: simlib.v

```
3186 module \original_tag (A, Y);
3187
3188     parameter TAG = "";
3189     parameter WIDTH = 0;
3190
3191     input [WIDTH-1:0] A;
3192     output [WIDTH-1:0] Y;
3193
3194     assign Y = A;
3195
3196 endmodule
```

```
yosys> help $overwrite_tag
```

Simulation model (verilog)

Listing 9.96: simlib.v

```
3173 module \ $overwrite_tag (A, SET, CLR);
3174
3175     parameter TAG = "";
3176     parameter WIDTH = 0;
3177
3178     input [WIDTH-1:0] A;
3179     input [WIDTH-1:0] SET;
3180     input [WIDTH-1:0] CLR;
3181
3182 endmodule
```

```
yosys> help $set_tag
```

Simulation model (verilog)

Listing 9.97: simlib.v

```
3143 module \ $set_tag (A, SET, CLR, Y);
3144
3145     parameter TAG = "";
3146     parameter WIDTH = 0;
3147
3148     input [WIDTH-1:0] A;
3149     input [WIDTH-1:0] SET;
3150     input [WIDTH-1:0] CLR;
3151     output [WIDTH-1:0] Y;
3152
3153     assign Y = A;
3154
3155 endmodule
```

9.1.11 Debugging cells

The *\$print* cell is used to log the values of signals, akin to (and translatable to) the *\$display* and *\$write* family of tasks in Verilog. It has the following parameters:

FORMAT

The internal format string. The syntax is described below.

ARGS_WIDTH

The width (in bits) of the signal on the ARGS port.

TRG_ENABLE

True if triggered on specific signals defined in TRG; false if triggered whenever ARGS or EN change and EN is 1.

If TRG_ENABLE is true, the following parameters also apply:

TRG_WIDTH

The number of bits in the TRG port.

TRG_POLARITY

For each bit in TRG, 1 if that signal is positive-edge triggered, 0 if negative-edge triggered.

PRIORITY

When multiple *\$print* or *\$check* cells fire on the same trigger, they execute in descending priority order.

Ports:

TRG

The signals that control when this *\$print* cell is triggered.

If the width of this port is zero and TRG_ENABLE is true, the cell is triggered during initial evaluation (time zero) only.

EN

Enable signal for the whole cell.

ARGS

The values to be displayed, in format string order.

```
yosys> help $check
```

```
Simulation model (verilog)
```

Listing 9.98: simlib.v

```

2242 module \ $check (A, EN, TRG, ARGS);
2243
2244     parameter FLAVOR = "";
2245     parameter PRIORITY = 0;
2246
2247     parameter FORMAT = "";
2248     parameter ARGS_WIDTH = 0;
2249
2250     parameter TRG_ENABLE = 1;
2251     parameter TRG_WIDTH = 0;
2252     parameter TRG_POLARITY = 0;
2253
2254     input A;
2255     input EN;
2256     input [TRG_WIDTH-1:0] TRG;
2257     input [ARGS_WIDTH-1:0] ARGS;
2258
2259 endmodule

```

```
yosys> help $print
```

```
Simulation model (verilog)
```

Listing 9.99: simlib.v

```

2222 module \ $print (EN, TRG, ARGS);
2223
2224     parameter PRIORITY = 0;
2225

```

(continues on next page)

(continued from previous page)

```

2226     parameter FORMAT = "";
2227     parameter signed ARGS_WIDTH = 0;
2228
2229     parameter TRG_ENABLE = 1;
2230     parameter signed TRG_WIDTH = 0;
2231     parameter TRG_POLARITY = 0;
2232
2233     input EN;
2234     input [TRG_WIDTH-1:0] TRG;
2235     input [ARGS_WIDTH-1:0] ARGS;
2236
2237 endmodule

```

```
yosys> help $scopeinfo
```

```
Simulation model (verilog)
```

Listing 9.100: simlib.v

```

3214 module \$scopeinfo ();
3215
3216     parameter TYPE = "";
3217
3218 endmodule

```

Format string syntax

The format string syntax resembles Python f-strings. Regular text is passed through unchanged until a format specifier is reached, starting with a `{`.

Format specifiers have the following syntax. Unless noted, all items are required:

`{`

Denotes the start of the format specifier.

size

Signal size in bits; this many bits are consumed from the `ARGS` port by this specifier.

`:`

Separates the size from the remaining items.

justify

`>` for right-justified, `<` for left-justified.

padding

`0` for zero-padding, or a space for space-padding.

width?

(optional) The number of characters wide to pad to.

base

- `b` for base-2 integers (binary)
- `o` for base-8 integers (octal)
- `d` for base-10 integers (decimal)
- `h` for base-16 integers (hexadecimal)

- `c` for ASCII characters/strings
- `t` and `r` for simulation time (corresponding to `$time` and `$realtime`)

For integers, this item may follow:

`+?`

(optional, decimals only) Include a leading plus for non-negative numbers. This can assist with symmetry with negatives in tabulated output.

signedness

`u` for unsigned, `s` for signed. This distinction is only respected when rendering decimals.

ASCII characters/strings have no special options, but the signal size must be divisible by 8.

For simulation time, the signal size must be zero.

Finally:

`}`

Denotes the end of the format specifier.

Some example format specifiers:

- `{8:>02hu}` - 8-bit unsigned integer rendered as hexadecimal, right-justified, zero-padded to 2 characters wide.
- `{32:< 15d+s}` - 32-bit signed integer rendered as decimal, left-justified, space-padded to 15 characters wide, positive values prefixed with `+`.
- `{16:< 10hu}` - 16-bit unsigned integer rendered as hexadecimal, left-justified, space-padded to 10 characters wide.
- `{0:>010t}` - simulation time, right-justified, zero-padded to 10 characters wide.

To include literal `{` and `}` characters in your format string, use `{ {` and `} }` respectively.

It is an error for a format string to consume more or less bits from `ARGS` than the port width.

Values are never truncated, regardless of the specified width.

Note that further restrictions on allowable combinations of options may apply depending on the backend used.

For example, Verilog does not have a format specifier that allows zero-padding a string (i.e. more than 1 ASCII character), though zero-padding a single character is permitted.

Thus, while the RTLIL format specifier `{8:>02c}` translates to `%02c`, `{16:>02c}` cannot be represented in Verilog and will fail to emit. In this case, `{16:> 02c}` must be used, which translates to `%2s`.

9.1.12 Wire cells

Todo

Add information about `$slice` and `$concat` cells.

yosys> help `$concat`

Concatenation of inputs into a single output ($Y = \{B, A\}$).

Properties

is_evaluable

Simulation model (verilog)

Listing 9.101: simlib.v

```
1617 module \concat (A, B, Y);
1618
1619     parameter A_WIDTH = 0;
1620     parameter B_WIDTH = 0;
1621
1622     input [A_WIDTH-1:0] A;
1623     input [B_WIDTH-1:0] B;
1624     output [A_WIDTH+B_WIDTH-1:0] Y;
1625
1626     assign Y = {B, A};
1627
1628 endmodule
```

yosys> help \$slice

Properties

is_evaluable

Simulation model (verilog)

Listing 9.102: simlib.v

```
1596 module \slice (A, Y);
1597
1598     parameter OFFSET = 0;
1599     parameter A_WIDTH = 0;
1600     parameter Y_WIDTH = 0;
1601
1602     input [A_WIDTH-1:0] A;
1603     output [Y_WIDTH-1:0] Y;
1604
1605     assign Y = A >> OFFSET;
1606
1607 endmodule
```

9.2 Gate-level cells

For gate level logic networks, fixed function single bit cells are used that do not provide any parameters.

Simulation models for these cells can be found in the file `techlibs/common/simcells.v` in the Yosys source tree.

In most cases gate level logic networks are created from RTL networks using the techmap pass. The flip-flop cells from the gate level logic network can be mapped to physical flip-flop cells from a Liberty file using the dfflibmap pass. The combinatorial logic cells can be mapped to physical cells from a Liberty file via ABC using the abc pass.

9.2.1 Combinatorial cells (simple)

Table 9.4: Cell types for gate level combinatorial cells (simple)

| Verilog | Cell Type |
|---------------|-----------------------|
| Y = A | <code>\$_BUF_</code> |
| Y = ~A | <code>\$_NOT_</code> |
| Y = A & B | <code>\$_AND_</code> |
| Y = ~(A & B) | <code>\$_NAND_</code> |
| Y = A B | <code>\$_OR_</code> |
| Y = ~(A B) | <code>\$_NOR_</code> |
| Y = A ^ B | <code>\$_XOR_</code> |
| Y = ~(A ^ B) | <code>\$_XNOR_</code> |
| Y = S ? B : A | <code>\$_MUX_</code> |

yosys> help `$_AND_`
A 2-input AND gate.

| | |
|--------------|-----------|
| Truth table: | A B Y |
| | -----+--- |
| | 0 0 0 |
| | 0 1 0 |
| | 1 0 0 |
| | 1 1 1 |

Properties
is_evaluable

Simulation model (verilog)

Listing 9.103: simcells.v

```
78 module \$_AND_ (A, B, Y);
79     input A, B;
80     output Y;
81     assign Y = A & B;
82 endmodule
```

yosys> help `$_BUF_`
A buffer. This cell type is always optimized away by the opt_clean pass.

| | |
|--------------|---------|
| Truth table: | A Y |
| | ---+--- |
| | 0 0 |
| | 1 1 |

Properties
is_evaluable

Simulation model (verilog)

Listing 9.104: simcells.v

```

40 module \$_BUF_ (A, Y);
41     input A;
42     output Y;
43     assign Y = A;
44 endmodule

```

yosys> help \$_MUX_

A 2-input MUX gate.

```

Truth table:   A B S | Y
               -----+---
               a - 0 | a
               - b 1 | b

```

Properties

is_evaluable

Simulation model (verilog)

Listing 9.105: simcells.v

```

236 module \$_MUX_ (A, B, S, Y);
237     input A, B, S;
238     output Y;
239     assign Y = S ? B : A;
240 endmodule

```

yosys> help \$_NAND_

A 2-input NAND gate.

```

Truth table:   A B | Y
               -----+---
               0 0 | 1
               0 1 | 1
               1 0 | 1
               1 1 | 0

```

Properties

is_evaluable

Simulation model (verilog)

Listing 9.106: simcells.v

```

98 module \$_NAND_ (A, B, Y);
99     input A, B;
100    output Y;
101    assign Y = ~(A & B);
102 endmodule

```

yosys> help \$_NOR_

A 2-input NOR gate.

| Truth table: | A | B | Y |
|--------------|---|---|---|
| | 0 | 0 | 1 |
| | 0 | 1 | 0 |
| | 1 | 0 | 0 |
| | 1 | 1 | 0 |

Properties

is_evaluable

Simulation model (verilog)

Listing 9.107: simcells.v

```

138 module \$_NOR_ (A, B, Y);
139     input A, B;
140     output Y;
141     assign Y = ~(A | B);
142 endmodule

```

yosys> help \$_NOT_

An inverter gate.

| Truth table: | A | Y |
|--------------|---|---|
| | 0 | 1 |
| | 1 | 0 |

Properties

is_evaluable

Simulation model (verilog)

Listing 9.108: simcells.v

```

58 module \$_NOT_ (A, Y);
59     input A;
60     output Y;
61     assign Y = ~A;
62 endmodule

```

yosys> help \$_OR_

A 2-input OR gate.

| Truth table: | A | B | Y |
|--------------|---|---|---|
| | 0 | 0 | 0 |
| | 0 | 1 | 1 |
| | 1 | 0 | 1 |
| | 1 | 1 | 1 |

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.109: simcells.v

```
118 module \$_OR_ (A, B, Y);
119     input A, B;
120     output Y;
121     assign Y = A | B;
122 endmodule
```

yosys> help \$_XNOR_

A 2-input XNOR gate.

| | | | | |
|--------------|---|---|--|---|
| Truth table: | A | B | | Y |
| | 0 | 0 | | 1 |
| | 0 | 1 | | 0 |
| | 1 | 0 | | 0 |
| | 1 | 1 | | 1 |

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.110: simcells.v

```
178 module \$_XNOR_ (A, B, Y);
179     input A, B;
180     output Y;
181     assign Y = ~(A ^ B);
182 endmodule
```

yosys> help \$_XOR_

A 2-input XOR gate.

| | | | | |
|--------------|---|---|--|---|
| Truth table: | A | B | | Y |
| | 0 | 0 | | 0 |
| | 0 | 1 | | 1 |
| | 1 | 0 | | 1 |
| | 1 | 1 | | 0 |

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.111: simcells.v

```

158 module \$_XOR_ (A, B, Y);
159     input A, B;
160     output Y;
161     assign Y = A ^ B;
162 endmodule

```

9.2.2 Combinatorial cells (combined)

These cells combine two or more combinatorial cells (simple) into a single cell.

Table 9.5: Cell types for gate level combinatorial cells (combined)

| Verilog | Cell Type |
|--------------------------------------|-------------------------|
| $Y = A \& \sim B$ | <code>\$_ANDNOT_</code> |
| $Y = A \mid \sim B$ | <code>\$_ORNOT_</code> |
| $Y = \sim((A \& B) \mid C)$ | <code>\$_AOI3_</code> |
| $Y = \sim((A \mid B) \& C)$ | <code>\$_OAI3_</code> |
| $Y = \sim((A \& B) \mid (C \& D))$ | <code>\$_AOI4_</code> |
| $Y = \sim((A \mid B) \& (C \mid D))$ | <code>\$_OAI4_</code> |
| $Y = \sim(S ? B : A)$ | <code>\$_NMUX_</code> |
| (see below) | <code>\$_MUX4_</code> |
| (see below) | <code>\$_MUX8_</code> |
| (see below) | <code>\$_MUX16_</code> |

The `$_MUX4_`, `$_MUX8_` and `$_MUX16_` cells are used to model wide muxes, and correspond to the following Verilog code:

```

// $_MUX4_
assign Y = T ? (S ? D : C) :
           (S ? B : A);

// $_MUX8_
assign Y = U ? T ? (S ? H : G) :
           (S ? F : E) :
           T ? (S ? D : C) :
           (S ? B : A);

// $_MUX16_
assign Y = V ? U ? T ? (S ? P : O) :
           (S ? N : M) :
           T ? (S ? L : K) :
           (S ? J : I) :
           U ? T ? (S ? H : G) :
           (S ? F : E) :
           T ? (S ? D : C) :
           (S ? B : A);

```

```

yosys> help $_ANDNOT_
A 2-input AND-NOT gate.

```

```

Truth table:   A B | Y
               -----+---
               0 0 | 0
               0 1 | 0
               1 0 | 1
               1 1 | 0

```

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.112: simcells.v

```

198 module \$_ANDNOT_ (A, B, Y);
199     input A, B;
200     output Y;
201     assign Y = A & (~B);
202 endmodule

```

yosys> help \$_AOI3_

A 3-input And-Or-Invert gate.

```

Truth table:   A B C | Y
               -----+---
               0 0 0 | 1
               0 0 1 | 0
               0 1 0 | 1
               0 1 1 | 0
               1 0 0 | 1
               1 0 1 | 0
               1 1 0 | 0
               1 1 1 | 0

```

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.113: simcells.v

```

367 module \$_AOI3_ (A, B, C, Y);
368     input A, B, C;
369     output Y;
370     assign Y = ~((A & B) | C);
371 endmodule

```

yosys> help \$_AOI4_

A 4-input And-Or-Invert gate.

```

Truth table:   A B C D | Y
               -----+---

```

(continues on next page)

(continued from previous page)

| | | | | | |
|---|---|---|---|--|---|
| 0 | 0 | 0 | 0 | | 1 |
| 0 | 0 | 0 | 1 | | 1 |
| 0 | 0 | 1 | 0 | | 1 |
| 0 | 0 | 1 | 1 | | 0 |
| 0 | 1 | 0 | 0 | | 1 |
| 0 | 1 | 0 | 1 | | 1 |
| 0 | 1 | 1 | 0 | | 1 |
| 0 | 1 | 1 | 1 | | 0 |
| 1 | 0 | 0 | 0 | | 1 |
| 1 | 0 | 0 | 1 | | 1 |
| 1 | 0 | 1 | 0 | | 1 |
| 1 | 0 | 1 | 1 | | 0 |
| 1 | 1 | 0 | 0 | | 0 |
| 1 | 1 | 0 | 1 | | 0 |
| 1 | 1 | 1 | 0 | | 0 |
| 1 | 1 | 1 | 1 | | 0 |

Properties

is_evaluable

Simulation model (verilog)

Listing 9.114: simcells.v

```
423 module \$_AOI4_ (A, B, C, D, Y);
424     input A, B, C, D;
425     output Y;
426     assign Y = ~((A & B) | (C & D));
427 endmodule
```

yosys> help \$_MUX16_

A 16-input MUX gate.

| | | |
|--------------|--|---|
| Truth table: | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | S | T | U | V | | Y |
| | a | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | 0 | 0 | 0 | 0 | | a |
| | - | b | - | - | - | - | - | - | - | - | - | - | - | - | - | - | 1 | 0 | 0 | 0 | | b |
| | - | - | c | - | - | - | - | - | - | - | - | - | - | - | - | - | 0 | 1 | 0 | 0 | | c |
| | - | - | - | d | - | - | - | - | - | - | - | - | - | - | - | - | 1 | 1 | 0 | 0 | | d |
| | - | - | - | - | e | - | - | - | - | - | - | - | - | - | - | - | 0 | 0 | 1 | 0 | | e |
| | - | - | - | - | - | f | - | - | - | - | - | - | - | - | - | - | 1 | 0 | 1 | 0 | | f |
| | - | - | - | - | - | - | g | - | - | - | - | - | - | - | - | - | 0 | 1 | 1 | 0 | | g |
| | - | - | - | - | - | - | - | h | - | - | - | - | - | - | - | - | 1 | 1 | 1 | 0 | | h |
| | - | - | - | - | - | - | - | - | i | - | - | - | - | - | - | - | 0 | 0 | 0 | 1 | | i |
| | - | - | - | - | - | - | - | - | - | j | - | - | - | - | - | - | 1 | 0 | 0 | 1 | | j |
| | - | - | - | - | - | - | - | - | - | - | k | - | - | - | - | - | 0 | 1 | 0 | 1 | | k |
| | - | - | - | - | - | - | - | - | - | - | - | l | - | - | - | - | 1 | 1 | 0 | 1 | | l |
| | - | - | - | - | - | - | - | - | - | - | - | - | m | - | - | - | 0 | 0 | 1 | 1 | | m |
| | - | - | - | - | - | - | - | - | - | - | - | - | - | n | - | - | 1 | 0 | 1 | 1 | | n |
| | - | - | - | - | - | - | - | - | - | - | - | - | - | - | o | - | 0 | 1 | 1 | 1 | | o |
| | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | p | 1 | 1 | 1 | 1 | | p |

Properties

is_evaluable

Simulation model (verilog)

Listing 9.115: simcells.v

```

336 module \$_MUX16_ (A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, S, T, U, V, Y);
337     input A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, S, T, U, V;
338     output Y;
339     assign Y = V ? U ? T ? (S ? P : O) :
340                (S ? N : M) :
341                T ? (S ? L : K) :
342                (S ? J : I) :
343                U ? T ? (S ? H : G) :
344                (S ? F : E) :
345                T ? (S ? D : C) :
346                (S ? B : A);
347 endmodule

```

yosys> help \$_MUX4_

A 4-input MUX gate.

| | | | | | | | | |
|--------------|---|---|---|---|---|---|--|---|
| Truth table: | A | B | C | D | S | T | | Y |
| | a | - | - | - | 0 | 0 | | a |
| | - | b | - | - | 1 | 0 | | b |
| | - | - | c | - | 0 | 1 | | c |
| | - | - | - | d | 1 | 1 | | d |

Properties

is_evaluable

Simulation model (verilog)

Listing 9.116: simcells.v

```

276 module \$_MUX4_ (A, B, C, D, S, T, Y);
277     input A, B, C, D, S, T;
278     output Y;
279     assign Y = T ? (S ? D : C) :
280                (S ? B : A);
281 endmodule

```

yosys> help \$_MUX8_

An 8-input MUX gate.

| | | | | | | | | | | | | | |
|--------------|---|---|---|---|---|---|---|---|---|---|---|--|---|
| Truth table: | A | B | C | D | E | F | G | H | S | T | U | | Y |
| | a | - | - | - | - | - | - | - | 0 | 0 | 0 | | a |
| | - | b | - | - | - | - | - | - | 1 | 0 | 0 | | b |
| | - | - | c | - | - | - | - | - | 0 | 1 | 0 | | c |
| | - | - | - | d | - | - | - | - | 1 | 1 | 0 | | d |

(continues on next page)

(continued from previous page)

```

- - - - e - - - 0 0 1 | e
- - - - - f - - 1 0 1 | f
- - - - - - g - 0 1 1 | g
- - - - - - - h 1 1 1 | h

```

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.117: simcells.v

```

301 module \$_MUX8_ (A, B, C, D, E, F, G, H, S, T, U, Y);
302     input A, B, C, D, E, F, G, H, S, T, U;
303     output Y;
304     assign Y = U ? T ? (S ? H : G) :
305                (S ? F : E) :
306                T ? (S ? D : C) :
307                (S ? B : A);
308 endmodule

```

yosys> help \$_NMUX_

A 2-input inverting MUX gate.

```

Truth table:   A B S | Y
               -+---
               0 - 0 | 1
               1 - 0 | 0
               - 0 1 | 1
               - 1 1 | 0

```

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.118: simcells.v

```

256 module \$_NMUX_ (A, B, S, Y);
257     input A, B, S;
258     output Y;
259     assign Y = S ? !B : !A;
260 endmodule

```

yosys> help \$_OAI3_

A 3-input Or-And-Invert gate.

```

Truth table:   A B C | Y
               -+---
               0 0 0 | 1
               0 0 1 | 1

```

(continues on next page)

(continued from previous page)

| | | | | |
|---|---|---|--|---|
| 0 | 1 | 0 | | 1 |
| 0 | 1 | 1 | | 0 |
| 1 | 0 | 0 | | 1 |
| 1 | 0 | 1 | | 0 |
| 1 | 1 | 0 | | 1 |
| 1 | 1 | 1 | | 0 |

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.119: simcells.v

```

391 module \$_OAI3_ (A, B, C, Y);
392     input A, B, C;
393     output Y;
394     assign Y = ~((A | B) & C);
395 endmodule

```

yosys> help \$_OAI4_

A 4-input Or-And-Invert gate.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | A | B | C | D | | Y |
| | 0 | 0 | 0 | 0 | | 1 |
| | 0 | 0 | 0 | 1 | | 1 |
| | 0 | 0 | 1 | 0 | | 1 |
| | 0 | 0 | 1 | 1 | | 1 |
| | 0 | 1 | 0 | 0 | | 1 |
| | 0 | 1 | 0 | 1 | | 0 |
| | 0 | 1 | 1 | 0 | | 0 |
| | 0 | 1 | 1 | 1 | | 0 |
| | 1 | 0 | 0 | 0 | | 1 |
| | 1 | 0 | 0 | 1 | | 0 |
| | 1 | 0 | 1 | 0 | | 0 |
| | 1 | 0 | 1 | 1 | | 0 |
| | 1 | 1 | 0 | 0 | | 1 |
| | 1 | 1 | 0 | 1 | | 0 |
| | 1 | 1 | 1 | 0 | | 0 |
| | 1 | 1 | 1 | 1 | | 0 |

Properties*is_evaluable*

Simulation model (verilog)

Listing 9.120: simcells.v

```

455 module \$_OAI4_ (A, B, C, D, Y);
456     input A, B, C, D;

```

(continues on next page)

(continued from previous page)

```

457     output Y;
458     assign Y = ~((A | B) & (C | D));
459 endmodule

```

yosys> help \$_ORNOT_

A 2-input OR-NOT gate.

```

Truth table:   A B | Y
               -----+---
                 0 0 | 1
                 0 1 | 0
                 1 0 | 1
                 1 1 | 1

```

Properties

is_evaluable

Simulation model (verilog)

Listing 9.121: simcells.v

```

218 module \$_ORNOT_ (A, B, Y);
219     input A, B;
220     output Y;
221     assign Y = A | (~B);
222 endmodule

```

9.2.3 Flip-flop cells

The cell types `$_DFF_N_` and `$_DFF_P_` represent d-type flip-flops.

Table 9.6: Cell types for basic flip-flops

| Verilog | Cell Type |
|--|------------------------|
| <code>always @(negedge C) Q <= D</code> | <code>\$_DFF_N_</code> |
| <code>always @(posedge C) Q <= D</code> | <code>\$_DFF_P_</code> |

The cell types `$_DFFE_[NP][NP]_` implement d-type flip-flops with enable. The values in the table for these cell types relate to the following Verilog code template.

```

always @(CLK_EDGE C)
    if (EN == EN_LVL)
        Q <= D;

```

Table 9.7: Cell types for gate level logic networks (FFs with enable)

| <i>ClkEdge</i> | <i>EnLvl</i> | Cell Type |
|----------------------|--------------|--------------------------|
| <code>negedge</code> | 0 | <code>\$_DFFE_NN_</code> |
| <code>negedge</code> | 1 | <code>\$_DFFE_NP_</code> |
| <code>posedge</code> | 0 | <code>\$_DFFE_PN_</code> |
| <code>posedge</code> | 1 | <code>\$_DFFE_PP_</code> |

The cell types `$_DFF_[NP][NP][01]_` implement d-type flip-flops with asynchronous reset. The values in the table for these cell types relate to the following Verilog code template, where `RST_EDGE` is `posedge` if `RST_LVL` is 1, and `negedge` otherwise.

```
always @(CLK_EDGE C, RST_EDGE R)
  if (R == RST_LVL)
    Q <= RST_VAL;
  else
    Q <= D;
```

The cell types `$_SDFF_[NP][NP][01]_` implement d-type flip-flops with synchronous reset. The values in the table for these cell types relate to the following Verilog code template:

```
always @(CLK_EDGE C)
  if (R == RST_LVL)
    Q <= RST_VAL;
  else
    Q <= D;
```

Table 9.8: Cell types for gate level logic networks (FFs with reset)

| <i>ClkEdge</i> | <i>RstLvl</i> | <i>RstVal</i> | Cell Type |
|----------------------|---------------|---------------|--|
| <code>negedge</code> | 0 | 0 | <code>\$_DFF_NNO_</code> , <code>\$_SDFF_NNO_</code> |
| <code>negedge</code> | 0 | 1 | <code>\$_DFF_NN1_</code> , <code>\$_SDFF_NN1_</code> |
| <code>negedge</code> | 1 | 0 | <code>\$_DFF_NPO_</code> , <code>\$_SDFF_NPO_</code> |
| <code>negedge</code> | 1 | 1 | <code>\$_DFF_NP1_</code> , <code>\$_SDFF_NP1_</code> |
| <code>posedge</code> | 0 | 0 | <code>\$_DFF_PNO_</code> , <code>\$_SDFF_PNO_</code> |
| <code>posedge</code> | 0 | 1 | <code>\$_DFF_PN1_</code> , <code>\$_SDFF_PN1_</code> |
| <code>posedge</code> | 1 | 0 | <code>\$_DFF_PPO_</code> , <code>\$_SDFF_PPO_</code> |
| <code>posedge</code> | 1 | 1 | <code>\$_DFF_PP1_</code> , <code>\$_SDFF_PP1_</code> |

The cell types `$_DFFE_[NP][NP][01][NP]_` implement d-type flip-flops with asynchronous reset and enable. The values in the table for these cell types relate to the following Verilog code template, where `RST_EDGE` is `posedge` if `RST_LVL` is 1, and `negedge` otherwise.

```
always @(CLK_EDGE C, RST_EDGE R)
  if (R == RST_LVL)
    Q <= RST_VAL;
  else if (EN == EN_LVL)
    Q <= D;
```

The cell types `$_SDFFE_[NP][NP][01][NP]_` implement d-type flip-flops with synchronous reset and enable, with reset having priority over enable. The values in the table for these cell types relate to the following Verilog code template:

```
always @(CLK_EDGE C)
  if (R == RST_LVL)
    Q <= RST_VAL;
  else if (EN == EN_LVL)
    Q <= D;
```

The cell types `$_SDFFCE_[NP][NP][01][NP]_` implement d-type flip-flops with synchronous reset and enable, with enable having priority over reset. The values in the table for these cell types relate to the following Verilog code template:

```

always @(CLK_EDGE C)
  if (EN == EN_LVL)
    if (R == RST_LVL)
      Q <= RST_VAL;
    else
      Q <= D;

```

Table 9.9: Cell types for gate level logic networks (FFs with reset and enable)

| <i>ClkEdge</i> | <i>RstLvl</i> | <i>RstVal</i> | <i>EnLvl</i> | Cell Type |
|----------------|---------------|---------------|--------------|---|
| negedge | 0 | 0 | 0 | <i>\$_DFFE_NNON_</i> , <i>\$_SDFFE_NNON_</i> , <i>\$_SDFACE_NNON_</i> |
| negedge | 0 | 0 | 1 | <i>\$_DFFE_NNOP_</i> , <i>\$_SDFFE_NNOP_</i> , <i>\$_SDFACE_NNOP_</i> |
| negedge | 0 | 1 | 0 | <i>\$_DFFE_NN1N_</i> , <i>\$_SDFFE_NN1N_</i> , <i>\$_SDFACE_NN1N_</i> |
| negedge | 0 | 1 | 1 | <i>\$_DFFE_NN1P_</i> , <i>\$_SDFFE_NN1P_</i> , <i>\$_SDFACE_NN1P_</i> |
| negedge | 1 | 0 | 0 | <i>\$_DFFE_NPON_</i> , <i>\$_SDFFE_NPON_</i> , <i>\$_SDFACE_NPON_</i> |
| negedge | 1 | 0 | 1 | <i>\$_DFFE_NPOP_</i> , <i>\$_SDFFE_NPOP_</i> , <i>\$_SDFACE_NPOP_</i> |
| negedge | 1 | 1 | 0 | <i>\$_DFFE_NP1N_</i> , <i>\$_SDFFE_NP1N_</i> , <i>\$_SDFACE_NP1N_</i> |
| negedge | 1 | 1 | 1 | <i>\$_DFFE_NP1P_</i> , <i>\$_SDFFE_NP1P_</i> , <i>\$_SDFACE_NP1P_</i> |
| posedge | 0 | 0 | 0 | <i>\$_DFFE_PNON_</i> , <i>\$_SDFFE_PNON_</i> , <i>\$_SDFACE_PNON_</i> |
| posedge | 0 | 0 | 1 | <i>\$_DFFE_PNOP_</i> , <i>\$_SDFFE_PNOP_</i> , <i>\$_SDFACE_PNOP_</i> |
| posedge | 0 | 1 | 0 | <i>\$_DFFE_PN1N_</i> , <i>\$_SDFFE_PN1N_</i> , <i>\$_SDFACE_PN1N_</i> |
| posedge | 0 | 1 | 1 | <i>\$_DFFE_PN1P_</i> , <i>\$_SDFFE_PN1P_</i> , <i>\$_SDFACE_PN1P_</i> |
| posedge | 1 | 0 | 0 | <i>\$_DFFE_PPON_</i> , <i>\$_SDFFE_PPON_</i> , <i>\$_SDFACE_PPON_</i> |
| posedge | 1 | 0 | 1 | <i>\$_DFFE_PPOP_</i> , <i>\$_SDFFE_PPOP_</i> , <i>\$_SDFACE_PPOP_</i> |
| posedge | 1 | 1 | 0 | <i>\$_DFFE_PP1N_</i> , <i>\$_SDFFE_PP1N_</i> , <i>\$_SDFACE_PP1N_</i> |
| posedge | 1 | 1 | 1 | <i>\$_DFFE_PP1P_</i> , <i>\$_SDFFE_PP1P_</i> , <i>\$_SDFACE_PP1P_</i> |

The cell types *\$_DFFSR_[NP][NP][NP]_* implement d-type flip-flops with asynchronous set and reset. The values in the table for these cell types relate to the following Verilog code template, where *RST_EDGE* is posedge if *RST_LVL* if 1, negedge otherwise, and *SET_EDGE* is posedge if *SET_LVL* if 1, negedge otherwise.

```

always @(CLK_EDGE C, RST_EDGE R, SET_EDGE S)
  if (R == RST_LVL)
    Q <= 0;
  else if (S == SET_LVL)
    Q <= 1;
  else
    Q <= D;

```

Table 9.10: Cell types for gate level logic networks (FFs with set and reset)

| <i>ClkEdge</i> | <i>SetLvl</i> | <i>RstLvl</i> | Cell Type |
|----------------|---------------|---------------|----------------------|
| negedge | 0 | 0 | <i>\$_DFFSR_NNN_</i> |
| negedge | 0 | 1 | <i>\$_DFFSR_NNP_</i> |
| negedge | 1 | 0 | <i>\$_DFFSR_NPN_</i> |
| negedge | 1 | 1 | <i>\$_DFFSR_NPP_</i> |
| posedge | 0 | 0 | <i>\$_DFFSR_PNN_</i> |
| posedge | 0 | 1 | <i>\$_DFFSR_PNP_</i> |
| posedge | 1 | 0 | <i>\$_DFFSR_PPN_</i> |
| posedge | 1 | 1 | <i>\$_DFFSR_PPP_</i> |

The cell types `$_DFFSRE_[NP][NP][NP][NP]_` implement d-type flip-flops with asynchronous set and reset and enable. The values in the table for these cell types relate to the following Verilog code template, where `RST_EDGE` is `posedge` if `RST_LVL` if 1, `negedge` otherwise, and `SET_EDGE` is `posedge` if `SET_LVL` if 1, `negedge` otherwise.

```
always @(CLK_EDGE C, RST_EDGE R, SET_EDGE S)
  if (R == RST_LVL)
    Q <= 0;
  else if (S == SET_LVL)
    Q <= 1;
  else if (E == EN_LVL)
    Q <= D;
```

Table 9.11: Cell types for gate level logic networks (FFs with set and reset and enable)

| <i>ClkEdge</i> | <i>SetLvl</i> | <i>RstLvl</i> | <i>EnLvl</i> | Cell Type |
|----------------|---------------|---------------|--------------|------------------------------|
| negedge | 0 | 0 | 0 | <code>\$_DFFSRE_NNNN_</code> |
| negedge | 0 | 0 | 1 | <code>\$_DFFSRE_NNNP_</code> |
| negedge | 0 | 1 | 0 | <code>\$_DFFSRE_NNPN_</code> |
| negedge | 0 | 1 | 1 | <code>\$_DFFSRE_NNPP_</code> |
| negedge | 1 | 0 | 0 | <code>\$_DFFSRE_NPNN_</code> |
| negedge | 1 | 0 | 1 | <code>\$_DFFSRE_NPNP_</code> |
| negedge | 1 | 1 | 0 | <code>\$_DFFSRE_NPPN_</code> |
| negedge | 1 | 1 | 1 | <code>\$_DFFSRE_NPPP_</code> |
| posedge | 0 | 0 | 0 | <code>\$_DFFSRE_PNNN_</code> |
| posedge | 0 | 0 | 1 | <code>\$_DFFSRE_PNNP_</code> |
| posedge | 0 | 1 | 0 | <code>\$_DFFSRE_PNPN_</code> |
| posedge | 0 | 1 | 1 | <code>\$_DFFSRE_PNPP_</code> |
| posedge | 1 | 0 | 0 | <code>\$_DFFSRE_PPNN_</code> |
| posedge | 1 | 0 | 1 | <code>\$_DFFSRE_PPNP_</code> |
| posedge | 1 | 1 | 0 | <code>\$_DFFSRE_PPPN_</code> |
| posedge | 1 | 1 | 1 | <code>\$_DFFSRE_PPPP_</code> |

Todo

flip-flops with async load, `$_ALDFFE?[NP]{2,3}_`

yosys> help `$_ALDFFE_NNN_`

A negative edge D-type flip-flop with negative polarity async load and negative polarity clock enable.

```
Truth table:  D C L AD E | Q
              +-----+
              - - 0 a - | a
              d \ - - 0 | d
              - - - - - | q
```

Simulation model (verilog)

Listing 9.122: simcells.v

```

1420 module \$_ALDFFE_NNN_ (D, C, L, AD, E, Q);
1421     input D, C, L, AD, E;
1422     output reg Q;
1423     always @(negedge C or negedge L) begin
1424         if (L == 0)
1425             Q <= AD;
1426         else if (E == 0)
1427             Q <= D;
1428     end
1429 endmodule

```

yosys> help \\$_ALDFFE_NNP_

A negative edge D-type flip-flop with negative polarity async load and positive polarity clock enable.

```

Truth table:   D C L AD E | Q
-----+-----
              - - 0 a - | a
              d \ - - 1 | d
              - - - - - | q

```

Simulation model (verilog)

Listing 9.123: simcells.v

```

1445 module \$_ALDFFE_NNP_ (D, C, L, AD, E, Q);
1446     input D, C, L, AD, E;
1447     output reg Q;
1448     always @(negedge C or negedge L) begin
1449         if (L == 0)
1450             Q <= AD;
1451         else if (E == 1)
1452             Q <= D;
1453     end
1454 endmodule

```

yosys> help \\$_ALDFFE_NPN_

A negative edge D-type flip-flop with positive polarity async load and negative polarity clock enable.

```

Truth table:   D C L AD E | Q
-----+-----
              - - 1 a - | a
              d \ - - 0 | d
              - - - - - | q

```

Simulation model (verilog)

Listing 9.124: simcells.v

```

1470 module \$_ALDFFE_NPN_ (D, C, L, AD, E, Q);
1471     input D, C, L, AD, E;
1472     output reg Q;

```

(continues on next page)

(continued from previous page)

```

1473     always @(negedge C or posedge L) begin
1474         if (L == 1)
1475             Q <= AD;
1476         else if (E == 0)
1477             Q <= D;
1478     end
1479 endmodule

```

yosys> help \$_ALDFFE_NPP_

A negative edge D-type flip-flop with positive polarity async load and positive polarity clock enable.

| Truth table: | D | C | L | AD | E | Q |
|--------------|---|---|---|----|---|---|
| | - | - | 1 | a | - | a |
| | d | \ | - | - | 1 | d |
| | - | - | - | - | - | q |

Simulation model (verilog)

Listing 9.125: simcells.v

```

1495 module \$_ALDFFE_NPP_ (D, C, L, AD, E, Q);
1496     input D, C, L, AD, E;
1497     output reg Q;
1498     always @(negedge C or posedge L) begin
1499         if (L == 1)
1500             Q <= AD;
1501         else if (E == 1)
1502             Q <= D;
1503     end
1504 endmodule

```

yosys> help \$_ALDFFE_PNN_

A positive edge D-type flip-flop with negative polarity async load and negative polarity clock enable.

| Truth table: | D | C | L | AD | E | Q |
|--------------|---|---|---|----|---|---|
| | - | - | 0 | a | - | a |
| | d | / | - | - | 0 | d |
| | - | - | - | - | - | q |

Simulation model (verilog)

Listing 9.126: simcells.v

```

1520 module \$_ALDFFE_PNN_ (D, C, L, AD, E, Q);
1521     input D, C, L, AD, E;
1522     output reg Q;
1523     always @(posedge C or negedge L) begin
1524         if (L == 0)
1525             Q <= AD;
1526         else if (E == 0)

```

(continues on next page)

(continued from previous page)

```

1527         Q <= D;
1528     end
1529 endmodule

```

yosys> help \$_ALDFFE_PNP_

A positive edge D-type flip-flop with negative polarity async load and positive polarity clock enable.

| Truth table: | D | C | L | AD | E | Q |
|--------------|---|---|---|----|---|---|
| | - | - | 0 | a | - | a |
| | d | / | - | - | 1 | d |
| | - | - | - | - | - | q |

Simulation model (verilog)

Listing 9.127: simcells.v

```

1545 module \$_ALDFFE_PNP_ (D, C, L, AD, E, Q);
1546     input D, C, L, AD, E;
1547     output reg Q;
1548     always @(posedge C or negedge L) begin
1549         if (L == 0)
1550             Q <= AD;
1551         else if (E == 1)
1552             Q <= D;
1553     end
1554 endmodule

```

yosys> help \$_ALDFFE_PPN_

A positive edge D-type flip-flop with positive polarity async load and negative polarity clock enable.

| Truth table: | D | C | L | AD | E | Q |
|--------------|---|---|---|----|---|---|
| | - | - | 1 | a | - | a |
| | d | / | - | - | 0 | d |
| | - | - | - | - | - | q |

Simulation model (verilog)

Listing 9.128: simcells.v

```

1570 module \$_ALDFFE_PPN_ (D, C, L, AD, E, Q);
1571     input D, C, L, AD, E;
1572     output reg Q;
1573     always @(posedge C or posedge L) begin
1574         if (L == 1)
1575             Q <= AD;
1576         else if (E == 0)
1577             Q <= D;
1578     end
1579 endmodule

```

yosys> help \$_ALDFFE_PPP_

A positive edge D-type flip-flop with positive polarity async load and positive polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|----|---|--|---|
| Truth table: | D | C | L | AD | E | | Q |
| | - | - | 1 | a | - | | a |
| | d | / | - | - | 1 | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.129: simcells.v

```

1595 module \$_ALDFFE_PPP_ (D, C, L, AD, E, Q);
1596     input D, C, L, AD, E;
1597     output reg Q;
1598     always @(posedge C or posedge L) begin
1599         if (L == 1)
1600             Q <= AD;
1601         else if (E == 1)
1602             Q <= D;
1603     end
1604 endmodule

```

yosys> help \$_ALDFF_NN_

A negative edge D-type flip-flop with negative polarity async load.

| | | | | | | |
|--------------|---|---|---|----|--|---|
| Truth table: | D | C | L | AD | | Q |
| | - | - | 0 | a | | a |
| | d | \ | - | - | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.130: simcells.v

```

1323 module \$_ALDFF_NN_ (D, C, L, AD, Q);
1324     input D, C, L, AD;
1325     output reg Q;
1326     always @(negedge C or negedge L) begin
1327         if (L == 0)
1328             Q <= AD;
1329         else
1330             Q <= D;
1331     end
1332 endmodule

```

yosys> help \$_ALDFF_NP_

A negative edge D-type flip-flop with positive polarity async load.

| | | | | | | |
|--------------|---|---|---|----|--|---|
| Truth table: | D | C | L | AD | | Q |
| | - | - | - | - | | q |

(continues on next page)

(continued from previous page)

| | | | | | |
|---|---|---|---|--|---|
| - | - | 1 | a | | a |
| d | \ | - | - | | d |
| - | - | - | - | | q |

Simulation model (verilog)

Listing 9.131: simcells.v

```

1347 module \$_ALDFF_NP_ (D, C, L, AD, Q);
1348     input D, C, L, AD;
1349     output reg Q;
1350     always @(negedge C or posedge L) begin
1351         if (L == 1)
1352             Q <= AD;
1353         else
1354             Q <= D;
1355     end
1356 endmodule

```

yosys> help \$_ALDFF_PN_

A positive edge D-type flip-flop with negative polarity async load.

Truth table:

| | | | | | |
|-----------|---|---|----|--|---|
| D | C | L | AD | | Q |
| -----+--- | | | | | |
| - | - | 0 | a | | a |
| d | / | - | - | | d |
| - | - | - | - | | q |

Simulation model (verilog)

Listing 9.132: simcells.v

```

1371 module \$_ALDFF_PN_ (D, C, L, AD, Q);
1372     input D, C, L, AD;
1373     output reg Q;
1374     always @(posedge C or negedge L) begin
1375         if (L == 0)
1376             Q <= AD;
1377         else
1378             Q <= D;
1379     end
1380 endmodule

```

yosys> help \$_ALDFF_PP_

A positive edge D-type flip-flop with positive polarity async load.

Truth table:

| | | | | | |
|-----------|---|---|----|--|---|
| D | C | L | AD | | Q |
| -----+--- | | | | | |
| - | - | 1 | a | | a |
| d | / | - | - | | d |
| - | - | - | - | | q |

Simulation model (verilog)

Listing 9.133: simcells.v

```

1395 module \$_ALDFF_PP_ (D, C, L, AD, Q);
1396     input D, C, L, AD;
1397     output reg Q;
1398     always @(posedge C or posedge L) begin
1399         if (L == 1)
1400             Q <= AD;
1401         else
1402             Q <= D;
1403     end
1404 endmodule

```

yosys> help \$_DFFE_NNON_

A negative edge D-type flip-flop with negative polarity reset and negative polarity clock enable.

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | - | 0 | - | 0 |
| | d | \ | - | 0 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.134: simcells.v

```

924 module \$_DFFE_NNON_ (D, C, R, E, Q);
925     input D, C, R, E;
926     output reg Q;
927     always @(negedge C or negedge R) begin
928         if (R == 0)
929             Q <= 0;
930         else if (E == 0)
931             Q <= D;
932     end
933 endmodule

```

yosys> help \$_DFFE_NNOP_

A negative edge D-type flip-flop with negative polarity reset and positive polarity clock enable.

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | - | 0 | - | 0 |
| | d | \ | - | 1 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.135: simcells.v

```

949 module \$_DFFE_NNOP_ (D, C, R, E, Q);
950     input D, C, R, E;
951     output reg Q;

```

(continues on next page)

(continued from previous page)

```

952     always @(negedge C or negedge R) begin
953         if (R == 0)
954             Q <= 0;
955         else if (E == 1)
956             Q <= D;
957     end
958 endmodule

```

yosys> help \$_DFFE_NN1N_

A negative edge D-type flip-flop with negative polarity set and negative polarity clock enable.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | 0 | - | | 1 |
| | d | \ | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.136: simcells.v

```

974 module \$_DFFE_NN1N_ (D, C, R, E, Q);
975     input D, C, R, E;
976     output reg Q;
977     always @(negedge C or negedge R) begin
978         if (R == 0)
979             Q <= 1;
980         else if (E == 0)
981             Q <= D;
982     end
983 endmodule

```

yosys> help \$_DFFE_NN1P_

A negative edge D-type flip-flop with negative polarity set and positive polarity clock enable.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | 0 | - | | 1 |
| | d | \ | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.137: simcells.v

```

999 module \$_DFFE_NN1P_ (D, C, R, E, Q);
1000     input D, C, R, E;
1001     output reg Q;
1002     always @(negedge C or negedge R) begin
1003         if (R == 0)
1004             Q <= 1;
1005         else if (E == 1)

```

(continues on next page)

(continued from previous page)

```

1006         Q <= D;
1007     end
1008 endmodule

```

yosys> help \$_DFFE_NN_

A negative edge D-type flip-flop with negative polarity enable.

```

Truth table:   D C E | Q
               -----+---
               d \ 0 | d
               - - - | q

```

Simulation model (verilog)

Listing 9.138: simcells.v

```

650 module \$_DFFE_NN_ (D, C, E, Q);
651     input D, C, E;
652     output reg Q;
653     always @(negedge C) begin
654         if (!E) Q <= D;
655     end
656 endmodule

```

yosys> help \$_DFFE_NPON_

A negative edge D-type flip-flop with positive polarity reset and negative polarity clock enable.

```

Truth table:   D C R E | Q
               -----+---
               - - 1 - | 0
               d \ - 0 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.139: simcells.v

```

1024 module \$_DFFE_NPON_ (D, C, R, E, Q);
1025     input D, C, R, E;
1026     output reg Q;
1027     always @(negedge C or posedge R) begin
1028         if (R == 1)
1029             Q <= 0;
1030         else if (E == 0)
1031             Q <= D;
1032     end
1033 endmodule

```

yosys> help \$_DFFE_NPOP_

A negative edge D-type flip-flop with positive polarity reset and positive polarity clock enable.

```

Truth table:   D C R E | Q
               +-----+
               - - 1 - | 0
               d \ - 1 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.140: simcells.v

```

1049 module \$_DFFE_NPOP_ (D, C, R, E, Q);
1050     input D, C, R, E;
1051     output reg Q;
1052     always @(negedge C or posedge R) begin
1053         if (R == 1)
1054             Q <= 0;
1055         else if (E == 1)
1056             Q <= D;
1057     end
1058 endmodule

```

yosys> help \$_DFFE_NP1N_

A negative edge D-type flip-flop with positive polarity set and negative polarity clock enable.

```

Truth table:   D C R E | Q
               +-----+
               - - 1 - | 1
               d \ - 0 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.141: simcells.v

```

1074 module \$_DFFE_NP1N_ (D, C, R, E, Q);
1075     input D, C, R, E;
1076     output reg Q;
1077     always @(negedge C or posedge R) begin
1078         if (R == 1)
1079             Q <= 1;
1080         else if (E == 0)
1081             Q <= D;
1082     end
1083 endmodule

```

yosys> help \$_DFFE_NP1P_

A negative edge D-type flip-flop with positive polarity set and positive polarity clock enable.

```

Truth table:   D C R E | Q
               +-----+
               - - 1 - | 1
               d \ - 1 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.142: simcells.v

```

1099 module \$_DFFE_NP1P_ (D, C, R, E, Q);
1100     input D, C, R, E;
1101     output reg Q;
1102     always @(negedge C or posedge R) begin
1103         if (R == 1)
1104             Q <= 1;
1105         else if (E == 1)
1106             Q <= D;
1107     end
1108 endmodule

```

yosys> help \$_DFFE_NP_

A negative edge D-type flip-flop with positive polarity enable.

| | | | | | |
|--------------|--------|---|---|--|-----|
| Truth table: | D | C | E | | Q |
| | -----+ | | | | --- |
| | d | \ | 1 | | d |
| | - | - | - | | q |

Simulation model (verilog)

Listing 9.143: simcells.v

```

670 module \$_DFFE_NP_ (D, C, E, Q);
671     input D, C, E;
672     output reg Q;
673     always @(negedge C) begin
674         if (E) Q <= D;
675     end
676 endmodule

```

yosys> help \$_DFFE_PNON_

A positive edge D-type flip-flop with negative polarity reset and negative polarity clock enable.

| | | | | | | |
|--------------|--------|---|---|---|--|-----|
| Truth table: | D | C | R | E | | Q |
| | -----+ | | | | | --- |
| | - | - | 0 | - | | 0 |
| | d | / | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.144: simcells.v

```

1124 module \$_DFFE_PNON_ (D, C, R, E, Q);
1125     input D, C, R, E;
1126     output reg Q;
1127     always @(posedge C or negedge R) begin
1128         if (R == 0)
1129             Q <= 0;

```

(continues on next page)

(continued from previous page)

```

1130     else if (E == 0)
1131         Q <= D;
1132     end
1133 endmodule

```

yosys> help \$_DFFE_PNOP_

A positive edge D-type flip-flop with negative polarity reset and positive polarity clock enable.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | 0 | - | | 0 |
| | d | / | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.145: simcells.v

```

1149 module \$_DFFE_PNOP_ (D, C, R, E, Q);
1150     input D, C, R, E;
1151     output reg Q;
1152     always @(posedge C or negedge R) begin
1153         if (R == 0)
1154             Q <= 0;
1155         else if (E == 1)
1156             Q <= D;
1157     end
1158 endmodule

```

yosys> help \$_DFFE_PN1N_

A positive edge D-type flip-flop with negative polarity set and negative polarity clock enable.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | 0 | - | | 1 |
| | d | / | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.146: simcells.v

```

1174 module \$_DFFE_PN1N_ (D, C, R, E, Q);
1175     input D, C, R, E;
1176     output reg Q;
1177     always @(posedge C or negedge R) begin
1178         if (R == 0)
1179             Q <= 1;
1180         else if (E == 0)
1181             Q <= D;
1182     end
1183 endmodule

```

yosys> help \$_DFFE_PN1P_

A positive edge D-type flip-flop with negative polarity set and positive polarity clock enable.

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | - | 0 | - | 1 |
| | d | / | - | 1 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.147: simcells.v

```

1199 module \$_DFFE_PN1P_ (D, C, R, E, Q);
1200     input D, C, R, E;
1201     output reg Q;
1202     always @(posedge C or negedge R) begin
1203         if (R == 0)
1204             Q <= 1;
1205         else if (E == 1)
1206             Q <= D;
1207     end
1208 endmodule

```

yosys> help \$_DFFE_PN_

A positive edge D-type flip-flop with negative polarity enable.

| Truth table: | D | C | E | Q |
|--------------|---|---|---|---|
| | d | / | 0 | d |
| | - | - | - | q |

Simulation model (verilog)

Listing 9.148: simcells.v

```

690 module \$_DFFE_PN_ (D, C, E, Q);
691     input D, C, E;
692     output reg Q;
693     always @(posedge C) begin
694         if (!E) Q <= D;
695     end
696 endmodule

```

yosys> help \$_DFFE_PPON_

A positive edge D-type flip-flop with positive polarity reset and negative polarity clock enable.

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | - | 1 | - | 0 |
| | d | / | - | 0 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.149: simcells.v

```

1224 module \$_DFFE_PPON_ (D, C, R, E, Q);
1225     input D, C, R, E;
1226     output reg Q;
1227     always @(posedge C or posedge R) begin
1228         if (R == 1)
1229             Q <= 0;
1230         else if (E == 0)
1231             Q <= D;
1232     end
1233 endmodule

```

yosys> help \$_DFFE_PPOP_

A positive edge D-type flip-flop with positive polarity reset and positive polarity clock enable.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | 1 | - | | 0 |
| | d | / | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.150: simcells.v

```

1249 module \$_DFFE_PPOP_ (D, C, R, E, Q);
1250     input D, C, R, E;
1251     output reg Q;
1252     always @(posedge C or posedge R) begin
1253         if (R == 1)
1254             Q <= 0;
1255         else if (E == 1)
1256             Q <= D;
1257     end
1258 endmodule

```

yosys> help \$_DFFE_PP1N_

A positive edge D-type flip-flop with positive polarity set and negative polarity clock enable.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | 1 | - | | 1 |
| | d | / | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.151: simcells.v

```

1274 module \$_DFFE_PP1N_ (D, C, R, E, Q);
1275     input D, C, R, E;
1276     output reg Q;

```

(continues on next page)

(continued from previous page)

```

1277     always @(posedge C or posedge R) begin
1278         if (R == 1)
1279             Q <= 1;
1280         else if (E == 0)
1281             Q <= D;
1282     end
1283 endmodule

```

yosys> help \$_DFFE_PP1P_

A positive edge D-type flip-flop with positive polarity set and positive polarity clock enable.

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | 1 | - | | 1 |
| | d | / | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.152: simcells.v

```

1299 module \$_DFFE_PP1P_ (D, C, R, E, Q);
1300     input D, C, R, E;
1301     output reg Q;
1302     always @(posedge C or posedge R) begin
1303         if (R == 1)
1304             Q <= 1;
1305         else if (E == 1)
1306             Q <= D;
1307     end
1308 endmodule

```

yosys> help \$_DFFE_PP_

A positive edge D-type flip-flop with positive polarity enable.

| | | | | | |
|--------------|---|---|---|--|---|
| Truth table: | D | C | E | | Q |
| | d | / | 1 | | d |
| | - | - | - | | q |

Simulation model (verilog)

Listing 9.153: simcells.v

```

710 module \$_DFFE_PP_ (D, C, E, Q);
711     input D, C, E;
712     output reg Q;
713     always @(posedge C) begin
714         if (E) Q <= D;
715     end
716 endmodule

```

yosys> help \$_DFFSRE_NNNN_

A negative edge D-type flip-flop with negative polarity set, negative polarity reset and negative polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 0 | - | - | | 0 |
| | - | 0 | - | - | - | | 1 |
| | \ | - | - | 0 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.154: simcells.v

```

1845 module \$_DFFSRE_NNNN_ (C, S, R, E, D, Q);
1846     input C, S, R, E, D;
1847     output reg Q;
1848     always @(negedge C, negedge S, negedge R) begin
1849         if (R == 0)
1850             Q <= 0;
1851         else if (S == 0)
1852             Q <= 1;
1853         else if (E == 0)
1854             Q <= D;
1855     end
1856 endmodule

```

yosys> help \$_DFFSRE_NNNP_

A negative edge D-type flip-flop with negative polarity set, negative polarity reset and positive polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 0 | - | - | | 0 |
| | - | 0 | - | - | - | | 1 |
| | \ | - | - | 1 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.155: simcells.v

```

1873 module \$_DFFSRE_NNNP_ (C, S, R, E, D, Q);
1874     input C, S, R, E, D;
1875     output reg Q;
1876     always @(negedge C, negedge S, negedge R) begin
1877         if (R == 0)
1878             Q <= 0;
1879         else if (S == 0)
1880             Q <= 1;
1881         else if (E == 1)
1882             Q <= D;

```

(continues on next page)

(continued from previous page)

```

1883     end
1884 endmodule

```

```
yosys> help $_DFFSRE_NNPN_
```

A negative edge D-type flip-flop with negative polarity set, positive polarity reset and negative polarity clock enable.

| Truth table: | C | S | R | E | D | Q |
|--------------|---|---|---|---|---|---|
| | - | - | 1 | - | - | 0 |
| | - | 0 | - | - | - | 1 |
| | \ | - | - | 0 | d | d |
| | - | - | - | - | - | q |

Simulation model (verilog)

Listing 9.156: simcells.v

```

1901 module \$_DFFSRE_NNPN_ (C, S, R, E, D, Q);
1902     input C, S, R, E, D;
1903     output reg Q;
1904     always @(negedge C, negedge S, posedge R) begin
1905         if (R == 1)
1906             Q <= 0;
1907         else if (S == 0)
1908             Q <= 1;
1909         else if (E == 0)
1910             Q <= D;
1911     end
1912 endmodule

```

```
yosys> help $_DFFSRE_NNPP_
```

A negative edge D-type flip-flop with negative polarity set, positive polarity reset and positive polarity clock enable.

| Truth table: | C | S | R | E | D | Q |
|--------------|---|---|---|---|---|---|
| | - | - | 1 | - | - | 0 |
| | - | 0 | - | - | - | 1 |
| | \ | - | - | 1 | d | d |
| | - | - | - | - | - | q |

Simulation model (verilog)

Listing 9.157: simcells.v

```

1929 module \$_DFFSRE_NNPP_ (C, S, R, E, D, Q);
1930     input C, S, R, E, D;
1931     output reg Q;
1932     always @(posedge C, negedge S, posedge R) begin
1933         if (R == 1)
1934             Q <= 0;

```

(continues on next page)

(continued from previous page)

```

1935     else if (S == 0)
1936         Q <= 1;
1937     else if (E == 1)
1938         Q <= D;
1939     end
1940 endmodule

```

yosys> help \$_DFFSRE_NPNN_

A negative edge D-type flip-flop with positive polarity set, negative polarity reset and negative polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 0 | - | - | | 0 |
| | - | 1 | - | - | - | | 1 |
| | \ | - | - | 0 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.158: simcells.v

```

1957 module \$_DFFSRE_NPNN_ (C, S, R, E, D, Q);
1958     input C, S, R, E, D;
1959     output reg Q;
1960     always @(negedge C, posedge S, negedge R) begin
1961         if (R == 0)
1962             Q <= 0;
1963         else if (S == 1)
1964             Q <= 1;
1965         else if (E == 0)
1966             Q <= D;
1967     end
1968 endmodule

```

yosys> help \$_DFFSRE_NPNP_

A negative edge D-type flip-flop with positive polarity set, negative polarity reset and positive polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 0 | - | - | | 0 |
| | - | 1 | - | - | - | | 1 |
| | \ | - | - | 1 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.159: simcells.v

```

1985 module \$_DFFSRE_NPNP_ (C, S, R, E, D, Q);
1986     input C, S, R, E, D;

```

(continues on next page)

(continued from previous page)

```

1987     output reg Q;
1988     always @(negedge C, posedge S, negedge R) begin
1989         if (R == 0)
1990             Q <= 0;
1991         else if (S == 1)
1992             Q <= 1;
1993         else if (E == 1)
1994             Q <= D;
1995     end
1996 endmodule

```

yosys> help \$_DFFSRE_NPPN_

A negative edge D-type flip-flop with positive polarity set, positive polarity reset and negative polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 1 | - | - | | 0 |
| | - | 1 | - | - | - | | 1 |
| | \ | - | - | 0 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.160: simcells.v

```

2013 module \$_DFFSRE_NPPN_ (C, S, R, E, D, Q);
2014     input C, S, R, E, D;
2015     output reg Q;
2016     always @(negedge C, posedge S, posedge R) begin
2017         if (R == 1)
2018             Q <= 0;
2019         else if (S == 1)
2020             Q <= 1;
2021         else if (E == 0)
2022             Q <= D;
2023     end
2024 endmodule

```

yosys> help \$_DFFSRE_NPPP_

A negative edge D-type flip-flop with positive polarity set, positive polarity reset and positive polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 1 | - | - | | 0 |
| | - | 1 | - | - | - | | 1 |
| | \ | - | - | 1 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.161: simcells.v

```

2041 module \$_DFFSRE_NPPP_ (C, S, R, E, D, Q);
2042     input C, S, R, E, D;
2043     output reg Q;
2044     always @(negedge C, posedge S, posedge R) begin
2045         if (R == 1)
2046             Q <= 0;
2047         else if (S == 1)
2048             Q <= 1;
2049         else if (E == 1)
2050             Q <= D;
2051     end
2052 endmodule

```

yosys> help \$_DFFSRE_PNNN_

A positive edge D-type flip-flop with negative polarity set, negative polarity reset and negative polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 0 | - | - | | 0 |
| | - | 0 | - | - | - | | 1 |
| | / | - | - | 0 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.162: simcells.v

```

2069 module \$_DFFSRE_PNNN_ (C, S, R, E, D, Q);
2070     input C, S, R, E, D;
2071     output reg Q;
2072     always @(posedge C, negedge S, negedge R) begin
2073         if (R == 0)
2074             Q <= 0;
2075         else if (S == 0)
2076             Q <= 1;
2077         else if (E == 0)
2078             Q <= D;
2079     end
2080 endmodule

```

yosys> help \$_DFFSRE_PNNP_

A positive edge D-type flip-flop with negative polarity set, negative polarity reset and positive polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 0 | - | - | | 0 |
| | - | 0 | - | - | - | | 1 |
| | / | - | - | 1 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.163: simcells.v

```

2097 module \$_DFFSRE_PNNP_ (C, S, R, E, D, Q);
2098     input C, S, R, E, D;
2099     output reg Q;
2100     always @(posedge C, negedge S, negedge R) begin
2101         if (R == 0)
2102             Q <= 0;
2103         else if (S == 0)
2104             Q <= 1;
2105         else if (E == 1)
2106             Q <= D;
2107     end
2108 endmodule

```

yosys> help \$_DFFSRE_PNNP_

A positive edge D-type flip-flop with negative polarity set, positive polarity reset and negative polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 1 | - | - | | 0 |
| | - | 0 | - | - | - | | 1 |
| | / | - | - | 0 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.164: simcells.v

```

2125 module \$_DFFSRE_PNNP_ (C, S, R, E, D, Q);
2126     input C, S, R, E, D;
2127     output reg Q;
2128     always @(posedge C, negedge S, posedge R) begin
2129         if (R == 1)
2130             Q <= 0;
2131         else if (S == 0)
2132             Q <= 1;
2133         else if (E == 0)
2134             Q <= D;
2135     end
2136 endmodule

```

yosys> help \$_DFFSRE_PNNP_

A positive edge D-type flip-flop with negative polarity set, positive polarity reset and positive polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 1 | - | - | | 0 |
| | - | 0 | - | - | - | | 1 |

(continues on next page)

(continued from previous page)

```

/ - - 1 d | d
- - - - - | q

```

Simulation model (verilog)

Listing 9.165: simcells.v

```

2153 module \$_DFFSRE_PNPP_ (C, S, R, E, D, Q);
2154     input C, S, R, E, D;
2155     output reg Q;
2156     always @(posedge C, negedge S, posedge R) begin
2157         if (R == 1)
2158             Q <= 0;
2159         else if (S == 0)
2160             Q <= 1;
2161         else if (E == 1)
2162             Q <= D;
2163     end
2164 endmodule

```

yosys> help \$_DFFSRE_PPNN_

A positive edge D-type flip-flop with positive polarity set, negative polarity reset and negative polarity clock enable.

```

Truth table:   C S R E D | Q
               +-----+
               - - 0 - - | 0
               - 1 - - - | 1
               / - - 0 d | d
               - - - - - | q

```

Simulation model (verilog)

Listing 9.166: simcells.v

```

2181 module \$_DFFSRE_PPNN_ (C, S, R, E, D, Q);
2182     input C, S, R, E, D;
2183     output reg Q;
2184     always @(posedge C, posedge S, negedge R) begin
2185         if (R == 0)
2186             Q <= 0;
2187         else if (S == 1)
2188             Q <= 1;
2189         else if (E == 0)
2190             Q <= D;
2191     end
2192 endmodule

```

yosys> help \$_DFFSRE_PPNP_

A positive edge D-type flip-flop with positive polarity set, negative polarity reset and positive polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 0 | - | - | | 0 |
| | - | 1 | - | - | - | | 1 |
| | / | - | - | 1 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.167: simcells.v

```

2209 module \$_DFFSRE_PPNP_ (C, S, R, E, D, Q);
2210     input C, S, R, E, D;
2211     output reg Q;
2212     always @(posedge C, posedge S, negedge R) begin
2213         if (R == 0)
2214             Q <= 0;
2215         else if (S == 1)
2216             Q <= 1;
2217         else if (E == 1)
2218             Q <= D;
2219     end
2220 endmodule

```

yosys> help \$_DFFSRE_PPNP_

A positive edge D-type flip-flop with positive polarity set, positive polarity reset and negative polarity clock enable.

| | | | | | | | |
|--------------|---|---|---|---|---|--|---|
| Truth table: | C | S | R | E | D | | Q |
| | - | - | 1 | - | - | | 0 |
| | - | 1 | - | - | - | | 1 |
| | / | - | - | 0 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.168: simcells.v

```

2237 module \$_DFFSRE_PPPN_ (C, S, R, E, D, Q);
2238     input C, S, R, E, D;
2239     output reg Q;
2240     always @(posedge C, posedge S, posedge R) begin
2241         if (R == 1)
2242             Q <= 0;
2243         else if (S == 1)
2244             Q <= 1;
2245         else if (E == 0)
2246             Q <= D;
2247     end
2248 endmodule

```

yosys> help \$_DFFSRE_PPPP_

A positive edge D-type flip-flop with positive polarity set, positive polarity reset and positive polarity

clock enable.

| | | | | | | | |
|--------------|-----|-----|-----|-----|-----|---|-----|
| Truth table: | C | S | R | E | D | | Q |
| | --- | --- | --- | --- | --- | + | --- |
| | - | - | 1 | - | - | | 0 |
| | - | 1 | - | - | - | | 1 |
| | / | - | - | 1 | d | | d |
| | - | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.169: simcells.v

```

2265 module \$_DFFSRE_PPPP_ (C, S, R, E, D, Q);
2266     input C, S, R, E, D;
2267     output reg Q;
2268     always @(posedge C, posedge S, posedge R) begin
2269         if (R == 1)
2270             Q <= 0;
2271         else if (S == 1)
2272             Q <= 1;
2273         else if (E == 1)
2274             Q <= D;
2275     end
2276 endmodule

```

yosys> help \$_DFFSR_NNN_

A negative edge D-type flip-flop with negative polarity set and negative polarity reset.

| | | | | | | |
|--------------|-----|-----|-----|-----|---|-----|
| Truth table: | C | S | R | D | | Q |
| | --- | --- | --- | --- | + | --- |
| | - | - | 0 | - | | 0 |
| | - | 0 | - | - | | 1 |
| | \ | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.170: simcells.v

```

1621 module \$_DFFSR_NNN_ (C, S, R, D, Q);
1622     input C, S, R, D;
1623     output reg Q;
1624     always @(negedge C, negedge S, negedge R) begin
1625         if (R == 0)
1626             Q <= 0;
1627         else if (S == 0)
1628             Q <= 1;
1629         else
1630             Q <= D;
1631     end
1632 endmodule

```

yosys> help \$_DFFSR_NNP_

A negative edge D-type flip-flop with negative polarity set and positive polarity reset.

| | | | | | | |
|--------------|-----|-----|-----|-----|---|-----|
| Truth table: | C | S | R | D | | Q |
| | --- | --- | --- | --- | + | --- |
| | - | - | 1 | - | | 0 |
| | - | 0 | - | - | | 1 |
| | \ | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.171: simcells.v

```

1649 module \$_DFFSR_NNP_ (C, S, R, D, Q);
1650     input C, S, R, D;
1651     output reg Q;
1652     always @(negedge C, negedge S, posedge R) begin
1653         if (R == 1)
1654             Q <= 0;
1655         else if (S == 0)
1656             Q <= 1;
1657         else
1658             Q <= D;
1659     end
1660 endmodule

```

yosys> help \$_DFFSR_NPN_

A negative edge D-type flip-flop with positive polarity set and negative polarity reset.

| | | | | | | |
|--------------|-----|-----|-----|-----|---|-----|
| Truth table: | C | S | R | D | | Q |
| | --- | --- | --- | --- | + | --- |
| | - | - | 0 | - | | 0 |
| | - | 1 | - | - | | 1 |
| | \ | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.172: simcells.v

```

1677 module \$_DFFSR_NPN_ (C, S, R, D, Q);
1678     input C, S, R, D;
1679     output reg Q;
1680     always @(negedge C, posedge S, negedge R) begin
1681         if (R == 0)
1682             Q <= 0;
1683         else if (S == 1)
1684             Q <= 1;
1685         else
1686             Q <= D;
1687     end
1688 endmodule

```

yosys> help \$_DFFSR_NPP_

A negative edge D-type flip-flop with positive polarity set and positive polarity reset.

| | | | | | | |
|--------------|-------|---|-----|---|--|---|
| Truth table: | C | S | R | D | | Q |
| | ----- | + | --- | | | |
| | - | - | 1 | - | | 0 |
| | - | 1 | - | - | | 1 |
| | \ | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.173: simcells.v

```

1705 module \$_DFFSR_NPP_ (C, S, R, D, Q);
1706     input C, S, R, D;
1707     output reg Q;
1708     always @(negedge C, posedge S, posedge R) begin
1709         if (R == 1)
1710             Q <= 0;
1711         else if (S == 1)
1712             Q <= 1;
1713         else
1714             Q <= D;
1715     end
1716 endmodule

```

yosys> help \$_DFFSR_PNN_

A positive edge D-type flip-flop with negative polarity set and negative polarity reset.

| | | | | | | |
|--------------|-------|---|-----|---|--|---|
| Truth table: | C | S | R | D | | Q |
| | ----- | + | --- | | | |
| | - | - | 0 | - | | 0 |
| | - | 0 | - | - | | 1 |
| | / | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.174: simcells.v

```

1733 module \$_DFFSR_PNN_ (C, S, R, D, Q);
1734     input C, S, R, D;
1735     output reg Q;
1736     always @(posedge C, negedge S, negedge R) begin
1737         if (R == 0)
1738             Q <= 0;
1739         else if (S == 0)
1740             Q <= 1;
1741         else
1742             Q <= D;
1743     end
1744 endmodule

```

yosys> help \$_DFFSR_PNP_

A positive edge D-type flip-flop with negative polarity set and positive polarity reset.

| | | | | | | |
|--------------|-----------|---|---|---|--|---|
| Truth table: | C | S | R | D | | Q |
| | -----+--- | | | | | |
| | - | - | 1 | - | | 0 |
| | - | 0 | - | - | | 1 |
| | / | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.175: simcells.v

```

1761 module \$_DFFSR_PNP_ (C, S, R, D, Q);
1762     input C, S, R, D;
1763     output reg Q;
1764     always @(posedge C, negedge S, posedge R) begin
1765         if (R == 1)
1766             Q <= 0;
1767         else if (S == 0)
1768             Q <= 1;
1769         else
1770             Q <= D;
1771     end
1772 endmodule

```

yosys> help \$_DFFSR_PPN_

A positive edge D-type flip-flop with positive polarity set and negative polarity reset.

| | | | | | | |
|--------------|-----------|---|---|---|--|---|
| Truth table: | C | S | R | D | | Q |
| | -----+--- | | | | | |
| | - | - | 0 | - | | 0 |
| | - | 1 | - | - | | 1 |
| | / | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.176: simcells.v

```

1789 module \$_DFFSR_PPN_ (C, S, R, D, Q);
1790     input C, S, R, D;
1791     output reg Q;
1792     always @(posedge C, posedge S, negedge R) begin
1793         if (R == 0)
1794             Q <= 0;
1795         else if (S == 1)
1796             Q <= 1;
1797         else
1798             Q <= D;
1799     end
1800 endmodule

```

yosys> help \$_DFFSR_PPP_

A positive edge D-type flip-flop with positive polarity set and positive polarity reset.

| | | | | | | |
|--------------|-----|-----|-----|-----|---|-----|
| Truth table: | C | S | R | D | | Q |
| | --- | --- | --- | --- | + | --- |
| | - | - | 1 | - | | 0 |
| | - | 1 | - | - | | 1 |
| | / | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.177: simcells.v

```

1817 module \$_DFFSR_PPP_ (C, S, R, D, Q);
1818     input C, S, R, D;
1819     output reg Q;
1820     always @(posedge C, posedge S, posedge R) begin
1821         if (R == 1)
1822             Q <= 0;
1823         else if (S == 1)
1824             Q <= 1;
1825         else
1826             Q <= D;
1827     end
1828 endmodule

```

yosys> help \$_DFF_NNO_

A negative edge D-type flip-flop with negative polarity reset.

| | | | | | |
|--------------|-----|-----|-----|---|-----|
| Truth table: | D | C | R | | Q |
| | --- | --- | --- | + | --- |
| | - | - | 0 | | 0 |
| | d | \ | - | | d |
| | - | - | - | | q |

Simulation model (verilog)

Listing 9.178: simcells.v

```

731 module \$_DFF_NNO_ (D, C, R, Q);
732     input D, C, R;
733     output reg Q;
734     always @(negedge C or negedge R) begin
735         if (R == 0)
736             Q <= 0;
737         else
738             Q <= D;
739     end
740 endmodule

```

yosys> help \$_DFF_NN1_

A negative edge D-type flip-flop with negative polarity set.

| | | | | | |
|--------------|-----|-----|-----|---|-----|
| Truth table: | D | C | R | | Q |
| | --- | --- | --- | + | --- |

(continues on next page)

(continued from previous page)

```

- - 0 | 1
d \ - | d
- - - | q

```

Simulation model (verilog)

Listing 9.179: simcells.v

```

755 module \$_DFF_NN1_ (D, C, R, Q);
756     input D, C, R;
757     output reg Q;
758     always @(negedge C or negedge R) begin
759         if (R == 0)
760             Q <= 1;
761         else
762             Q <= D;
763     end
764 endmodule

```

yosys> help \$_DFF_NP0_

A negative edge D-type flip-flop with positive polarity reset.

```

Truth table:   D C R | Q
              -----+---
              - - 1 | 0
              d \ - | d
              - - - | q

```

Simulation model (verilog)

Listing 9.180: simcells.v

```

779 module \$_DFF_NP0_ (D, C, R, Q);
780     input D, C, R;
781     output reg Q;
782     always @(negedge C or posedge R) begin
783         if (R == 1)
784             Q <= 0;
785         else
786             Q <= D;
787     end
788 endmodule

```

yosys> help \$_DFF_NP1_

A negative edge D-type flip-flop with positive polarity set.

```

Truth table:   D C R | Q
              -----+---
              - - 1 | 1
              d \ - | d
              - - - | q

```

Simulation model (verilog)

Listing 9.181: simcells.v

```

803 module \$_DFF_NP1_ (D, C, R, Q);
804     input D, C, R;
805     output reg Q;
806     always @(negedge C or posedge R) begin
807         if (R == 1)
808             Q <= 1;
809         else
810             Q <= D;
811     end
812 endmodule

```

yosys> help \$_DFF_N_

A negative edge D-type flip-flop.

| | | | | |
|--------------|-------|---|------|---|
| Truth table: | D | C | | Q |
| | ----- | + | ---- | |
| | d | \ | | d |
| | - | - | | q |

Simulation model (verilog)

Listing 9.182: simcells.v

```

610 module \$_DFF_N_ (D, C, Q);
611     input D, C;
612     output reg Q;
613     always @(negedge C) begin
614         Q <= D;
615     end
616 endmodule

```

yosys> help \$_DFF_PN0_

A positive edge D-type flip-flop with negative polarity reset.

| | | | | | |
|--------------|-------|---|------|--|---|
| Truth table: | D | C | R | | Q |
| | ----- | + | ---- | | |
| | - | - | 0 | | 0 |
| | d | / | - | | d |
| | - | - | - | | q |

Simulation model (verilog)

Listing 9.183: simcells.v

```

827 module \$_DFF_PN0_ (D, C, R, Q);
828     input D, C, R;
829     output reg Q;
830     always @(posedge C or negedge R) begin
831         if (R == 0)
832             Q <= 0;
833         else

```

(continues on next page)

(continued from previous page)

```

834         Q <= D;
835     end
836 endmodule

```

yosys> help \$_DFF_PN1_

A positive edge D-type flip-flop with negative polarity set.

```

Truth table:   D C R | Q
               - - - + -
               - - 0 | 1
               d / - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.184: simcells.v

```

851 module \$_DFF_PN1_ (D, C, R, Q);
852     input D, C, R;
853     output reg Q;
854     always @(posedge C or negedge R) begin
855         if (R == 0)
856             Q <= 1;
857         else
858             Q <= D;
859     end
860 endmodule

```

yosys> help \$_DFF_PP0_

A positive edge D-type flip-flop with positive polarity reset.

```

Truth table:   D C R | Q
               - - - + -
               - - 1 | 0
               d / - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.185: simcells.v

```

875 module \$_DFF_PP0_ (D, C, R, Q);
876     input D, C, R;
877     output reg Q;
878     always @(posedge C or posedge R) begin
879         if (R == 1)
880             Q <= 0;
881         else
882             Q <= D;
883     end
884 endmodule

```

yosys> help \$_DFF_PP1_

A positive edge D-type flip-flop with positive polarity set.

| | | | | | |
|--------------|-------|---|------|--|---|
| Truth table: | D | C | R | | Q |
| | ----- | + | ---- | | |
| | - | - | 1 | | 1 |
| | d | / | - | | d |
| | - | - | - | | q |

Simulation model (verilog)

Listing 9.186: simcells.v

```

899 module \$_DFF_PP1_ (D, C, R, Q);
900     input D, C, R;
901     output reg Q;
902     always @(posedge C or posedge R) begin
903         if (R == 1)
904             Q <= 1;
905         else
906             Q <= D;
907     end
908 endmodule

```

yosys> help \$_DFF_P_

A positive edge D-type flip-flop.

| | | | | |
|--------------|-------|---|------|---|
| Truth table: | D | C | | Q |
| | ----- | + | ---- | |
| | d | / | | d |
| | - | - | | q |

Simulation model (verilog)

Listing 9.187: simcells.v

```

630 module \$_DFF_P_ (D, C, Q);
631     input D, C;
632     output reg Q;
633     always @(posedge C) begin
634         Q <= D;
635     end
636 endmodule

```

yosys> help \$_FF_

A D-type flip-flop that is clocked from the implicit global clock. (This cell type is usually only used in netlists for formal verification.)

Simulation model (verilog)

Listing 9.188: simcells.v

```

589 module \$_FF_ (D, Q);
590     input D;

```

(continues on next page)

(continued from previous page)

```

591     output reg Q;
592     always @($global_clock) begin
593         Q <= D;
594     end
595 endmodule

```

yosys> help \$_SDFFCE_NNON_

A negative edge D-type flip-flop with negative polarity synchronous reset and negative polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|---|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | + | - |
| | - | \ | 0 | 0 | | 0 |
| | d | \ | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.189: simcells.v

```

2884 module \$_SDFFCE_NNON_ (D, C, R, E, Q);
2885     input D, C, R, E;
2886     output reg Q;
2887     always @(negedge C) begin
2888         if (E == 0) begin
2889             if (R == 0)
2890                 Q <= 0;
2891             else
2892                 Q <= D;
2893         end
2894     end
2895 endmodule

```

yosys> help \$_SDFFCE_NNOP_

A negative edge D-type flip-flop with negative polarity synchronous reset and positive polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|---|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | + | - |
| | - | \ | 0 | 1 | | 0 |
| | d | \ | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.190: simcells.v

```

2911 module \$_SDFFCE_NNOP_ (D, C, R, E, Q);
2912     input D, C, R, E;
2913     output reg Q;
2914     always @(negedge C) begin
2915         if (E == 1) begin

```

(continues on next page)

(continued from previous page)

```

2916         if (R == 0)
2917             Q <= 0;
2918         else
2919             Q <= D;
2920     end
2921 end
2922 endmodule

```

yosys> help \$_SDFFCE_NN1N_

A negative edge D-type flip-flop with negative polarity synchronous set and negative polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | \ | 0 | 0 | | 1 |
| | d | \ | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.191: simcells.v

```

2938 module \$_SDFFCE_NN1N_ (D, C, R, E, Q);
2939     input D, C, R, E;
2940     output reg Q;
2941     always @(negedge C) begin
2942         if (E == 0) begin
2943             if (R == 0)
2944                 Q <= 1;
2945             else
2946                 Q <= D;
2947         end
2948     end
2949 endmodule

```

yosys> help \$_SDFFCE_NN1P_

A negative edge D-type flip-flop with negative polarity synchronous set and positive polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | \ | 0 | 1 | | 1 |
| | d | \ | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.192: simcells.v

```

2965 module \$_SDFFCE_NN1P_ (D, C, R, E, Q);
2966     input D, C, R, E;
2967     output reg Q;

```

(continues on next page)

(continued from previous page)

```

2968     always @(negedge C) begin
2969         if (E == 1) begin
2970             if (R == 0)
2971                 Q <= 1;
2972             else
2973                 Q <= D;
2974         end
2975     end
2976 endmodule

```

yosys> help \$_SDFFCE_NPON_

A negative edge D-type flip-flop with positive polarity synchronous reset and negative polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|---|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | + | - |
| | - | \ | 1 | 0 | | 0 |
| | d | \ | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.193: simcells.v

```

2992 module \$_SDFFCE_NPON_ (D, C, R, E, Q);
2993     input D, C, R, E;
2994     output reg Q;
2995     always @(negedge C) begin
2996         if (E == 0) begin
2997             if (R == 1)
2998                 Q <= 0;
2999             else
3000                 Q <= D;
3001         end
3002     end
3003 endmodule

```

yosys> help \$_SDFFCE_NPOP_

A negative edge D-type flip-flop with positive polarity synchronous reset and positive polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|---|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | + | - |
| | - | \ | 1 | 1 | | 0 |
| | d | \ | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.194: simcells.v

```

3019 module \$_SDFFCE_NPOP_ (D, C, R, E, Q);
3020     input D, C, R, E;
3021     output reg Q;
3022     always @(negedge C) begin
3023         if (E == 1) begin
3024             if (R == 1)
3025                 Q <= 0;
3026             else
3027                 Q <= D;
3028         end
3029     end
3030 endmodule

```

yosys> help \$_SDFFCE_NP1N_

A negative edge D-type flip-flop with positive polarity synchronous set and negative polarity clock enable (with clock enable having priority).

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | \ | 1 | 0 | 1 |
| | d | \ | - | 0 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.195: simcells.v

```

3046 module \$_SDFFCE_NP1N_ (D, C, R, E, Q);
3047     input D, C, R, E;
3048     output reg Q;
3049     always @(negedge C) begin
3050         if (E == 0) begin
3051             if (R == 1)
3052                 Q <= 1;
3053             else
3054                 Q <= D;
3055         end
3056     end
3057 endmodule

```

yosys> help \$_SDFFCE_NP1P_

A negative edge D-type flip-flop with positive polarity synchronous set and positive polarity clock enable (with clock enable having priority).

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | \ | 1 | 1 | 1 |
| | d | \ | - | 1 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.196: simcells.v

```

3073 module \$_SDFFCE_NP1P_ (D, C, R, E, Q);
3074     input D, C, R, E;
3075     output reg Q;
3076     always @(negedge C) begin
3077         if (E == 1) begin
3078             if (R == 1)
3079                 Q <= 1;
3080             else
3081                 Q <= D;
3082         end
3083     end
3084 endmodule

```

yosys> help \$_SDFFCE_PNON_

A positive edge D-type flip-flop with negative polarity synchronous reset and negative polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 0 | 0 | | 0 |
| | d | / | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.197: simcells.v

```

3100 module \$_SDFFCE_PNON_ (D, C, R, E, Q);
3101     input D, C, R, E;
3102     output reg Q;
3103     always @(posedge C) begin
3104         if (E == 0) begin
3105             if (R == 0)
3106                 Q <= 0;
3107             else
3108                 Q <= D;
3109         end
3110     end
3111 endmodule

```

yosys> help \$_SDFFCE_PNOP_

A positive edge D-type flip-flop with negative polarity synchronous reset and positive polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 0 | 1 | | 0 |
| | d | / | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.198: simcells.v

```

3127 module \$_SDFFCE_PNOP_ (D, C, R, E, Q);
3128     input D, C, R, E;
3129     output reg Q;
3130     always @(posedge C) begin
3131         if (E == 1) begin
3132             if (R == 0)
3133                 Q <= 0;
3134             else
3135                 Q <= D;
3136         end
3137     end
3138 endmodule

```

yosys> help \$_SDFFCE_PN1N_

A positive edge D-type flip-flop with negative polarity synchronous set and negative polarity clock enable (with clock enable having priority).

Truth table:

| D | C | R | E | Q |
|---|---|---|---|---|
| - | / | 0 | 0 | 1 |
| d | / | - | 0 | d |
| - | - | - | - | q |

Simulation model (verilog)

Listing 9.199: simcells.v

```

3154 module \$_SDFFCE_PN1N_ (D, C, R, E, Q);
3155     input D, C, R, E;
3156     output reg Q;
3157     always @(posedge C) begin
3158         if (E == 0) begin
3159             if (R == 0)
3160                 Q <= 1;
3161             else
3162                 Q <= D;
3163         end
3164     end
3165 endmodule

```

yosys> help \$_SDFFCE_PN1P_

A positive edge D-type flip-flop with negative polarity synchronous set and positive polarity clock enable (with clock enable having priority).

Truth table:

| D | C | R | E | Q |
|---|---|---|---|---|
| - | / | 0 | 1 | 1 |
| d | / | - | 1 | d |
| - | - | - | - | q |

Simulation model (verilog)

Listing 9.200: simcells.v

```

3181 module \$_SDFACE_PN1P_ (D, C, R, E, Q);
3182     input D, C, R, E;
3183     output reg Q;
3184     always @(posedge C) begin
3185         if (E == 1) begin
3186             if (R == 0)
3187                 Q <= 1;
3188             else
3189                 Q <= D;
3190         end
3191     end
3192 endmodule

```

yosys> help \$_SDFACE_PPON_

A positive edge D-type flip-flop with positive polarity synchronous reset and negative polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 1 | 0 | | 0 |
| | d | / | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.201: simcells.v

```

3208 module \$_SDFACE_PPON_ (D, C, R, E, Q);
3209     input D, C, R, E;
3210     output reg Q;
3211     always @(posedge C) begin
3212         if (E == 0) begin
3213             if (R == 1)
3214                 Q <= 0;
3215             else
3216                 Q <= D;
3217         end
3218     end
3219 endmodule

```

yosys> help \$_SDFACE_PPOP_

A positive edge D-type flip-flop with positive polarity synchronous reset and positive polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 1 | 1 | | 0 |
| | d | / | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.202: simcells.v

```

3235 module \$_SDFFCE_PPOP_ (D, C, R, E, Q);
3236     input D, C, R, E;
3237     output reg Q;
3238     always @(posedge C) begin
3239         if (E == 1) begin
3240             if (R == 1)
3241                 Q <= 0;
3242             else
3243                 Q <= D;
3244         end
3245     end
3246 endmodule

```

yosys> help \$_SDFFCE_PP1N_

A positive edge D-type flip-flop with positive polarity synchronous set and negative polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 1 | 0 | | 1 |
| | d | / | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.203: simcells.v

```

3262 module \$_SDFFCE_PP1N_ (D, C, R, E, Q);
3263     input D, C, R, E;
3264     output reg Q;
3265     always @(posedge C) begin
3266         if (E == 0) begin
3267             if (R == 1)
3268                 Q <= 1;
3269             else
3270                 Q <= D;
3271         end
3272     end
3273 endmodule

```

yosys> help \$_SDFFCE_PP1P_

A positive edge D-type flip-flop with positive polarity synchronous set and positive polarity clock enable (with clock enable having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 1 | 1 | | 1 |
| | d | / | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.204: simcells.v

```

3289 module \$_SDFCE_PP1P_ (D, C, R, E, Q);
3290     input D, C, R, E;
3291     output reg Q;
3292     always @(posedge C) begin
3293         if (E == 1) begin
3294             if (R == 1)
3295                 Q <= 1;
3296             else
3297                 Q <= D;
3298         end
3299     end
3300 endmodule

```

yosys> help \$_SDFFE_NNON_

A negative edge D-type flip-flop with negative polarity synchronous reset and negative polarity clock enable (with reset having priority).

| | | | | | | |
|--------------|---|---|---|---|---|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | + | - |
| | - | \ | 0 | - | | 0 |
| | d | \ | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.205: simcells.v

```

2484 module \$_SDFFE_NNON_ (D, C, R, E, Q);
2485     input D, C, R, E;
2486     output reg Q;
2487     always @(negedge C) begin
2488         if (R == 0)
2489             Q <= 0;
2490         else if (E == 0)
2491             Q <= D;
2492     end
2493 endmodule

```

yosys> help \$_SDFFE_NNOP_

A negative edge D-type flip-flop with negative polarity synchronous reset and positive polarity clock enable (with reset having priority).

| | | | | | | |
|--------------|---|---|---|---|---|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | + | - |
| | - | \ | 0 | - | | 0 |
| | d | \ | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.206: simcells.v

```

2509 module \$_SDFFE_NNOP_ (D, C, R, E, Q);
2510     input D, C, R, E;
2511     output reg Q;
2512     always @(negedge C) begin
2513         if (R == 0)
2514             Q <= 0;
2515         else if (E == 1)
2516             Q <= D;
2517     end
2518 endmodule

```

yosys> help \$_SDFFE_NN1N_

A negative edge D-type flip-flop with negative polarity synchronous set and negative polarity clock enable (with set having priority).

```

Truth table:   D C R E | Q
               +-----+
               - \ 0 - | 1
               d \ - 0 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.207: simcells.v

```

2534 module \$_SDFFE_NN1N_ (D, C, R, E, Q);
2535     input D, C, R, E;
2536     output reg Q;
2537     always @(negedge C) begin
2538         if (R == 0)
2539             Q <= 1;
2540         else if (E == 0)
2541             Q <= D;
2542     end
2543 endmodule

```

yosys> help \$_SDFFE_NN1P_

A negative edge D-type flip-flop with negative polarity synchronous set and positive polarity clock enable (with set having priority).

```

Truth table:   D C R E | Q
               +-----+
               - \ 0 - | 1
               d \ - 1 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.208: simcells.v

```

2559 module \$_SDFFE_NN1P_ (D, C, R, E, Q);
2560     input D, C, R, E;
2561     output reg Q;
2562     always @(negedge C) begin
2563         if (R == 0)
2564             Q <= 1;
2565         else if (E == 1)
2566             Q <= D;
2567     end
2568 endmodule

```

yosys> help \\$_SDFFE_NPON_

A negative edge D-type flip-flop with positive polarity synchronous reset and negative polarity clock enable (with reset having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | | q |
| | - | \ | 1 | - | | 0 |
| | d | \ | - | 0 | | d |

Simulation model (verilog)

Listing 9.209: simcells.v

```

2584 module \$_SDFFE_NPON_ (D, C, R, E, Q);
2585     input D, C, R, E;
2586     output reg Q;
2587     always @(negedge C) begin
2588         if (R == 1)
2589             Q <= 0;
2590         else if (E == 0)
2591             Q <= D;
2592     end
2593 endmodule

```

yosys> help \\$_SDFFE_NPOP_

A negative edge D-type flip-flop with positive polarity synchronous reset and positive polarity clock enable (with reset having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | - | - | - | | q |
| | - | \ | 1 | - | | 0 |
| | d | \ | - | 1 | | d |

Simulation model (verilog)

Listing 9.210: simcells.v

```

2609 module \$_SDFFE_NPOP_ (D, C, R, E, Q);
2610     input D, C, R, E;
2611     output reg Q;
2612     always @(negedge C) begin
2613         if (R == 1)
2614             Q <= 0;
2615         else if (E == 1)
2616             Q <= D;
2617     end
2618 endmodule

```

yosys> help \$_SDFFE_NP1N_

A negative edge D-type flip-flop with positive polarity synchronous set and negative polarity clock enable (with set having priority).

```

Truth table:   D C R E | Q
               +-----+
               - \ 1 - | 1
               d \ - 0 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.211: simcells.v

```

2634 module \$_SDFFE_NP1N_ (D, C, R, E, Q);
2635     input D, C, R, E;
2636     output reg Q;
2637     always @(negedge C) begin
2638         if (R == 1)
2639             Q <= 1;
2640         else if (E == 0)
2641             Q <= D;
2642     end
2643 endmodule

```

yosys> help \$_SDFFE_NP1P_

A negative edge D-type flip-flop with positive polarity synchronous set and positive polarity clock enable (with set having priority).

```

Truth table:   D C R E | Q
               +-----+
               - \ 1 - | 1
               d \ - 1 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.212: simcells.v

```

2659 module \$_SDFFE_NP1P_ (D, C, R, E, Q);
2660     input D, C, R, E;
2661     output reg Q;
2662     always @(negedge C) begin
2663         if (R == 1)
2664             Q <= 1;
2665         else if (E == 1)
2666             Q <= D;
2667     end
2668 endmodule

```

yosys> help \$_SDFFE_PNON_

A positive edge D-type flip-flop with negative polarity synchronous reset and negative polarity clock enable (with reset having priority).

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | / | 0 | - | 0 |
| | d | / | - | 0 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.213: simcells.v

```

2684 module \$_SDFFE_PNON_ (D, C, R, E, Q);
2685     input D, C, R, E;
2686     output reg Q;
2687     always @(posedge C) begin
2688         if (R == 0)
2689             Q <= 0;
2690         else if (E == 0)
2691             Q <= D;
2692     end
2693 endmodule

```

yosys> help \$_SDFFE_PNOP_

A positive edge D-type flip-flop with negative polarity synchronous reset and positive polarity clock enable (with reset having priority).

| Truth table: | D | C | R | E | Q |
|--------------|---|---|---|---|---|
| | - | / | 0 | - | 0 |
| | d | / | - | 1 | d |
| | - | - | - | - | q |

Simulation model (verilog)

Listing 9.214: simcells.v

```

2709 module \$_SDFFE_PNOP_ (D, C, R, E, Q);
2710     input D, C, R, E;
2711     output reg Q;
2712     always @(posedge C) begin
2713         if (R == 0)
2714             Q <= 0;
2715         else if (E == 1)
2716             Q <= D;
2717     end
2718 endmodule

```

yosys> help \$_SDFFE_PN1N_

A positive edge D-type flip-flop with negative polarity synchronous set and negative polarity clock enable (with set having priority).

```

Truth table:   D C R E | Q
-----+-----
- / 0 - | 1
d / - 0 | d
- - - - | q

```

Simulation model (verilog)

Listing 9.215: simcells.v

```

2734 module \$_SDFFE_PN1N_ (D, C, R, E, Q);
2735     input D, C, R, E;
2736     output reg Q;
2737     always @(posedge C) begin
2738         if (R == 0)
2739             Q <= 1;
2740         else if (E == 0)
2741             Q <= D;
2742     end
2743 endmodule

```

yosys> help \$_SDFFE_PN1P_

A positive edge D-type flip-flop with negative polarity synchronous set and positive polarity clock enable (with set having priority).

```

Truth table:   D C R E | Q
-----+-----
- / 0 - | 1
d / - 1 | d
- - - - | q

```

Simulation model (verilog)

Listing 9.216: simcells.v

```

2759 module \$_SDFFE_PN1P_ (D, C, R, E, Q);
2760     input D, C, R, E;
2761     output reg Q;
2762     always @(posedge C) begin
2763         if (R == 0)
2764             Q <= 1;
2765         else if (E == 1)
2766             Q <= D;
2767     end
2768 endmodule

```

yosys> help \\$_SDFFE_PPON_

A positive edge D-type flip-flop with positive polarity synchronous reset and negative polarity clock enable (with reset having priority).

```

Truth table:   D C R E | Q
               +-----+
               - / 1 - | 0
               d / - 0 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.217: simcells.v

```

2784 module \$_SDFFE_PPON_ (D, C, R, E, Q);
2785     input D, C, R, E;
2786     output reg Q;
2787     always @(posedge C) begin
2788         if (R == 1)
2789             Q <= 0;
2790         else if (E == 0)
2791             Q <= D;
2792     end
2793 endmodule

```

yosys> help \\$_SDFFE_PPOP_

A positive edge D-type flip-flop with positive polarity synchronous reset and positive polarity clock enable (with reset having priority).

```

Truth table:   D C R E | Q
               +-----+
               - / 1 - | 0
               d / - 1 | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.218: simcells.v

```

2809 module \$_SDFFE_PPOP_ (D, C, R, E, Q);
2810     input D, C, R, E;
2811     output reg Q;
2812     always @(posedge C) begin
2813         if (R == 1)
2814             Q <= 0;
2815         else if (E == 1)
2816             Q <= D;
2817     end
2818 endmodule

```

yosys> help \$_SDFFE_PP1N_

A positive edge D-type flip-flop with positive polarity synchronous set and negative polarity clock enable (with set having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 1 | - | | 1 |
| | d | / | - | 0 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.219: simcells.v

```

2834 module \$_SDFFE_PP1N_ (D, C, R, E, Q);
2835     input D, C, R, E;
2836     output reg Q;
2837     always @(posedge C) begin
2838         if (R == 1)
2839             Q <= 1;
2840         else if (E == 0)
2841             Q <= D;
2842     end
2843 endmodule

```

yosys> help \$_SDFFE_PP1P_

A positive edge D-type flip-flop with positive polarity synchronous set and positive polarity clock enable (with set having priority).

| | | | | | | |
|--------------|---|---|---|---|--|---|
| Truth table: | D | C | R | E | | Q |
| | - | / | 1 | - | | 1 |
| | d | / | - | 1 | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.220: simcells.v

```

2859 module \$_SDFFE_PP1P_ (D, C, R, E, Q);
2860     input D, C, R, E;
2861     output reg Q;
2862     always @(posedge C) begin
2863         if (R == 1)
2864             Q <= 1;
2865         else if (E == 1)
2866             Q <= D;
2867     end
2868 endmodule

```

yosys> help \$_SDFF_NN0_

A negative edge D-type flip-flop with negative polarity synchronous reset.

```

Truth table:   D C R | Q
               -----+---
               - \ 0 | 0
               d \ - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.221: simcells.v

```

2291 module \$_SDFF_NN0_ (D, C, R, Q);
2292     input D, C, R;
2293     output reg Q;
2294     always @(negedge C) begin
2295         if (R == 0)
2296             Q <= 0;
2297         else
2298             Q <= D;
2299     end
2300 endmodule

```

yosys> help \$_SDFF_NN1_

A negative edge D-type flip-flop with negative polarity synchronous set.

```

Truth table:   D C R | Q
               -----+---
               - \ 0 | 1
               d \ - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.222: simcells.v

```

2315 module \$_SDFF_NN1_ (D, C, R, Q);
2316     input D, C, R;
2317     output reg Q;

```

(continues on next page)

(continued from previous page)

```

2318     always @(negedge C) begin
2319         if (R == 0)
2320             Q <= 1;
2321         else
2322             Q <= D;
2323     end
2324 endmodule

```

yosys> help \$_SDFF_NP0_

A negative edge D-type flip-flop with positive polarity synchronous reset.

```

Truth table:   D C R | Q
               -----+---
               - \ 1 | 0
               d \ - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.223: simcells.v

```

2339 module \$_SDFF_NP0_ (D, C, R, Q);
2340     input D, C, R;
2341     output reg Q;
2342     always @(negedge C) begin
2343         if (R == 1)
2344             Q <= 0;
2345         else
2346             Q <= D;
2347     end
2348 endmodule

```

yosys> help \$_SDFF_NP1_

A negative edge D-type flip-flop with positive polarity synchronous set.

```

Truth table:   D C R | Q
               -----+---
               - \ 1 | 1
               d \ - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.224: simcells.v

```

2363 module \$_SDFF_NP1_ (D, C, R, Q);
2364     input D, C, R;
2365     output reg Q;
2366     always @(negedge C) begin
2367         if (R == 1)
2368             Q <= 1;
2369         else

```

(continues on next page)

(continued from previous page)

```

2370         Q <= D;
2371     end
2372 endmodule

```

yosys> help \$_SDFF_PN0_

A positive edge D-type flip-flop with negative polarity synchronous reset.

```

Truth table:   D C R | Q
               -----+---
               - / 0 | 0
               d / - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.225: simcells.v

```

2387 module \$_SDFF_PN0_ (D, C, R, Q);
2388     input D, C, R;
2389     output reg Q;
2390     always @(posedge C) begin
2391         if (R == 0)
2392             Q <= 0;
2393         else
2394             Q <= D;
2395     end
2396 endmodule

```

yosys> help \$_SDFF_PN1_

A positive edge D-type flip-flop with negative polarity synchronous set.

```

Truth table:   D C R | Q
               -----+---
               - / 0 | 1
               d / - | d
               - - - | q

```

Simulation model (verilog)

Listing 9.226: simcells.v

```

2411 module \$_SDFF_PN1_ (D, C, R, Q);
2412     input D, C, R;
2413     output reg Q;
2414     always @(posedge C) begin
2415         if (R == 0)
2416             Q <= 1;
2417         else
2418             Q <= D;
2419     end
2420 endmodule

```


yosys> help \$_SDFF_PP0_

A positive edge D-type flip-flop with positive polarity synchronous reset.

| Truth table: | D | C | R | Q |
|--------------|---|---|---|---|
| | - | / | 1 | 0 |
| | d | / | - | d |
| | - | - | - | q |

Simulation model (verilog)

Listing 9.227: simcells.v

```

2435 module \$_SDFF_PP0_ (D, C, R, Q);
2436     input D, C, R;
2437     output reg Q;
2438     always @(posedge C) begin
2439         if (R == 1)
2440             Q <= 0;
2441         else
2442             Q <= D;
2443     end
2444 endmodule

```

yosys> help \$_SDFF_PP1_

A positive edge D-type flip-flop with positive polarity synchronous set.

| Truth table: | D | C | R | Q |
|--------------|---|---|---|---|
| | - | / | 1 | 1 |
| | d | / | - | d |
| | - | - | - | q |

Simulation model (verilog)

Listing 9.228: simcells.v

```

2459 module \$_SDFF_PP1_ (D, C, R, Q);
2460     input D, C, R;
2461     output reg Q;
2462     always @(posedge C) begin
2463         if (R == 1)
2464             Q <= 1;
2465         else
2466             Q <= D;
2467     end
2468 endmodule

```

9.2.4 Latch cells

The cell types `$_DLATCH_N_` and `$_DLATCH_P_` represent d-type latches.

Table 9.12: Cell types for basic latches

| Verilog | Cell Type |
|--|---------------------------|
| <code>always @* if (!E) Q <= D</code> | <code>\$_DLATCH_N_</code> |
| <code>always @* if (E) Q <= D</code> | <code>\$_DLATCH_P_</code> |

The cell types `$_DLATCH_[NP][NP][01]_` implement d-type latches with reset. The values in the table for these cell types relate to the following Verilog code template:

```
always @*
  if (R == RST_LVL)
    Q <= RST_VAL;
  else if (E == EN_LVL)
    Q <= D;
```

Table 9.13: Cell types for gate level logic networks (latches with reset)

| <i>EnLvl</i> | <i>RstLvl</i> | <i>RstVal</i> | Cell Type |
|--------------|---------------|---------------|-----------------------------|
| 0 | 0 | 0 | <code>\$_DLATCH_NNO_</code> |
| 0 | 0 | 1 | <code>\$_DLATCH_NN1_</code> |
| 0 | 1 | 0 | <code>\$_DLATCH_NPO_</code> |
| 0 | 1 | 1 | <code>\$_DLATCH_NP1_</code> |
| 1 | 0 | 0 | <code>\$_DLATCH_PNO_</code> |
| 1 | 0 | 1 | <code>\$_DLATCH_PN1_</code> |
| 1 | 1 | 0 | <code>\$_DLATCH_PPO_</code> |
| 1 | 1 | 1 | <code>\$_DLATCH_PP1_</code> |

The cell types `$_DLATCHSR_[NP][NP][NP]_` implement d-type latches with set and reset. The values in the table for these cell types relate to the following Verilog code template:

```
always @*
  if (R == RST_LVL)
    Q <= 0;
  else if (S == SET_LVL)
    Q <= 1;
  else if (E == EN_LVL)
    Q <= D;
```

Table 9.14: Cell types for gate level logic networks (latches with set and reset)

| <i>EnLvl</i> | <i>SetLvl</i> | <i>RstLvl</i> | Cell Type |
|--------------|---------------|---------------|-------------------------------|
| 0 | 0 | 0 | <code>\$_DLATCHSR_NNN_</code> |
| 0 | 0 | 1 | <code>\$_DLATCHSR_NNP_</code> |
| 0 | 1 | 0 | <code>\$_DLATCHSR_NPN_</code> |
| 0 | 1 | 1 | <code>\$_DLATCHSR_NPP_</code> |
| 1 | 0 | 0 | <code>\$_DLATCHSR_PNN_</code> |
| 1 | 0 | 1 | <code>\$_DLATCHSR_PNP_</code> |
| 1 | 1 | 0 | <code>\$_DLATCHSR_PPN_</code> |
| 1 | 1 | 1 | <code>\$_DLATCHSR_PPP_</code> |

The cell types `$_SR_[NP][NP]_` implement sr-type latches. The values in the table for these cell types relate to the following Verilog code template:

```
always @*
  if (R == RST_LVL)
    Q <= 0;
  else if (S == SET_LVL)
    Q <= 1;
```

Table 9.15: Cell types for gate level logic networks (SR latches)

| <i>SetLvl</i> | <i>RstLvl</i> | Cell Type |
|---------------|---------------|------------------------|
| 0 | 0 | <code>\$_SR_NN_</code> |
| 0 | 1 | <code>\$_SR_NP_</code> |
| 1 | 0 | <code>\$_SR_PN_</code> |
| 1 | 1 | <code>\$_SR_PP_</code> |

yosys> help `$_DLATCHSR_NNN_`

A negative enable D-type latch with negative polarity set and negative polarity reset.

```
Truth table:   E S R D | Q
               +-----+
               - - 0 - | 0
               - 0 - - | 1
               0 - - d | d
               - - - - | q
```

Simulation model (verilog)

Listing 9.229: simcells.v

```
3551 module \$_DLATCHSR_NNN_ (E, S, R, D, Q);
3552     input E, S, R, D;
3553     output reg Q;
3554     always @* begin
3555         if (R == 0)
3556             Q <= 0;
3557         else if (S == 0)
3558             Q <= 1;
3559         else if (E == 0)
3560             Q <= D;
3561     end
3562 endmodule
```

yosys> help `$_DLATCHSR_NNP_`

A negative enable D-type latch with negative polarity set and positive polarity reset.

```
Truth table:   E S R D | Q
               +-----+
               - - 1 - | 0
               - 0 - - | 1
```

(continues on next page)

(continued from previous page)

```

0 - - d | d
- - - - | q

```

Simulation model (verilog)

Listing 9.230: simcells.v

```

3579 module \$_DLATCHSR_NNP_ (E, S, R, D, Q);
3580     input E, S, R, D;
3581     output reg Q;
3582     always @* begin
3583         if (R == 1)
3584             Q <= 0;
3585         else if (S == 0)
3586             Q <= 1;
3587         else if (E == 0)
3588             Q <= D;
3589     end
3590 endmodule

```

yosys> help \$_DLATCHSR_NPN_

A negative enable D-type latch with positive polarity set and negative polarity reset.

```

Truth table:   E S R D | Q
               +-----+
               - - 0 - | 0
               - 1 - - | 1
               0 - - d | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.231: simcells.v

```

3607 module \$_DLATCHSR_NPN_ (E, S, R, D, Q);
3608     input E, S, R, D;
3609     output reg Q;
3610     always @* begin
3611         if (R == 0)
3612             Q <= 0;
3613         else if (S == 1)
3614             Q <= 1;
3615         else if (E == 0)
3616             Q <= D;
3617     end
3618 endmodule

```

yosys> help \$_DLATCHSR_NPP_

A negative enable D-type latch with positive polarity set and positive polarity reset.

```

Truth table:   E S R D | Q
               +-----+

```

(continues on next page)

(continued from previous page)

```

- - 1 - | 0
- 1 - - | 1
0 - - d | d
- - - - | q

```

Simulation model (verilog)

Listing 9.232: simcells.v

```

3635 module \$_DLATCHSR_NPP_ (E, S, R, D, Q);
3636     input E, S, R, D;
3637     output reg Q;
3638     always @* begin
3639         if (R == 1)
3640             Q <= 0;
3641         else if (S == 1)
3642             Q <= 1;
3643         else if (E == 0)
3644             Q <= D;
3645     end
3646 endmodule

```

yosys> help \$_DLATCHSR_PNN_

A positive enable D-type latch with negative polarity set and negative polarity reset.

```

Truth table:   E S R D | Q
-----+-----
- - 0 - | 0
- 0 - - | 1
1 - - d | d
- - - - | q

```

Simulation model (verilog)

Listing 9.233: simcells.v

```

3663 module \$_DLATCHSR_PNN_ (E, S, R, D, Q);
3664     input E, S, R, D;
3665     output reg Q;
3666     always @* begin
3667         if (R == 0)
3668             Q <= 0;
3669         else if (S == 0)
3670             Q <= 1;
3671         else if (E == 1)
3672             Q <= D;
3673     end
3674 endmodule

```

yosys> help \$_DLATCHSR_PNP_

A positive enable D-type latch with negative polarity set and positive polarity reset.

| | | | | | | |
|--------------|-----------|---|---|---|--|---|
| Truth table: | E | S | R | D | | Q |
| | -----+--- | | | | | |
| | - | - | 1 | - | | 0 |
| | - | 0 | - | - | | 1 |
| | 1 | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.234: simcells.v

```

3691 module \$_DLATCHSR_PNP_ (E, S, R, D, Q);
3692     input E, S, R, D;
3693     output reg Q;
3694     always @* begin
3695         if (R == 1)
3696             Q <= 0;
3697         else if (S == 0)
3698             Q <= 1;
3699         else if (E == 1)
3700             Q <= D;
3701     end
3702 endmodule

```

yosys> help \$_DLATCHSR_PPN_

A positive enable D-type latch with positive polarity set and negative polarity reset.

| | | | | | | |
|--------------|-----------|---|---|---|--|---|
| Truth table: | E | S | R | D | | Q |
| | -----+--- | | | | | |
| | - | - | 0 | - | | 0 |
| | - | 1 | - | - | | 1 |
| | 1 | - | - | d | | d |
| | - | - | - | - | | q |

Simulation model (verilog)

Listing 9.235: simcells.v

```

3719 module \$_DLATCHSR_PPN_ (E, S, R, D, Q);
3720     input E, S, R, D;
3721     output reg Q;
3722     always @* begin
3723         if (R == 0)
3724             Q <= 0;
3725         else if (S == 1)
3726             Q <= 1;
3727         else if (E == 1)
3728             Q <= D;
3729     end
3730 endmodule

```

yosys> help \$_DLATCHSR_PPP_

A positive enable D-type latch with positive polarity set and positive polarity reset.

```

Truth table:   E S R D | Q
               - - - - + - -
               - - 1 - | 0
               - 1 - - | 1
               1 - - d | d
               - - - - | q

```

Simulation model (verilog)

Listing 9.236: simcells.v

```

3747 module \$_DLATCHSR_PPP_ (E, S, R, D, Q);
3748     input E, S, R, D;
3749     output reg Q;
3750     always @* begin
3751         if (R == 1)
3752             Q <= 0;
3753         else if (S == 1)
3754             Q <= 1;
3755         else if (E == 1)
3756             Q <= D;
3757     end
3758 endmodule

```

yosys> help \$_DLATCH_NNO_

A negative enable D-type latch with negative polarity reset.

```

Truth table:   E R D | Q
               - - - + - -
               - 0 - | 0
               0 - d | d
               - - - | q

```

Simulation model (verilog)

Listing 9.237: simcells.v

```

3357 module \$_DLATCH_NNO_ (E, R, D, Q);
3358     input E, R, D;
3359     output reg Q;
3360     always @* begin
3361         if (R == 0)
3362             Q <= 0;
3363         else if (E == 0)
3364             Q <= D;
3365     end
3366 endmodule

```

yosys> help \$_DLATCH_NN1_

A negative enable D-type latch with negative polarity set.

```

Truth table:   E R D | Q
               - - - + - -

```

(continues on next page)

(continued from previous page)

| | | | | |
|---|---|---|--|---|
| - | 0 | - | | 1 |
| 0 | - | d | | d |
| - | - | - | | q |

Simulation model (verilog)

Listing 9.238: simcells.v

```

3381 module \$_DLATCH_NN1_ (E, R, D, Q);
3382     input E, R, D;
3383     output reg Q;
3384     always @* begin
3385         if (R == 0)
3386             Q <= 1;
3387         else if (E == 0)
3388             Q <= D;
3389     end
3390 endmodule

```

yosys> help \$_DLATCH_NP0_

A negative enable D-type latch with positive polarity reset.

| | | | | | |
|--------------|-------|---|-----|--|---|
| Truth table: | E | R | D | | Q |
| | ----- | + | --- | | |
| | - | 1 | - | | 0 |
| | 0 | - | d | | d |
| | - | - | - | | q |

Simulation model (verilog)

Listing 9.239: simcells.v

```

3405 module \$_DLATCH_NP0_ (E, R, D, Q);
3406     input E, R, D;
3407     output reg Q;
3408     always @* begin
3409         if (R == 1)
3410             Q <= 0;
3411         else if (E == 0)
3412             Q <= D;
3413     end
3414 endmodule

```

yosys> help \$_DLATCH_NP1_

A negative enable D-type latch with positive polarity set.

| | | | | | |
|--------------|-------|---|-----|--|---|
| Truth table: | E | R | D | | Q |
| | ----- | + | --- | | |
| | - | 1 | - | | 1 |
| | 0 | - | d | | d |
| | - | - | - | | q |

Simulation model (verilog)

Listing 9.240: simcells.v

```

3429 module \$_DLATCH_NP1_ (E, R, D, Q);
3430     input E, R, D;
3431     output reg Q;
3432     always @* begin
3433         if (R == 1)
3434             Q <= 1;
3435         else if (E == 0)
3436             Q <= D;
3437     end
3438 endmodule

```

yosys> help \\$_DLATCH_N_

A negative enable D-type latch.

| | |
|--------------|-----------|
| Truth table: | E D Q |
| | -----+--- |
| | 0 d d |
| | - - q |

Simulation model (verilog)

Listing 9.241: simcells.v

```

3314 module \$_DLATCH_N_ (E, D, Q);
3315     input E, D;
3316     output reg Q;
3317     always @* begin
3318         if (E == 0)
3319             Q <= D;
3320     end
3321 endmodule

```

yosys> help \\$_DLATCH_PNO_

A positive enable D-type latch with negative polarity reset.

| | |
|--------------|-----------|
| Truth table: | E R D Q |
| | -----+--- |
| | - 0 - 0 |
| | 1 - d d |
| | - - - q |

Simulation model (verilog)

Listing 9.242: simcells.v

```

3453 module \$_DLATCH_PNO_ (E, R, D, Q);
3454     input E, R, D;
3455     output reg Q;
3456     always @* begin
3457         if (R == 0)
3458             Q <= 0;

```

(continues on next page)

(continued from previous page)

```

3459         else if (E == 1)
3460             Q <= D;
3461     end
3462 endmodule

```

yosys> help \$_DLATCH_PN1_

A positive enable D-type latch with negative polarity set.

```

Truth table:   E R D | Q
               -+---
               - 0 - | 1
               1 - d | d
               - - - | q

```

Simulation model (verilog)

Listing 9.243: simcells.v

```

3477 module \$_DLATCH_PN1_ (E, R, D, Q);
3478     input E, R, D;
3479     output reg Q;
3480     always @* begin
3481         if (R == 0)
3482             Q <= 1;
3483         else if (E == 1)
3484             Q <= D;
3485     end
3486 endmodule

```

yosys> help \$_DLATCH_PPO_

A positive enable D-type latch with positive polarity reset.

```

Truth table:   E R D | Q
               -+---
               - 1 - | 0
               1 - d | d
               - - - | q

```

Simulation model (verilog)

Listing 9.244: simcells.v

```

3501 module \$_DLATCH_PPO_ (E, R, D, Q);
3502     input E, R, D;
3503     output reg Q;
3504     always @* begin
3505         if (R == 1)
3506             Q <= 0;
3507         else if (E == 1)
3508             Q <= D;
3509     end
3510 endmodule

```

yosys> help \$_DLATCH_PP1_

A positive enable D-type latch with positive polarity set.

| Truth table: | E | R | D | Q |
|--------------|---|---|---|---|
| | - | 1 | - | 1 |
| | 1 | - | d | d |
| | - | - | - | q |

Simulation model (verilog)

Listing 9.245: simcells.v

```

3525 module \$_DLATCH_PP1_ (E, R, D, Q);
3526     input E, R, D;
3527     output reg Q;
3528     always @* begin
3529         if (R == 1)
3530             Q <= 1;
3531         else if (E == 1)
3532             Q <= D;
3533     end
3534 endmodule

```

yosys> help \$_DLATCH_P_

A positive enable D-type latch.

| Truth table: | E | D | Q |
|--------------|---|---|---|
| | 1 | d | d |
| | - | - | q |

Simulation model (verilog)

Listing 9.246: simcells.v

```

3335 module \$_DLATCH_P_ (E, D, Q);
3336     input E, D;
3337     output reg Q;
3338     always @* begin
3339         if (E == 1)
3340             Q <= D;
3341     end
3342 endmodule

```

yosys> help \$_SR_NN_

A set-reset latch with negative polarity SET and negative polarity RESET.

| Truth table: | S | R | Q |
|--------------|---|---|---|
| | - | 0 | 0 |
| | 0 | - | 1 |
| | - | - | q |

Simulation model (verilog)

Listing 9.247: simcells.v

```

497 module \$_SR_NN_ (S, R, Q);
498     input S, R;
499     output reg Q;
500     always @* begin
501         if (R == 0)
502             Q <= 0;
503         else if (S == 0)
504             Q <= 1;
505     end
506 endmodule

```

yosys> help \$_SR_NP_

A set-reset latch with negative polarity SET and positive polarity RESET.

| | | | | |
|--------------|------|---|------|---|
| Truth table: | S | R | | Q |
| | ---- | + | ---- | |
| | - | 1 | | 0 |
| | 0 | - | | 1 |
| | - | - | | q |

Simulation model (verilog)

Listing 9.248: simcells.v

```

521 module \$_SR_NP_ (S, R, Q);
522     input S, R;
523     output reg Q;
524     always @* begin
525         if (R == 1)
526             Q <= 0;
527         else if (S == 0)
528             Q <= 1;
529     end
530 endmodule

```

yosys> help \$_SR_PN_

A set-reset latch with positive polarity SET and negative polarity RESET.

| | | | | |
|--------------|------|---|------|---|
| Truth table: | S | R | | Q |
| | ---- | + | ---- | |
| | - | 0 | | 0 |
| | 1 | - | | 1 |
| | - | - | | q |

Simulation model (verilog)

Listing 9.249: simcells.v

```

545 module \$_SR_PN_ (S, R, Q);
546     input S, R;

```

(continues on next page)

(continued from previous page)

```

547     output reg Q;
548     always @* begin
549         if (R == 0)
550             Q <= 0;
551         else if (S == 1)
552             Q <= 1;
553     end
554 endmodule

```

yosys> help \$_SR_PP_

A set-reset latch with positive polarity SET and positive polarity RESET.

```

Truth table:   S R | Q
              -----+---
                - 1 | 0
                1 - | 1
                - - | q

```

Simulation model (verilog)

Listing 9.250: simcells.v

```

569 module \$_SR_PP_ (S, R, Q);
570     input S, R;
571     output reg Q;
572     always @* begin
573         if (R == 1)
574             Q <= 0;
575         else if (S == 1)
576             Q <= 1;
577     end
578 endmodule

```

9.2.5 Other gate-level cells

Other gate-level cells

yosys> help \$_TBUF_

A tri-state buffer.

```

Truth table:   A E | Y
              -----+---
                a 1 | a
                - 0 | z

```

Properties

is_evaluable

Simulation model (verilog)

Listing 9.251: simcells.v

```
473 module \$_TBUF_ (A, E, Y);  
474     input A, E;  
475     output Y;  
476     assign Y = E ? A : 1'bz;  
477 endmodule
```

9.3 Cell properties

is_evaluable

These cells are able to be used in conjunction with the `eval` command. Some passes, such as `opt_expr`, may also be able to perform additional optimizations on cells which are evaluable.

x-aware

Some passes will treat these cells as the non ‘x’ aware cell. For example, during synthesis `$eqx` will typically be treated as `$eq`.

x-output

These cells can produce ‘x’ output even if all inputs are defined. For example, a `$div` cell with divisor (B) equal to zero has undefined output.

Refer to the propindex for the list of cells with a given property.

COMMAND LINE REFERENCE

Usage:

```
./yosys [OPTION...] [<infile> [...]]
```

operation options:

```
-b, --backend <backend>      use <backend> for the output file specified on the
↳command line
-f, --frontend <frontend>    use <frontend> for the input files on the command line
-s, --scriptfile <scriptfile>
                              execute the commands in <scriptfile>
-c, --tcl-scriptfile <tcl_scriptfile>
                              execute the commands in the TCL <tcl_scriptfile> (see
↳'help tcl' for details)
-C, --tcl-interactive        enters TCL interactive shell mode
-p, --commands <commands>    execute <commands> (to chain commands, separate them
↳with semicolon + whitespace: 'cmd1; cmd2')
-r, --top <top>              elaborate the specified HDL <top> module
-m, --plugin <plugin>        load the specified <plugin> module
-D, --define <define>[=<value>]
                              set the specified Verilog define to <value> if supplied
↳via command "read -define"
-S, --synth                  shortcut for calling the "synth" command, a default
↳script for transforming the Verilog input to a gate-level netlist. For example: yosys -
↳o output.blif -S input.v For more complex synthesis jobs it is recommended to use the
↳read_* and write_* commands in a script file instead of specifying input and output
↳files on the command line.
-H                            print the command list
-h, --help [<command>]       print this help message. If given, print help for
↳<command>.
-V, --version                print version information and exit
```

logging options:

```
-Q                            suppress printing of banner (copyright, disclaimer,
↳version)
-T                            suppress printing of footer (log hash, version, timing
↳statistics)
--no-version                  suppress writing out Yosys version anywhere excluding -V,
↳--version
-q, --quiet                  quiet operation. Only write warnings and error messages
↳to console. Use this option twice to also quiet warning messages
-v, --verbose <level>       print log headers up to <level> to the console. Implies -
```

(continues on next page)

(continued from previous page)

```

↪q for everything except the 'End of script.' message.
-t, --timestamp          annotate all log messages with a time stamp
-d, --detailed-timing    print more detailed timing stats at exit
-l, --logfile <logfile>  write log messages to <logfile>
-L, --line-buffered-logfile <logfile>
                           like -l but open <logfile> in line buffered mode
-o, --outfile <outfile>  write the design to <outfile> on exit
-P, --dump-design <header_id>[:<filename>]
                           dump the design when printing the specified log header
↪to a file. yosys_dump_<header_id>.il is used as filename if none is specified. Use 'ALL
↪' as <header_id> to dump at every header.
-W, --warning-as-warning <regex>
                           print a warning for all log messages matching <regex>
-w, --warning-as-message <regex>
                           if a warning message matches <regex>, it is printed as
↪regular message instead
-e, --warning-as-error <regex>
                           if a warning message matches <regex>, it is printed as
↪error message instead
-E, --deps-file <depsfile> write a Makefile dependencies file <depsfile> with input
↪and output file names

developer options:
-X, --trace              enable tracing of core data structure changes. for
↪debugging
-M, --randomize-pointers will slightly randomize allocated pointer addresses. for
↪debugging
    --autoidx <idx>      start counting autoidx up from <seed>, similar effect to
↪--hash-seed
    --hash-seed <seed>   mix up hashing values with <seed>, for extreme
↪optimization and testing
-A, --abort              will call abort() at the end of the script. for debugging
-x, --experimental <feature> do not print warnings for the experimental <feature>
-g, --debug              globally enable debug log messages
    --perffile <perffile> write a JSON performance log to <perffile>

```

10.1 Command reference

Todo

Can we warn on command groups that aren't included anywhere?

List of all commands

10.1.1 Yosys environment variables

HOME

Yosys command history is stored in `$HOME/.yosys_history`. Graphics (from `show` and `viz` commands) will output to this directory by default. This environment variable is also used in some cases

for resolving filenames with ~.

PATH

May be used in OpenBSD builds for finding the location of Yosys executable.

TMPDIR

Used for storing temporary files.

ABC

When compiling Yosys with out-of-tree ABC using **ABCEXTERNAL**, this variable can be used to override the external ABC executable.

YOSYS_NOVERIFIC

If Yosys was built with Verific, this environment variable can be used to temporarily disable Verific support.

YOSYS_COVER_DIR and YOSYS_COVER_FILE

When using code coverage, these environment variables control the output file name/location.

YOSYS_ABORT_ON_LOG_ERROR

Can be used for debugging Yosys internals. Setting it to 1 causes abort() to be called when Yosys terminates with an error message.

10.1.2 Reading input files

write_aiger - write design to AIGER file

yosys> help write_aiger

write_aiger [options] [filename]

Write the current design to an AIGER file. The design must be flattened and must not contain any cell types except \$AND_, \$NOT_, simple FF types, \$assert and \$assume cells, and \$initstate cells.

\$assert and \$assume cells are converted to AIGER bad state properties and invariant constraints.

| | |
|------------------|---|
| -ascii | write ASCII version of AIGER format |
| -zinit | convert FFs to zero-initialized FFs, adding additional ↩ inputs for uninitialized FFs. |
| -miter | design outputs are AIGER bad state properties |
| -symbols | include a symbol table in the generated AIGER file |
| -no-sort | don't sort input/output ports |
| -map <filename> | write an extra file with port and latch symbols |
| -vmap <filename> | like -map, but more verbose |

| | |
|--------------------------------------|---|
| <code>-no-startoffset</code> | make indexes zero based, enable using map files with
↪smt solvers. |
| <code>-ywmap <filename></code> | write a map file for conversion to and from yosys
↪witness traces. |
| <code>-I, -0, -B, -L</code> | If the design contains no input/output/assert/flip-flop
↪then create one
dummy input/output/bad_state-pin or latch to make the
↪tools reading the
AIGER file happy. |

write_aiger2 - (experimental) write design to AIGER file

yosys> help write_aiger2

Warning

This command is experimental

`write_aiger2 [options] [filename]`

Write the selected module to an AIGER file.

| | |
|-----------------------|---|
| <code>-strash</code> | perform structural hashing while writing |
| <code>-flatten</code> | allow descending into submodules and write a flattened
↪view of the design
hierarchy starting at the selected top |

This command is able to ingest all combinational cells except for:

`$macc_v2, $alu, $lcu, $demux, $bweqx, $macc, $concat, $pow, $modfloor,
$divfloor, $mod, $div, $mul, $sub, $add, $nex, $eqx, $shiftx, $shift,
$sshr, $sshl, $shr, $shl, $sop, $lut, $slice, $neg,`

And all combinational gates except for:

`$_TBUF_, $_MUX16_, $_MUX8_, $_MUX4_,`

write_blif - write design to BLIF file

yosys> help write_blif

`write_blif [options] [filename]`

Write the current design to an BLIF file.

| | |
|--|---|
| <code>-top top_module</code> | set the specified module as design top module |
| <code>-buf <cell-type> <in-port> <out-port></code> | <code><cell-type></code> cell-type with the specified port names for buffers |
| <code>-unbuf <cell-type> <in-port> <out-port></code> | replace buffers with the specified name and port names with a .names statement that models a buffer |
| <code>-true <cell-type> <out-port></code> | |
| <code>-false <cell-type> <out-port></code> | |
| <code>-undef <cell-type> <out-port></code> | use the specified cell types to drive nets that are constant 1, 0, or undefined. when '-' is used as <cell-type>, then <out-port> specifies the wire name to be used for the constant signal and no cell driving that wire is generated. when '+' is used as <cell-type>, then <out-port> specifies the wire name to be used for the constant signal and a .names statement is generated to drive the wire. |
| <code>-noalias</code> | if a net name is aliasing another net name, then by default a net without fanout is created that is driven by the other net. This option suppresses the generation of this nets without fanout. |

The following options can be useful when the generated file is not going to be read by a BLIF parser but a custom tool. It is recommended not to name the output file *.blif when any of these options are used.

| | |
|----------------------|---|
| <code>-icells</code> | do not translate Yosys's internal gates to generic BLIF logic functions. Instead create .subckt or .gate lines for all cells. |
| <code>-gates</code> | print .gate instead of .subckt lines for all cells that are not instantiations of other modules from this design. |
| <code>-conn</code> | do not generate buffers for connected wires. instead use the non-standard .conn statement. |
| <code>-attr</code> | use the non-standard .attr statement to write cell attributes |

| | |
|-----------------------------|--|
| <code>-param</code> | use the non-standard <code>.param</code> statement to write cell parameters |
| <code>-cname</code> | use the non-standard <code>.cname</code> statement to write cell names |
| <code>-iname, -iattr</code> | enable <code>-cname</code> and <code>-attr</code> functionality for <code>.names</code> statements (the <code>.cname</code> and <code>.attr</code> statements will be included in the BLIF output after the truth table for the <code>.names</code> statement) |
| <code>-blackbox</code> | write blackbox cells with <code>.blackbox</code> statement. |
| <code>-impltf</code> | do not write definitions for the <code>\$true</code> , <code>\$false</code> and <code>\$undef</code> wires. |

write_btor - write design to BTOR file

```
yosys> help write_btor
```

```
write_btor [options] [filename]
```

Write a BTOR description of the current design.

| | |
|--------------------------------------|---|
| <code>-v</code> | Add comments and indentation to BTOR output file |
| <code>-s</code> | Output only a single bad property for all asserts |
| <code>-c</code> | Output cover properties using 'bad' statements instead of asserts |
| <code>-i <filename></code> | Create additional info file with auxiliary information |
| <code>-x</code> | Output symbols for internal netnames (starting with '\$') |
| <code>-ywmap <filename></code> | Create a map file for conversion to and from Yosys witness traces |

write_cxxrtl - convert design to C++ RTL simulation

```
yosys> help write_cxxrtl
```

```
write_cxxrtl [options] [filename]
```

Write C++ code that simulates the design. The generated code requires a driver that instantiates the design, toggles its clock, and interacts with its ports.

The following driver may be used as an example for a design with a single clock

(continues on next page)

(continued from previous page)

driving rising edge triggered flip-flops:

```
#include "top.cc"

int main() {
    cxxrtl_design::p_top top;
    top.step();
    while (1) {
        /* user logic */
        top.p_clk.set(false);
        top.step();
        top.p_clk.set(true);
        top.step();
    }
}
```

Note that CXXRTL simulations, just like the hardware they are simulating, are subject to race conditions. If, in the example above, the user logic would run simultaneously with the rising edge of the clock, the design would malfunction.

This backend supports replacing parts of the design with black boxes implemented in C++. If a module marked as a CXXRTL black box, its implementation is ignored, and the generated code consists only of an interface and a factory function. The driver must implement the factory function that creates an implementation of the black box, taking into account the parameters it is instantiated with.

For example, the following Verilog code defines a CXXRTL black box interface for a synchronous debug sink:

```
(* cxxrtl_blackbox *)
module debug(...);
    (* cxxrtl_edge = "p" *) input clk;
    input en;
    input [7:0] i_data;
    (* cxxrtl_sync *) output [7:0] o_data;
endmodule
```

For this HDL interface, this backend will generate the following C++ interface:

```
struct bb_p_debug : public module {
    value<1> p_clk;
    bool posedge_p_clk() const { /* ... */ }
    value<1> p_en;
    value<8> p_i_data;
    wire<8> p_o_data;

    bool eval(performer *performer) override;
    virtual bool commit(observer &observer);
    bool commit() override;

    static std::unique_ptr<bb_p_debug>
    create(std::string name, metadata_map parameters, metadata_map attributes);
```

(continues on next page)

(continued from previous page)

};

The ``create'` function must be implemented by the driver. For example, it could always provide an implementation logging the values to standard error stream:

```
namespace cxxrtl_design {

struct stderr_debug : public bb_p_debug {
    bool eval(performer *performer) override {
        if (posedge_p_clk() && p_en)
            fprintf(stderr, "debug: %02x\n", p_i_data.data[0]);
        p_o_data.next = p_i_data;
        return bb_p_debug::eval(performer);
    }
};

std::unique_ptr<bb_p_debug>
bb_p_debug::create(std::string name, cxxrtl::metadata_map parameters,
                  cxxrtl::metadata_map attributes) {
    return std::make_unique<stderr_debug>();
}

}
```

For complex applications of black boxes, it is possible to parameterize their port widths. For example, the following Verilog code defines a CXXRTL black box interface for a configurable width debug sink:

```
(* cxxrtl_blackbox, cxxrtl_template = "WIDTH" *)
module debug(...);
    parameter WIDTH = 8;
    (* cxxrtl_edge = "p" *) input clk;
    input en;
    (* cxxrtl_width = "WIDTH" *) input [WIDTH - 1:0] i_data;
    (* cxxrtl_width = "WIDTH" *) output [WIDTH - 1:0] o_data;
endmodule
```

For this parametric HDL interface, this backend will generate the following C++ interface (only the differences are shown):

```
template<size_t WIDTH>
struct bb_p_debug : public module {
    // ...
    value<WIDTH> p_i_data;
    wire<WIDTH> p_o_data;
    // ...
    static std::unique_ptr<bb_p_debug<WIDTH>>
        create(std::string name, metadata_map parameters, metadata_map attributes);
};
```

The ``create'` function must be implemented by the driver, specialized for every possible combination of template parameters. (Specialization is necessary to

(continues on next page)

(continued from previous page)

enable separate compilation of generated code and black box implementations.)

```
template<size_t SIZE>
struct stderr_debug : public bb_p_debug<SIZE> {
    // ...
};

template<>
std::unique_ptr<bb_p_debug<8>>
bb_p_debug<8>::create(std::string name, cxxrtl::metadata_map parameters,
                     cxxrtl::metadata_map attributes) {
    return std::make_unique<stderr_debug<8>>();
}
```

The following attributes are recognized by this backend:

`cxxrtl_blackbox`

only valid on modules. if specified, the module contents are ignored, and the generated code includes only the module interface and a factory function, which will be called to instantiate the module.

`cxxrtl_edge`

only valid on inputs of black boxes. must be one of "p", "n", "a". if specified on signal ``clk``, the generated code includes edge detectors ``posedge_p_clk()`` (if "p"), ``negedge_p_clk()`` (if "n"), or both (if "a"), simplifying implementation of clocked black boxes.

`cxxrtl_template`

only valid on black boxes. must contain a space separated sequence of identifiers that have a corresponding black box parameters. for each of them, the generated code includes a ``size_t`` template parameter.

`cxxrtl_width`

only valid on ports of black boxes. must be a constant expression, which is directly inserted into generated code.

`cxxrtl_comb, cxxrtl_sync`

only valid on outputs of black boxes. if specified, indicates that every bit of the output port is driven, correspondingly, by combinatorial or synchronous logic. this knowledge is used for scheduling optimizations. if neither is specified, the output will be pessimistically treated as driven by both combinatorial and synchronous logic.

The following options are supported by this backend:

`-print-wire-types` enable printing of signal wire types, for pass developers.

`-header`

generate separate interface (.h) and implementation (.cc) files.
if specified, the backend must be called with a `filename`, and filename

(continues on next page)

(continued from previous page)

of the interface is derived from filename of the implementation.
 ↪ otherwise, interface and implementation are generated together.

-namespace <ns-name> place the generated code into namespace <ns-name>. if not specified, "cxrtl_design" is used.

-print-output <stream> print cells in the generated code direct their output to <stream>. must be one of "std::cout", "std::cerr". if not specified, "std::cout" is used. explicitly provided performer overrides this.

-nohierarchy use design hierarchy as-is. in most designs, a top module should be present as it is exposed through the C API and has unbuffered outputs for improved performance; it will be determined automatically if absent.

-noflatten don't flatten the design. fully flattened designs can evaluate within one delta cycle if they have no combinatorial feedback. note that the debug interface and waveform dumps use full hierarchical names for all wires even in flattened designs.

-noprocs don't convert processes to netlists. in most designs, converting processes significantly improves evaluation performance at the cost of slight increase in compilation time.

-O <level> set the optimization level. the default is -O6. higher optimization levels dramatically decrease compile and run time, and highest level possible for a design should be used.

-O0 no optimization.

-O1 unbuffer internal wires if possible.

-O2 like -O1, and localize internal wires if possible.

| | |
|------------|--|
| -03 | like -02, and inline internal wires if possible. |
| -04 | like -03, and unbuffer public wires not marked (*keep*)
↳if possible. |
| -05 | like -04, and localize public wires not marked (*keep*)
↳if possible. |
| -06 | like -05, and inline public wires not marked (*keep*)
↳if possible. |
| -g <level> | set the debug level. the default is -g4. higher debug
↳levels provide
more visibility and generate more code, but do not
↳pessimize evaluation. |
| -g0 | no debug information. the C API is disabled. |
| -g1 | include bare minimum of debug information necessary to
↳access all design
state. the C API is enabled. |
| -g2 | like -g1, but include debug information for all public
↳wires that are
directly accessible through the C++ interface. |
| -g3 | like -g2, and include debug information for public
↳wires that are tied
to a constant or another public wire. |
| -g4 | like -g3, and compute debug information on demand for
↳all public wires
that were optimized out. |

write_edif - write design to EDIF netlist file

yosys> help write_edif

write_edif [options] [filename]

Write the current design to an EDIF netlist file.

| | |
|-----------------|---|
| -top top_module | set the specified module as design top module |
| -nogndvcc | do not create "GND" and "VCC" cells. (this will produce
↳an error
if the design contains constant nets. use "hilomap" to
↳map to custom
constant drivers first) |

| | |
|--------------------------------------|---|
| <code>-gndvccy</code> | create "GND" and "VCC" cells with "Y" outputs. (the ↵
↵ default is
↵ "G" for "GND" and "P" for "VCC".) |
| <code>-attrprop</code> | create EDIF properties for cell attributes |
| <code>-keep</code> | create extra KEEP nets by allowing a cell to drive ↵
↵ multiple nets. |
| <code>-pvector {par brackets}</code> | the delimiting character for module port rename ↵
↵ clauses to
parentheses, square brackets, or angle brackets. |
| <code>-lsbidx</code> | use index 0 for the LSB bit of a net or port instead of ↵
↵ MSB. |

Unfortunately there are different "flavors" of the EDIF file format. This command generates EDIF files for the Xilinx place&route tools. It might be necessary to make small modifications to this command when a different tool is targeted.

`write_firrtl` - write design to a FIRRTL file

```
yosys> help write_firrtl
```

```
write_firrtl [options] [filename]
```

Write a FIRRTL netlist of the current design.
The following commands are executed by this command:

- `pmuxtree`
- `bmuxmap`
- `demuxmap`
- `bwmuxmap`

`write_functional_cxx` - convert design to C++ using the functional backend

```
yosys> help write_functional_cxx
```

TODO: add help message

`write_functional_rosette` - Generate Rosette compatible Racket from Functional IR

```
yosys> help write_functional_rosette
```

```
write_functional_rosette [options] [filename]
```

Functional Rosette Backend.

| | |
|------------------------|--|
| <code>-provides</code> | include 'provide' statement(s) for loading output as a ↵
↵ module |
|------------------------|--|

write_functional_smt2 - Generate SMT-LIB from Functional IR

```
yosys> help write_functional_smt2
```

```
Functional SMT Backend.
```

write_intersynth - write design to InterSynth netlist file

```
yosys> help write_intersynth
```

```
write_intersynth [options] [filename]
```

```
Write the current design to an 'intersynth' netlist file. InterSynth is
a tool for Coarse-Grain Example-Driven Interconnect Synthesis.
```

| | |
|--|---|
| -notypes | do not generate celltypes and conntypes commands. i.e. ↵
↵ just output
the netlists. this is used for postsilicon synthesis. |
| -lib <verilog_or_hdl_library> | Use the specified library file for determining whether ↵
↵ cell ports are
inputs or outputs. This option can be used multiple ↵
↵ times to specify
more than one library. |
| -selected | only write selected modules. modules must be selected ↵
↵ entirely or
not at all. |

```
http://bygone.clairexen.net/intersynth/
```

write_jny - generate design metadata

```
yosys> help write_jny
```

```
jny [options] [selection]
```

```
Write JSON netlist metadata for the current design
```

| | |
|------------------------|--|
| -no-connections | Don't include connection information in the netlist ↵
↵ output. |
| -no-attributes | Don't include attributed information in the netlist ↵
↵ output. |
| -no-properties | Don't include property information in the netlist ↵
↵ output. |

The JSON schema for JNY output files is located in the "jny.schema.json" file which is located at "https://raw.githubusercontent.com/YosysHQ/yosys/main/misc/jny.schema.json"

write_json - write design to a JSON file

yosys> help write_json

write_json [options] [filename]

Write a JSON netlist of the current design.

| | |
|--------------|---|
| -aig | include AIG models for the different gate types |
| -compat-int | emit 32-bit or smaller fully-defined parameter values
directly
as JSON numbers (for compatibility with old parsers) |
| -selected | output only select module |
| -noscopeinfo | don't include \$scopeinfo cells in the output |

The general syntax of the JSON output created by this command is as follows:

```
{
  "creator": "Yosys <version info>",
  "modules": {
    <module_name>: {
      "attributes": {
        <attribute_name>: <attribute_value>,
        ...
      },
      "parameter_default_values": {
        <parameter_name>: <parameter_value>,
        ...
      },
      "ports": {
        <port_name>: <port_details>,
        ...
      },
      "cells": {
        <cell_name>: <cell_details>,
        ...
      },
      "memories": {
        <memory_name>: <memory_details>,
        ...
      },
      "netnames": {
        <net_name>: <net_details>,

```

(continues on next page)

(continued from previous page)

```

        ...
    }
}
},
"models": {
    ...
},
}

```

Where <port_details> is:

```

{
  "direction": <"input" | "output" | "inout">,
  "bits": <bit_vector>
  "offset": <the lowest bit index in use, if non-0>
  "upto": <1 if the port bit indexing is MSB-first>
  "signed": <1 if the port is signed>
}

```

The "offset" and "upto" fields are skipped if their value would be 0. They don't affect connection semantics, and are only used to preserve original HDL bit indexing.

And <cell_details> is:

```

{
  "hide_name": <1 | 0>,
  "type": <cell_type>,
  "model": <AIG model name, if -aig option used>,
  "parameters": {
    <parameter_name>: <parameter_value>,
    ...
  },
  "attributes": {
    <attribute_name>: <attribute_value>,
    ...
  },
  "port_directions": {
    <port_name>: <"input" | "output" | "inout">,
    ...
  },
  "connections": {
    <port_name>: <bit_vector>,
    ...
  },
}

```

And <memory_details> is:

```

{
  "hide_name": <1 | 0>,
  "attributes": {
    <attribute_name>: <attribute_value>,

```

(continues on next page)

(continued from previous page)

```

    ...
  },
  "width": <memory width>
  "start_offset": <the lowest valid memory address>
  "size": <memory size>
}

```

And <net_details> is:

```

{
  "hide_name": <1 | 0>,
  "bits": <bit_vector>
  "offset": <the lowest bit index in use, if non-0>
  "upto": <1 if the port bit indexing is MSB-first>
  "signed": <1 if the port is signed>
}

```

The "hide_name" fields are set to 1 when the name of this cell or net is automatically created and is likely not of interest for a regular user.

The "port_directions" section is only included for cells for which the interface is known.

Module and cell ports and nets can be single bit wide or vectors of multiple bits. Each individual signal bit is assigned a unique integer. The <bit_vector> values referenced above are vectors of this integers. Signal bits that are connected to a constant driver are denoted as string "0", "1", "x", or "z" instead of a number.

Bit vectors (including integers) are written as string holding the binary representation of the value. Strings are written as strings, with an appended blank in cases of strings of the form /[01xz]* */.

For example the following Verilog code:

```

module test(input x, y);
  (* keep *) foo #(.P(42), .Q(1337))
    foo_inst (.A({x, y}), .B({y, x}), .C({4'd10, {4{x}}}}));
endmodule

```

Translates to the following JSON output:

```

{
  "creator": "Yosys 0.9+2406 (git sha1 fb1168d8, clang 9.0.1 -fPIC -Os)",
  "modules": {
    "test": {
      "attributes": {
        "cells_not_processed": "00000000000000000000000000000001",
        "src": "test.v:1.1-4.10"
      },
      "ports": {
        "x": {

```

(continues on next page)

[illegible]

```
"models": {
  <model_name>: [
```

(continued from previous page)

```

    /* 0 */ [ <node-spec> ],
    /* 1 */ [ <node-spec> ],
    /* 2 */ [ <node-spec> ],
    ...
  ],
  ...
},

```

The following node-types may be used:

```

[ "port", <portname>, <bitindex>, <out-list> ]
- the value of the specified input port bit

[ "nport", <portname>, <bitindex>, <out-list> ]
- the inverted value of the specified input port bit

[ "and", <node-index>, <node-index>, <out-list> ]
- the ANDed value of the specified nodes

[ "nand", <node-index>, <node-index>, <out-list> ]
- the inverted ANDed value of the specified nodes

[ "true", <out-list> ]
- the constant value 1

[ "false", <out-list> ]
- the constant value 0

```

All nodes appear in topological order. I.e. only nodes with smaller indices are referenced by "and" and "nand" nodes.

The optional <out-list> at the end of a node specification is a list of output portname and bitindex pairs, specifying the outputs driven by this node.

For example, the following is the model for a 3-input 3-output \$reduce_and cell inferred by the following code:

```

module test(input [2:0] in, output [2:0] out);
  assign in = &out;
endmodule

"$reduce_and:3U:3": [
  /* 0 */ [ "port", "A", 0 ],
  /* 1 */ [ "port", "A", 1 ],
  /* 2 */ [ "and", 0, 1 ],
  /* 3 */ [ "port", "A", 2 ],
  /* 4 */ [ "and", 2, 3, "Y", 0 ],
  /* 5 */ [ "false", "Y", 1, "Y", 2 ]
]

```

Future version of Yosys might add support for additional fields in the JSON format. A program processing this format must ignore all unknown fields.

write_rtlil - write design to RTLIL file

```
yosys> help write_rtlil
```

```
write_rtlil [filename]
```

Write the current design to an RTLIL file. (RTLIL is a text representation of a design in yosys's internal format.)

```
-selected
```

only write selected parts of the design.

write_simplec - convert design to simple C code

```
yosys> help write_simplec
```

```
write_simplec [options] [filename]
```

Write simple C code for simulating the design. The C code written can be used to simulate the design in a C environment, but the purpose of this command is to generate code that works well with C-based formal verification.

```
-verbose
```

this will print the recursive walk used to export the
↳ modules.

```
-i8, -i16, -i32, -i64
```

the maximum integer bit width to use in the
↳ generated code.

THIS COMMAND IS UNDER CONSTRUCTION

write_smt2 - write design to SMT-LIBv2 file

```
yosys> help write_smt2
```

```
write_smt2 [options] [filename]
```

Write a SMT-LIBv2 [1] description of the current design. For a module with name '<mod>' this will declare the sort '<mod>_s' (state of the module) and will define and declare functions operating on that state.

The following SMT2 functions are generated for a module with name '<mod>'. Some declarations/definitions are printed with a special comment. A prover using the SMT2 files can use those comments to collect all relevant metadata about the design.

```
; yosys-smt2-module <mod>
(declare-sort |<mod>_s| 0)
  The sort representing a state of module <mod>.

(define-fun |<mod>_h| ((state |<mod>_s|)) Bool (...))
  This function must be asserted for each state to establish the
  design hierarchy.
```

(continues on next page)

(continued from previous page)

```

; yosys-smt2-input <wirename> <width>
; yosys-smt2-output <wirename> <width>
; yosys-smt2-register <wirename> <width>
; yosys-smt2-wire <wirename> <width>
(define-fun |<mod>_n <wirename>| (|<mod>_s|) (_ BitVec <width>))
(define-fun |<mod>_n <wirename>| (|<mod>_s|) Bool)
    For each port, register, and wire with the 'keep' attribute set an
    accessor function is generated. Single-bit wires are returned as Bool,
    multi-bit wires as BitVec.

; yosys-smt2-cell <submod> <instancename>
(declare-fun |<mod>_h <instancename>| (|<mod>_s|) |<submod>_s|)
    There is a function like that for each hierarchical instance. It
    returns the sort that represents the state of the sub-module that
    implements the instance.

(declare-fun |<mod>_is| (|<mod>_s|) Bool)
    This function must be asserted 'true' for initial states, and 'false'
    otherwise.

(define-fun |<mod>_i| ((state |<mod>_s|)) Bool (...))
    This function must be asserted 'true' for initial states. For
    non-initial states it must be left unconstrained.

(define-fun |<mod>_t| ((state |<mod>_s|) (next_state |<mod>_s|)) Bool (...))
    This function evaluates to 'true' if the states 'state' and
    'next_state' form a valid state transition.

(define-fun |<mod>_a| ((state |<mod>_s|)) Bool (...))
    This function evaluates to 'true' if all assertions hold in the state.

(define-fun |<mod>_u| ((state |<mod>_s|)) Bool (...))
    This function evaluates to 'true' if all assumptions hold in the state.

; yosys-smt2-assert <id> <filename:linenum>
(define-fun |<mod>_a <id>| ((state |<mod>_s|)) Bool (...))
    Each $assert cell is converted into one of this functions. The function
    evaluates to 'true' if the assert statement holds in the state.

; yosys-smt2-assume <id> <filename:linenum>
(define-fun |<mod>_u <id>| ((state |<mod>_s|)) Bool (...))
    Each $assume cell is converted into one of this functions. The function
    evaluates to 'true' if the assume statement holds in the state.

; yosys-smt2-cover <id> <filename:linenum>
(define-fun |<mod>_c <id>| ((state |<mod>_s|)) Bool (...))
    Each $cover cell is converted into one of this functions. The function
    evaluates to 'true' if the cover statement is activated in the state.

```

Options:

| | |
|--|---|
| <code>-verbose</code> | this will print the recursive walk used to export the modules. |
| <code>-stbv</code> | Use a BitVec sort to represent a state instead of an uninterpreted sort. As a side-effect this will prevent use of arrays to model memories. |
| <code>-stdt</code> | Use SMT-LIB 2.6 style datatypes to represent a state instead of an uninterpreted sort. |
| <code>-nobv</code> | disable support for BitVec (FixedSizeBitVectors theory). without this option multi-bit wires are represented using the BitVec sort and support for coarse grain cells (incl. arithmetic) is enabled. |
| <code>-nomem</code> | disable support for memories (via ArraysEx theory). this option is implied by <code>-nobv</code> . only \$mem cells without merged registers in read ports are supported. call "memory" with <code>-nordff</code> to make sure that no registers are merged into \$mem read ports. ' <code><mod>_m</code> ' functions will be generated for accessing the arrays that are used to represent memories. |
| <code>-wires</code> | create ' <code><mod>_n</code> ' functions for all public wires. by default only ports, registers, and wires with the 'keep' attribute are exported. |
| <code>-tpl <template_file></code> | use the given template file. the line containing only the token '%%' is replaced with the regular output of this command. |
| <code>-solver-option <option> <value></code> | <code>yosys-smt2-solver-option` directive for yosys-smtbmc to write the given option as a <code> `(set-option ...)` command in the SMT-LIBv2.</code></code> |

[1] For more information on SMT-LIBv2 visit <http://smt-lib.org/> or read David R. Cok's tutorial: <https://smtlib.github.io/jSMTLIB/SMTLIBTutorial.pdf>

Example:

Consider the following module (test.v). We want to
→ prove that the output can
never transition from a non-zero value to a zero value.

```
module test(input clk, output reg [3:0] y);
always @(posedge clk)
y <= (y << 1) | ^y;
endmodule
```

For this proof we create the following template (test.
→ tpl).

```
; we need QF_UFBV for this proof
(set-logic QF_UFBV)
```

```
; insert the auto-generated code here
%%
```

```
; declare two state variables s1 and s2
(declare-fun s1 () test_s)
(declare-fun s2 () test_s)
```

```
; state s2 is the successor of state s1
(assert (test_t s1 s2))
```

```
; we are looking for a model with y non-zero in s1
(assert (distinct (|test_n y| s1) #b0000))
```

```
; we are looking for a model with y zero in s2
(assert (= (|test_n y| s2) #b0000))
```

```
; is there such a model?
(check-sat)
```

The following yosys script will create a 'test.smt2'
→ file for our proof:

```
read_verilog test.v
hierarchy -check; proc; opt; check -assert
write_smt2 -bv -tpl test.tpl test.smt2
```

Running 'cvc4 test.smt2' will print 'unsat' because y
→ can never transition
from non-zero to zero in the test design.

write_smv - write design to SMV file

```
yosys> help write_smv
```

```
write_smv [options] [filename]
```

Write an SMV description of the current design.

| | |
|-----------------------------------|---|
| -verbose | this will print the recursive walk used to export the modules. |
| -tpl <template_file> | use the given template file. the line containing only the token '%%' is replaced with the regular output of this command. |

THIS COMMAND IS UNDER CONSTRUCTION

write_spice - write design to SPICE netlist file

yosys> help write_spice

write_spice [options] [filename]

Write the current design to an SPICE netlist file.

| | |
|----------------------------|---|
| -big_endian | generate multi-bit ports in MSB first order (default is LSB first) |
| -neg net_name | set the net name for constant 0 (default: Vss) |
| -pos net_name | set the net name for constant 1 (default: Vdd) |
| -buf DC subckt_name | set the name for jumper element (default: DC) (used to connect different nets) |
| -nc_prefix | prefix for not-connected nets (default: _NC) |
| -inames | include names of internal (\$-prefixed) nets in outputs (default is to use net numbers instead) |
| -top top_module | set the specified module as design top module |

write_table - write design as connectivity table

yosys> help write_table

write_table [options] [filename]

Write the current design as connectivity table. The output is a tab-separated ASCII table with the following columns:

```
module name
cell name
cell type
```

(continues on next page)

(continued from previous page)

```
cell port
direction
signal
```

module inputs and outputs are output using cell type and port '-' and with 'pi' (primary input) or 'po' (primary output) or 'pio' as direction.

write_verilog - write design to Verilog file

```
yosys> help write_verilog
```

```
write_verilog [options] [filename]
```

Write the current design to a Verilog file.

| | |
|------------------------|---|
| -sv | with this option, SystemVerilog constructs like always_
↳comb are used |
| -norename | without this option all internal object names (the ones
↳with a dollar
instead of a backslash prefix) are changed to short
↳names in the
format '<number>_'. |
| -renameprefix <prefix> | insert this prefix in front of auto-generated instance
↳names |
| -noattr | with this option no attributes are included in the
↳output |
| -attr2comment | with this option attributes are included as comments in
↳the output |
| -noexpr | without this option all internal cells are converted to
↳Verilog
expressions. |
| -noparallelcase | With this option no parallel_case attributes are used.
↳Instead, a case
statement that assigns don't-care values for priority
↳dependent inputs
is generated. |
| -siminit | add initial statements with hierarchical refs to
↳initialize FFs when
in -noexpr mode. |
| -nodec | 32-bit constant values are by default dumped as decimal
↳numbers, |

(continues on next page)

(continued from previous page)

| | |
|--------------------|--|
| | not bit pattern. This option deactivates this feature
↳and instead
will write out all constants in binary. |
| -decimal | dump 32-bit constants in decimal and without size and
↳radix |
| -nohex | constant values that are compatible with hex output are
↳usually
dumped as hex values. This option deactivates this
↳feature and
instead will write out all constants in binary. |
| -nostr | Parameters and attributes that are specified as strings
↳in the
original input will be output as strings by this back-
↳end. This
deactivates this feature and instead will write string
↳constants
as binary numbers. |
| -simple-lhs | Connection assignments with simple left hand side
↳without
concatenations. |
| -extmem | instead of initializing memories using assignments to
↳individual
elements, use the '\$readmemh' function to read
↳initialization data
from a file. This data is written to a file named by
↳appending
a sequential index to the Verilog filename and
↳replacing the extension
with '.mem', e.g. 'write_verilog -extmem foo.v' writes
↳'foo-1.mem',
'foo-2.mem' and so on. |
| -defparam | use 'defparam' statements instead of the Verilog-2001
↳syntax for
cell parameters. |
| -blackboxes | usually modules with the 'blackbox' attribute are
↳ignored. with
this option set only the modules with the 'blackbox'
↳attribute
are written to the output file. |
| -selected | only write selected modules. modules must be selected
↳entirely or
not at all. |

| | |
|----|--|
| -v | verbose output (print new names of all renamed wires ↵
↵ and cells) |
|----|--|

Note that RTLIL processes can't always be mapped directly to Verilog always blocks. This frontend should only be used to export an RTLIL netlist, i.e. after the "proc" pass has been used to convert all processes to logic networks and registers. A warning is generated when this command is called on a design with RTLIL processes.

write_xaiger - write design to XAIGER file

yosys> help write_xaiger

write_xaiger [options] [filename]

Write the top module (according to the (* top *) attribute or if only one module is currently selected) to an XAIGER file. Any non \$_NOT_, \$_AND_, (optionally \$_DFF_N_, \$_DFF_P_), or non (* abc9_box *) cells will be converted into psuedo-inputs and pseudo-outputs. Whitebox contents will be taken from the equivalent module in the '\$abc9_holes' design, if it exists.

| | |
|--------|-------------------------------------|
| -ascii | write ASCII version of AIGER format |
|--------|-------------------------------------|

| | |
|-----------------|---|
| -map <filename> | write an extra file with port and box symbols |
|-----------------|---|

| | |
|------|--------------------------|
| -dff | write \$_DFF_[NP]_ cells |
|------|--------------------------|

write_xaiger2 - (experimental) write module to XAIGER file

yosys> help write_xaiger2

Warning

This command is experimental

write_xaiger2 [options] [filename]

Write the selected module to a XAIGER file including the 'h' and 'a' extensions with box information for ABC.

| | |
|---------|--|
| -strash | perform structural hashing while writing |
|---------|--|

| | |
|----------|--|
| -flatten | allow descending into submodules and write a flattened ↵
↵ view of the design
hierarchy starting at the selected top |
|----------|--|

| | |
|---------------------------------|---|
| <code>-mapping_prep</code> | after the file is written, prepare the module for
↳ reintegration of
a mapping in a subsequent command. all cells which are
↳ not blackboxed nor
whiteboxed are removed from the design as well as all
↳ wires which only
connect to removed cells
(conflicts with <code>-flatten</code>) |
| <code>-map2 <file></code> | write a map2 file which 'read_xaiger2 -sc_mapping' can
↳ read to
reintegrate a mapping
(conflicts with <code>-flatten</code>) |

10.1.3 Writing output files

read_aiger - read AIGER file

yosys> help read_aiger

`read_aiger [options] [filename]`

Load module from an AIGER file into the current design.

| | |
|---|---|
| <code>-module_name <module_name></code> | name of module to be created (default: <code><filename></code>) |
| <code>-clk_name <wire_name></code> | if specified, AIGER latches to be transformed into \$_
↳ DFF_P_ cells
clocked by wire of this name. otherwise, \$_FF_ cells
↳ will be used |
| <code>-map <filename></code> | read file with port and latch symbols |
| <code>-wideports</code> | merge ports that match the pattern 'name[int]' into a
↳ single
multi-bit port 'name' |
| <code>-xaiger</code> | read XAIGER extensions |

read_blif - read BLIF file

yosys> help read_blif

`read_blif [options] [filename]`

Load modules from a BLIF file into the current design.

| | |
|-------------------|---|
| <code>-sop</code> | Create \$sop cells instead of \$lut cells |
|-------------------|---|

`-wideports`

Merge ports that match the pattern 'name[int]' into a ↵
↵single
multi-bit port 'name'.

`read_json` - read JSON file

yosys> help read_json

`read_json [filename]`

Load modules from a JSON file into the current design See "help write_json"
for a description of the file format.

`read_liberty` - read cells from liberty file

yosys> help read_liberty

`read_liberty [filename]`

Read cells from liberty file as modules into current design.

`-lib`

only create empty blackbox modules

`-wb`

mark imported cells as whiteboxes

`-nooverwrite`

ignore re-definitions of modules. (the default behavior ↵
↵is to
create an error message if the existing module is not a ↵
↵blackbox
module, and overwrite the existing module if it is a ↵
↵blackbox module.)

`-overwrite`

overwrite existing modules with the same name

`-ignore_miss_func`

ignore cells with missing function specification of ↵
↵outputs

`-ignore_miss_dir`

ignore cells with a missing or invalid direction
specification on a pin

`-ignore_miss_data`

ignore latches with missing data and/or enable pins

`-ignore_buses`

ignore cells with bus interfaces (wide ports)

`-setattr <attribute name>`

set specified attribute (to the value 1) on all ↵
↵loaded modules

`-unit_delay`

import combinational timing arcs under the unit delay ↵
↵model

read_rtlil - read modules from RTLIL file

```
yosys> help read_rtlil
```

```
read_rtlil [filename]
```

Load modules from an RTLIL file to the current design. (RTLIL is a text representation of a design in yosys's internal format.)

| | |
|---------------------------|---|
| <code>-nooverwrite</code> | ignore re-definitions of modules. (the default behavior is to create an error message if the existing module is not a blackbox module, and overwrite the existing module if it is a blackbox module.) |
| <code>-overwrite</code> | overwrite existing modules with the same name |
| <code>-lib</code> | only create empty blackbox modules |

read_verilog - read modules from Verilog file

```
yosys> help read_verilog
```

```
read_verilog [options] [filename]
```

Load modules from a Verilog file to the current design. A large subset of Verilog-2005 is supported.

| | |
|------------------------------|---|
| <code>-sv</code> | enable support for SystemVerilog features. (only a small subset of SystemVerilog is supported) |
| <code>-formal</code> | enable support for SystemVerilog assertions and some Yosys extensions
replace the implicit <code>-D SYNTHESIS</code> with <code>-D FORMAL</code> |
| <code>-nosynthesis</code> | don't add implicit <code>-D SYNTHESIS</code> |
| <code>-noassert</code> | ignore <code>assert()</code> statements |
| <code>-noassume</code> | ignore <code>assume()</code> statements |
| <code>-norestrict</code> | ignore <code>restrict()</code> statements |
| <code>-assume-asserts</code> | treat all <code>assert()</code> statements like <code>assume()</code> statements |
| <code>-assert-assumes</code> | treat all <code>assume()</code> statements like <code>assert()</code> statements |

| | |
|--------------|--|
| -nodisplay | <p>suppress output from display system tasks (\$display et.
↪al).</p> <p>This does not affect the output from a later 'sim'
↪command.</p> |
| -debug | <p>alias for -dump_ast1 -dump_ast2 -dump_vlog1 -dump_vlog2
↪-yydebug</p> |
| -dump_ast1 | dump abstract syntax tree (before simplification) |
| -dump_ast2 | dump abstract syntax tree (after simplification) |
| -no_dump_ptr | <p>do not include hex memory addresses in dump (easier to
↪diff dumps)</p> |
| -dump_vlog1 | dump ast as Verilog code (before simplification) |
| -dump_vlog2 | dump ast as Verilog code (after simplification) |
| -dump_rtlil | dump generated RTLIL netlist |
| -yydebug | enable parser debug output |
| -nolatches | <p>usually latches are synthesized into logic loops
this option prohibits this and sets the output to 'x'
in what would be the latches hold condition</p> <p>this behavior can also be achieved by setting the
'nolatches' attribute on the respective module or
always block.</p> |
| -nomem2reg | <p>under certain conditions memories are converted to
↪registers
early during simplification to ensure correct handling
↪of
complex corner cases. this option disables this
↪behavior.</p> <p>this can also be achieved by setting the 'nomem2reg'
attribute on the respective module or register.</p> <p>This is potentially dangerous. Usually the front-end
↪has good
reasons for converting an array to a list of registers.
Prohibiting this step will likely result in incorrect
↪synthesis
results.</p> |
| -mem2reg | <p>always convert memories to registers. this can also be
achieved by setting the 'mem2reg' attribute on the</p> |

(continues on next page)

(continued from previous page)

| | |
|--------------|---|
| | ↪respective module or register. |
| -nomeminit | do not infer \$meminit cells and instead convert ↪ initialized memories to registers directly in the front-end. |
| -ppdump | dump Verilog code after pre-processor |
| -nopp | do not run the pre-processor |
| -nodpi | disable DPI-C support |
| -noblackbox | do not automatically add a (* blackbox *) attribute to ↪ an empty module. |
| -lib | only create empty blackbox modules. This implies - ↪ DBLACKBOX. modules with the (* whitebox *) attribute will be ↪ preserved. (* lib_whitebox *) will be treated like (* whitebox *). |
| -nowb | delete (* whitebox *) and (* lib_whitebox *) attributes ↪ from all modules. |
| -specify | parse and import specify blocks |
| -noopt | don't perform basic optimizations (such as const ↪ folding) in the high-level front-end. |
| -icells | interpret cell types starting with '\$' as internal cell ↪ types |
| -pwires | add a wire for each module parameter |
| -nooverwrite | ignore re-definitions of modules. (the default behavior ↪ is to create an error message if the existing module is not a ↪ black box module, and overwrite the existing module otherwise.) |
| -overwrite | overwrite existing modules with the same name |
| -defer | only read the abstract syntax tree and defer actual ↪ compilation |

(continues on next page)

(continued from previous page)

to a later 'hierarchy' command. Useful in cases where
 ↳ the default
 parameters of modules yield invalid or not
 ↳ synthesizable code.

-noautowire make the default of `default_nettype be "none" instead
 ↳ of "wire".

-setattr <attribute> <name> specified attribute (to the value 1) on all
 ↳ loaded modules

-Dname[=definition] define the preprocessor symbol 'name' and set its
 ↳ optional value
 'definition'

-Idir add 'dir' to the directories which are used when
 ↳ searching include
 files

The command 'verilog_defaults' can be used to register default options for subsequent calls to 'read_verilog'.

Note that the Verilog frontend does a pretty good job of processing valid verilog input, but has not very good error reporting. It generally is recommended to use a simulator (for example Icarus Verilog) for checking the syntax of the code, rather than to rely on read_verilog for that.

Depending on if read_verilog is run in -formal mode, either the macro SYNTHESIS or FORMAL is defined automatically, unless -nosynthesis is used. In addition, read_verilog always defines the macro YOSYS.

See the Yosys README file for a list of non-standard Verilog features supported by the Yosys Verilog front-end.

read_verilog_file_list - parse a Verilog file list

yosys> help read_verilog_file_list

read_verilog_file_list [options]

Parse a Verilog file list, and pass the list of Verilog files to read_verilog command

-F file_list_path File list file contains list of Verilog files to be
 ↳ parsed, any path is
 treated relative to the file list file

-f file_list_path File list file contains list of Verilog files to be
 ↳ parsed, any path is
 treated relative to current working directory

read_xaiger2 - (experimental) read XAIGER file

```
yosys> help read_xaiger2
```

Warning

This command is experimental

```
read_xaiger2 -sc_mapping [options] <filename>
```

Read a standard cell mapping from a XAIGER file into an existing module.

```
-module_name <name> name of the target module
```

```
-map2 <filename> read file with symbol information
```

10.1.4 Yosys kernel commands**Warning**

No commands found for group 'kernel'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

10.1.5 Formal verification**assertpmux - adds asserts for parallel muxes**

```
yosys> help assertpmux
```

```
assertpmux [options] [selection]
```

This command adds asserts to the design that assert that all parallel muxes (\$pmux cells) have a maximum of one of their inputs enable at any time.

```
-noinit do not enforce the pmux condition during the init state
```

```
-always usually the $pmux condition is only checked when the
↳ $pmux output
is used by the mux tree it drives. this option will
↳ deactivate this
additional constraint and check the $pmux condition
↳ always.
```

async2sync - convert async FF inputs to sync circuits

```
yosys> help async2sync
```

`async2sync [options] [selection]`

This command replaces async FF inputs with sync circuits emulating the same behavior for when the async signals are actually synchronized to the clock.

This pass assumes negative hold time for the async FF inputs. For example when a reset deasserts with the clock edge, then the FF output will still drive the reset value in the next cycle regardless of the data-in value at the time of the clock edge.

`-nolower`

Do not automatically run 'chformal -lower' to lower
→\$check cells.

chformal - change formal constraints of the design

yosys> help chformal

`chformal [types] [mode] [options] [selection]`

Make changes to the formal constraints of the design. The [types] options the type of constraint to operate on. If none of the following options are given, the command will operate on all constraint types:

| | |
|----------------------|--|
| <code>-assert</code> | <i>\$assert</i> cells, representing <code>assert(...)</code> constraints |
| <code>-assume</code> | <i>\$assume</i> cells, representing <code>assume(...)</code> constraints |
| <code>-live</code> | <i>\$live</i> cells, representing <code>assert(s_eventually ...)</code> |
| <code>-fair</code> | <i>\$fair</i> cells, representing <code>assume(s_eventually ...)</code> |
| <code>-cover</code> | <i>\$cover</i> cells, representing <code>cover()</code> statements |

Additionally chformal will operate on *\$check* cells corresponding to the selected constraint types.

Exactly one of the following modes must be specified:

| | |
|-------------------------------|--|
| <code>-remove</code> | remove the cells and thus constraints from the design |
| <code>-early</code> | bypass FFs that only delay the activation of a constraint. When inputs of the bypassed FFs do not remain stable between clock edges, this may result in unexpected behavior. |
| <code>-delay <N></code> | delay activation of the constraint by <N> clock cycles |
| <code>-skip <N></code> | ignore activation of the constraint in the first <N> clock cycles |
| <code>-coverenable</code> | add cover statements for the enable signals of the constraints |
| <code>-assert2assume</code> | |
| <code>-assert2cover</code> | |
| <code>-assume2assert</code> | |
| <code>-live2fair</code> | |
| <code>-fair2live</code> | change the roles of cells as indicated. these options can be combined |
| <code>-lower</code> | convert each \$check cell into an \$assert, \$assume, \$live, \$fair or \$cover cell. If the \$check cell contains a message, also produce a \$print cell. |

clk2fflogic - convert clocked FFs to generic \$ff cells

```
yosys> help clk2fflogic
```

```
clk2fflogic [options] [selection]
```

This command replaces clocked flip-flops with generic \$ff cells that use the implicit global clock. This is useful for formal verification of designs with multiple clocks.

This pass assumes negative hold time for the async FF inputs. For example when a reset deasserts with the clock edge, then the FF output will still drive the reset value in the next cycle regardless of the data-in value at the time of the clock edge.

```
-nolower
```

Do not automatically run 'chformal -lower' to lower
↳ \$check cells.

```
-nopeepopt
```

Do not automatically run 'peepopt -formalclk' to
↳ rewrite clock patterns
to more formal friendly forms.

cutpoint - adds formal cut points to the design

```
yosys> help cutpoint
```

```
cutpoint [options] [selection]
```

This command adds formal cut points to the design.

```
-undef
```

set cutpoint nets to undef (x). the default behavior is
↳ to create
an \$anyseq cell and drive the cutpoint net from that

```
-noscopeinfo
```

do not create '\$scopeinfo' cells that preserve
↳ attributes of cells that
were removed by this pass

```
cutpoint -blackbox [options]
```

Replace all instances of blackboxes in the design with a formal cut point.

dft_tag - create tagging logic for data flow tracking

```
yosys> help dft_tag
```

```
dft_tag [options] [selection]
```

This pass... TODO

| | |
|------------------------------|---|
| <code>-overwrite-only</code> | Only process \$overwrite_tag and \$original_tag cells. |
| <code>-tag-public</code> | For each public wire that may carry tagged data, create
↳ a new public
wire (named <wirename>:<tagname>) that carries the tag
↳ bits. Note
that without this, tagging logic will only be emitted
↳ as required
for uses of \$get_tag. |

fmcombine - combine two instances of a cell into one

yosys> help fmcombine

fmcombine [options] module_name gold_cell gate_cell

This pass takes two cells, which are instances of the same module, and replaces them with one instance of a special 'combined' module, that effectively contains two copies of the original module, plus some formal properties.

This is useful for formal test benches that check what differences in behavior a slight difference in input causes in a module.

| | |
|----------------------|---|
| <code>-initeq</code> | Insert assumptions that initially all FFs in both
↳ circuits have the
same initial values. |
| <code>-anyeq</code> | Do not duplicate \$anyseq/\$anyconst cells. |
| <code>-fwd</code> | Insert forward hint assumptions into the combined
↳ module. |
| <code>-bwd</code> | Insert backward hint assumptions into the combined
↳ module.
(Backward hints are logically equivalent to forward
↳ hits, but
some solvers are faster with bwd hints, or even both -
↳ bwd and -fwd.) |
| <code>-nop</code> | Don't insert hint assumptions into the combined module.
(This should not provide any speedup over the original
↳ design, but
strangely sometimes it does.) |

If none of -fwd, -bwd, and -nop is given, then -fwd is used as default.

fminit - set init values/sequences for formal

```
yosys> help fminit
```

```
fminit [options] <selection>
```

This pass creates init constraints (for example for reset sequences) in a formal model.

```
-seq <signal> <sequence> Set sequence using comma-separated list of values, use
    ↳ 'z for unconstrained bits. The last value is used for the
    ↳ remainder of the trace.

-set <signal> <value> Set constant value constraint

-posedge <signal>

-negedge <signal> Set clock for init sequences
```

formalff - prepare FFs for formal

```
yosys> help formalff
```

```
formalff [options] [selection]
```

This pass transforms clocked flip-flops to prepare a design for formal verification. If a design contains latches and/or multiple different clocks run the `async2sync` or `clk2fflogic` passes before using this pass.

```
-clk2ff Replace all clocked flip-flops with $ff cells that use
    ↳ the implicit global clock. This assumes, without checking, that the
    ↳ design uses a single global clock. If that is not the case, the
    ↳ clk2fflogic pass should be used instead.

-ff2anyinit Replace uninitialized bits of $ff cells with $anyinit
    ↳ cells. An $anyinit cell behaves exactly like an $ff cell with an
    ↳ undefined initialization value. The difference is that $anyinit
    ↳ inhibits don't-care optimizations and is used to track solver-
    ↳ provided values in witness traces.

    If combined with -clk2ff this also affects newly
    ↳ created $ff cells.
```

| | |
|---|--|
| <code>-anyinit2ff</code> | <p>Replaces \$anyinit cells with uninitialized \$ff cells.↵
↵This performs the
reverse of -ff2anyinit and can be used, before running↵
↵a backend pass
(or similar) that is not yet aware of \$anyinit cells.</p> <p>Note that after running -anyinit2ff, in general,↵
↵performing don't-care
optimizations is not sound in a formal verification↵
↵setting.</p> |
| <code>-fine</code> | <p>Emit fine-grained \$_FF_ cells instead of coarse-grained
↵\$ff cells for</p> |
| <code>-anyinit2ff</code> . Cannot be combined with <code>-clk2ff</code> or <code>-ff2anyinit</code> . | |
| <code>-setundef</code> | <p>Find FFs with undefined initialization values for which↵
↵changing the
initialization does not change the observable behavior↵
↵and initialize
them. For -ff2anyinit, this reduces the number of↵
↵generated \$anyinit
cells that drive wires with private names.</p> |
| <code>-hierarchy</code> | <p>Propagates the 'replaced_by_gclk' attribute set by↵
↵clk2ff upwards
through the design hierarchy towards the toplevel↵
↵inputs. This option
works on the whole design and ignores the selection.</p> |
| <code>-assume</code> | <p>Add assumptions that constrain wires with the 'replaced_
↵by_gclk'
attribute to the value they would have before an active↵
↵clock edge.</p> |
| <code>-declockgate</code> | <p>Detect clock-gating patterns and modify any FFs clocked↵
↵by the gated
clock to use the ungated clock with the gate signal as↵
↵clock enable.
This doesn't affect the design's behavior during FV but↵
↵can enable the
use of formal verification methods that only support a↵
↵single global
clock.</p> |

freduce - perform functional reduction

```
yosys> help freduce
```

```
freduce [options] [selection]
```

This pass performs functional reduction in the circuit. I.e. if two nodes are equivalent, they are merged to one node and one of the redundant drivers is disconnected. A subsequent call to 'clean' will remove the redundant drivers.

| | |
|-----------------------------------|---|
| <code>-v, -vv</code> | enable verbose or very verbose output |
| <code>-inv</code> | enable explicit handling of inverted signals |
| <code>-stop <n></code> | stop after <n> reduction operations. this is mostly used for debugging the <code>freduce</code> command itself. |
| <code>-dump <prefix></code> | dump the design to <prefix>_<module>_<num>.il after each reduction operation. this is mostly used for debugging the <code>freduce</code> command. |

This pass is undef-aware, i.e. it considers don't-care values for detecting equivalent nodes.

All selected wires are considered for rewiring. The selected cells cover the circuit that is analyzed.

future - resolve future sampled value functions

```
yosys> help future
```

```
future [options] [selection]
```

glift - create GLIFT models and optimization problems

```
yosys> help glift
```

```
glift <command> [options] [selection]
```

Augments the current or specified module with gate-level information flow tracking (GLIFT) logic using the "constructive mapping" approach. Also can set up QBF-SAT optimization problems in order to optimize GLIFT models or trade off precision and complexity.

Commands:

```
-create-precise-model Replaces the current or specified module with one that
    ↳ has corresponding
    ↳ "taint" inputs, outputs, and internal nets along with
    ↳ precise taint
    ↳ tracking logic. For example, precise taint tracking
    ↳ logic for an AND gate
    ↳ is:
    y_t = a & b_t | b & a_t | a_t & b_t
```

`-create-impresicemodel` Replaces the current or specified module with one that
 ↳ has corresponding
 "taint" inputs, outputs, and internal nets along with
 ↳ imprecise "All OR"
 taint tracking logic:

$$y_t = a_t \mid b_t$$

`-create-instrumentedmodel` Replaces the current or specified module with one that
 ↳ has corresponding
 "taint" inputs, outputs, and internal nets along with 4
 ↳ varying-precision
 versions of taint tracking logic. Which version of
 ↳ taint tracking logic is
 used for a given gate is determined by a MUX selected
 ↳ by an \$anyconst cell.
 By default, unless the ``-no-cost-model`` option is
 ↳ provided, an additional
 wire named ``__glift_weight`` with the ``keep`` and
 ↳ ``minimize`` attributes is
 added to the module along with pmuxes and adders to
 ↳ calculate a rough
 estimate of the number of logic gates in the GLIFT
 ↳ model given an assignment
 for the \$anyconst cells. The four versions of taint
 ↳ tracking logic for an
 AND gate are:

$$y_t = a \& b_t \mid b \& a_t \mid a_t \& b_t \quad (\text{like } \texttt{`-create-precise-model`})$$

$$y_t = a_t \mid a \& b_t$$

$$y_t = b_t \mid b \& a_t$$

$$y_t = a_t \mid b_t \quad (\text{like } \texttt{`-create-impresicemodel`})$$

Options:

`-taint-constants` Constant values in the design are labeled as tainted.
 (default: label constants as un-tainted)

`-keep-outputs` Do not remove module outputs. Taint tracking outputs
 ↳ will appear in the
 module ports alongside the original outputs.
 (default: original module outputs are removed)

`-simple-cost-model` Do not model logic area. Instead model the number of
 ↳ non-zero assignments to
 \$anyconsts. Taint tracking logic versions vary in their
 ↳ size, but all
 reduced-precision versions are significantly smaller
 ↳ than the fully-precise

(continues on next page)

(continued from previous page)

version. A non-zero \$anyconst assignment means that
 ↳reduced-precision taint tracking logic was chosen for some gate. Only
 ↳applicable in combination with
 ↳`-create-instrumented-model`. (default: use a complex
 ↳model and give that wire the "keep" and "minimize" attributes)

-no-cost-model

Do not model taint tracking logic area and do not
 ↳create a `\_\_glift\_weight` wire. Only applicable in combination with
 ↳`-create-instrumented-model`. (default: model area and give that wire the "keep" and
 ↳"minimize" attributes)

-instrument-more

Allow choice from more versions of (even simpler) taint
 ↳tracking logic. A total of 8 versions of taint tracking logic will be
 ↳added per gate, including the 4 versions from
 ↳`-create-instrumented-model` and these additional versions:

```
y_t = a_t
y_t = b_t
y_t = 1
y_t = 0
```

Only applicable in combination with
 ↳`-create-instrumented-model`. (default: do not add more versions of taint tracking
 ↳logic.)

miter - automatically create a miter circuit

yosys> help miter

miter -equiv [options] gold_name gate_name miter_name

Creates a miter circuit for equivalence checking. The gold- and gate- modules must have the same interfaces. The miter circuit will have all inputs of the two source modules, prefixed with 'in_'. The miter circuit has a 'trigger' output that goes high if an output mismatch between the two source modules is detected.

-ignore_gold_x

a undef (x) bit in the gold module output will match
 ↳any value in the gate module output.

| | |
|----------------------------|---|
| <code>-make_outputs</code> | also route the gold- and gate-outputs to 'gold_*' and
↳ 'gate_*' outputs
on the miter circuit. |
| <code>-make_outcmp</code> | also create a cmp_* output for each gold/gate output
↳ pair. |
| <code>-make_assert</code> | also create an 'assert' cell that checks if trigger is
↳ always low. |
| <code>-make_cover</code> | also create a 'cover' cell for each gold/gate output
↳ pair. |
| <code>-flatten</code> | call 'flatten -wb; opt_expr -keepdc -undriven;;' on the
↳ miter circuit. |
| <code>-cross</code> | allow output ports on the gold module to match input
↳ ports on the
gate module. This is useful when the gold module
↳ contains additional
logic to drive some of the gate module inputs. |

```
miter -assert [options] module [miter_name]
```

Creates a miter circuit for property checking. All input ports are kept, output ports are discarded. An additional output 'trigger' is created that goes high when an assert is violated. Without a miter_name, the existing module is modified.

| | |
|----------------------------|---|
| <code>-make_outputs</code> | keep module output ports. |
| <code>-flatten</code> | call 'flatten -wb; opt_expr -keepdc -undriven;;' on the
↳ miter circuit. |

mutate - generate or apply design mutations

```
yosys> help mutate
```

```
mutate -list N [options] [selection]
```

Create a list of N mutations using an even sampling.

| | |
|--------------------------|---|
| <code>-o filename</code> | Write list to this file instead of console output |
| <code>-s filename</code> | Write a list of all src tags found in the design to the
↳ specified file |
| <code>-seed N</code> | RNG seed for selecting mutations |

| | |
|-------------------------------------|---|
| <code>-none</code> | Include a "none" mutation in the output |
| <code>-ctrl name width value</code> | Use ctrl options to the output. Use 'value' for first mutation, then simply count up from there. |
| <code>-mode name</code> | |
| <code>-module name</code> | |
| <code>-cell name</code> | |
| <code>-port name</code> | |
| <code>-portbit int</code> | |
| <code>-ctrlbit int</code> | |
| <code>-wire name</code> | |
| <code>-wirebit int</code> | |
| <code>-src string</code> | Filter list of mutation candidates to those matching the given parameters. |
| <code>-cfg option int</code> | Set a configuration option. Options available:
weight_pq_w weight_pq_b weight_pq_c weight_pq_s
weight_pq_mw weight_pq_mb weight_pq_mc weight_pq_ms
weight_cover pick_cover_prcnt |

`mutate -mode MODE [options]`

Apply the given mutation.

| | |
|-------------------------------------|---|
| <code>-ctrl name width value</code> | Use control signal with the given name and width. The mutation is activated if the control signal equals the given value. |
| <code>-module name</code> | |
| <code>-cell name</code> | |
| <code>-port name</code> | |
| <code>-portbit int</code> | |
| <code>-ctrlbit int</code> | Mutation parameters, as generated by 'mutate -list N'. |
| <code>-wire name</code> | |
| <code>-wirebit int</code> | |
| <code>-src string</code> | Ignored. (They are generated by -list for documentation purposes.) |

qbfsat - solve a 2QBF-SAT problem in the circuit

```
yosys> help qbfsat
```

```
qbfsat [options] [selection]
```

This command solves an "exists-forall" 2QBF-SAT problem defined over the currently selected module. Existentially-quantified variables are declared by assigning a wire "\$anyconst". Universally-quantified variables may be explicitly declared by assigning a wire "\$allconst", but module inputs will be treated as universally-quantified variables by default.

| | |
|--|---|
| <code>-nocleanup</code> | Do not delete temporary files and directories. Useful
↪ for debugging. |
| <code>-dump-final-smt2</code> | File the --dump-smt2 option to yosys-smtbmc. |
| <code>-assume-outputs</code> | Add an "\$assume" cell for the conjunction of all one-
↪ bit module output wires. |
| <code>-assume-negative-polarity</code> | When adding \$assume cells for one-bit module output
↪ wires, assume they are negative polarity signals and should always be low,
↪ for example like the miters created with the `miter` command. |
| <code>-nooptimize</code> | Ignore "\minimize" and "\maximize" attributes, do not
↪ emit "(maximize)" or "(minimize)" in the SMT-LIBv2, and
↪ generally make no attempt to optimize anything. |
| <code>-nobisection</code> | If a wire is marked with the "\minimize" or "\maximize"
↪ attribute, do not attempt to optimize that value with the default
↪ iterated solving and threshold bisection approach. Instead, have yosys-
↪ smtbmc emit a "(minimize)" or "(maximize)" command in the SMT-LIBv2
↪ output and hope that the solver supports optimizing quantified
↪ bitvector problems. |
| <code>-solver <solver></code> | Use a particular solver. Choose one of: "z3", "yices",
↪ "cvc4" and "cvc5". (default: yices) |
| <code>-solver-option <name> <value></code> | See the <code><name></code> solver option in the SMT-LIBv2
↪ problem file. |

| | |
|---|--|
| <code>-timeout <value></code> | Set the per-iteration timeout in seconds.
(default: no timeout) |
| <code>-00, -01, -02</code> | Control the use of ABC to simplify the QBF-SAT problem
↳ before solving. |
| <code>-sat</code> | Generate an error if the solver does not return "sat". |
| <code>-unsat</code> | Generate an error if the solver does not return "unsat". |
| <code>-show-smtbmc</code> | Print the output from yosys-smtbmc. |
| <code>-specialize</code> | If the problem is satisfiable, replace each "\$anyconst"
↳ cell with its
corresponding constant value from the model produced by
↳ the solver. |
| <code>-specialize-from-file <solution file></code> | Do not solve the problem, but instead only attempt to
↳ replace each
"\$anyconst" cell in the current module with a constant
↳ value provided
by the specified file. |
| <code>-write-solution <file></code> | If the problem is satisfiable, write the corresponding
↳ constant value
for each "\$anyconst" cell from the model produced by
↳ the solver to the
specified file. |

sat - solve a SAT problem in the circuit

yosys> help sat

sat [options] [selection]

This command solves a SAT problem defined over the currently selected circuit and additional constraints passed as parameters.

| | |
|-----------------------------|---|
| <code>-all</code> | show all solutions to the problem (this can grow
↳ exponentially, use |
| <code>-max <N></code> | instead to get <N> solutions) |
| <code>-max <N></code> | like -all, but limit number of solutions to <N> |
| <code>-enable_undef</code> | enable modeling of undef value (aka 'x-bits')
this option is implied by -set-def, -set-undef et.
↳ cetera |

| | |
|--|---|
| <code>-max_undef</code> | maximize the number of undef bits in solutions, giving
↪ a better
picture of which input bits are actually vital to the
↪ solution. |
| <code>-set <signal> <value></code> | set the specified signal to the specified value. |
| <code>-set-def <signal></code> | add a constraint that all bits of the given signal must
↪ be defined |
| <code>-set-any-undef <signal></code> | add constraint that at least one bit of the given
↪ signal is undefined |
| <code>-set-all-undef <signal></code> | add constraint that all bits of the given signal are
↪ undefined |
| <code>-set-def-inputs</code> | add -set-def constraints for all module inputs |
| <code>-set-def-formal</code> | add -set-def constraints for formal \$anyinit, \$anyconst,
↪ \$anyseq cells |
| <code>-show <signal></code> | show the model for the specified signal. if no -show
↪ option is
passed then a set of signals to be shown is
↪ automatically selected. |
| <code>-show-inputs, -show-outputs, -show-input/output</code> | add constraints, show (input/output) ports to the list of
↪ shown signals |
| <code>-show-regs, -show-all, -show-stall</code> | show all registers, show signals with 'public' names,
↪ show all signals |
| <code>-ignore_div_by_zero</code> | ignore all solutions that involve a division by zero |
| <code>-ignore_unknown_cells</code> | ignore all cells that can not be matched to a SAT model |

The following options can be used to set up a sequential problem:

| | |
|---|--|
| <code>-seq <N></code> | set up a sequential problem with <N> time steps. The
↪ steps will
be numbered from 1 to N.

note: for large <N> it can be significantly faster to
↪ use |
| <code>-tempinduct-baseonly -maxsteps <N></code> | instead of <code>-seq <N></code> . |
| <code>-set-at <N> <signal> <value></code> | |

| | |
|---|---|
| <code>-unset-at <N> <signal></code> | set or unset the specified signal to the specified value in the given timestep. this has priority over a <code>-set</code> for the same signal. |
| <code>-set-assumes</code> | set all assumptions provided via <code>\$assume</code> cells |
| <code>-set-def-at <N> <signal></code> | |
| <code>-set-any-undef-at <N> <signal></code> | |
| <code>-set-all-undef-at <N> <signal></code> | unset all constraints in the given timestep. |
| <code>-set-init <signal> <value></code> | set initial value for the register driving the signal to the value |
| <code>-set-init-undef</code> | set all initial states (not set using <code>-set-init</code>) to undef |
| <code>-set-init-def</code> | do not force a value for the initial state but do not allow undef |
| <code>-set-init-zero</code> | set all initial states (not set using <code>-set-init</code>) to zero |
| <code>-dump_vcd <vcd-file></code> | dump SAT model (counter example in proof) to VCD file |
| <code>-dump_json <json-file></code> | dump SAT model (counter example in proof) to a WaveJSON file. |
| <code>-dump_cnf <cnf-file></code> | dump CNF of SAT problem (in DIMACS format). in temporal induction proofs this is the CNF of the first induction step. |

The following additional options can be used to set up a proof. If also `-seq` is passed, a temporal induction proof is performed.

| | |
|-----------------------------------|--|
| <code>-tempinduct</code> | Perform a temporal induction proof. In a temporal induction proof it is proven that the condition holds forever after the number of time steps specified using <code>-seq</code> . |
| <code>-tempinduct-def</code> | Perform a temporal induction proof. Assume an initial state with all registers set to defined values for the induction step. |
| <code>-tempinduct-baseonly</code> | Only the basecase half of temporal induction (requires <code>-maxsteps</code>) |

| | |
|--|--|
| <code>-tempinduct-induct</code> | Only the induction half of temporal induction |
| <code>-tempinduct-skip <N></code> | <p>Skip the first <N> steps of the induction proof.</p> <p>note: this will assume that the base case holds for <N> steps.</p> <p>this must be proven independently with "-tempinduct-baseonly"</p> |
| <code>-maxsteps <N></code> | Set a maximum length for the induction. |
| <code>-prove <signal> <value></code> | Attempt to prove that <signal> is always <value>. |
| <code>-prove-x <signal> <value></code> | <p>Like -prove, but an undef (x) bit in the lhs matches any value on the right hand side. Useful for equivalence checking.</p> |
| <code>-prove-asserts</code> | Prove that all asserts in the design hold. |
| <code>-prove-skip <N></code> | <p>Do not enforce the prove-condition for the first <N> time steps.</p> |
| <code>-maxsteps <N></code> | Set a maximum length for the induction. |
| <code>-initsteps <N></code> | <p>Set initial length for the induction.</p> <p>This will speed up the search of the right induction length for deep induction proofs.</p> |
| <code>-stepsize <N></code> | <p>Increase the size of the induction proof in steps of <N>.</p> <p>This will speed up the search of the right induction length for deep induction proofs.</p> |
| <code>-timeout <N></code> | <p>Maximum number of seconds a single SAT instance may take.</p> |
| <code>-verify</code> | <p>Return an error and stop the synthesis script if the proof fails.</p> |
| <code>-verify-no-timeout</code> | Like -verify but do not return an error for timeouts. |
| <code>-falsify</code> | <p>Return an error and stop the synthesis script if the proof succeeds.</p> |
| <code>-falsify-no-timeout</code> | Like -falsify but do not return an error for timeouts. |

supercover - add hi/lo cover cells for each wire bit

```
yosys> help supercover
```

```
supercover [options] [selection]
```

This command adds two cover cells for each bit of each selected wire, one checking for a hi signal level and one checking for lo level.

synthprop - synthesize SVA properties

```
yosys> help synthprop
```

```
synthprop [options]
```

This creates synthesizable properties for the selected module.

| | |
|---------------------------------|---|
| -name <portname> | name of the output port for assertions (default: <code>assertions</code>). |
| -map <filename> | write the port mapping for synthesizable properties into the given file. |
| -or_outputs | Or all outputs together to create a single output that goes high when any property is violated, instead of generating individual output bits. |
| -reset <portname> | name of the top-level reset input. Latch a high state on the generated outputs until an asynchronous top-level reset input is activated. |
| -resetn <portname> | like above but with inverse polarity |

xprop - formal x propagation

```
yosys> help xprop
```

```
xprop [options] [selection]
```

This pass transforms the circuit into an equivalent circuit that explicitly encodes the propagation of x values using purely 2-valued logic. On the interface between xprop-transformed and non-transformed parts of the design, appropriate conversions are inserted automatically.

```
-split-inputs
-splitt-outputs
```

| | |
|---------------------------------|---|
| <code>-split-ports</code> | Replace each input/output/port with two new ports, one
↳ carrying the
defined values (named <code><portname>_d</code>) and one carrying
↳ the mask of which
bits are x (named <code><portname>_x</code>). When a bit in the
↳ <code><portname>_x</code> is set
the corresponding bit in <code><portname>_d</code> is ignored for
↳ inputs and
guaranteed to be 0 for outputs. |
| <code>-split-public</code> | Replace each public non-port wire with two new wires,
↳ one carrying the
defined values (named <code><wirename>_d</code>) and one carrying
↳ the mask of which
bits are x (named <code><wirename>_x</code>). When a bit in the
↳ <code><portname>_x</code> is set
the corresponding bit in <code><wirename>_d</code> is guaranteed to
↳ be 0 for
outputs. |
| <code>-assume-encoding</code> | Add encoding invariants as assumptions. This can speed
↳ up formal
verification tasks. |
| <code>-assert-encoding</code> | Add encoding invariants as assertions. Used for testing
↳ the xprop
pass itself. |
| <code>-assume-def-inputs</code> | Assume all inputs are fully defined. This adds
↳ corresponding
assumptions to the design and uses these assumptions to
↳ optimize the
xprop encoding. |
| <code>-required</code> | Produce a runtime error if any encountered cell could
↳ not be encoded. |
| <code>-formal</code> | Produce a runtime error if any encoded cell uses a
↳ signal that is |

neither known to be non-x nor driven by another encoded cell.

| | |
|-----------------------------|---|
| <code>-debug-asserts</code> | Add assertions checking that the encoding used by this
↳ pass never
produces x values within the encoded signals. |
|-----------------------------|---|

10.1.6 Passes

Working with hierarchy

Warning

No commands found for group ‘passes/hierarchy’

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Converting process blocks

proc - translate processes to netlists

yosys> help proc

proc [options] [selection]

This pass calls all the other `proc_*` passes in the most common order.

```
proc_clean
proc_rmdead
proc_prune
proc_init
proc_arst
proc_rom
proc_mux
proc_dlatch
proc_dff
proc_memwr
proc_clean
opt_expr -keepdc
```

This replaces the processes in the design with multiplexers, flip-flops and latches.

The following options are supported:

| | |
|---|--|
| <code>-nomux</code> | Will omit the <code>proc_mux</code> pass. |
| <code>-norom</code> | Will omit the <code>proc_rom</code> pass. |
| <code>-global_arst [!]<name></code> | This option is passed through to <code>proc_arst</code> . |
| <code>-ifx</code> | This option is passed through to <code>proc_mux</code> . <code>proc_rmdead</code> is not executed in <code>-ifx</code> mode. |
| <code>-noopt</code> | Will omit the <code>opt_expr</code> pass. |

proc_arst - detect asynchronous resets

```
yosys> help proc_arst
```

```
proc_arst [-global_arst [!]<netname>] [selection]
```

This pass identifies asynchronous resets in the processes and converts them to a different internal representation that is suitable for generating flip-flop cells with asynchronous resets.

```
-global_arst [!]<netname>
    netnames that have a net with the given name, use
    ↪ this net as async
    ↪ reset for registers that have been assign initial
    ↪ values in their
    ↪ declaration ('reg foobar = constant_value;'). Use the '!'
    ↪ modifier for
    ↪ active low reset signals. Note: the frontend stores the
    ↪ default value
    ↪ in the 'init' attribute on the net.
```

proc_clean - remove empty parts of processes

```
yosys> help proc_clean
```

```
proc_clean [options] [selection]
```

```
-quiet          do not print any messages.
```

This pass removes empty parts of processes and ultimately removes a process if it contains only empty structures.

proc_dff - extract flip-flops from processes

```
yosys> help proc_dff
```

```
proc_dff [selection]
```

This pass identifies flip-flops in the processes and converts them to d-type flip-flop cells.

proc_dlatch - extract latches from processes

```
yosys> help proc_dlatch
```

```
proc_dlatch [selection]
```

This pass identifies latches in the processes and converts them to d-type latches.

proc_init - convert initial block to init attributes

```
yosys> help proc_init
```

```
proc_init [selection]
```

This pass extracts the 'init' actions from processes (generated from Verilog 'initial' blocks) and sets the initial value to the 'init' attribute on the respective wire.

proc_memwr - extract memory writes from processes

```
yosys> help proc_memwr
```

```
proc_memwr [selection]
```

This pass converts memory writes in processes into \$memwr cells.

proc_mux - convert decision trees to multiplexers

```
yosys> help proc_mux
```

```
proc_mux [options] [selection]
```

This pass converts the decision trees in processes (originating from if-else and case statements) to trees of multiplexer cells.

```
-ifx
```

Use Verilog simulation behavior with respect to undefined values in 'case' expressions and 'if' conditions.

proc_prune - remove redundant assignments

```
yosys> help proc_prune
```

```
proc_prune [selection]
```

This pass identifies assignments in processes that are always overwritten by a later assignment to the same signal and removes them.

proc_rmdead - eliminate dead trees in decision trees

```
yosys> help proc_rmdead
```

```
proc_rmdead [selection]
```

This pass identifies unreachable branches in decision trees and removes them.

proc_rom - convert switches to ROMs

```
yosys> help proc_rom
```

```
proc_rom [selection]
```

This pass converts switches into read-only memories when appropriate.

FSM handling

fsm - extract and optimize finite state machines

```
yosys> help fsm
```

```
fsm [options] [selection]
```

This pass calls all the other fsm_* passes in a useful order. This performs FSM extraction and optimization. It also calls opt_clean as needed:

```
fsm_detect          unless got option -nodetect
fsm_extract

fsm_opt
opt_clean
fsm_opt

fsm_expand          if got option -expand
opt_clean           if got option -expand
fsm_opt             if got option -expand

fsm_recode          unless got option -norecode

fsm_info

fsm_export          if got option -export
fsm_map             unless got option -nomap
```

Options:

`-expand, -norecode, -enable_export, -disable_map` passes as indicated above

`-fullexpand` call expand with -full option

`-encoding type`

`-fm_set_fsm_file file`

`-encfile file` passed through to fsm_recode pass

This pass uses a subset of FF types to detect FSMs. Run 'opt -nosdff -nodffe' before this pass to prepare the design.

fsm_detect - finding FSMs in design

```
yosys> help fsm_detect
```

```
fsm_detect [options] [selection]
```

This pass detects finite state machines by identifying the state signal. The state signal is then marked by setting the attribute 'fsm_encoding' on the state signal to "auto".

-ignore-self-reset Mark FSMs even if they are self-resetting

Existing 'fsm_encoding' attributes are not changed by this pass.

Signals can be protected from being detected by this pass by setting the 'fsm_encoding' attribute to "none".

This pass uses a subset of FF types to detect FSMs. Run 'opt -nosdff -nodffe' before this pass to prepare the design for fsm_detect.

fsm_expand - expand FSM cells by merging logic into it

```
yosys> help fsm_expand
```

```
fsm_expand [-full] [selection]
```

The fsm_extract pass is conservative about the cells that belong to a finite state machine. This pass can be used to merge additional auxiliary gates into the finite state machine.

By default, fsm_expand is still a bit conservative regarding merging larger word-wide cells. Call with -full to consider all cells for merging.

fsm_export - exporting FSMs to KISS2 files

```
yosys> help fsm_export
```

```
fsm_export [-noauto] [-o filename] [-origenc] [selection]
```

This pass creates a KISS2 file for every selected FSM. For FSMs with the 'fsm_export' attribute set, the attribute value is used as filename, otherwise the module and cell name is used as filename. If the parameter '-o' is given, the first exported FSM is written to the specified filename. This overwrites the setting as specified with the 'fsm_export' attribute. All other FSMs are exported to the default name as mentioned above.

-noauto

only export FSMs that have the 'fsm_export' attribute  set

-o filename

filename of the first exported FSM

`-origenc`

use binary state encoding as state names instead of s0, s1, ...

fsm_extract - extracting FSMs in design

yosys> help fsm_extract

`fsm_extract [selection]`

This pass operates on all signals marked as FSM state signals using the 'fsm_encoding' attribute. It consumes the logic that creates the state signal and uses the state signal to generate control signal and replaces it with an FSM cell.

The generated FSM cell still generates the original state signal with its original encoding. The 'fsm_opt' pass can be used in combination with the 'opt_clean' pass to eliminate this signal.

fsm_info - print information on finite state machines

yosys> help fsm_info

`fsm_info [selection]`

This pass dumps all internal information on FSM cells. It can be useful for analyzing the synthesis process and is called automatically by the 'fsm' pass so that this information is included in the synthesis log file.

fsm_map - mapping FSMs to basic logic

yosys> help fsm_map

`fsm_map [selection]`

This pass translates FSM cells to flip-flops and logic.

fsm_opt - optimize finite state machines

yosys> help fsm_opt

`fsm_opt [selection]`

This pass optimizes FSM cells. It detects which output signals are actually not used and removes them from the FSM. This pass is usually used in combination with the 'opt_clean' pass (see also 'help fsm').

fsm_recode - recoding finite state machines

yosys> help fsm_recode

fsm_recode [options] [selection]

This pass reassign the state encodings for FSM cells. At the moment only one-hot encoding and binary encoding is supported.

| | |
|-------------------------|---|
| -encoding <type> | specify the encoding scheme used for FSMs without the 'fsm_encoding' attribute or with the attribute set to ↪ 'auto'. |
| -fm_set_fsm_file <file> | generate a file containing the mapping from old to new ↪ FSM encoding in form of Synopsys Formality set_fsm_* commands. |
| -encfile <file> | write the mappings from old to new FSM encoding to a ↪ file in the following format:

<pre>.fsm <module_name> <state_signal> .map <old_bitpattern> <new_bitpattern></pre> |

Memory handling

memory - translate memories to basic cells

yosys> help memory

memory [-norom] [-nomap] [-nordff] [-nowiden] [-nosat] [-memx] [-no-rw-check] [-bram <bram_rules>]

This pass calls all the other memory_* passes in a useful order:

| | |
|----------------------------------|---|
| opt_mem | |
| opt_mem_priority | |
| opt_mem_feedback | |
| memory_bmux2rom | (skipped if called with -norom) |
| memory_dff [-no-rw-check] | (skipped if called with -nordff or -memx) |
| opt_clean | |
| memory_share [-nowiden] [-nosat] | |
| opt_mem_widen | |
| memory_memx | (when called with -memx) |
| opt_clean | |
| memory_collect | |
| memory_bram -rules <bram_rules> | (when called with -bram) |
| memory_map | (skipped if called with -nomap) |

This converts memories to word-wide DFFs and address decoders or multiport memory blocks if called with the -nomap option.

memory_bmux2rom - convert muxes to ROMs

yosys> help memory_bmux2rom

```
memory_bmux2rom [options] [selection]
```

This pass converts \$bmux cells with constant A input to ROMs.

memory_bram - map memories to block rams

```
yosys> help memory_bram
```

```
memory_bram -rules <rule_file> [selection]
```

This pass converts the multi-port \$mem memory cells into block ram instances. The given rules file describes the available resources and how they should be used.

The rules file contains configuration options, a set of block ram description and a sequence of match rules.

The option 'attr_icase' configures how attribute values are matched. The value 0 means case-sensitive, 1 means case-insensitive.

A block ram description looks like this:

```
bram RAMB1024X32      # name of BRAM cell
  init 1              # set to '1' if BRAM can be initialized
  abits 10             # number of address bits
  dbits 32             # number of data bits
  groups 2             # number of port groups
  ports 1 1            # number of ports in each group
  wrmode 1 0           # set to '1' if this groups is write ports
  enable 4 1           # number of enable bits
  transp 0 2           # transparent (for read ports)
  clocks 1 2           # clock configuration
  clkpol 2 2           # clock polarity configuration
endbram
```

For the option 'transp' the value 0 means non-transparent, 1 means transparent and a value greater than 1 means configurable. All groups with the same value greater than 1 share the same configuration bit.

For the option 'clocks' the value 0 means non-clocked, and a value greater than 0 means clocked. All groups with the same value share the same clock signal.

For the option 'clkpol' the value 0 means negative edge, 1 means positive edge and a value greater than 1 means configurable. All groups with the same value greater than 1 share the same configuration bit.

Using the same bram name in different bram blocks will create different variants of the bram. Verilog configuration parameters for the bram are created as needed.

It is also possible to create variants by repeating statements in the bram block and appending '@<label>' to the individual statements.

(continues on next page)

(continued from previous page)

A match rule looks like this:

```
match RAMB1024X32
  max waste 16384    # only use this bram if <= 16k ram bits are unused
  min efficiency 80  # only use this bram if efficiency is at least 80%
endmatch
```

It is possible to match against the following values with min/max rules:

```
words ..... number of words in memory in design
abits ..... number of address bits on memory in design
dbits ..... number of data bits on memory in design
wports ..... number of write ports on memory in design
rports ..... number of read ports on memory in design
ports ..... number of ports on memory in design
bits ..... number of bits in memory in design
dups ..... number of duplications for more read ports

awaste ..... number of unused address slots for this match
dwaste ..... number of unused data bits for this match
bwaste ..... number of unused bram bits for this match
waste ..... total number of unused bram bits (bwaste*dups)
efficiency ... total percentage of used and non-duplicated bits

acells ..... number of cells in 'address-direction'
dcells ..... number of cells in 'data-direction'
cells ..... total number of cells (acells*dcells*dups)
```

A match containing the command 'attribute' followed by a list of space separated 'name[=string_value]' values requires that the memory contains any one of the given attribute name and string values (where specified), or name and integer 1 value (if no string_value given, since Verilog will interpret '(* attr *)' as '(* attr=1 *)').

A name prefixed with '!' indicates that the attribute must not exist.

The interface for the created bram instances is derived from the bram description. Use 'techmap' to convert the created bram instances into instances of the actual bram cells of your target architecture.

A match containing the command 'or_next_if_better' is only used if it has a higher efficiency than the next match (and the one after that if the next also has 'or_next_if_better' set, and so forth).

A match containing the command 'make_transp' will add external circuitry to simulate 'transparent read', if necessary.

A match containing the command 'make_outreg' will add external flip-flops to implement synchronous read ports, if necessary.

A match containing the command 'shuffle_enable A' will re-organize the data bits to accommodate the enable pattern of port A.

memory_collect - creating multi-port memory cells

```
yosys> help memory_collect
```

```
memory_collect [selection]
```

This pass collects memories and memory ports and creates generic multiport memory cells.

memory_dff - merge input/output DFFs into memory read ports

```
yosys> help memory_dff
```

```
memory_dff [-no-rw-check] [selection]
```

This pass detects DFFs at memory read ports and merges them into the memory port. I.e. it consumes an asynchronous memory port and the flip-flops at its interface and yields a synchronous memory port.

-no-rw-check

marks all recognized read ports as "return don't-care value on read/write collision" (same result as setting the no_rw_check attribute on all memories).

memory_libmap - map memories to cells

```
yosys> help memory_libmap
```

```
memory_libmap -lib <library_file> [-D <condition>] [selection]
```

This pass takes a description of available RAM cell types and maps all selected memories to one of them, or leaves them to be mapped to FFs.

-lib <library_file>

Selects a library file containing RAM cell definitions. This option can be passed more than once to select multiple libraries. See passes/memory/memlib.md for description of the library format.

-D <condition>

Enables a condition that can be checked within the library file to eg. select between slightly different hardware variants. This option can be passed any number of times.

-logic-cost-rom <num>

-logic-cost-ram <num>

Sets the cost of a single bit for memory lowered to soft logic.

-no-auto-distributed

-no-auto-block

-no-auto-huge

Disables automatic mapping of given kind of RAMs.
 ↳ Manual mapping
 (using ram_style or other attributes) is still
 ↳ supported.

memory_map - translate multiport memories to basic cells

yosys> help memory_map

memory_map [options] [selection]

This pass converts multiport memory cells as generated by the memory_collect pass to word-wide DFFs and address decoders.

-attr !<name>

do not map memories that have attribute <name> set.

-attr <name>[=<value>] for memories that have attribute <name> set, only map
 ↳ them if its value
 is a string <value> (if specified), or an integer 1
 ↳ (otherwise). if this
 option is specified multiple times, map the memory if
 ↳ the attribute is
 to any of the values.

-iattr

for -attr, suppress case sensitivity in matching of
 ↳ <value>.

-rom-only

only perform conversion for ROMs (memories with no
 ↳ write ports).

-keepdc

when mapping ROMs, keep x-bits shared across read ports.

-formal

map memories for a global clock based formal
 ↳ verification flow.
 This implies -keepdc, uses \$ff cells for ROMs and sets
 ↳ hdlname
 attributes. It also has limited support for async write
 ↳ ports
 as generated by clk2fflogic.

memory_memx - emulate vlog sim behavior for mem ports

yosys> help memory_memx

memory_memx [selection]

This pass adds additional circuitry that emulates the Verilog simulation behavior for out-of-bounds memory reads and writes.

memory_narrow - split up wide memory ports

```
yosys> help memory_narrow
```

```
memory_narrow [options] [selection]
```

This pass splits up wide memory ports into several narrow ports.

memory_nordff - extract read port FFs from memories

```
yosys> help memory_nordff
```

```
memory_nordff [options] [selection]
```

This pass extracts FFs from memory read ports. This results in a netlist similar to what one would get from not calling memory_dff.

memory_share - consolidate memory ports

```
yosys> help memory_share
```

```
memory_share [-nosat] [-nowiden] [selection]
```

This pass merges share-able memory ports into single memory ports.

The following methods are used to consolidate the number of memory ports:

- When multiple write ports access the same address then this is converted to a single write port with a more complex data and/or enable logic path.
- When multiple read or write ports access adjacent aligned addresses, they are merged to a single wide read or write port. This transformation can be disabled with the "-nowiden" option.
- When multiple write ports are never accessed at the same time (a SAT solver is used to determine this), then the ports are merged into a single write port. This transformation can be disabled with the "-nosat" option.

Note that in addition to the algorithms implemented in this pass, the \$memrd and \$memwr cells are also subject to generic resource sharing passes (and other optimizations) such as "share" and "opt_merge".

memory_unpack - unpack multi-port memory cells

```
yosys> help memory_unpack
```

```
memory_unpack [selection]
```

This pass converts the multi-port \$mem memory cells into individual \$memrd and \$memwr cells. It is the counterpart to the memory_collect pass.

Optimization passes

opt - perform simple optimizations

yosys> help opt

opt [options] [selection]

This pass calls all the other opt_* passes in a useful order. This performs a series of trivial optimizations and cleanups. This pass executes the other passes in the following order:

```

    opt_expr [-mux_undef] [-mux_bool] [-undriven] [-noclkinv] [-fine] [-full] [-
↪keepdc]
    opt_merge [-share_all] -nomux

    do
        opt_muxtree
        opt_reduce [-fine] [-full]
        opt_merge [-share_all]
        opt_share (-full only)
        opt_dff [-nodffe] [-nosdff] [-keepdc] [-sat] (except when called with -
↪noff)
        opt_hier (-hier only)
        opt_clean [-purge]
        opt_expr [-mux_undef] [-mux_bool] [-undriven] [-noclkinv] [-fine] [-full] [-
↪keepdc]
        while <changed design>

```

When called with -fast the following script is used instead:

```

    do
        opt_expr [-mux_undef] [-mux_bool] [-undriven] [-noclkinv] [-fine] [-full] [-
↪keepdc]
        opt_merge [-share_all]
        opt_dff [-nodffe] [-nosdff] [-keepdc] [-sat] (except when called with -
↪noff)
        opt_hier (-hier only)
        opt_clean [-purge]
        while <changed design in opt_dff>

```

Note: Options in square brackets (such as [-keepdc]) are passed through to the opt_* commands when given to 'opt'.

opt_clean - remove unused cells and wires

yosys> help opt_clean

opt_clean [options] [selection]

This pass identifies wires and cells that are unused and removes them. Other passes often remove cells but leave the wires in the design or reconnect the wires but leave the old cells in the design. This pass can be used to clean up after the passes that do the actual work.

(continues on next page)

(continued from previous page)

This pass only operates on completely selected modules without processes.

`-purge`

also remove internal nets if they have a public name

`opt_demorgan` - Optimize reductions with DeMorgan equivalents

yosys> help opt_demorgan

`opt_demorgan [selection]`

This pass pushes inverters through `$reduce_*` cells if this will reduce the overall gate count of the circuit

`opt_dff` - perform DFF optimizations

yosys> help opt_dff

`opt_dff [-nodffe] [-nosdff] [-keepdc] [-sat] [selection]`

This pass converts flip-flops to a more suitable type by merging clock enables and synchronous reset multiplexers, removing unused control inputs, or potentially removes the flip-flop altogether, converting it to a constant driver.

`-nodffe`

disables dff → dffe conversion, and other transforms
 ↳ recognizing clock enable

`-nosdff`

disables dff → sdff conversion, and other transforms
 ↳ recognizing sync resets

`-simple-dffe`

only enables clock enable recognition transform for
 ↳ obvious cases

`-sat`

additionally invoke SAT solver to detect and remove
 ↳ flip-flops (with non-constant inputs) that can also be replaced with a
 ↳ constant driver

`-keepdc`

some optimizations change the behavior of the circuit
 ↳ with respect to don't-care bits. for example in `'a+0'` a single x-bit in
 ↳ `'a'` will cause all result bits to be set to x. this behavior changes
 ↳ when `'a+0'` is replaced by `'a'`. the `-keepdc` option disables all such
 ↳ optimizations.

opt_expr - perform const folding and simple expression rewriting

```
yosys> help opt_expr
```

```
opt_expr [options] [selection]
```

This pass performs const folding on internal cell types with constant inputs. It also performs some simple expression rewriting.

| | |
|-------------------------|--|
| <code>-mux_undef</code> | remove 'undef' inputs from \$mux, \$pmux and \$_MUX_ cells |
| <code>-mux_bool</code> | replace \$mux cells with inverters or buffers when ↵
↵ possible |
| <code>-undriven</code> | replace undriven nets with undef (x) constants |
| <code>-noclkinv</code> | do not optimize clock inverters by changing FF types |
| <code>-fine</code> | perform fine-grain optimizations |
| <code>-full</code> | alias for -mux_undef -mux_bool -undriven -fine |
| <code>-keepdc</code> | some optimizations change the behavior of the circuit ↵
↵ with respect to
don't-care bits. for example in 'a+0' a single x-bit in
↵ 'a' will cause
all result bits to be set to x. this behavior changes ↵
↵ when 'a+0' is
replaced by 'a'. the -keepdc option disables all such ↵
↵ optimizations. |

opt_ffinv - push inverters through FFs

```
yosys> help opt_ffinv
```

```
opt_ffinv [selection]
```

This pass pushes inverters to the other side of a FF when they can be merged into LUTs on the other side.

opt_hier - perform cross-boundary optimization

```
yosys> help opt_hier
```

```
opt_hier [selection]
```

This pass considers the design hierarchy and propagates unused signals, constant signals, and tied-together signals across module boundaries to facilitate optimization. Only the selected modules are affected.

Note this pass changes port semantics on modules which are not the top.

opt_lut - optimize LUT cells

```
yosys> help opt_lut
```

```
opt_lut [options] [selection]
```

This pass combines cascaded \$lut cells with unused inputs.

```
-tech ice40
```

treat the design as a LUT-mapped circuit for the ice40 architecture and preserve connections to SB_CARRY as appropriate

```
-limit N
```

only perform the first N combines, then stop. useful for debugging.

opt_lut_ins - discard unused LUT inputs

```
yosys> help opt_lut_ins
```

```
opt_lut_ins [options] [selection]
```

This pass removes unused inputs from LUT cells (that is, inputs that can not influence the output signal given this LUT's value). While such LUTs cannot be directly emitted by ABC, they can be a result of various post-ABC transformations, such as mapping wide LUTs (not all sub-LUTs will use the full set of inputs) or optimizations such as xilinx_dffopt.

```
-tech <technology>
```

Instead of generic \$lut cells, operate on LUT cells specific to the given technology. Valid values are: xilinx, lattice, gowin.

opt_mem - optimize memories

```
yosys> help opt_mem
```

```
opt_mem [options] [selection]
```

This pass performs various optimizations on memories in the design.

opt_mem_feedback - convert memory read-to-write port feedback paths to write enables

```
yosys> help opt_mem_feedback
```

```
opt_mem_feedback [selection]
```

This pass detects cases where an asynchronous read port is only connected via a mux tree to a write port with the same address. When such a connection is found, it is replaced with a new condition on an enable signal, allowing for removal of the read port.

opt_mem_priority - remove priority relations between write ports that can never collide

```
yosys> help opt_mem_priority
```

```
opt_mem_priority [selection]
```

This pass detects cases where one memory write port has priority over another even though they can never collide with each other -- ie. there can never be a situation where a given memory bit is written by both ports at the same time, for example because of always-different addresses, or mutually exclusive enable signals. In such cases, the priority relation is removed.

opt_mem_widen - optimize memories where all ports are wide

```
yosys> help opt_mem_widen
```

```
opt_mem_widen [options] [selection]
```

This pass looks for memories where all ports are wide and adjusts the base memory width up until that stops being the case.

opt_merge - consolidate identical cells

```
yosys> help opt_merge
```

```
opt_merge [options] [selection]
```

This pass identifies cells with identical type and input signals. Such cells are then merged to one cell.

```
-nomux
```

Do not merge MUX cells.

```
-share_all
```

Operate on all cell types, not just built-in types.

```
-keepdc
```

Do not merge flipflops with don't-care bits in their ␣ initial value.

opt_muxtree - eliminate dead trees in multiplexer trees

```
yosys> help opt_muxtree
```

```
opt_muxtree [selection]
```

This pass analyzes the control signals for the multiplexer trees in the design and identifies inputs that can never be active. It then removes this dead branches from the multiplexer trees.

This pass only operates on completely selected modules without processes.

opt_reduce - simplify large MUXes and AND/OR gates

```
yosys> help opt_reduce
```

```
opt_reduce [options] [selection]
```

This pass performs two interlinked optimizations:

1. it consolidates trees of large AND gates or OR gates and eliminates duplicated inputs.
2. it identifies duplicated inputs to MUXes and replaces them with a single input with the original control signals OR'ed together.

| | |
|--------------------|----------------------------------|
| <code>-fine</code> | perform fine-grain optimizations |
| <code>-full</code> | alias for <code>-fine</code> |

opt_share - merge mutually exclusive cells of the same type that share an input signal

```
yosys> help opt_share
```

```
opt_share [selection]
```

This pass identifies mutually exclusive cells of the same type that:

- (a) share an input signal,
- (b) drive the same `$mux`, `$_MUX_`, or `$pmux` multiplexing cell,

allowing the cell to be merged and the multiplexer to be moved from multiplexing its output to multiplexing the non-shared input signals.

recover_names - Execute a lossy mapping command and recover original netnames

```
yosys> help recover_names
```

```
recover_names [command]
```

This pass executes a lossy mapping command and uses a combination of simulation to find candidate equivalences and SAT to recover exact original net names.

Technology mapping**See also**

Technology libraries

Warning

No commands found for group 'passes/techmap'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Design modification

expose - convert internal signals to module ports

```
yosys> help expose
```

```
expose [options] [selection]
```

This command exposes all selected internal signals of a module as additional outputs.

| | |
|-------------------------------------|---|
| <code>-dff</code> | only consider wires that are directly driven by
↳ register cell. |
| <code>-cut</code> | when exposing a wire, create an input/output pair and
↳ cut the internal signal path at that wire. |
| <code>-input</code> | when exposing a wire, create an input port and
↳ disconnect the internal driver. |
| <code>-shared</code> | only expose those signals that are shared among the
↳ selected modules.
this is useful for preparing modules for equivalence
↳ checking. |
| <code>-evert</code> | also turn connections to instances of other modules to
↳ additional inputs and outputs and remove the module instances. |
| <code>-evert-dff</code> | turn flip-flops to sets of inputs and outputs. |
| <code>-sep <separator></code> | when creating new wire/port names, the original object
↳ name is suffixed with this separator (default: '.') and the port name or
↳ a type designator for the exposed signal. |

Equivalence checking

equiv_add - add a \$equiv cell

```
yosys> help equiv_add
```

```
equiv_add [-try] gold_sig gate_sig
```

This command adds an \$equiv cell for the specified signals.

```
equiv_add [-try] -cell gold_cell gate_cell
```

This command adds \$equiv cells for the ports of the specified cells.

equiv_induct - proving \$equiv cells using temporal induction

yosys> help equiv_induct

equiv_induct [options] [selection]

Uses a version of temporal induction to prove \$equiv cells.

Only selected \$equiv cells are proven and only selected cells are used to perform the proof.

-undef enable modelling of undef states

-seq <N> the max. number of time steps to be considered (default ↵
↵= 4)

-set-assumes set all assumptions provided via \$assume cells

This command is very effective in proving complex sequential circuits, when the internal state of the circuit quickly propagates to \$equiv cells.

However, this command uses a weak definition of 'equivalence': This command proves that the two circuits will not diverge after they produce equal outputs (observable points via \$equiv) for at least <N> cycles (the <N> specified via -seq).

Combined with simulation this is very powerful because simulation can give you confidence that the circuits start out synced for at least <N> cycles after reset.

equiv_make - prepare a circuit for equivalence checking

yosys> help equiv_make

equiv_make [options] gold_module gate_module equiv_module

This creates a module annotated with \$equiv cells from two presumably equivalent modules. Use commands such as 'equiv_simple' and 'equiv_status' to work with the created equivalent checking module.

-inames Also match cells and wires with \$... names.

-blacklist <file> Do not match cells or signals that match the names in ↵
↵the file.

-encfile <file> Match FSM encodings using the description from the file. See 'help fsm_recode' for details.

-make_assert

Check equivalence with \$assert cells instead of \$equiv.
\$eqx (==) is used to compare signals.

Note: The circuit created by this command is not a miter (with something like a trigger output), but instead uses \$equiv cells to encode the equivalence checking problem. Use 'miter -equiv' if you want to create a miter circuit.

equiv_mark - mark equivalence checking regions

```
yosys> help equiv_mark
```

```
equiv_mark [options] [selection]
```

This command marks the regions in an equivalence checking module. Region 0 is the proven part of the circuit. Regions with higher numbers are connected unproven subcircuits. The integer attribute 'equiv_region' is set on all wires and cells.

equiv_miter - extract miter from equiv circuit

```
yosys> help equiv_miter
```

```
equiv_miter [options] miter_module [selection]
```

This creates a miter module for further analysis of the selected \$equiv cells.

-trigger

Create a trigger output

-cmp

Create cmp_* outputs for individual unproven \$equiv
↳ cells

-assert

Create a \$assert cell for each unproven \$equiv cell

-undef

Create compare logic that handles undefs correctly

equiv_opt - prove equivalence for optimized circuit

```
yosys> help equiv_opt
```

```
equiv_opt [options] [command]
```

This command uses temporal induction to check circuit equivalence before and after an optimization pass.

-run <from_label> <to_label> Run the commands between the labels (see below).
↳ an empty
from label is synonymous to the start of the command
↳ list, and empty to
label is synonymous to the end of the command list.

| | |
|--------------------------------------|---|
| <code>-map <filename></code> | expand the modules in this file before proving
↳ equivalence. this is
useful for handling architecture-specific primitives. |
| <code>-blacklist <file></code> | Do not match cells or signals that match the names in
↳ the file
(passed to <code>equiv_make</code>). |
| <code>-assert</code> | produce an error if the circuits are not equivalent. |
| <code>-multiclock</code> | run <code>clk2fflogic</code> before equivalence checking. |
| <code>-async2sync</code> | run <code>async2sync</code> before equivalence checking. |
| <code>-undef</code> | enable modelling of undef states during <code>equiv_induct</code> . |
| <code>-nocheck</code> | disable running check before and after the command
↳ under test. |

The following commands are executed by this verification command:

```
run_pass:
    hierarchy -auto-top
    design -save preopt
    check -assert      (unless -nocheck)
    [command]
    check -assert      (unless -nocheck)
    design -stash postopt

prepare:
    design -copy-from preopt -as gold A:top
    design -copy-from postopt -as gate A:top

techmap:      (only with -map)
    techmap -wb -D EQUIV -autoproc -map <filename> ...

prove:
    clk2fflogic      (only with -multiclock)
    async2sync       (only with -async2sync)
    equiv_make -blacklist <filename> ... gold gate equiv
    equiv_induct [-undef] equiv
    equiv_status [-assert] equiv

restore:
    design -load preopt
```

equiv_purge - purge equivalence checking module

```
yosys> help equiv_purge
```

```
equiv_purge [options] [selection]
```

This command removes the proven part of an equivalence checking module, leaving only the unproven segments in the design. This will also remove and add module ports as needed.

equiv_remove - remove \$equiv cells

```
yosys> help equiv_remove
```

```
equiv_remove [options] [selection]
```

This command removes the selected \$equiv cells. If neither -gold nor -gate is used then only proven cells are removed.

| | |
|-------|-------------------|
| -gold | keep gold circuit |
|-------|-------------------|

| | |
|-------|-------------------|
| -gate | keep gate circuit |
|-------|-------------------|

equiv_simple - try proving simple \$equiv instances

```
yosys> help equiv_simple
```

```
equiv_simple [options] [selection]
```

This command tries to prove \$equiv cells using a simple direct SAT approach.

| | |
|----|----------------|
| -v | verbose output |
|----|----------------|

| | |
|--------|----------------------------------|
| -undef | enable modelling of undef states |
|--------|----------------------------------|

| | |
|--------|--|
| -short | create shorter input cones that stop at shared nodes.
↳ This yields simpler SAT problems but sometimes fails to prove
↳ equivalence. |
|--------|--|

| | |
|----------|--|
| -nogroup | disabling grouping of \$equiv cells by output wire |
|----------|--|

| | |
|----------|---|
| -seq <N> | the max. number of time steps to be considered (default
↳ = 1) |
|----------|---|

| | |
|--------------|---|
| -set-assumes | set all assumptions provided via \$assume cells |
|--------------|---|

equiv_status - print status of equivalent checking module

```
yosys> help equiv_status
```

```
equiv_status [options] [selection]
```

This command prints status information for all selected \$equiv cells.

-assert

produce an error if any unproven \$equiv cell is found

equiv_struct - structural equivalence checking

```
yosys> help equiv_struct
```

```
equiv_struct [options] [selection]
```

This command adds additional \$equiv cells based on the assumption that the gold and gate circuit are structurally equivalent. Note that this can introduce bad \$equiv cells in cases where the netlists are not structurally equivalent, for example when analyzing circuits with cells with commutative inputs. This command will also de-duplicate gates.

-fwd

by default this command performs forward sweeps until
 ↳ nothing can
 be merged by forwards sweeps, then backward sweeps
 ↳ until forward
 sweeps are effective again. with this option set only
 ↳ forward sweeps
 are performed.

-fwnonly <cell_type>

add the specified cell type to the list of cell types
 ↳ that are only
 merged in forward sweeps and never in backward sweeps.
 ↳ \$equiv is in
 this list automatically.

-icells

by default, the internal RTL and gate cell types are
 ↳ ignored. add
 this option to also process those cell types with this
 ↳ command.

-maxiter <N>

maximum number of iterations to run before aborting

Simulating circuits**Warning**

No commands found for group 'passes/sat'

Documentation may have been built without source_location support. Try check /cmd/index_other.

Design status

cd - a shortcut for 'select -module <name>'

yosys> help cd

cd <modname>

This is just a shortcut for 'select -module <modname>'.

cd <cellname>

When no module with the specified name is found, but there is a cell with the specified name in the current module, then this is equivalent to 'cd <celltype>'.

cd ..

Remove trailing substrings that start with '.' in current module name until the name of a module in the current design is generated, then switch to that module. Otherwise clear the current selection.

cd

This is just a shortcut for 'select -clear'.

check - check for obvious problems in the design

yosys> help check

check [options] [selection]

This pass identifies the following problems in the current design:

- combinatorial loops
- two or more conflicting drivers for one wire
- used wires that do not have a driver

Options:

-noinit

also check for wires which have the 'init' attribute set

-initdrv

also check for wires that have the 'init' attribute set, and are not driven by an FF cell type

-mapped

also check for internal cells that have not been mapped to cells of the target architecture

-allow-tbuf

modify the -mapped behavior to still allow \$_TBUF_ cells

| | |
|---|--|
| <code>-assert</code> | produce a runtime error if any problems are found in
↳ the current design |
| <code>-force-detailed-loop-check</code> | for the detection of combinatorial loops, use a
↳ detailed connectivity
model for all internal cells for which it is available.
↳ This disables
falling back to a simpler overapproximating model for
↳ those cells for
which the detailed model is expected costly. |

cover - print code coverage counters

```
yosys> help cover
```

Warning

This command is intended for internal developer use only

`cover [options] [pattern]`

Print the code coverage counters collected using the `cover()` macro in the Yosys C++ code. This is useful to figure out what parts of Yosys are utilized by a test bench.

| | |
|----------------------|--|
| <code>-q</code> | Do not print output to the normal destination (console
↳ and/or log file) |
| <code>-o file</code> | Write output to this file, truncate if exists. |
| <code>-a file</code> | Write output to this file, append if exists. |
| <code>-d dir</code> | Write output to a newly created file in the specified
↳ directory. |

When one or more pattern (shell wildcards) are specified, then only counters matching at least one pattern are printed.

It is also possible to instruct Yosys to print the coverage counters on program exit to a file using environment variables:

```
YOSYS_COVER_DIR="{dir-name}" yosys {args}
```

This will create a file (with an auto-generated name) in this directory and write the coverage counters to it.

```
YOSYS_COVER_FILE="{file-name}" yosys {args}
```

(continues on next page)

(continued from previous page)

This will append the coverage counters to the specified file.

Hint: Use the following AWK command to consolidate Yosys coverage files:

```
gawk '{ p[$3] = $1; c[$3] += $2; } END { for (i in p)
  printf "%-60s %10d %s\n", p[i], c[i], i; }' {files} | sort -k3
```

Coverage counters are only available in Yosys for Linux.

debug - run command with debug log messages enabled

```
yosys> help debug
```

```
debug cmd
```

Execute the specified command with debug log messages enabled

edgetypes - list all types of edges in selection

```
yosys> help edgetypes
```

```
edgetypes [options] [selection]
```

This command lists all unique types of 'edges' found in the selection. An 'edge' is a 4-tuple of source and sink cell type and port name.

exec - execute commands in the operating system shell

```
yosys> help exec
```

```
exec [options] -- [command]
```

Execute a command in the operating system shell. All supplied arguments are concatenated and passed as a command to `popen(3)`. Whitespace is not guaranteed to be preserved, even if quoted. `stdin` and `stderr` are not connected, while `stdout` is logged unless the `"-q"` option is specified.

`-q` Suppress stdout and stderr from subprocess

`-expect-return <info>` Generate an error if `popen()` does not return specified value.
 ↳ value.
 May only be specified once; the final specified value
 ↳ is controlling
 if specified multiple times.

`-expect-stdout <regex>` Generate an error if the specified regex does not match any line
 ↳ any line
 in subprocess's stdout. May be specified multiple
 ↳ times.

```
-not-expect-stdout logger > an error if the specified regex matches any
↳ line
in subprocess's stdout. May be specified multiple
↳ times.

Example: exec -q -expect-return 0 -- echo "bananapie" |
↳ grep "nana"
```

log - print text and log files

```
yosys> help log
```

```
log [options] string
```

```
log [ -push | -pop ]
```

Print the given string to the screen and/or the log file. This is useful for TCL scripts, because the TCL command "puts" only goes to stdout but not to logfiles.

| | |
|----------------|---|
| -stdout | Print the output to stdout too. This is useful when all
↳ Yosys is
executed with a script and the -q (quiet operation)
↳ argument to notify
the user. |
| -stderr | Print the output to stderr too. |
| -nolog | Don't use the internal log() command. Use either -
↳ stdout or -stderr,
otherwise no output will be generated at all. |
| -n | do not append a newline |
| -header | log a pass header |
| -push | push a new level on the pass counter |
| -pop | pop from the pass counter |

logger - set logger properties

```
yosys> help logger
```

```
logger [options]
```

This command sets global logger properties, also available using command line options.

| | |
|--|--|
| <code>-[no]time</code> | enable/disable display of timestamp in log output. |
| <code>-[no]stderr</code> | enable/disable logging errors to stderr. |
| <code>-warn regex</code> | print a warning for all log messages matching the regex. |
| <code>-nowarn regex</code> | if a warning message matches the regex, it is printed
↳ as regular message instead. |
| <code>-werror regex</code> | if a warning message matches the regex, it is printed
↳ as error message instead and the tool terminates with a nonzero
↳ return code. |
| <code>-[no]debug</code> | globally enable/disable debug log messages. |
| <code>-experimental <feature></code> | print warnings for the specified experimental
↳ feature |
| <code>-expect <type> <regex> <log string></code> | expect <log string> error to appear. matched errors
↳ will terminate with exit code 0.
Types prefix-log, prefix-warning and prefix-error match
↳ the entire logged string, including filename if present. |
| <code>-expect-no-warnings</code> | gives error in case there is at least one warning that
↳ is not expected. |
| <code>-check-expected</code> | verifies that the patterns previously set up by <code>-expect</code>
↳ have actually been met, then clears the expected log list. If this
↳ is not called manually, the check will happen at yosys exit time
↳ instead. |

ls - list modules or objects in modules

yosys> help ls

ls [selection]

When no active module is selected, this prints a list of modules.

When an active module is selected, this prints a list of objects in the module.

ltp - print longest topological path

```
yosys> help ltp
```

```
ltp [options] [selection]
```

This command prints the longest topological path in the design. (Only considers paths within a single module, so the design must be flattened.)

-noff

automatically exclude FF cell types

plugin - load and list loaded plugins

```
yosys> help plugin
```

```
plugin [options]
```

Load and list loaded plugins.

-i <plugin_filename> Load (install) the specified plugin.

-a <alias_name> Register the specified alias name for the loaded plugin

-l List loaded plugins

portarcs - derive port arcs for propagation delay

```
yosys> help portarcs
```

```
portarcs [options] [selection]
```

This command characterizes the combinational content of selected modules and derives timing arcs going from module inputs to module outputs representing the propagation delay of the module.

-draw plot the computed delay table to the terminal

-icells assign unit delay to gates from the internal Yosys cell library

-write write the computed arcs back into the module as \$specify2 instances

portlist - list (top-level) ports

```
yosys> help portlist
```

```
portlist [options] [selection]
```

This command lists all module ports found in the selected modules.
 If no selection is provided then it lists the ports on the top module.

`-m` print verilog blackbox module definitions instead of
 ↪ port lists

printattrs - print attributes of selected objects

yosys> help printattrs

printattrs [selection]

Print all attributes of the selected objects.

scc - detect strongly connected components (logic loops)

yosys> help scc

scc [options] [selection]

This command identifies strongly connected components (aka logic loops) in the design.

| | |
|-------------------------------------|---|
| <code>-expect <num></code> | expect to find exactly <num> SCCs. A different number
↪ of SCCs will
↪ produce an error. |
| <code>-max_depth <num></code> | limit to loops not longer than the specified number of
↪ cells. This
↪ can e.g. be useful in identifying small local loops in
↪ a module that
↪ implements one large SCC. |
| <code>-nofeedback</code> | do not count cells that have their output fed back into
↪ one of their
↪ inputs as single-cell scc. |
| <code>-all_cell_types</code> | Usually this command only considers internal non-memory
↪ cells. With
↪ this option set, all cells are considered. For unknown
↪ cells all ports
↪ are assumed to be bidirectional 'inout' ports. |
| <code>-set_attr <name></code> | value set the specified attribute on all cells that are part
↪ of a logic
↪ loop. the special token {} in the value is replaced
↪ with a unique
↪ identifier for the logic loop. |

| | |
|-----------------------|---|
| <code>-select</code> | replace the current selection with a selection of all
↳ cells and wires
that are part of a found logic loop |
| <code>-specify</code> | examine specify rules to detect logic loops in whitebox/
↳ blackbox cells |

scratchpad - get/set values in the scratchpad

yosys> help scratchpad

scratchpad [options]

This pass allows to read and modify values from the scratchpad of the current design. Options:

| | |
|--|--|
| <code>-get <identifier></code> | print the value saved in the scratchpad under the given
↳ identifier. |
| <code>-set <identifier> <value></code> | save the given value in the scratchpad under the given
↳ identifier. |
| <code>-unset <identifier></code> | remove the entry for the given identifier from the
↳ scratchpad. |
| <code>-copy <identifier1> <identifier2></code> | copy the value of the first identifier to the second
↳ identifier. |
| <code>-assert <identifier> <value></code> | assert that the entry for the given identifier is set
↳ to the given value. |
| <code>-assert-set <identifier></code> | assert that the entry for the given identifier exists. |
| <code>-assert-unset <identifier></code> | assert that the entry for the given identifier does not
↳ exist. |

The identifier may not contain whitespace. By convention, it is usually prefixed by the name of the pass that uses it, e.g. 'opt.did_something'. If the value contains whitespace, it must be enclosed in double quotes.

select - modify and view the list of selected objects

yosys> help select

```
select [ -add | -del | -set <name> ] {-read <filename> | <selection>}  
  
select [ -unset <name> ]
```



```
select [ <assert_option> ] {-read <filename> | <selection>}

select [ -list | -list-mod | -write <filename> | -count | -clear ]

select -module <modname>
```

Most commands use the list of currently selected objects to determine which part of the design to operate on. This command can be used to modify and view this list of selected objects.

Note that many commands support an optional [selection] argument that can be used to override the global selection for the command. The syntax of this optional argument is identical to the syntax of the <selection> argument described here.

| | |
|---------------------|--|
| -add, -del | add or remove the given objects to the current selection.
without this options the current selection is replaced. |
| -set <name> | do not modify the current selection. instead save the new selection under the given name (see @<name> below). to save the current selection, use "select -set <name> %" |
| -unset <name> | do not modify the current selection. instead remove a previously saved selection under the given name (see @<name> below). |
| -assert-none | do not modify the current selection. instead assert that the given selection is empty. i.e. produce an error if any object or module matching the selection is found. |
| -assert-any | do not modify the current selection. instead assert that the given selection is non-empty. i.e. produce an error if no object or module matching the selection is found. |
| -assert-mod-count N | do not modify the current selection. instead assert that the given selection contains exactly N modules (partially or fully selected). |
| -assert-count N | do not modify the current selection. instead assert that the given selection contains exactly N objects. |

| | |
|--------------------------------------|--|
| <code>-assert-max N</code> | do not modify the current selection. instead assert
↳ that the given
selection contains less than or exactly N objects. |
| <code>-assert-min N</code> | do not modify the current selection. instead assert
↳ that the given
selection contains at least N objects. |
| <code>-list</code> | list all objects in the current selection |
| <code>-write <filename></code> | like <code>-list</code> but write the output to the specified file |
| <code>-read <filename></code> | read the specified file (written by <code>-write</code>) |
| <code>-count</code> | count all objects in the current selection |
| <code>-clear</code> | clear the current selection. this effectively selects
↳ the whole
design. it also resets the selected module (see <code>-
↳ module</code>). use the
command 'select *' to select everything but stay in the
↳ current module. |
| <code>-none</code> | create an empty selection. the current module is
↳ unchanged. |
| <code>-module <modname></code> | limit the current scope to the specified module.
the difference between this and simply selecting the
↳ module
is that all object names are interpreted relative to
↳ this
module after this command until the selection is
↳ cleared again. |

When this command is called without an argument, the current selection is displayed in a compact form (i.e. only the module name when a whole module is selected).

The `<selection>` argument itself is a series of commands for a simple stack machine. Each element on the stack represents a set of selected objects. After this commands have been executed, the union of all remaining sets on the stack is computed and used as selection for the command.

Pushing (selecting) object when not in `-module` mode:

```
<mod_pattern>
    select the specified module(s)

<mod_pattern>/<obj_pattern>
    select the specified object(s) from the module(s)
```

(continues on next page)

(continued from previous page)

Pushing (selecting) object when in -module mode:

```
<obj_pattern>
    select the specified object(s) from the current module
```

By default, patterns will not match black/white-box modules or their contents. To include such objects, prefix the pattern with '='.

A <mod_pattern> can be a module name, wildcard expression (*, ?, [...]) matching module names, or one of the following:

```
A:<pattern>, A:<pattern>=<pattern>
    all modules with an attribute matching the given pattern
    in addition to = also <, <=, >=, and > are supported
```

```
N:<pattern>
    all modules with a name matching the given pattern
    (i.e. 'N:' is optional as it is the default matching rule)
```

An <obj_pattern> can be an object name, wildcard expression, or one of the following:

```
w:<pattern>
    all wires with a name matching the given wildcard pattern
```

```
i:<pattern>, o:<pattern>, x:<pattern>
    all inputs (i:), outputs (o:) or any ports (x:) with matching names
```

```
s:<size>, s:<min>:<max>
    all wires with a matching width
```

```
m:<pattern>
    all memories with a name matching the given pattern
```

```
c:<pattern>
    all cells with a name matching the given pattern
```

```
t:<pattern>
    all cells with a type matching the given pattern
```

```
t:@<name>
    all cells with a type matching a module in the saved selection <name>
```

```
p:<pattern>
    all processes with a name matching the given pattern
```

```
a:<pattern>
    all objects with an attribute name matching the given pattern
```

```
a:<pattern>=<pattern>
    all objects with a matching attribute name-value-pair.
```

(continues on next page)

(continued from previous page)

```

    in addition to = also <, <=, >=, and > are supported

r:<pattern>, r:<pattern>=<pattern>
    cells with matching parameters. also with <, <=, >= and >.

n:<pattern>
    all objects with a name matching the given pattern
    (i.e. 'n:' is optional as it is the default matching rule)

@<name>
    push the selection saved prior with 'select -set <name> ...'

```

The following actions can be performed on the top sets on the stack:

```

%
    push a copy of the current selection to the stack

%%
    replace the stack with a union of all elements on it

%n
    replace top set with its invert

%u
    replace the two top sets on the stack with their union

%i
    replace the two top sets on the stack with their intersection

%d
    pop the top set from the stack and subtract it from the new top

%D
    like %d but swap the roles of two top sets on the stack

%c
    create a copy of the top set from the stack and push it

%x[<num1>|*][.<num2>][:<rule>[:<rule>..]]
    expand top set <num1> num times according to the specified rules.
    (i.e. select all cells connected to selected wires and select all
    wires connected to selected cells) The rules specify which cell
    ports to use for this. the syntax for a rule is a '-' for exclusion
    and a '+' for inclusion, followed by an optional comma separated
    list of cell types followed by an optional comma separated list of
    cell ports in square brackets. a rule can also be just a cell or wire
    name that limits the expansion (is included but does not go beyond).
    select at most <num2> objects. a warning message is printed when this
    limit is reached. When '*' is used instead of <num1> then the process
    is repeated until no further object are selected.

%ci[<num1>|*][.<num2>][:<rule>[:<rule>..]]

```

(continues on next page)

(continued from previous page)

```

%co[<num1>|*][.<num2>][:<rule>[:<rule>..]]
    similar to %x, but only select input (%ci) or output cones (%co)

%xe[...] %cie[...] %coe
    like %x, %ci, and %co but only consider combinatorial cells

%a
    expand top set by selecting all wires that are (at least in part)
    aliases for selected wires.

%s
    expand top set by adding all modules that implement cells in selected
    modules

%m
    expand top set by selecting all modules that contain selected objects

%M
    select modules that implement selected cells

%C
    select cells that implement selected modules

%R[<num>]
    select <num> random objects from top selection (default 1)

```

Example: the following command selects all wires that are connected to a 'GATE' input of a 'SWITCH' cell:

```
select */t:SWITCH %x:+[GATE] */t:SWITCH %d
```

setenv - set an environment variable

yosys> help setenv

```
setenv name value
```

Set the given environment variable on the current process. Values containing whitespace must be passed in double quotes (").

show - generate schematics using graphviz

yosys> help show

```
show [options] [selection]
```

Create a graphviz DOT file for the selected part of the design and compile it to a graphics file (usually SVG or PostScript).

```
-viewer <viewer> Run the specified command with the graphics file as ↵
                  ↵parameter.
```

(continues on next page)

(continued from previous page)

On Windows, this pauses Yosys until the viewer exits.
Use "-viewer none" to not run any command.

- format <format>** Generate a graphics file in the specified format. Use
 ↳ 'dot' to just
 generate a .dot file, or other <format> strings such as
 ↳ 'svg' or 'ps'
 to generate files in other formats (this calls the 'dot
 ↳ ' command).
- lib <verilog_or_liberty_file>** Use the specified library file for determining whether
 ↳ cell ports are
 inputs or outputs. This option can be used multiple
 ↳ times to specify
 more than one library.
- note: in most cases it is better to load the library
 ↳ before calling
 show with 'read_verilog -lib <filename>'. it is also
 ↳ possible to
 load liberty files with 'read_liberty -lib <filename>'.
- prefix <prefix>** generate <prefix>.* instead of ~/.yosys_show.*
- color <color> <object>** Assign the specified color to the specified object. The
 ↳ object can be
 a single selection wildcard expressions or a saved set
 ↳ of objects in
 the @<name> syntax (see "help select" for details).
- label <text> <object>** Assign the specified label text to the specified object.
 ↳ The object can
 be a single selection wildcard expressions or a saved
 ↳ set of objects in
 the @<name> syntax (see "help select" for details).
- colors <seed>** Randomly assign colors to the wires. The integer
 ↳ argument is the seed
 for the random number generator. Change the seed value
 ↳ if the colored
 graph still is ambiguous. A seed of zero deactivates
 ↳ the coloring.
- colorattr <attribute_name>** Use the specified attribute to assign colors. A unique
 ↳ color is
 assigned to each unique value of this attribute.
- width** annotate buses with a label indicating the width of the
 ↳ bus.

| | |
|-----------------------|--|
| <code>-signed</code> | mark ports (A, B) that are declared as signed (using ↪ the [AB]_SIGNED cell parameter) with an asterisk next to the port name. |
| <code>-stretch</code> | stretch the graph so all inputs are on the left side ↪ and all outputs (including inout ports) are on the right side. |
| <code>-pause</code> | wait for the user to press enter to before returning |
| <code>-enum</code> | enumerate objects with internal (\$-prefixed) names |
| <code>-long</code> | do not abbreviate objects with internal (\$-prefixed) ↪ names |
| <code>-notitle</code> | do not add the module name as graph title to the dot ↪ file |
| <code>-nobg</code> | don't run viewer in the background, IE wait for the ↪ viewer tool to exit before returning |
| <code>-href</code> | adds href attribute to all items representing cells and ↪ wires, using src attribute of origin |

When no <format> is specified, 'dot' is used. When no <format> and <viewer> is specified, 'xdot' is used to display the schematic (POSIX systems only).

The generated output files are '~/yosys_show.dot' and '~/yosys_show.<format>', unless another prefix is specified using -prefix <prefix>.

Yosys on Windows and YosysJS use different defaults: The output is written to 'show.dot' in the current directory and new viewer is launched each time the 'show' command is executed.

sta - perform static timing analysis

```
yosys> help sta
```

```
sta [options] [selection]
```

This command performs static timing analysis on the design. (Only considers paths within a single module, so the design must be flattened.)

stat - print some statistics

```
yosys> help stat
```

stat [options] [selection]

Print some statistics (number of objects) on the selected portion of the design.

| | |
|-------------------------|--|
| -top <module> | print design hierarchy with this module as top. if the
↳ design is fully
selected and a module has the 'top' attribute set, this
↳ module is used
default value for this option. |
| -liberty <liberty_file> | use all area information from the provided liberty file |
| -tech <technology> | print area estimate for the specified technology.
↳ Currently supported
values for <technology>: xilinx, cmos |
| -width | annotate internal cell types with their word width.
e.g. \$add_8 for an 8 bit wide \$add cell. |
| -json | output the statistics in a machine-readable JSON format.
this is output to the console; use "tee" to output to a
↳ file. |

tee - redirect command output to file

yosys> help tee

tee [-q] [-o logfile|-a logfile] cmd

Execute the specified command, optionally writing the commands output to the specified logfile(s).

| | |
|---------------|--|
| -q | Do not print output to the normal destination (console
↳ and/or log file). |
| -o logfile | Write output to this file, truncate if exists. |
| -a logfile | Write output to this file, append if exists. |
| -s scratchpad | Write output to this scratchpad value, truncate if it
↳ exists.

+INT, -INT
Add/subtract INT from the -v setting for this command. |

torder - print cells in topological order

```
yosys> help torder
```

```
torder [options] [selection]
```

This command prints the selected cells in topological order.

-stop <cell_type> ~~deactivates~~ the specified cell port in topological sorting ↵

-noautostop by default Q outputs of internal FF cells and memory read port outputs are not used in topological sorting. this option deactivates that. ↵

trace - redirect command output to file

```
yosys> help trace
```

```
trace cmd
```

Execute the specified command, logging all changes the command performs on the design in real time.

viz - visualize data flow graph

```
yosys> help viz
```

```
viz [options] [selection]
```

Create a graphviz DOT file for the selected part of the design, showing the relationships between the selected wires, and compile it to a graphics file (usually SVG or PostScript).

-viewer <viewer> Run the specified command with the graphics file as parameter. ↵
On Windows, this pauses yosys until the viewer exits.

-format <format> Generate a graphics file in the specified format. Use ↵
↵ 'dot' to just
generate a .dot file, or other <format> strings such as
↵ 'svg' or 'ps'
to generate files in other formats (this calls the 'dot
↵ ' command).

-prefix <prefix> generate <prefix>.* instead of ~/.yosys_viz.*

-pause wait for the user to press enter to before returning

| | |
|---|---|
| <code>-nobg</code> | don't run viewer in the background, IE wait for the
↪ viewer tool to
exit before returning |
| <code>-set-vg-attr</code> | set their group index as 'vg' attribute on cells and
↪ wires |
| <code>-g <selection></code> | manually define a group of terminal signals. this group
↪ is not being
merged with other terminal groups. |
| <code>-u <selection></code> | manually define a unique group for each wire in the
↪ selection. |
| <code>-x <selection></code> | manually exclude wires from being considered. (usually
↪ this is
used for global signals, such as reset.) |
| <code>-s <selection></code> | like -g, but mark group as 'special', changing the
↪ algorithm to
preserve as much info about this groups connectivity as
↪ possible. |
| <code>-G <selection_expr> .</code> | |
| <code>-U <selection_expr> .</code> | |
| <code>-X <selection_expr> .</code> | |
| <code>-S <selection_expr></code> | like -u, -g, -x, and -s, but parse all arguments up to
↪ a terminating .
as a single select expression. (see 'help select' for
↪ details) |
| <code>-0, -1, -2, -3, -4, -5, -6, -7, -8, -9</code> | select effort level each level corresponds to an
↪ increasingly more
aggressive sequence of strategies for merging nodes of
↪ the data flow
graph. (default: 9) |

When no <format> is specified, 'dot' is used. When no <format> and <viewer> is specified, 'xdot' is used to display the schematic (POSIX systems only).

The generated output files are '~/yosys_viz.dot' and '~/yosys_viz.<format>', unless another prefix is specified using -prefix <prefix>.

Yosys on Windows and YosysJS use different defaults: The output is written to 'show.dot' in the current directory and new viewer is launched each time the 'show' command is executed.

write_file - write a text to a file

```
yosys> help write_file
```

```
write_file [options] output_file [input_file]
```

Write the text from the input file to the output file.

```
-a
```

Append to output file (instead of overwriting)

Inside a script the input file can also can a here-document:

```
write_file hello.txt <<EOT
Hello World!
EOT
```

10.1.7 Technology libraries

Listed in alphabetical order.

Generic**Warning**

No commands found for group 'techlibs/common'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Achronix**Warning**

No commands found for group 'techlibs/achronix'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Anlogic**Warning**

No commands found for group 'techlibs/anlogic'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

CoolRunner-II**Warning**

No commands found for group 'techlibs/coolrunner2'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

eASIC

Warning

No commands found for group ‘techlibs/easic’

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

ECP5

Warning

No commands found for group ‘techlibs/ecp5’

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

FABulous

Warning

No commands found for group ‘techlibs/fabulous’

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Gatamate

Warning

No commands found for group ‘techlibs/gatamate’

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Gowin

Warning

No commands found for group ‘techlibs/gowin’

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

GreenPAK4

rmports - remove module ports with no connections

```
yosys> help rmports
```

```
    rmports [selection]
```

This pass identifies ports in the selected modules which are not used or driven and removes them.

iCE40

Warning

No commands found for group 'techlibs/ice40'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Intel (MAX10, Cyclone IV)

Warning

No commands found for group 'techlibs/intel'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Intel ALM (Cyclone V, Arria V, Cyclone 10 GX)

Warning

No commands found for group 'techlibs/intel_alm'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Lattice

Warning

No commands found for group 'techlibs/lattice'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Lattice Nexus

Warning

No commands found for group 'techlibs/nexus'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Microchip

Warning

No commands found for group 'techlibs/microchip'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Microchip - SmartFusion2/IGLOO2

Warning

No commands found for group 'techlibs/sf2'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

NanoXplore

Warning

No commands found for group 'techlibs/nanoxplore'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

QuickLogic

Warning

No commands found for group 'techlibs/quicklogic'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

Xilinx

Warning

No commands found for group 'techlibs/xilinx'

Documentation may have been built without `source_location` support. Try check `/cmd/index_other`.

10.1.8 Internal commands for developers

example_dt - drivertools example

```
yosys> help example_dt
```

Warning

This command is intended for internal developer use only

TODO: add help message

internal_stats - print internal statistics

```
yosys> help internal_stats
```

Warning

This command is experimental

Warning

This command is intended for internal developer use only

Print internal statistics for developers (experimental)

test_abcloop - automatically test handling of loops in abc command

```
yosys> help test_abcloop
```

Warning

This command is intended for internal developer use only

test_abcloop [options]

Test handling of logic loops in ABC.

-n {integer} create this number of circuits and test them (default = 100).

-s {positive_integer} this value as rng seed value (default = unix time).

test_autotb - generate simple test benches

```
yosys> help test_autotb
```

Warning

This command is intended for internal developer use only

test_autotb [options] [filename]

Automatically create primitive Verilog test benches for all modules in the design. The generated testbenches toggle the input pins of the module in a semi-random manner and dumps the resulting output signals.

This can be used to check the synthesis results for simple circuits by

(continues on next page)

(continued from previous page)

comparing the testbench output for the input files and the synthesis results.

The backend automatically detects clock signals. Additionally a signal can be forced to be interpreted as clock signal by setting the attribute 'gentb_clock' on the signal.

The attribute 'gentb_constant' can be used to force a signal to a constant value after initialization. This can e.g. be used to force a reset signal low in order to explore more inner states in a state machine.

The attribute 'gentb_skip' can be attached to modules to suppress testbench generation.

| | |
|--------------------------------|--|
| <code>-n <int></code> | number of iterations the test bench should run (default ↪
↪ = 1000) |
| <code>-seed <int></code> | seed used for pseudo-random number generation (default ↪
↪ = 0).
a value of 0 will cause an arbitrary seed to be chosen, ↪
↪ based on
the current system time. |

test_cell - automatically test the implementation of a cell type

yosys> help test_cell

Warning

This command is intended for internal developer use only

`test_cell [options] {cell-types}`

Tests the internal implementation of the given cell type (for example '\$add') by comparing SAT solver, EVAL and TECHMAP implementations of the cell types..

Run with 'all' instead of a cell type to run the test on all supported cell types. Use for example 'all /\$add' for all cell types except \$add.

| | |
|------------------------------------|--|
| <code>-n {integer}</code> | create this number of cell instances and test them ↪
↪ (default = 100). |
| <code>-s {positive_integer}</code> | use this value as rng seed value (default = unix time). |
| <code>-f {rtlil_file}</code> | don't generate circuits. instead load the specified ↪
↪ RTLIL file. |

| | |
|------------------------------------|--|
| <code>-w {filename_prefix}</code> | don't test anything. just generate the circuits and write them to RTLIL files with the specified prefix |
| <code>-map {filename}</code> | pass this option to techmap. |
| <code>-simlib</code> | use "techmap -D SIMLIB_NOCHECKS -map +/simlib.v -max_iter 2 -autoproc" |
| <code>-aigmap</code> | instead of calling "techmap", call "aigmap" |
| <code>-muxdiv</code> | when creating test benches with dividers, create an additional mux to mask out the division-by-zero case |
| <code>-script {script_file}</code> | instead of calling "techmap", call "script {script_file}" |
| <code>-const</code> | set some input bits to random constant values |
| <code>-nosat</code> | do not check SAT model or run SAT equivalence checking |
| <code>-noeval</code> | do not check const-eval models |
| <code>-noopt</code> | do not opt techmapped design |
| <code>-edges</code> | test cell edges db creator against sat-based implementation |
| <code>-v</code> | print additional debug information to the console |
| <code>-vlog {filename}</code> | create a Verilog test bench to test simlib and write verilog |
| <code>-bloat {factor}</code> | increase cell size limits b{factor} times where possible |
| <code>-check_cost</code> | check if the estimated cell cost is a valid upper bound for the techmapped cell count |

test_generic - test the generic compute graph

yosys> help test_generic

Warning

This command is intended for internal developer use only

TODO: add help message

test_pmgen - test pass for pmgen

yosys> help test_pmgen

Warning

This command is intended for internal developer use only

test_pmgen -reduce_chain [options] [selection]

Demo for recursive pmgen patterns. Map chains of AND/OR/XOR to \$reduce_*.

test_pmgen -reduce_tree [options] [selection]

Demo for recursive pmgen patterns. Map trees of AND/OR/XOR to \$reduce_*.

test_pmgen -eqpmux [options] [selection]

Demo for recursive pmgen patterns. Optimize EQ/NE/PMUX circuits.

test_pmgen -generate [options] <pattern_name>

Create modules that match the specified pattern.

10.1.9 Writing command help

- use *chformal* as an example
- generated help content below

chformal - change formal constraints of the design

yosys> help chformal

chformal [types] [mode] [options] [selection]

Make changes to the formal constraints of the design. The [types] options the type of constraint to operate on. If none of the following options are given, the command will operate on all constraint types:

| | |
|----------------|--|
| -assert | <i>\$assert</i> cells, representing <code>assert(...)</code> constraints |
| -assume | <i>\$assume</i> cells, representing <code>assume(...)</code> constraints |
| -live | <i>\$live</i> cells, representing <code>assert(s_eventually ...)</code> |
| -fair | <i>\$fair</i> cells, representing <code>assume(s_eventually ...)</code> |
| -cover | <i>\$cover</i> cells, representing <code>cover()</code> statements |

Additionally chformal will operate on *\$check* cells corresponding to the selected constraint types.

Exactly one of the following modes must be specified:

| | |
|----------------|---|
| -remove | remove the cells and thus constraints from the design |
|----------------|---|

| | |
|-------------------------|--|
| -early | bypass FFs that only delay the activation of a constraint. When inputs of the bypassed FFs do not remain stable between clock edges, this may result in unexpected behavior. |
| -delay <N> | delay activation of the constraint by <N> clock cycles |
| -skip <N> | ignore activation of the constraint in the first <N> clock cycles |
| -coverenable | add cover statements for the enable signals of the constraints |
| -assert2assume | |
| -assert2cover | |
| -assume2assert | |
| -live2fair | |
| -fair2live | change the roles of cells as indicated. these options can be combined |
| -lower | convert each \$check cell into an \$assert, \$assume, \$live, \$fair or \$cover cell. If the \$check cell contains a message, also produce a \$print cell. |

The `formatted_help()` method

- `PrettyHelp::get_current()`
- `PrettyHelp::set_group()`
 - used with `.. autocmdgroup:: <group>`
 - can assign group and return false
 - if no group is set, will try to use `source_location` and assign group from path to source file
- return value
 - true means help content added to current `PrettyHelp`
 - false to use `Pass::help()`
- adding content
 - help content is a list of `ContentListing` nodes, each one having a type, body, and its own list of children `ContentListings`
 - `PrettyHelp::get_root()` returns the root `ContentListing` (`type="root"`)
 - `ContentListing::{usage, option, codeblock, paragraph}` each add a `ContentListing` to the current node, with type the same as the method
 - * the first argument is the body of the new node
 - * `usage` shows how to call the command (i.e. its “signature”)
 - * `paragraph` content is formatted as a paragraph of text with line breaks added automatically
 - * `codeblock` content is displayed verbatim, use line breaks as desired; takes an optional `language` argument for assigning the language in RST output for code syntax highlighting (use `yoscript` for yosys script syntax highlighting)
 - * `option` lists a single option for the command, usually starting with a dash (-); takes an optional second argument which adds a paragraph node as a means of description
 - `ContentListing::open_usage` creates and returns a new usage node, can be used to e.g. add text/options specific to a given usage of the command

- ContentListing::open_option creates and returns a new option node, can be used to e.g. add multiple paragraphs to an option's description
- paragraphs are treated as raw RST, allowing for inline formatting and references as if it were written in the RST file itself

Listing 10.1: ChformalPass::formatted_help() from passes/
cmds/chformal.cc

```

bool formatted_help() override {
    auto *help = PrettyHelp::get_current();
    help->set_group("formal");

    auto content_root = help->get_root();

    content_root->usage("chformal [types] [mode] [options] [selection]");
    content_root->paragraph(
        "Make changes to the formal constraints of the design. The
↳[types] options "
        "the type of constraint to operate on. If none of the following
↳options are "
        "given, the command will operate on all constraint types:"
    );

    content_root->option("-assert", "$assert` cells, representing ``assert(.
↳..)`` constraints");
    content_root->option("-assume", "$assume` cells, representing ``assume(.
↳..)`` constraints");
    content_root->option("-live", "$live` cells, representing ``assert(s_
↳eventually ...)``");
    content_root->option("-fair", "$fair` cells, representing ``assume(s_
↳eventually ...)``");
    content_root->option("-cover", "$cover` cells, representing ``cover()``
↳statements");
    content_root->paragraph(
        "Additionally chformal will operate on `$check` cells
↳corresponding to the "
        "selected constraint types."
    );

    content_root->paragraph("Exactly one of the following modes must be
↳specified:");

    content_root->option("-remove", "remove the cells and thus constraints
↳from the design");
    content_root->option("-early",
        "bypass FFs that only delay the activation of a constraint. When
↳inputs "
        "of the bypassed FFs do not remain stable between clock edges,
↳this may "
        "result in unexpected behavior."
    );
    content_root->option("-delay <N>", "delay activation of the constraint
↳by <N> clock cycles");

```

(continues on next page)

(continued from previous page)

```

        content_root->option("-skip <N>", "ignore activation of the constraint
↳in the first <N> clock cycles");
        auto cover_option = content_root->open_option("-coverenable");
        cover_option->paragraph(
            "add cover statements for the enable signals of the constraints"
        );
#ifdef YOSYS_ENABLE_VERIFIC
        cover_option->paragraph(
            "Note: For the Verific frontend it is currently not guaranteed
↳that a "
                "reachable SVA statement corresponds to an active enable signal."
        );
#endif
        content_root->option("-assert2assume");
        content_root->option("-assert2cover");
        content_root->option("-assume2assert");
        content_root->option("-live2fair");
        content_root->option("-fair2live", "change the roles of cells as
↳indicated. these options can be combined");
        content_root->option("-lower",
            "convert each $check cell into an $assert, $assume, $live, $fair
↳or "
                "$cover cell. If the $check cell contains a message, also
↳produce a "
                "$print cell."
        );
        return true;
    }

```

Dumping command help to json

- `help -dump-cells-json cmds.json`
 - generates a `ContentListing` for each command registered in Yosys
 - tries to parse unformatted `Pass::help()` output if `Pass::formatted_help()` is unimplemented or returns false
 - * if a line starts with four spaces followed by the name of the command then a space, it is parsed as a signature (usage node)
 - * if a line is indented and starts with a dash (-), it is parsed as an option
 - * anything else is parsed as a codeblock and added to either the root node or the current option depending on the indentation
 - dictionary of command name to `ContentListing`
 - * uses `ContentListing::to_json()` recursively for each node in root
 - * root node used for source location of class definition
 - * includes flags set during pass constructor (e.g. `experimental_flag` set by `Pass::experimental()`)
 - * also title (`short_help` argument in `Pass::Pass`), group, and class name
 - dictionary of group name to list of commands in that group

- used by sphinx autodoc to generate help content

Listing 10.2: *chformal* in generated `cmds.json`

```

"chformal": {
  "title": "change formal constraints of the design",
  "content": [
    {"body": "chformal [types] [mode] [options] [selection]", "content": [], "options": {}, "type": "usage"},
    {"body": "Make changes to the formal constraints of the design. The [types] options the type of constraint to operate on. If none of the following options are given, the command will operate on all constraint types:", "content": [], "options": {}, "type": "text"},
    {"body": "-assert", "content": [{"body": "$assert` cells, representing `assert(...)`` constraints", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-assume", "content": [{"body": "$assume` cells, representing `assume(...)`` constraints", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-live", "content": [{"body": "$live` cells, representing `assert(s_ eventually ...)``", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-fair", "content": [{"body": "$fair` cells, representing `assume(s_ eventually ...)``", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-cover", "content": [{"body": "$cover` cells, representing `cover()`` statements", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "Additionally chformal will operate on $check` cells corresponding to the selected constraint types.", "content": [], "options": {}, "type": "text"},
    {"body": "Exactly one of the following modes must be specified:", "content": [], "options": {}, "type": "text"},
    {"body": "-remove", "content": [{"body": "remove the cells and thus constraints from the design", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-early", "content": [{"body": "bypass FFs that only delay the activation of a constraint. When inputs of the bypassed FFs do not remain stable between clock edges, this may result in unexpected behavior.", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-delay <N>", "content": [{"body": "delay activation of the constraint by <N> clock cycles", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-skip <N>", "content": [{"body": "ignore activation of the constraint in the first <N> clock cycles", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-coverenable", "content": [{"body": "add cover statements for the enable signals of the constraints", "content": [], "options": {}, "type": "text"}], "options": {}, "type": "option"},
    {"body": "-assert2assume", "content": [], "options": {}, "type": "option"},
    {"body": "-assert2cover", "content": [], "options": {}, "type": "option"},
    {"body": "-assume2assert", "content": [], "options": {}, "type": "option"},
    {"body": "-live2fair", "content": [], "options": {}, "type": "option"},
    {"body": "-fair2live", "content": [{"body": "change the roles of cells as"}]

```

(continues on next page)

(continued from previous page)

```

→indicated. these options can be combined", "content": [], "options": {}, "type": "text
→"}], "options": {}, "type": "option"},
    {"body": "-lower", "content": [{"body": "convert each $check cell into an
→$assert, $assume, $live, $fair or $cover cell. If the $check cell contains a message,
→also produce a $print cell.", "content": [], "options": {}, "type": "text"}], "options
→": {}, "type": "option"}
  ],
  "group": "formal",
  "source_file": "unknown",
  "source_line": 0,
  "source_func": "unknown",
  "experimental_flag": false,
  "internal_flag": false
},

```

Note

Synthesis command scripts are special cased

If the final block of help output starts with the string "The following commands are executed by this synthesis command:\n", then the rest of the code block is formatted as yoscript (e.g. synth_ice40). The caveat here is that if the script() calls run() on any commands *prior* to the first check_label then the auto detection will break and revert to unformatted code (e.g. synth_fabulous).

Command line rendering

- if Pass::formatted_help() returns true, will call PrettyHelp::log_help()
 - traverse over the children of the root node and render as plain text
 - effectively the reverse of converting unformatted Pass::help() text
 - lines are broken at 80 characters while maintaining indentation (controlled by MAX_LINE_LEN in kernel/log_help.cc)
 - each line is broken into words separated by spaces, if a given word starts and ends with backticks they will be stripped
- if it returns false it will call Pass::help() which should call log() directly to print and format help text
 - if Pass::help() is not overridden then a default message about missing help will be displayed

```
-- Running command `help chformal' --
```

```
chformal [types] [mode] [options] [selection]
```

Make changes to the formal constraints of the design. The [types] options the type of constraint to operate on. If none of the following options are given, the command will operate on all constraint types:

```
-assert
  $assert cells, representing assert(...) constraints
```

(continues on next page)

(continued from previous page)

```

-assume
    $assume cells, representing assume(...) constraints

-live
    $live cells, representing ``assert(s_eventually ...)``

-fair
    $fair cells, representing ``assume(s_eventually ...)``

-cover
    $cover cells, representing cover() statements

```

Additionally chformal will operate on \$check cells corresponding to the selected constraint types.

Exactly one of the following modes must be specified:

```

-remove
    remove the cells and thus constraints from the design

-early
    bypass FFs that only delay the activation of a constraint. When inputs
    of the bypassed FFs do not remain stable between clock edges, this may result
    in unexpected behavior.

-delay <N>
    delay activation of the constraint by <N> clock cycles

-skip <N>
    ignore activation of the constraint in the first <N> clock cycles

-coverenable
    add cover statements for the enable signals of the constraints

-assert2assume
-assert2cover
-assume2assert
-live2fair
-fair2live
    change the roles of cells as indicated. these options can be combined

-lower
    convert each $check cell into an $assert, $assume, $live, $fair or
    $cover cell. If the $check cell contains a message, also produce a $print
    cell.

```


RST generated from autocmd

- below is the raw RST output from autocmd (YosysCmdDocumenter class in docs/util/cmd_documenter.py) for *chformal* command
- heading will be rendered as a subheading of the most recent heading (see *chformal autocmd* above rendered under *Writing command help*)
- .. cmd:def:: <cmd> line is indexed for cross references with :cmd:ref: directive (*chformal autocmd* above uses :noindex: option so that *chformal* still links to the correct location)
 - :title: option controls text that appears when hovering over the *chformal* link
- commands with warning flags (experimental or internal) add a .. warning block before any of the help content
- if a command has no source_location the .. note at the bottom will instead link to /cmd/index_other

Listing 10.3: Generated rst for .. autocmd:: chformal

```
chformal - change formal constraints of the design
#####
.. cmd:def:: chformal
   :title: change formal constraints of the design

   .. cmd:usage:: chformal::chformal [types] [mode] [options] [selection]

   Make changes to the formal constraints of the design. The [types] options the type of
   ↪constraint to operate on. If none of the following options are given, the command will
   ↪operate on all constraint types:

   :option -assert:
       ``$assert`` cells, representing ``assert(...)`` constraints

   :option -assume:
       ``$assume`` cells, representing ``assume(...)`` constraints

   :option -live:
       ``$live`` cells, representing ``assert(s_eventually ...)``

   :option -fair:
       ``$fair`` cells, representing ``assume(s_eventually ...)``

   :option -cover:
       ``$cover`` cells, representing ``cover()`` statements

   Additionally chformal will operate on ``$check`` cells corresponding to the selected
   ↪constraint types.

   Exactly one of the following modes must be specified:

   :option -remove:
       remove the cells and thus constraints from the design

   :option -early:
```

(continues on next page)

(continued from previous page)

bypass FFs that only delay the activation of a constraint. When inputs of the
↳bypassed FFs do not remain stable between clock edges, this may result in unexpected
↳behavior.

`:option -delay <N>:`

delay activation of the constraint by <N> clock cycles

`:option -skip <N>:`

ignore activation of the constraint in the first <N> clock cycles

`:option -coverenable:`

add cover statements for the enable signals of the constraints

`:option -assert2assume:`

`:option -assert2cover:`

`:option -assume2assert:`

`:option -live2fair:`

`:option -fair2live:`

change the roles of cells as indicated. these options can be combined

`:option -lower:`

convert each \$check cell into an \$assert, \$assume, \$live, \$fair or \$cover cell. If
↳the \$check cell contains a message, also produce a \$print cell.

BIBLIOGRAPHY

- [ASU86] Alfred V. Aho, Ravi Sethi, and Jeffrey D. Ullman. *Compilers: principles, techniques, and tools*. Addison-Wesley Longman Publishing Co., Inc., Boston, MA, USA, 1986. ISBN 0-201-10088-6.
- [A+02] IEEE Standards Association and others. Ieee standard for verilog register transfer level synthesis. *IEEE Std 1364.1-2002*, 2002. doi:10.1109/IEEESTD.2002.94220.
- [A+04] IEEE Standards Association and others. Ieee standard for vhdl register transfer level (rtl) synthesis. *IEEE Std 1076.6-2004 (Revision of IEEE Std 1076.6-1999)*, 2004. doi:10.1109/IEEESTD.2004.94802.
- [A+06] IEEE Standards Association and others. Ieee standard for verilog hardware description language. *IEEE Std 1364-2005 (Revision of IEEE Std 1364-2001)*, 2006. doi:10.1109/IEEESTD.2006.99495.
- [A+09] IEEE Standards Association and others. Ieee standard vhdl language reference manual. *IEEE Std 1076-2008 (Revision of IEEE Std 1076-2002)*, 26 2009. doi:10.1109/IEEESTD.2009.4772740.
- [A+10] IEEE Standards Association and others. Ieee standard for ip-xact, standard structure for packaging, integrating, and reusing ip within tools flows. *IEEE Std 1685-2009*, pages C1–360, 2010. doi:10.1109/IEEESTD.2010.5417309.
- [BHSV90] R.K. Brayton, G.D. Hachtel, and A.L. Sangiovanni-Vincentelli. Multilevel logic synthesis. *Proceedings of the IEEE*, 78(2):264–300, 1990. doi:10.1109/5.52213.
- [CI00] Clifford E. Cummings and Sunburst Design Inc. Nonblocking assignments in verilog synthesis, coding styles that kill. In *SNUG (Synopsys Users Group) 2000 User Papers, section-MC1 (1 st paper)*. 2000.
- [EenSorensson03] Niklas Eén and Niklas Sörensson. Temporal induction by incremental sat solving. *Electronic Notes in Theoretical Computer Science*, 89(4):543–560, 2003.
- [GW13] Johann Glaser and C. Wolf. Methodology and example-driven interconnect synthesis for designing heterogeneous coarse-grain reconfigurable architectures. In Jan Haase, editor, *Advances in Models, Methods, and Tools for Complex Chip Design — Selected contributions from FDL'12*. Springer, 2013.
- [HS96] G D Hachtel and F Somenzi. Logic synthesis and verification algorithms. 1996.
- [LHBB85] Kyu Y. Lee, Michael Holley, Mary Bailey, and Walter Bright. A high-level design language for programmable logic devices. *VLSI Design (Manhasset NY: CPM Publications)*, pages 50–62, June 1985.
- [STGR10] Yiqiong Shi, Chan Wai Ting, Bah-Hwee Gwee, and Ye Ren. A highly efficient method for extracting fsms from flattened gate-level netlist. In *Circuits and Systems (ISCAS), Proceedings of 2010 IEEE International Symposium on*, 2610–2613. 2010. doi:10.1109/ISCAS.2010.5537093.

- [Ull76] J. R. Ullmann. An algorithm for subgraph isomorphism. *J. ACM*, 23(1):31–42, January 1976. doi:10.1145/321921.321925.
- [Wol13] C. Wolf. Design and implementation of the yosys open synthesis suite. Bachelor Thesis, Vienna University of Technology, 2013.
- [WGS+12] C. Wolf, Johann Glaser, Florian Schupfer, Jan Haase, and Christoph Grimm. Example-driven interconnect synthesis for heterogeneous coarse-grain reconfigurable logic. In *FDL Proceeding of the 2012 Forum on Specification and Design Languages*, 194–201. 2012.

INTERNAL CELL REFERENCE

Internal cell

\$alu, 305
\$fa, 306
\$lcu, 307
\$macc, 308
\$macc_v2, 311
\$add, 258
\$and, 259
\$bweqx, 260
\$div, 260
\$divfloor, 261
\$eq, 262
\$eqx, 262
\$ge, 263
\$gt, 263
\$le, 264
\$logic_and, 265
\$logic_or, 265
\$lt, 266
\$mod, 266
\$modfloor, 267
\$mul, 268
\$ne, 269
\$nex, 269
\$or, 270
\$pow, 270
\$shift, 271
\$shiftx, 272
\$shl, 273
\$shr, 273
\$sshl, 274
\$sshr, 274
\$sub, 275
\$xnor, 276
\$xor, 276
\$_ANDNOT_, 335
\$_AOI3_, 336
\$_AOI4_, 336
\$_MUX16_, 337
\$_MUX4_, 338
\$_MUX8_, 338
\$_NMUX_, 339
\$_OAI3_, 339
\$_OAI4_, 340
\$_ORNOT_, 341
\$_AND_, 331
\$_BUF_, 331
\$_MUX_, 332
\$_NAND_, 332
\$_NOR_, 332
\$_NOT_, 333
\$_OR_, 333
\$_XNOR_, 334
\$_XOR_, 334
\$check, 327
\$print, 327
\$scopeinfo, 328
\$allconst, 320
\$allseq, 320
\$anyconst, 320
\$anyinit, 321
\$anyseq, 321
\$assert, 322
\$assume, 322
\$cover, 322
\$equiv, 323
\$fair, 323
\$ff, 323
\$initstate, 324
\$live, 324
\$future_ff, 325
\$get_tag, 325
\$original_tag, 325
\$overwrite_tag, 325
\$set_tag, 326
\$fsm, 303
\$_TBUF_, 407
\$lut, 313
\$sop, 314
\$mem, 294
\$mem_v2, 296
\$meminit, 299
\$meminit_v2, 300
\$memrd, 300

| | |
|---------------------|----------------------|
| \$memrd_v2, 301 | \$_DFFE_PP1P_, 358 |
| \$memwr, 301 | \$_DFFE_PP_, 358 |
| \$memwr_v2, 302 | \$_DFFSRE_NNNN_, 358 |
| \$bmux, 277 | \$_DFFSRE_NNNP_, 359 |
| \$bwmux, 278 | \$_DFFSRE_NNPN_, 360 |
| \$demux, 278 | \$_DFFSRE_NNPP_, 360 |
| \$mux, 279 | \$_DFFSRE_NPNN_, 361 |
| \$pmux, 279 | \$_DFFSRE_NPNP_, 361 |
| \$tribuf, 280 | \$_DFFSRE_NPPN_, 362 |
| \$adff, 282 | \$_DFFSRE_NPPP_, 362 |
| \$adffe, 283 | \$_DFFSRE_PNNN_, 363 |
| \$adlatch, 283 | \$_DFFSRE_PNNP_, 363 |
| \$aldff, 284 | \$_DFFSRE_PNPN_, 364 |
| \$aldffe, 284 | \$_DFFSRE_PNPP_, 364 |
| \$dff, 285 | \$_DFFSRE_PPNN_, 365 |
| \$dffe, 285 | \$_DFFSRE_PPNP_, 365 |
| \$dffsr, 286 | \$_DFFSRE_PPPN_, 366 |
| \$dffsre, 287 | \$_DFFSRE_PPPP_, 366 |
| \$dlatch, 287 | \$_DFFSR_NNN_, 367 |
| \$dlatchsr, 288 | \$_DFFSR_NNP_, 367 |
| \$sdff, 288 | \$_DFFSR_NPN_, 368 |
| \$sdffce, 289 | \$_DFFSR_NPP_, 368 |
| \$sdffe, 289 | \$_DFFSR_PNN_, 369 |
| \$sr, 290 | \$_DFFSR_PNP_, 369 |
| \$_ALDFFE_NNN_, 344 | \$_DFFSR_PPN_, 370 |
| \$_ALDFFE_NNP_, 345 | \$_DFFSR_PPP_, 370 |
| \$_ALDFFE_NPN_, 345 | \$_DFF_NNO_, 371 |
| \$_ALDFFE_NPP_, 346 | \$_DFF_NN1_, 371 |
| \$_ALDFFE_PNN_, 346 | \$_DFF_NPO_, 372 |
| \$_ALDFFE_PNP_, 347 | \$_DFF_NP1_, 372 |
| \$_ALDFFE_PPN_, 347 | \$_DFF_N_, 373 |
| \$_ALDFFE_PPP_, 347 | \$_DFF_PNO_, 373 |
| \$_ALDFF_NN_, 348 | \$_DFF_PN1_, 374 |
| \$_ALDFF_NP_, 348 | \$_DFF_PPO_, 374 |
| \$_ALDFF_PN_, 349 | \$_DFF_PP1_, 374 |
| \$_ALDFF_PP_, 349 | \$_DFF_P_, 375 |
| \$_DFFE_NNON_, 350 | \$_FF_, 375 |
| \$_DFFE_NNOP_, 350 | \$_SDFFCE_NNON_, 376 |
| \$_DFFE_NN1N_, 351 | \$_SDFFCE_NNOP_, 376 |
| \$_DFFE_NN1P_, 351 | \$_SDFFCE_NN1N_, 377 |
| \$_DFFE_NN_, 352 | \$_SDFFCE_NN1P_, 377 |
| \$_DFFE_NPON_, 352 | \$_SDFFCE_NPON_, 378 |
| \$_DFFE_NPOP_, 352 | \$_SDFFCE_NPOP_, 378 |
| \$_DFFE_NP1N_, 353 | \$_SDFFCE_NP1N_, 379 |
| \$_DFFE_NP1P_, 353 | \$_SDFFCE_NP1P_, 379 |
| \$_DFFE_NP_, 354 | \$_SDFFCE_PNON_, 380 |
| \$_DFFE_PNON_, 354 | \$_SDFFCE_PNOP_, 380 |
| \$_DFFE_PNOP_, 355 | \$_SDFFCE_PN1N_, 381 |
| \$_DFFE_PN1N_, 355 | \$_SDFFCE_PN1P_, 381 |
| \$_DFFE_PN1P_, 355 | \$_SDFFCE_PPON_, 382 |
| \$_DFFE_PN_, 356 | \$_SDFFCE_PPOP_, 382 |
| \$_DFFE_PPON_, 356 | \$_SDFFCE_PP1N_, 383 |
| \$_DFFE_PPOP_, 357 | \$_SDFFCE_PP1P_, 383 |
| \$_DFFE_PP1N_, 357 | \$_SDFFE_NNON_, 384 |

| | | | |
|-------------------------------|-----|----------------------------|-----|
| <code>\$_SDFFE_NNOP_</code> | 384 | <code>\$reduce_bool</code> | 255 |
| <code>\$_SDFFE_NN1N_</code> | 385 | <code>\$reduce_or</code> | 255 |
| <code>\$_SDFFE_NN1P_</code> | 385 | <code>\$reduce_xnor</code> | 256 |
| <code>\$_SDFFE_NPON_</code> | 386 | <code>\$reduce_xor</code> | 256 |
| <code>\$_SDFFE_NPOP_</code> | 386 | <code>\$concat</code> | 329 |
| <code>\$_SDFFE_NP1N_</code> | 387 | <code>\$slice</code> | 330 |
| <code>\$_SDFFE_NP1P_</code> | 387 | | |
| <code>\$_SDFFE_PNON_</code> | 388 | | |
| <code>\$_SDFFE_PNOP_</code> | 388 | | |
| <code>\$_SDFFE_PN1N_</code> | 389 | | |
| <code>\$_SDFFE_PN1P_</code> | 389 | | |
| <code>\$_SDFFE_PPON_</code> | 390 | | |
| <code>\$_SDFFE_PPOP_</code> | 390 | | |
| <code>\$_SDFFE_PP1N_</code> | 391 | | |
| <code>\$_SDFFE_PP1P_</code> | 391 | | |
| <code>\$_SDFF_NNO_</code> | 392 | | |
| <code>\$_SDFF_NN1_</code> | 392 | | |
| <code>\$_SDFF_NPO_</code> | 393 | | |
| <code>\$_SDFF_NP1_</code> | 393 | | |
| <code>\$_SDFF_PNO_</code> | 394 | | |
| <code>\$_SDFF_PN1_</code> | 394 | | |
| <code>\$_SDFF_PPO_</code> | 394 | | |
| <code>\$_SDFF_PP1_</code> | 395 | | |
| <code>\$_DLATCHSR_NNN_</code> | 397 | | |
| <code>\$_DLATCHSR_NNP_</code> | 397 | | |
| <code>\$_DLATCHSR_NPN_</code> | 398 | | |
| <code>\$_DLATCHSR_NPP_</code> | 398 | | |
| <code>\$_DLATCHSR_PNN_</code> | 399 | | |
| <code>\$_DLATCHSR_PNP_</code> | 399 | | |
| <code>\$_DLATCHSR_PPN_</code> | 400 | | |
| <code>\$_DLATCHSR_PPP_</code> | 400 | | |
| <code>\$_DLATCH_NNO_</code> | 401 | | |
| <code>\$_DLATCH_NN1_</code> | 401 | | |
| <code>\$_DLATCH_NPO_</code> | 402 | | |
| <code>\$_DLATCH_NP1_</code> | 402 | | |
| <code>\$_DLATCH_N_</code> | 403 | | |
| <code>\$_DLATCH_PNO_</code> | 403 | | |
| <code>\$_DLATCH_PN1_</code> | 404 | | |
| <code>\$_DLATCH_PPO_</code> | 404 | | |
| <code>\$_DLATCH_PP1_</code> | 404 | | |
| <code>\$_DLATCH_P_</code> | 405 | | |
| <code>\$_SR_NN_</code> | 405 | | |
| <code>\$_SR_NP_</code> | 406 | | |
| <code>\$_SR_PN_</code> | 406 | | |
| <code>\$_SR_PP_</code> | 407 | | |
| <code>\$specify2</code> | 315 | | |
| <code>\$specify3</code> | 316 | | |
| <code>\$specrule</code> | 319 | | |
| <code>\$buf</code> | 252 | | |
| <code>\$logic_not</code> | 252 | | |
| <code>\$neg</code> | 253 | | |
| <code>\$not</code> | 253 | | |
| <code>\$pos</code> | 254 | | |
| <code>\$reduce_and</code> | 254 | | |

PROPERTY INDEX

is_
is_evaluable, 408
\$alu, 305
\$fa, 306
\$lcu, 307
\$macc, 308
\$macc_v2, 311
\$add, 258
\$and, 259
\$bweqx, 260
\$div, 260
\$divfloor, 261
\$eq, 262
\$eqx, 262
\$ge, 263
\$gt, 263
\$le, 264
\$logic_and, 265
\$logic_or, 265
\$lt, 266
\$mod, 266
\$modfloor, 267
\$mul, 268
\$ne, 269
\$nex, 269
\$or, 270
\$pow, 270
\$shift, 271
\$shiftx, 272
\$shl, 273
\$shr, 273
\$sshl, 274
\$sshr, 274
\$sub, 275
\$xnor, 276
\$xor, 276
\$_ANDNOT_, 335
\$_AOI3_, 336
\$_AOI4_, 336
\$_MUX16_, 337
\$_MUX4_, 338
\$_MUX8_, 338
\$_NMUX_, 339
\$_OAI3_, 339
\$_OAI4_, 340
\$_ORNOT_, 341
\$_AND_, 331
\$_BUF_, 331
\$_MUX_, 332
\$_NAND_, 332
\$_NOR_, 332
\$_NOT_, 333
\$_OR_, 333
\$_XNOR_, 334
\$_XOR_, 334
\$allconst, 320
\$allseq, 320
\$anyconst, 320
\$anyseq, 321
\$assert, 322
\$assume, 322
\$cover, 322
\$equiv, 323
\$fair, 323
\$initstate, 324
\$live, 324
\$_TBUF_, 407
\$lut, 313
\$sop, 314
\$bmux, 277
\$bwmux, 278
\$demux, 278
\$mux, 279
\$pmux, 279
\$tribuf, 280
\$specify2, 315
\$specify3, 316
\$specrule, 319
\$buf, 252
\$logic_not, 252
\$neg, 253
\$not, 253
\$pos, 254
\$reduce_and, 254

\$reduce_bool, 255
\$reduce_or, 255
\$reduce_xnor, 256
\$reduce_xor, 256
\$concat, 329
\$slice, 330

X-

x-aware, 408
\$bweqx, 260
\$eqx, 262
\$nex, 269
x-output, 408
\$div, 260
\$mod, 266
\$shiftx, 272
\$pmux, 279

TAG INDEX

read_aiger, 435
read_blif, 435
read_json, 436
read_liberty, 436
read_rtlil, 437
read_verilog, 437
read_verilog_file_list, 440
read_xaiger2, 441
assertpmux, 441
async2sync, 441
chformal, 442
clk2fflogic, 443
cutpoint, 443
dft_tag, 443
fmcombine, 444
fminit, 445
formalff, 445
freduce, 446
future, 447
glift, 447
miter, 449
mutate, 450
qbfsat, 452
sat, 453
supercover, 457
synthprop, 457
xprop, 457
write_aiger, 411
write_aiger2, 412
write_blif, 412
write_btor, 414
write_cxxrtl, 414
write_edif, 419
write_firrtl, 420
write_functional_cxx, 420
write_functional_rosette, 420
write_functional_smt2, 421
write_intersynth, 421
write_jny, 421
write_json, 422
write_rtlil, 427
write_simplec, 427
write_smt2, 427
write_smv, 430
write_spice, 431
write_table, 431
write_verilog, 432
write_xaiger, 434
write_xaiger2, 434
example_dt, 504
internal_stats, 505
test_abcloop, 505
test_autotb, 505
test_cell, 506
test_generic, 507
test_pmgen, 508
abc, ??
abc9, ??
abc9_exe, ??
abc9_ops, ??
abc_new, ??
abstract, ??
add, ??
aigmap, ??
alumacc, ??
anlogic_eqn, ??
anlogic_fixcarry, ??
attrmap, ??
attrmvcp, ??
autoname, ??
blackbox, ??
bmuxmap, ??
booth, ??
box_derive, ??
bufnorm, ??
bugpoint, ??
bwmuxmap, ??
cellmatch, ??
chparam, ??
chtype, ??
clean, ??
clean_zerowidth, ??
clkbufmap, ??
clockgate, ??

| | |
|-----------------------|-----------------------|
| connect, ?? | onehot, ?? |
| connect_rpc, ?? | paramap, ?? |
| connwrappers, ?? | peepopt, ?? |
| constmap, ?? | pmux2shiftx, ?? |
| coolrunner2_fixup, ?? | pmuxtree, ?? |
| coolrunner2_sop, ?? | prep, ?? |
| copy, ?? | ql_bram_merge, ?? |
| delete, ?? | ql_bram_types, ?? |
| deminout, ?? | ql_dsp_io_regs, ?? |
| demuxmap, ?? | ql_dsp_macc, ?? |
| design, ?? | ql_dsp_simd, ?? |
| dffinit, ?? | ql_ioff, ?? |
| dfflegalize, ?? | raise_error, ?? |
| dfflibmap, ?? | read, ?? |
| dffunmap, ?? | rename, ?? |
| dump, ?? | scatter, ?? |
| echo, ?? | script, ?? |
| efinix_fixcarry, ?? | setattr, ?? |
| eval, ?? | setparam, ?? |
| extract, ?? | setundef, ?? |
| extract_counter, ?? | share, ?? |
| extract_fa, ?? | shell, ?? |
| extract_reduce, ?? | shregmap, ?? |
| extractinv, ?? | sim, ?? |
| flatten, ?? | simplemap, ?? |
| flowmap, ?? | splice, ?? |
| fst2tb, ?? | splitcells, ?? |
| gatemate_foldinv, ?? | splitnets, ?? |
| greenpak4_dffinv, ?? | submod, ?? |
| help, ?? | synth, ?? |
| hierarchy, ?? | synth_achronix, ?? |
| hilomap, ?? | synth_anlogic, ?? |
| history, ?? | synth_coolrunner2, ?? |
| ice40_braminit, ?? | synth_easic, ?? |
| ice40_dsp, ?? | synth_ecp5, ?? |
| ice40_opt, ?? | synth_efinix, ?? |
| ice40_wrapcarry, ?? | synth_fabulous, ?? |
| insbuf, ?? | synth_gatemate, ?? |
| iopadmap, ?? | synth_gowin, ?? |
| jny, ?? | synth_greenpak4, ?? |
| json, ?? | synth_ice40, ?? |
| keep_hierarchy, ?? | synth_intel, ?? |
| lattice_gsr, ?? | synth_intel_alm, ?? |
| libcache, ?? | synth_lattice, ?? |
| license, ?? | synth_microchip, ?? |
| linecoverage, ?? | synth_nanoxplore, ?? |
| lut2mux, ?? | synth_nexus, ?? |
| maccmap, ?? | synth_quicklogic, ?? |
| microchip_dffopt, ?? | synth_sf2, ?? |
| microchip_dsp, ?? | synth_xilinx, ?? |
| muxcover, ?? | tcl, ?? |
| muxpack, ?? | techmap, ?? |
| nlutmap, ?? | test_select, ?? |
| nx_carry, ?? | timeest, ?? |

| | |
|----------------------|-----------------------|
| tribuf, ?? | opt_mem, 474 |
| uniquify, ?? | opt_mem_feedback, 474 |
| verific, ?? | opt_mem_priority, 475 |
| verilog_defaults, ?? | opt_mem_widen, 475 |
| verilog_defines, ?? | opt_merge, 475 |
| wbflip, ?? | opt_muxtree, 475 |
| wrapcell, ?? | opt_reduce, 476 |
| wreduce, ?? | opt_share, 476 |
| xilinx_dffopt, ?? | recover_names, 476 |
| xilinx_dsp, ?? | proc, 459 |
| xilinx_srl, ?? | proc_arst, 460 |
| zinit, ?? | proc_clean, 460 |
| expose, 477 | proc_dff, 460 |
| equiv_add, 477 | proc_dlatch, 460 |
| equiv_induct, 478 | proc_init, 461 |
| equiv_make, 478 | proc_memwr, 461 |
| equiv_mark, 479 | proc_mux, 461 |
| equiv_miter, 479 | proc_prune, 461 |
| equiv_opt, 479 | proc_rmdead, 461 |
| equiv_purge, 481 | proc_rom, 461 |
| equiv_remove, 481 | cd, 483 |
| equiv_simple, 481 | check, 483 |
| equiv_status, 482 | cover, 484 |
| equiv_struct, 482 | debug, 485 |
| fsm, 462 | edgetypes, 485 |
| fsm_detect, 463 | exec, 485 |
| fsm_expand, 463 | log, 486 |
| fsm_export, 463 | logger, 486 |
| fsm_extract, 464 | ls, 487 |
| fsm_info, 464 | ltp, 488 |
| fsm_map, 464 | plugin, 488 |
| fsm_opt, 464 | portarcs, 488 |
| fsm_recode, 464 | portlist, 488 |
| memory, 465 | printattrs, 489 |
| memory_bmux2rom, 465 | scc, 489 |
| memory_bram, 466 | scratchpad, 490 |
| memory_collect, 468 | select, 490 |
| memory_dff, 468 | setenv, 495 |
| memory_libmap, 468 | show, 495 |
| memory_map, 469 | sta, 497 |
| memory_memx, 469 | stat, 497 |
| memory_narrow, 470 | tee, 498 |
| memory_nordff, 470 | torder, 499 |
| memory_share, 470 | trace, 499 |
| memory_unpack, 470 | viz, 499 |
| opt, 471 | write_file, 501 |
| opt_clean, 471 | rmports, 502 |
| opt_demorgan, 472 | |
| opt_dff, 472 | |
| opt_expr, 473 | |
| opt_ffinv, 473 | |
| opt_hier, 473 | |
| opt_lut, 474 | |
| opt_lut_ins, 474 | |

COMMAND REFERENCE

Command

abc, ??
abc9, ??
abc9_exe, ??
abc9_ops, ??
abc_new, ??
abstract, ??
add, ??
aigmap, ??
alumacc, ??
anlogic_eqn, ??
anlogic_fixcarry, ??
assertpmux, 441
async2sync, 441
attrmap, ??
attrmvcp, ??
autoname, ??
blackbox, ??
bmuxmap, ??
booth, ??
box_derive, ??
bufnorm, ??
bugpoint, ??
bwmuxmap, ??
cd, 483
cellmatch, ??
check, 483
chformal, 442
chparam, ??
chtype, ??
clean, ??
clean_zerowidth, ??
clk2fflogic, 443
clkbufmap, ??
clockgate, ??
connect, ??
connect_rpc, ??
connwrappers, ??
constmap, ??
coolrunner2_fixup, ??
coolrunner2_sop, ??
copy, ??
cover, 484
cutpoint, 443
debug, 485
delete, ??
deminout, ??
demuxmap, ??
design, ??
dffinit, ??
dfflegalize, ??
dfflibmap, ??
dffunmap, ??
dft_tag, 443
dump, ??
echo, ??
edgetypes, 485
efinix_fixcarry, ??
equiv_add, 477
equiv_induct, 478
equiv_make, 478
equiv_mark, 479
equiv_miter, 479
equiv_opt, 479
equiv_purge, 481
equiv_remove, 481
equiv_simple, 481
equiv_status, 482
equiv_struct, 482
eval, ??
example_dt, 504
exec, 485
expose, 477
extract, ??
extract_counter, ??
extract_fa, ??
extract_reduce, ??
extractinv, ??
flatten, ??
flowmap, ??
fmcombine, 444
fminit, 445
formalff, 445
freduce, 446

fsm, 462
fsm_detect, 463
fsm_expand, 463
fsm_export, 463
fsm_extract, 464
fsm_info, 464
fsm_map, 464
fsm_opt, 464
fsm_recode, 464
fst2tb, ??
future, 447
gatemate_foldinv, ??
glift, 447
greenpak4_dffinv, ??
help, ??
hierarchy, ??
hilomap, ??
history, ??
ice40_braminit, ??
ice40_dsp, ??
ice40_opt, ??
ice40_wrapcarry, ??
insbuf, ??
internal_stats, 505
iopadmap, ??
jny, ??
json, ??
keep_hierarchy, ??
lattice_gsr, ??
libcache, ??
license, ??
linecoverage, ??
log, 486
logger, 486
ls, 487
ltp, 488
lut2mux, ??
maccmap, ??
memory, 465
memory_bmux2rom, 465
memory_bram, 466
memory_collect, 468
memory_dff, 468
memory_libmap, 468
memory_map, 469
memory_memx, 469
memory_narrow, 470
memory_nordff, 470
memory_share, 470
memory_unpack, 470
microchip_dffopt, ??
microchip_dsp, ??
miter, 449
mutate, 450
muxcover, ??
muxpack, ??
nlutmap, ??
nx_carry, ??
onehot, ??
opt, 471
opt_clean, 471
opt_demorgan, 472
opt_dff, 472
opt_expr, 473
opt_ffinv, 473
opt_hier, 473
opt_lut, 474
opt_lut_ins, 474
opt_mem, 474
opt_mem_feedback, 474
opt_mem_priority, 475
opt_mem_widen, 475
opt_merge, 475
opt_muxtree, 475
opt_reduce, 476
opt_share, 476
paramap, ??
peepopt, ??
plugin, 488
pmux2shiftx, ??
pmuxtree, ??
portarcs, 488
portlist, 488
prep, ??
printattrs, 489
proc, 459
proc_arst, 460
proc_clean, 460
proc_dff, 460
proc_dlatch, 460
proc_init, 461
proc_memwr, 461
proc_mux, 461
proc_prune, 461
proc_rmdead, 461
proc_rom, 461
qbfsat, 452
ql_bram_merge, ??
ql_bram_types, ??
ql_dsp_io_regs, ??
ql_dsp_macc, ??
ql_dsp_simd, ??
ql_ioff, ??
raise_error, ??
read, ??
read_aiger, 435
read_blif, 435
read_json, 436

read_liberty, 436
read_rtlil, 437
read_verilog, 437
read_verilog_file_list, 440
read_xaiger2, 441
recover_names, 476
rename, ??
rmports, 502
sat, 453
scatter, ??
scc, 489
scratchpad, 490
script, ??
select, 490
setattr, ??
setenv, 495
setparam, ??
setundef, ??
share, ??
shell, ??
show, 495
shregmap, ??
sim, ??
simplemap, ??
splice, ??
splitcells, ??
splitnets, ??
sta, 497
stat, 497
submod, ??
supercover, 457
synth, ??
synth_achronix, ??
synth_anlogic, ??
synth_coolrunner2, ??
synth_easic, ??
synth_ecp5, ??
synth_efinix, ??
synth_fabulous, ??
synth_gatemate, ??
synth_gowin, ??
synth_greenpak4, ??
synth_ice40, ??
synth_intel, ??
synth_intel_alm, ??
synth_lattice, ??
synth_microchip, ??
synth_nanoxplore, ??
synth_nexus, ??
synth_quicklogic, ??
synth_sf2, ??
synth_xilinx, ??
synthprop, 457
tcl, ??
techmap, ??
tee, 498
test_abcloop, 505
test_autotb, 505
test_cell, 506
test_generic, 507
test_pmgem, 508
test_select, ??
timeest, ??
torder, 499
trace, 499
tribuf, ??
uniquify, ??
verific, ??
verilog_defaults, ??
verilog_defines, ??
viz, 499
wbflip, ??
wrapcell, ??
wreduce, ??
write_aiger, 411
write_aiger2, 412
write_blif, 412
write_btor, 414
write_cxxrtl, 414
write_edif, 419
write_file, 501
write_firrtl, 420
write_functional_cxx, 420
write_functional_rosette, 420
write_functional_smt2, 421
write_intersynth, 421
write_jny, 421
write_json, 422
write_rtlil, 427
write_simplec, 427
write_smt2, 427
write_smv, 430
write_spice, 431
write_table, 431
write_verilog, 432
write_xaiger, 434
write_xaiger2, 434
xilinx_dffopt, ??
xilinx_dsp, ??
xilinx_srl, ??
xprop, 457
zinit, ??